

DIP Switch Settings for FM Receiver Operation (LC72131)

NOTE: R0=0 and R1=0

Frequency	D0	D1	D2	D3	D4	D5	D6	D7	D8	D9	D10	D11
87.5	1	1	0	1	0	1	1	1	1	0	0	0
87.7	0	0	1	1	0	1	1	1	1	0	0	0
87.8	1	0	1	1	0	1	1	1	1	0	0	0
88.1	0	1	1	1	0	1	1	1	1	0	0	0
88.3	1	1	1	1	0	1	1	1	1	0	0	0
88.5	1	0	1	1	0	1	1	1	1	0	0	0
88.7	1	0	1	1	0	1	1	1	1	0	0	0
88.9	0	1	1	1	0	1	1	1	1	0	0	0
89.1	1	0	1	1	0	1	1	1	1	0	0	0
89.3	0	0	1	1	0	1	1	1	1	0	0	0
89.5	1	0	1	1	0	1	1	1	1	0	0	0
89.7	1	0	1	1	0	1	1	1	1	0	0	0
89.9	1	0	1	1	0	1	1	1	1	0	0	0
90.1	0	0	1	1	0	1	1	1	1	0	0	0
90.3	1	0	1	1	0	1	1	1	1	0	0	0
90.5	0	1	1	1	0	1	1	1	1	0	0	0
90.7	1	1	1	1	0	1	1	1	1	0	0	0
90.9	0	0	1	1	0	1	1	1	1	0	0	0
91.1	1	1	1	1	0	1	1	1	1	0	0	0
91.3	0	1	1	1	0	1	1	1	1	0	0	0
91.5	1	1	1	1	0	1	1	1	1	0	0	0
91.7	0	0	1	1	0	1	1	1	1	0	0	0
91.9	1	0	1	1	0	1	1	1	1	0	0	0
92.1	0	1	1	1	0	1	1	1	1	0	0	0
92.3	1	1	1	1	0	1	1	1	1	0	0	0
92.5	0	1	1	1	0	1	1	1	1	0	0	0
92.7	1	0	1	1	0	1	1	1	1	0	0	0
92.9	0	1	1	1	0	1	1	1	1	0	0	0
93.1	1	1	1	1	0	1	1	1	1	0	0	0
93.3	0	0	1	1	0	1	1	1	1	0	0	0
93.5	1	0	1	1	0	1	1	1	1	0	0	0
93.7	0	1	1	1	0	1	1	1	1	0	0	0
93.9	1	1	1	1	0	1	1	1	1	0	0	0
94.1	0	0	1	1	0	1	1	1	1	0	0	0
94.3	1	0	1	1	0	1	1	1	1	0	0	0

DIP Switch Settings for FM Receiver

Note: R0=0 and R1=0

Frequency	D0	D1	D2	D3	D4	D5	D6	D7	D8	D9	D10	D11
84.5	0	1	1	1	0	0	0	0	0	1	0	0
84.7	1	1	1	1	0	0	0	0	0	1	0	0
84.9	0	0	0	0	1	0	0	0	0	1	0	0
86.1	1	0	0	0	1	0	0	0	0	1	0	0
86.3	0	1	0	0	1	0	0	0	0	1	0	0
86.5	1	1	0	0	1	0	0	0	0	1	0	0
86.7	0	0	1	0	1	0	0	0	0	1	0	0
86.9	1	0	1	0	1	0	0	0	0	1	0	0
87.1	1	1	0	1	1	0	0	0	0	1	0	0
87.3	1	0	0	1	1	0	0	0	0	1	0	0
87.5	1	0	1	1	1	0	0	0	0	1	0	0
87.7	0	1	1	1	1	0	0	0	0	1	0	0
87.9	1	1	1	1	1	0	0	0	0	1	0	0
88.1	0	1	1	1	1	0	0	0	0	1	0	0
88.3	1	1	1	1	1	0	0	0	0	1	0	0
88.5	1	0	1	1	1	0	0	0	0	1	0	0
88.7	1	0	1	1	1	0	0	0	0	1	0	0
88.9	1	1	1	1	1	0	0	0	0	1	0	0
89.1	1	1	1	1	1	0	0	0	0	1	0	0
89.3	1	0	1	1	1	0	0	0	0	1	0	0
89.5	0	1	1	1	1	0	0	0	0	1	0	0
89.7	1	1	1	1	1	0	0	0	0	1	0	0
89.9	1	1	1	1	1	0	0	0	0	1	0	0
90.1	1	1	1	1	1	0	0	0	0	1	0	0
90.3	1	0	1	1	1	0	0	0	0	1	0	0
90.5	1	0	1	1	1	0	0	0	0	1	0	0
90.7	1	1	1	1	1	0	0	0	0	1	0	0
90.9	1	1	1	1	1	0	0	0	0	1	0	0
91.1	1	1	1	1	1	0	0	0	0	1	0	0
91.3	1	0	1	1	1	0	0	0	0	1	0	0
91.5	0	1	1	1	1	0	0	0	0	1	0	0
91.7	1	1	1	1	1	0	0	0	0	1	0	0
91.9	1	1	1	1	1	0	0	0	0	1	0	0
92.1	1	1	1	1	1	0	0	0	0	1	0	0
92.3	1	1	1	1	1	0	0	0	0	1	0	0
92.5	1	1	1	1	1	0	0	0	0	1	0	0
92.7	1	1	1	1	1	0	0	0	0	1	0	0
92.9	1	1	1	1	1	0	0	0	0	1	0	0
93.1	1	1	1	1	1	0	0	0	0	1	0	0
93.3	1	1	1	1	1	0	0	0	0	1	0	0
93.5	1	1	1	1	1	0	0	0	0	1	0	0
93.7	1	1	1	1	1	0	0	0	0	1	0	0
93.9	1	1	1	1	1	0	0	0	0	1	0	0
94.1	1	1	1	1	1	0	0	0	0	1	0	0
94.3	1	1	1	1	1	0	0	0	0	1	0	0

DIP Switch Settings for FM Receiver Operation

Note: R0=0 and R1=0

Frequency	D0	D1	D2	D3	D4	D5	D6	D7	D8	D9	D10	D11
101.5	1	0	0	0	1	1	0	0	0	1	0	0
101.7	0	1	0	0	1	1	0	0	0	1	0	0
101.9	1	1	0	0	1	1	0	0	0	1	0	0
102.1	0	0	1	0	1	1	0	0	0	1	0	0
102.3	1	0	1	0	1	1	0	0	0	1	0	0
102.5	0	1	0	1	1	1	0	0	0	1	0	0
102.7	1	1	1	0	1	1	0	0	0	1	0	0
102.9	0	0	0	1	1	1	0	0	0	1	0	0
103.1	1	0	0	1	1	1	0	0	0	1	0	0
103.3	0	1	0	1	1	1	0	0	0	1	0	0
103.5	1	1	0	1	1	1	0	0	0	1	0	0
103.7	0	0	1	1	1	1	0	0	0	1	0	0
103.9	1	0	1	1	1	1	0	0	0	1	0	0
104.1	0	1	1	1	1	1	0	0	0	1	0	0
104.3	1	1	1	1	1	1	0	0	0	1	0	0
104.5	0	0	0	0	0	0	1	0	0	1	0	0
104.7	0	1	0	0	0	0	1	0	0	1	0	0
104.9	0	1	0	0	0	0	1	0	0	1	0	0
105.1	1	1	0	0	0	0	1	0	0	1	0	0
105.3	0	0	1	0	0	0	1	0	0	1	0	0
105.5	1	0	1	0	0	0	1	0	0	1	0	0
105.7	0	1	1	0	0	0	1	0	0	1	0	0
105.9	1	1	1	0	0	0	1	0	0	1	0	0
106.1	0	0	0	1	0	0	1	0	0	1	0	0
106.3	1	0	0	1	0	0	1	0	0	1	0	0
106.5	0	1	0	1	0	0	1	0	0	1	0	0
106.7	1	1	0	1	0	0	1	0	0	1	0	0
106.9	0	0	1	1	1	0	0	0	0	1	0	0
107.1	1	1	1	1	1	0	0	0	0	1	0	0
107.3	0	1	1	1	1	0	0	0	0	1	0	0
107.5	1	1	1	1	1	0	0	0	0	1	0	0
107.7	0	0	0	0	0	1	0	0	0	1	0	0
107.9	1	0	0	0	0	1	0	0	0	1	0	0
108.1	0	1	0	0	0	1	0	0	0	1	0	0

D12 and D13 are always OFF