



CABLE NO COLOR	CABLE NO COLOR
NOT USED	22 RED
NOT USED	22 BLK & SHLD
ORANGE TO T71	TO T71 ORANGE
NOT USED	24 RED
NOT USED	24 & 23 BLK & SHLD
12 RED	19 RED
12 BLK	19 BLK
12 SHLD	19 SHLD
9 RED	16 RED
9 BLK & SHLD	16 BLK & SHLD
11 RED	18 RED
11 & 10 BLK & SHLD	18 & 17 BLK & SHLD
10 RED	17 RED

M-5S, M-8S →

M-5M →

PARTS MARKED * ARE DELETED IN M-5M

W	G	S	R	B
57	57	57		

33	33	33	28	28	32	32	32	30	30	30
RED	BLK, SHLD	WHT	BLK, SHLD	RED	RED	BLK, SHLD	WHT	BLK, SHLD	RED	WHT
NOT USED	20 BLK, SHLD	20 RED	15 BLK, SHLD	15 RED	NOT USED	19 BLK, SHLD	19 RED	17 BLK, SHLD	17 RED	NOT USED

L	R	G	L	R	G	C	NO	C	NO
EXT HP IN			MUTED MON			MIX 1 AUX		MIX 2 AUX	NOT USED
BLANK + G			+	-	BLANK	C	NO	C	NO

37	37	38	38	36
RED	BLU TO T30	BLK	RED	SHLD
24 RED	24 BLK	25 RED	25 BLK	23, 24, 25 SHLD

M-5S, M-8S

M-5M

FIG. L
OUTPUT BOARD