Note 2:
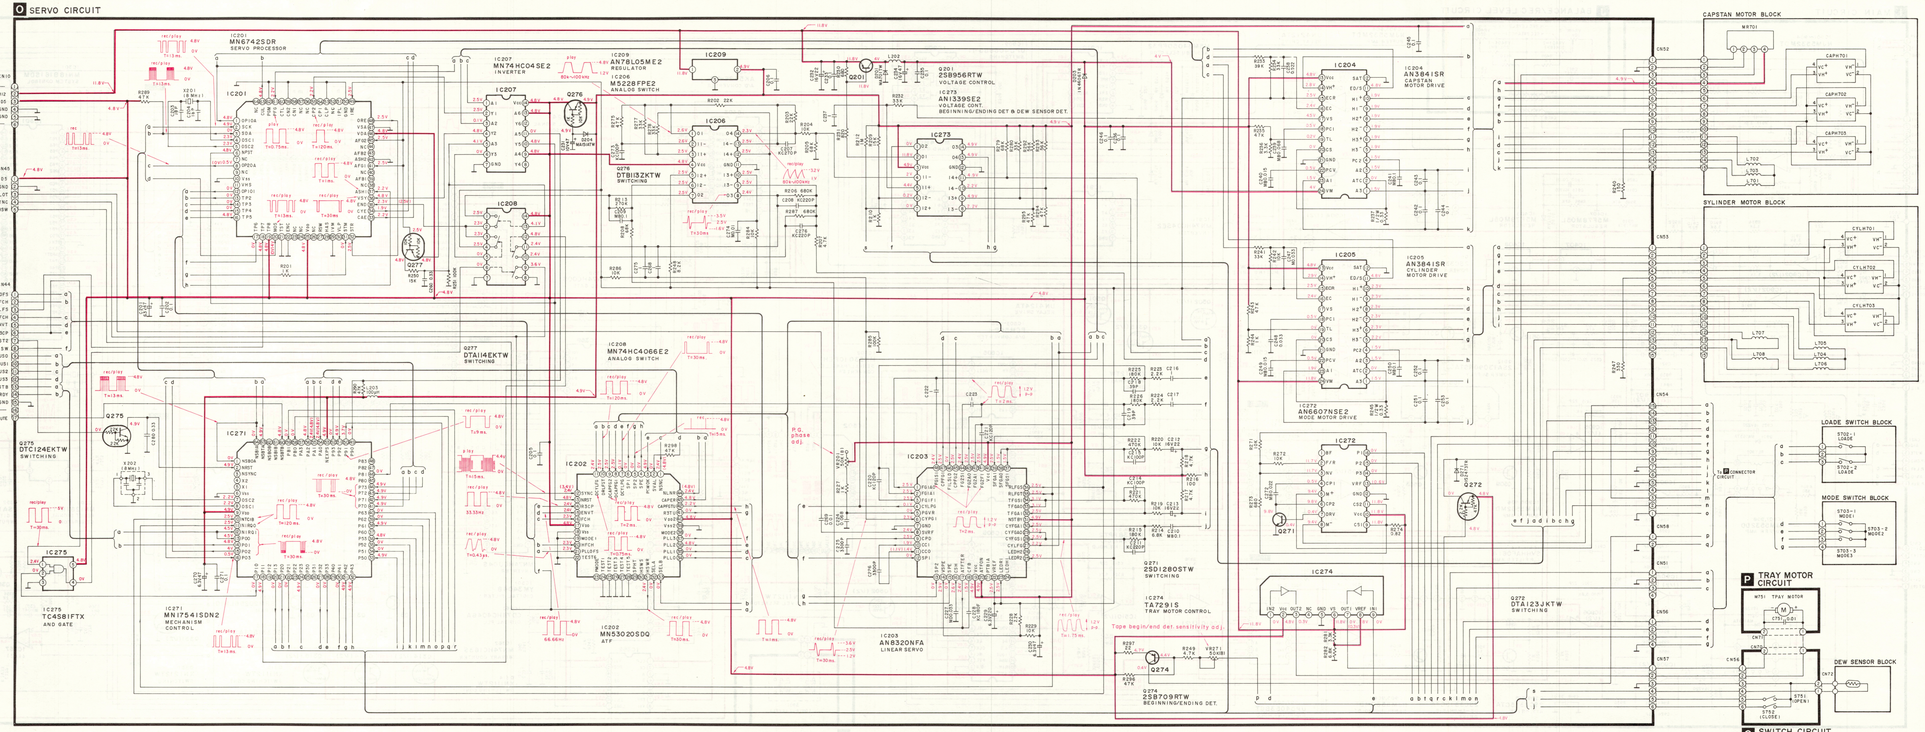
- **S701** : Tape hole detection switch.
- **S702** : Loading detection switch.
- **S703** : Mode detection switch.
- **S751** : Cassette tray open detection switch.
- **S752** : Cassette tray close detection switch.
- All voltage values shown in circuitry are under no signal condition and playback mode with volume control at minimum position otherwise specified.
  ( ).....Voltage values at recording mode.
  For measurement us EVM.
- Important safety notice
  Components identified by △ mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.
- (▬▬▬) indicates +B (bias).
- (▬ ▬ ▬) indicates −B (bias).
- (⟶) indicates the flow of the playback signal.
- (⇨) indicates the flow of the recording signal.