

Installation, Operation and Maintenance

TVA 132 & TVA 142

Television Audio System

Hallikainen and Friends, Inc. 101 Suburban Road San Luis Obispo, California (805) 541-0200 ADDENDUM

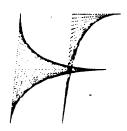

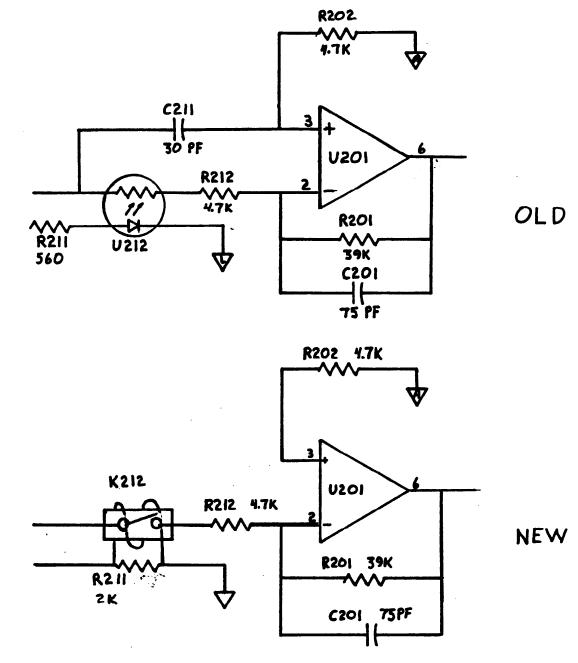

Halikainen & Friends 101 Suburban Road, San Luis Obispo, CA 93401 (805) 541-0200

The circuit change shown on reverse side is made on all TVA142 systems, serial numbers 1130 and above. Update kits are available for previous units.

The changes shown are for channel one program. The change is duplicated for each of the six audio input channels, and for the program and audition channels, resulting in 12 reed relays being installed.

The modification results in a substantial improvement in off channel attenuation. With the modification, off channel attenuation exceeds 70 dB.

Most of the circuitry remains the same. The changes are: Deletion of C211 (which cancelled some leakage through U212), Installing K212 for U212, And changing R211 from a series 560 ohm resistor to a shunt 2 K resistor. The new R211 maintains proper front panel LED current and suppresses high voltage transients from the coil of K212.


PARTS DELETED

C211, C231, C251,	C311, C331, C351,	C221, C241, C261,	C321, C341, C361	H&F	1529-3000	30 pF Polystyrene
R211, R231, R251,	R311, R331, R351,	R221, R241, R261,	R321, R341, R361	H&F	4 711- 4561	560 ohm, $\frac{1}{4}$ watt
U212, U232, U252,	U332,	U222, U242, U262,	U342,	H&F	3717-0001	LED/LDR optical coupler

PARTS ADDED

K232,	K332,	K222, K242, K262,	K342,	H&F	4500 0112			SPST-NO, Blal2áH
R231,	R331,	R221, R241, R261,	R341,	H&F	4 711-42 02	2 K,	, ‡ w a tt	

TVA Series Audio Systems

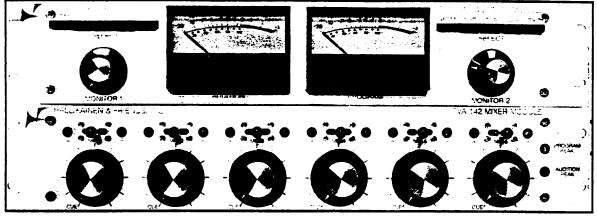

Finally, An Expandable Audio Mixing System Designed To Be Controlled By Your Video Switcher

- High quality audio
- Rack-mount construction
- Audio-follow-video plus manual control
- Noiseless audio switching
- Mic & line mixing
- Monitor speaker outputs
- Expandable to 36 inputs
- Comprehensive monitoring and metering facilities
- Three output D.A.s on program and audition channels

The H&F Series combines Audio-Follow-Video and manual control in a flexible audio system consisting of rack-mountable components which can provide for your present and future audio mixing requirements. The system is expandable to 36 balanced inputs in groups of six. If offers balanced audition, program, and cue outputs plus two monitor channels.

The TVA 142 is the mixing stage of the H&F television audio system. Each TVA 142 Mixer Module has six balanced mic or line inputs with individual gain controls. Audio routing to the program and audition channels is controlled either manually or with the audio-followvideo feature. In the AFV mode, the video switcher, through ground switching, activates a noiseless control circuit sending audio to either the program or audition channels or both. Front panel LED indicators show how each input has been assigned. Manual operation is easlip accomplished with a premium grade lever switch above each input gain control. Audio levels are monitored with peak flashers. The TVA 142 provides three outputs, program and audition to feed a line and a cue output for local use. The TVA 142 will serve as a stand alone mixer for many applications.

The TVA 132 Output Module provides three line level distribution amplifier outputs for multiple program and audition feeds. It offers accurate VU meters on both program and audition channels. One TVA 132 module can, when used with one to six TVA 142 Mixer modules, provide two seperate audio mixes with metering. This can be very useful when one program is "on-air" and a second one is to be simultaneously recorded. The TVA 132 meters, feeds, and monitors while the TVA 142 affords individual level control and tally indicators.

Halikainen & Friends 101 Suburban Road, San Luis Obispo, CA 93401-7590 (805) 541-0200

Technical Specifications

Output Module TVA 132

Number of inputs	36 maximum, in units of 6 each
Number of outputs	3 Program balanced 600 ohm DA outputs
	3 Audition balanced 600 ohm DA outputs
	1 balanced 600 ohm Cue output
	1 10 Watt, 8 ohm Monitor 1
	1 10 Watt, 8 ohm Monitor 2
Option 1	Replace 10 Watt monitor amps with
	600 ohm balanced outputs.
Monitor inputs	Program, Audition, Cue, Air, Aux.
Meters	2 large VU meters for program and audition, OVU
	internally adjustable for OdBm to +8dBm line out
Output levels	+8dBm nominal for all balanced outputs

Distortion, Noise, Response, for program audition and cue channels, See corresponding specs in TVA 142

Mixer Module TVA 142

- Number of inputs Input sensitivity Input impedance Number of outputs Outputs: Pgm, Aud, and Cue Maximum undistorted Output Distortion, @8dBm to 22dBm Signal to noise, unweighted Frequency response at 8dBm Crosstalk
- 6 balanced, assignable mic or line level -10db line, -58db mic 15K bridging line, 150 ohms mic 1 each Program, Audition, Cue +8dBm, 600 ohms balanced +22dBm 0.25% or less 74dB line, 60dB mic ±1dB 20Hz to 20 KHz -82db @ 1kHz

Unless otherwise specified, all specifications and measurements are referenced to 1 kHz, +8dBm output level. 0db = 0.775 v.

Audio follow control Control output (Tally)	Ground switched, 12 volts open circuit Ground switched 28vdc, 500mA max., open collector transistor
Indicators Automatic control	Long life LED status indicators Automatically follows video switcher- each mixer input is able to feed program & audition (preview) simultaneously.
Peak Flashers	Program and Audition. Adjustable threshold.
Power and Size	
AC power requirements Size	100 to 130vac, ½ amp, 60Hz Standard EIA 3½ inch (88.1mm) Rack panel, chassis, 10¾ inch (273 mm) deeps, clear anodized aluminum


ADDENDUM

On request of Larry Seese (T-ASA, Sacramento Army Depot, Sacramento, CA 95813: (916) 388-2256), the lever switch assembly in the TVA142 has been changed. The changed TVA142 part number becomes 0000-1421, while the standard unit remains 0000-1420.

The change enables the AFV mode ONLY when a lever switch is in the center position. In the standard system, AFV is always enabled, allowing simultaneous assignment of a single input to two outputs, one assignment by the switch and the other by AFV. With the modification, a single input may still be assigned to two outputs under AFV control.

To accomplish the change, each switch assembly $(p/n \ 0010-0002)$ has been replaced with switch assembly $p/n \ 0010-0009$. The parts in 0010-0009 are the same as those in 0010-0002, except that the switch $(p/n \ 5142-0001)$ has been changed to one that has four form C contacts $(p/n \ 5142-0002)$.

A schematic of the 0010-0009 switch assembly is shown below.

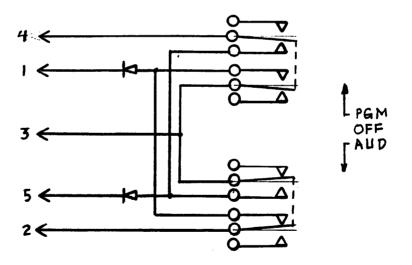

Hallikainen & Friends June 1980

ADDENDUM

On request of Mr. Paul Schleisman (Navy Broadcast Service, The Pentagon, Room 2E-325, Washington, DC 20350: (202)695-2915), the microphone input gain on the TVA142 has been increased by 20 dB.

This change is accomplished by changing Rll6, Rl26, Rl36, Rl46, Rl56, and Rl66 from 160K to 1.5M. In addition, Cl13, Cl23, Cl33, Cl43, Cl53, and Cl63 are deleted.

This change is included on all TVA142 option 1 systems, serial numbers 1081 and above. The part number on the TVA142 main printed circuit board becomes 0011-1262.

These changes increase preamp gain from 30 dB to 50 dB. With front panel gain control at maximum, an input level of -73 dBm (at 150 ohms) causes an output level of +8 dBm.

The equivalent input noise remains unchanged at approximately -118 dBm.

The -1 dB high frequency decreases from 18 KHz to 12 KHz, typical.

Hallikainen & Friends October 1980

TABLE OF CONTENTS

	•
SPECIFICATIONS	1
VARRANTY	2
INSTALLATION	3
TVA 142 Mixer Module	3 5
THEORY OF OPERATION: TVA 132	7
Program Operation	7 8 9
THEORY OF OPERATION: TVA 142	10
Preamplifier Section	10 11 13 14
ADJUSTMENTS	15
TVA 142	15 17 19
FIGURE 1 Switch Location, TVA 142	20
IGURE 2 Control Location TVA 131	21
PARTS LIST TVA 132	2 2
PARTS LIST TVA 142	34
UNIVERSAL POWER SUPPLY	51
OWER AMPLIFIER 1341PA	54
POWER SUPPLY 1351PS	61

.

Page

TABLE OF CONTENTS (cont)

ASSOCIATED DRAWINGS

TVA 132 Schematic, 1262094	C-038
TVA 132 Component Placement, 126200	C-052
TVA 142 Schematic, 1252MM	C-051
TVA 142 Component Placement, 1252MM	C-053
Universal Power Supply Schematic, 1241PS	B-057
Universal Power Supply Component Placement, 1241PS	A-042
Power Amplifier Schematic, 1341PA	B-059
Power Amplifier Component Placement, 1341PA	B-053
Power Amplifier Power Supply Schematic, 1351PS	B-060
Power Amplifier Power Supply Component Placement	A-05 4

WARRANTY

Hallikainen & Friends, a California corporation (Corp) hereby warrants, subject to the conditions herein below set forth, that should this product prove defective by reason of improper workmanship or defective materials within one (1) year from date of original purchase, Corp will repair or, at its option, replace the defective unit without charge for either parts or labor.

CONDITIONS OF WARRANTY

1. <u>Notice</u>. Purchaser shall notify Corp at its principal place of business by telephone within three (3) days after malfunction of the product time is deemed of essence.

2. <u>Proper Delivery</u>. The unit must be shipped, freight prepaid, or delivered to the manufacturing plant of Corp located at San Luis Obispo, CA 93401, in either its original package or a similar package affording an equal degree of protection.

3. The unit must not have been previously altered, repaired or serviced by anyone other than Corp, except for replacement of plug in components with electrically identical components, or routine adjustments as outlined in the accompanying manual. Upon repair by the customer, the Corp shall replace defective plug in parts returned to Corp, but shall not be liable for any labor expenses incurred in a field repair.

4. The serial number on the unit must not have been altered or removed; the unit must not have been subject to accident, misuse, or operated contrary to the instructions contained in the accompanying manual.

5. This warranty does not cover peripheral devices of other manufacturers supplied as part of a system by Corp (such as CRT terminals, printers, etc.); Purchaser's only remedies for malfunction with respect to such devices are with the equipment's manufacturer.

6. This warranty does not cover transportation expenses to and from service facility.

7. This warrant is in lieu of any other oral, written, or implied warranty, whether made by salesmen, agents, or other representatives of Corp.

Except to the extent prohibited by applicable law, all implied warranties made by Corp in connection with the product, including the warranty of merchantability are limited in duration to a period of one (1) year from the date of original purchase, and no warranties, whether express or implied, including said warranty of merchantability shall apply to this product after said period. Should this product prove defective in workmanship or material, the consumer's sole remedy shall be such repairs or replacements as hereinabove expressly provided; and under no circumstances shall Corp be liable for any loss or damage, direct or consequential, arising out of the use of or inability to use, this product.

INSTALLATION

The TVA System is flexible, allowing many types of installation ranging from a simple stand-alone mixer module to a complex thirty-six input AFV fully monitored audio console.

Modules may be installed wherever desired. The only thing to consider is operation. Usually the mixer module will go as close to the operator as possible, with the output module mounted next to it. We recommend the output and mixer modules be separated by no more than ten feet.

<u>TVA 142 Mixer Module</u>: Installation of the TVA 142 Mixer Module consists of selecting the desired input level and connecting the audio inputs, control inputs, mute outputs and audio outputs.

The mixer module inputs are individually selected to either mic or line level by two switches. These switches are internal, mounted on the PC Board. Their adjustment is described based upon their being viewed from the front of the box. Both switches are switched to the left for mic level and to the right for line level operation. Other switch combinations will give non-standard gains and impedances for special situations. Figure 1 shows the location of switches. The switches corresponding to each mixer input are as follows:

Mix 1	select switch	S111 and S112
Mix 2	select switch	S121 and S122
Mix 3	select switch	S131 and S132
Mix 4	select switch	S141 and S142
Mix 5	select switch	S151 and S152
Mix 6	select switch	S161 and S162

The audio inputs connect to TB1 and TB2 on the MIX 1-6 terminals. The input terminates the mic inputs at 150 ohms and line inputs at 10 K-ohms. If the line inputs need further termination, such as 600 ohms, simply add a 620 ohm terminating resistor across the input terminals.

Shielded or unshielded paired wire can be used for line inputs because the transformer inputs are balanced. Shielded wire is recommended for the mic inputs for greatest noise immunity.

The control inputs connect to TB3 and TB4 and are referenced to ground. A ground lug is provided for each input. If an input is to be mixed into the program bus, ground its corresponding CP (control program) terminal. If the input is to be mixed into the audition bus, ground its corresponding CA (control audition) terminal. Both the CA and CP may be grounded simultaneously to feed both channels.

Normally in an audio-follow-video application, each channel's CP would be connected to the ground switched tally output corresponding to the video switcher input that the audio is to follow. Caution: the control inputs must be ground switched. Other devices can be driven from the switched tally only if they are ground switched.

If the switcher tally output is not ground switched, an interface must be built. Most switchers either have existing ground switched outputs or floating relay outputs. One side of these contacts can be tied together and connected to ground to supply ground switching.

The mute outputs for the six channels are also available on TB3 and TB4. They are open collector grounded when activated. They are designed to sink current from relays or other devices to 500 mA with a voltage no greater than +28 V.D.C. open circuit. Several MA (mute audition) or MP (mute program) outputs can be tied together to combine several mute outputs to one relay. These mute outputs can be used to control a studio monitor relay or for any reason to indicate that an input is on.

The audio outputs for the CUE, AUDITION, and PROGRAM channels are located on TB2. They are balanced 600 ohm impedance outputs. Each output has its own separate ground lug.

An unbalanced load may be driven by one side of the balanced line referenced to ground.

<u>TVA 132 Output Module</u>: Installation of the TVA 132 Output Module consists of connecting the summing amplifier inputs, the external and air monitor inputs, and the line and monitor outputs.

The summing amplifier inputs are unbalanced high impedance. Keep the cables short to avoid ground loops and noise pickup. Use single conductor, shielded cable. Connect the center conductor to one of the TVA 142 PGM out terminals and the shield to associated ground terminal. On the TVA 132, connect the center conductor to one of the P terminals. Connect the shield to the ground lug next to it. In the same manner connect another mixer module from its PGM output to a different P terminal and adjacent ground.

Up to six mixer modules can be connected to one output module. Do not bus the program outputs from one mixer module to another and do not connect more than one mixer output to an input on the output module.

In a similar manner, connect the AUD (audition) output of each mixer module to an A terminal and ground terminal on TB1 and TB2 on the output module using a single conductor shielded cable.

Likewise, connect the CUE output of each mixer module to a Q terminal and ground terminal on TB2 of the output module.

5

The air and external inputs are provided to bring other inputs up through the monitor amplifiers. Usually, in a broadcast application, the air monitor audio from the demodulator is connected to the AIR input terminals. Both the AIR and EXT inputs are balanced 10 K-ohms impedance.

The output module provides three outputs each for Program and Audition. These are found on TB3 and TB4. Each is 600 ohms balanced and will drive any equal or higher impedance correctly. Unbalanced loads can be driven from one output terminal and ground.

The CUE output is also 600 ohms balanced and is usually connected to a small monitor amplifier and speaker for monitoring the cue bus. Unbalanced loads can be driven from one terminal and ground.

The two monitor outputs also have 600 ohm balanced outputs. These may drive a high quality amplifier and speaker for audio monitoring of any channel in the TVA system. They also can drive unbalanced loads from one output terminal to ground.

Two mutable ten watt power amplifiers are provided for monitoring. Connect a 8 ohm speaker to the monitor output terminal S (speaker) and the SG (speaker ground) terminal. The other terminal marked M (mute) will mute the amplifier when grounded to the SG terminal. For example, if monitor 2 drives a speaker in a studio, connect its M terminal to the mic channel MA and MP terminals on the TVA142 mixer module which are used in that studio. When mics are turned on, the speaker will mute.

Option one on the TVA132 deletes the power amplifiers. A pair of balanced 600 ohm lines are provided for driving external power amplifiers. In this case, the monitor amplifiers have balanced 600 ohm outputs. These may drive a high quality amplifier and speaker for audio monitoring of any channel in the TVA system. They can also drive unbalanced loads from one output terminal to ground.

6

THEORY OF OPERATION: TVA 131

The TVA 132 is the output module of the TVA series of audio equipment. The TVA 132 allows for system expansion by mixing the program, audition, and cue outputs of up to six TVA 142 mixer modules.

The TVA 132 also provides audio distribution (three balanced 600 ohm outputs each, for audition and program), program and audition metering, and monitor select and gain control functions.

The TVA 132 is powered by a standard power supply module (H&F part number 0010-0004). The operation of the power supply is explained elsewhere in this manual.

The TVA 132 is based on the NE5534, a high quality operational amplifier. Each op amp is powered with \pm 18 V. A 22 pF high frequency stabilization capacitor is provided for each op amp.

Program and audition circuitry are similar. Only program circuitry will be described here.

<u>Program Operation</u>: Each program input (P1 through P6) is attenuated by an L-pad prior to being applied to the summing amp. For P1 input, this pad consists of R101 and R103. The pad provides 6 dB of loss, and allows for a larger range of gain control in the summing amp.

The output of each pad (high side of R103 for P1) is summed in U101. For P1, the summer gain is determined by R102, R119, and R120. R119 adjusts the overall system gain to unity. C102 provides high frequency roll-off, decreasing system noise. R130 minimizes output offset by balancing bias current voltage drops. The output of U101 is the algebraic sum of inputs P1 through P6. The output of the summing amplifier drives three balanced line driving amplifiers, each consisting of two unity gain amplifiers. Each line amp operates in a similar manner.

U104 acts as a unity gain inverting amplifier. R136 and R138 set the gain to unity. C109 provides high frequency roll-off. R137 allows the non-inverting input bias current to develop a voltage similar to that on the inverting input, decreasing the output offset voltage.

The output of U104 is coupled through C110 and R139 to the output. C110 blocks any DC offset present on the output of U104. R139 provides half the 600 ohm source impedance that is seen by the load.

U104 also drives M101, the program VU meter. R146 provides for calibration of the VU meter.

U101 also drives U105, a non-inverting voltage follower. This non-inverting amplifier provides the other half of the balanced 600 ohm output.

The balanced audio output appears similar to an output driven by a 600 ohm transformer with the center tap grounded. Unbalanced loads may be driven by connecting the load between one output and ground.

U106, whose operation is identical to U104, also drives R147. R147 provides an adjustable program level to the monitor circuitry.

<u>Cue Operation</u>: The cue outputs of up to six TVA 142s are summed in U301. R307 and the input resistors (R301 through R306) set the gain at unity. C302 provides high frequency roll-off.

U301 drives U302, C302, and R314.

U302 acts as a unity gain inverting amplifier. Gain is set by

R310 and R311. C305 provides high frequency roll-off. R312 allows U302 bias currents to develop balanced voltages, minimizing output offset. C306 blocks any offset voltage, while R313 provides half the line driving impedance.

U301 driving C303 and R309 provides the second half of the balanced cue output.

U301 drives R314 to provide an adjustable level to the monitor select circuitry.

<u>Monitor Operation</u>: The TVA132 monitor circuitry is available in two configurations. The standard TVA132 provides an unbalanced mutable speaker level output for each monitor. Option 1 deletes the power amplifiers and provides balanced 600 ohm line level outputs. This line driving circuitry is the same as the other active balanced line drivers used in the TVA132.

In the standard TVA132, the monitor select switches connect the primary of the input transformer to one of the program feeds of the TVA132, or to one of the external inputs. Level controls are provided on each internal monitor feed to allow levels to be balanced with external sources.

The secondary of the input transformer drives the level control and the 1341PA power amplifier, covered later in this manual. The use of an input transformer allows external monitor inputs to bridge balanced or unbalanced lines.

The TVA132 option 1 has the secondary of the input transformer drive the level control and a standard active balanced line driver. The balanced output may drive balanced loads, or by connecting between one side and ground, drive unbalanced loads.

9

THEORY OF OPERATION: TVA 142

The TVA 142 is a high quality audio mixer designed around the NE5534 operational amplifier. Standard op-amp techniques are used throughout. The following discussion provides specific details on the circuit design to aid in trouble-shooting. Refer to the TVA 142 schematic diagram.

<u>Preamplifier Section</u>: The TVA 142 contains six preamps, one for each input. The preamp section converts the balanced line to unbalanced in an input transformer, provides gain, and provides impedance matching.

The preamp section of input one will be discussed in detail.

T111 provides balanced-to-unbalanced conversion, impedance conversion, and voltage gain. S111 determines whether the input is to bridge a 600 ohm line or operate from a 50 to 250 ohm microphone source. When in the line position, R111, R112 and R113 provide the 18 dB loss necessary to prevent transformer overload while presenting a high (bridging) impedance to the line and a low impedance to the transformer primary. When in the microphone position, S111 connects the input directly to the 150 ohm primary of T111. Due to the low source impedance, the loading through R111 and R112 is neglegible.

When in the microphone position, T111 provides a voltage gain of 10 (20 dB) due to its turns ratio. Since the secondary of T111 is terminated in 47K (R114), an additional voltage gain of 1.5 (3.5 dB) is achieved over a matched termination.

C111, C112 and the electrostatic shielding in T111 provide protection from RF fields.

Ulll provides a gain of 7.7 (18 dB) or 34 (31 dB) depending upon the setting of S112. S112 is typically in the low-gain position for a line input and in the high-gain position for a mic input. It may, however, be put in the high-gain position for a low-level line (such as network or remote line). C113 and C114 roll off the high frequencies starting at about 50 KHz in both gain settings. C115 provides highfrequency stability for the op-amp.

Ull1 drives the front panel gain control assembly (H&F part number 0010-0001) through Cll6. Cll6 eliminates any DC offset that may be present on the output of Ull1.

The front panel gain control is a relatively low resistance pot with a "cue switch". The low resistance (1 K) provides a low driving impedance to the LDRs and summing resistors and provides noise immunity.

When in the cue position, the control assembly drives a summing amplifier (U401) through R411. The wiper of the control assembly provides audio to the output bus assign circuitry.

Output Bus Assignment Circuitry: Output bus assignment is accomplished with optic couplers. When current flows through the couplers LED, the resistance of the LDR (CdS light dependent resistor) drops. The LDRs are driven by logic circuitry sampling external control signals, and are driven by a front panel lever switch (H&F part number 0010-0002). The lever switch operates independently of the logic circuitry so that manual control can be provided should the logic fail. A sample of the control signal driving the LDR drives a transistor for each channel providing an open collector "muting" output. This output can drive monitor muting circuitry, warning lights, or be used to start the selected device (i.e. cart start). The program bus assignment circuitry of input one will be discussed in detail.

An external contact closure to ground (or open collector transistor pulling to ground) on the CP (Control Program) input of channel one (TB3-1) will cause the output of the channel one preamp section to be assigned to the program bus.

When TB3-1 is pulled low, the input to U501 is pulled low through D511. D511 provides protection from more positive external control voltages, allowing the control signal driving the CP input to control other devices. C511 provides protection from RF. R511 provides a pull-up so that an open input is interpreted as a logic one. U501 is an inverting Schmitt trigger. It provides noise immunity, insuring the LDR is driven all the way on or off. U502 is an open source (similar to bipolar emitter follower) CMOS buffer. When U501 provides a logic 1 input, U502 provides enough current on its output to drive U212 (the LDR) through the Program LED in the switch assembly and R211. The output of U502 can also be driven high (activating the LED and LDR) by setting the front panel switch in the program position. A channel can be assigned by either the front panel lever switch or an external control signal. It is permissable to assign one preamplifier output to both program and audition busses through external control signals and switch settings.

When the LED of U212 is driven by either an external control signal or the front panel switch, Q511 is turned on through R513 which causes the collector to pull to ground. This provides an external status signal indicating that channel one is assigned to program. This output

12

(MP on TB3-4) can be used to mute studio monitors, or other control purposes. Several Muting outputs can be tied together to cause muting when any of several inputs are assigned to program. Similar provisions are available for the audition channel.

Once the LED of U212 is activated, indicating assignment of channel one to program, the LDR allows audio to pass through R212 to U201, the program bus summing amp. The gain of U201 is set to 8.3 (18 dB) by R201 and the corresponding input resistor (such as R212).

C211 and R202 provide a low level signal to the non-inverting input of U201 to compensate for leakage to the inverting input through the LDR. C201 and R201 provide a high frequency roll-off at about 50 KHz. C202 provides high frequency stability for U201.

<u>Line Driver</u>: The TVA 142 provides three active balanced 600 ohm outputs. These outputs are for the program bus, the audition bus, and the cue bus. The line drivers are the same, except for required differences in gain in the first summing amplifier.

U201 and U202 provide the program output. U201 is the program bus summing amplifier. U202 is a unity gain inverting amplifier, providing the second half of the balanced line. The output appears similar to the output obtained from a transformer with the center tap grounded, except that the source impedance seen by an unbalanced load (one line to ground) here is 300 ohms, and would be 150 ohms with a transformer output.

The output can be used to drive either balanced or unbalanced loads. With unbalanced loads, the load is driven by one line to ground.

When making test measurements with an unbalanced input audio voltmeter, the levels will appear the same as would be applied to a

13

balanced terminating load, when bridging from one side to ground. There is a 6 dB gain since the meter does not terminate the output (causing no drop across the internal resistor) and a 6 dB loss since only one side of the line is sampled.

<u>Peak Flashers</u>: Peak flashers are provided on the audition and program outputs as a means of determining output level.

The peak flashers are based upon the NE555V timer. The program peak flasher will be discussed in detail.

R602 and R603 provide an adjustable bias signal to the trigger input (pin 2) of U601. Program audio is coupled through R604 and C603 to the trigger input, where it is combined with the bias signal. When a negative program peak causes the trigger input to U601 to go below 4 bolts, the output (pin 3) is driven high, lighting the program peak flasher LED. When the output (pin 3) of U601 goes high, a saturated transistor holding pin 7 at ground potential is turned off, allowing C604 to charge through R606.

After the voltage at the threshold input (pin 6) reaches 8 volts, the timer is reset. This causes pins 3 and 7 to go low, extinguishing the LED and discharging C604 until the next program peak. C605 bypasses the internal reference voltage in U601. The persistence provided by the timer insures that even the shortest program peaks will be displayed.

The bias level set by R602 can be varied to allow the peak flasher to trigger at various levels.

The TVA 142 combines innovative audio and control circuitry to provide a high quality audio mixer.

ADJUSTMENTS

The TVA system is shipped fully checked out and ready for installation. It might be necessary to make some adjustments because your operating requirements are different than the factory settings. Therefore, a complete setup procedure will be discussed.

The following equipment will be necessary for checking out the TVA system:

DC Voltmeter AC Voltmeter Low Distortion Audio Generator Distortion Analyzer

<u>TVA 142</u>: Adjusting the TVA 142 Mixer Module for proper operation consists of checking the power supply voltages and setting the indicating level of the program peak flasher.

Check to see that both the positive and negative 18 volt power supplies are operating within one volt of plus and minus 18 volts. The power supplies can be easily checked at the power supply connector JØ1. Pin 1 is the plus 18 volt and pin 3 is the minus 18 volt connector. Use chassis ground as the meter reference. Also check the plus 12 volt logic supply. It should be within one volt of plus 12 volts.

Connect the audio generator to the MIX 1 terminals. Adjust the output of the generator for -10 dBm and a frequency of 400 Hz. Switch the MIX 1 lever switch to P and the MIX 1 gain control fully clockwise. Check to see that the MIX 1 gain switch S112 is in the line level position and that the MIX 1 transformer select switch is in the line winding position (both switches to the right). Refer to figure 1 for the location of the switches. Connect the audio voltmeter or distortion analyzer to a PGM output terminal and the ground next to it. The output level should be +8 dBm, or other desired output level between Ø and +8 dBm. Normally the peak flashers are set to indicate a level 10 dBm over the nominal output level, but they may be adjusted to any level between 0 and +23 dBm. Adjust the audio generator output to increase the output level measured at the PGM terminal to +18 dBm. Adjust the peak flasher level. Set pot R602 so that the PROGRAM peak flasher just lights. This also sets the level of the AUDITION peak flahser.

Return the generator output level to -10 dBm. Check that the other PGM terminal to ground also has an output of +8 dBm. Check the audition channel by throwing the MIX 1 lever switch to A.

Connect the voltmeter to one AUD terminal and ground next to it. The voltmeter should read +8 dBm with the input level still at -10 dBm. Check that the other PGM terminal to ground also has an output of +8 dBm. Turn the MIX 1 gain control fully counterclockwise to switch it into the CUE position. Change the voltmeter to a CUE terminal and the ground next to it. Read the output level. It should be -10 dBm. Check the other CUE terminal to ground to insure it also has an output level of -10 dBm.

Check the other MIX inputs with the audio generator set to produce -10 dBm at 400 Hz. Set the gain pots fully clockwise and insure that the inside gain switches and transformer winding select switches are in the line positions. Again, refer to figure 1 for the location of the switches. Check the inputs one at a time by connecting the generator to the MIX terminals and reading the output on a voltmeter connected first to a PGM terminal and ground and then to an AUD terminal and ground. Turn the gain control counterclockwise into the CUE position and check the output at a CUE terminal and ground. The normal output level for the PGM and AUD channels is +8 dBm. The normal output level for the CUE channel is +8 dBm with a +8 dBm input.

After all the inputs have been checked in the line configuration, check them in the mic configuration by reducing the output of the audio generator to -58 dBm. Change all the gain select switches to mic level and the transformer winding select switches to mic winding. Check that all the MIX channels one by one with the gain control fully clockwise produce a level of +8 dBm at one PGM terminal and ground. This completes the setup and checkout of the TVA 142 Mixer Module.

<u>TVA 132</u>: Adjusting the TVA 132 Output Module for proper operation consists of checking the power supply, voltages, setting the gain of the program and audition amplifiers, calibrating the VU meters, and adjusting the monitor levels to provide equal output no matter which switch position is selected.

Insure that both the positive and negative power supplies are operating within one volt of plus and minus 18 volts. The power supplies can be easily checked at the power supply connector J01. Pin 1 is the plus 18 volt and pin 3 is the minus 18 volt connector. Use chassis ground as a reference.

Connect the audio generator to the P1 terminal and ground. Adjust the output of the audio generator to +8 dBm at a frequency of 400 Hz. Connect an audio voltmeter or distortion analyzer to a PGM terminal and ground. Adjust the program gain control R119 for a level of +8 dBm measured at the PGM terminal. Refer to figure 2 for location of controls. The gain control will allow output levels if desired. Set the program VU calibrate control R146 to make the program VU meter read 0 VU. Check the other terminal of the PGM output used. It should read +8 dBm also.

Check the remaining PGM outputs one terminal at a time to a ground to insure that they all read +8 dBm.

Leave the audio voltmeter connected to one PGM output and a ground. Connect the remaining P inputs one at a time to the audio generator to insure they all work.

Repeat the above procedure for the Audition channel. The audition gain control is R219 and the audition VU calibrate control is R246. Connect the audio generator to the Q1 terminal and ground.

Set the output to +8 dBm at 400 Hz. Connect the audio voltmeter or distortion analyzer to a CUE terminal and ground. The voltmeter should read +8 dBm. The CUE channel gain is not adjustable, but is fixed at unity. Insure that the other CUE terminal to ground is also reading +8 dBm. Check the remaining Q inputs one at a time to insure that they work.

Connect the audio generator to the air input. This is a transformer input, so connect it across both sides. Press the air pushbutton on both monitor selectors. Adjust the audio generator for 0 dBm. Set the output frequency to 400 Hz.

Disconnect the plug from J402, the monitor gain control. Connect a voltmeter to pins 1 and 3 of J402. Measure the voltage and record it.

Disconnect the audio generator from the AIR input and connect it to the P1 terminal and ground. Reset the output level of the audio generator to +8 dBm. Select the PGM pushbutton on the Monitor 1 selector. Adjust R147, program monitor level, for the same level as measured in the last step.

Connect the audio generator to the Al terminal and ground. Select the AUD pushbutton on the Monitor 1 selector. Adjust R247, audition monitor level, for the same level as measured previously.

Set the audio generator back at 0 dBm. Connect it to the EXT terminals. Connect across both terminals because this is a transformer input.


Disconnect the voltmeter and replace the plug on J402. Select the EXT pushbutton on the monitor 1 selector. A level of +8 dBm should be measured on the Monitor 1 output terminals, if the module does not have power amplifiers. The other side of the balanced monitor 1 output line should be checked to insure that each side has the same level.

In modules with power amplifiers, a speaker should be connected to the output, and the tone heard.

This completes alignment of the TVA132 output module. Note that there is one required adjustment on the 1341PA power amplifiers. That adjustment is covered in the section of this manual devoted to the 1341PA.

<u>Printed Circuit Board Removal</u>: If necessary, the main PC board in the TVA series modules can be easily removed for service. Disconnect all connections to the barrier strips. Disconnect all Molex connectors on the board. Locate the six flat head screws on the bottom of the chassis which screw in to standoffs that support the PC board. Remove these six screws. Slide the PC board toward the front of the chassis and lift it out. To install the PC board, replace the screws, connectors, and connections to the barrier strips.

Do not attempt to remove the six hex screws on top of the PC board. This will only add great difficulty in removing the board, as the standoffs will then be in the way of the barrier strips.

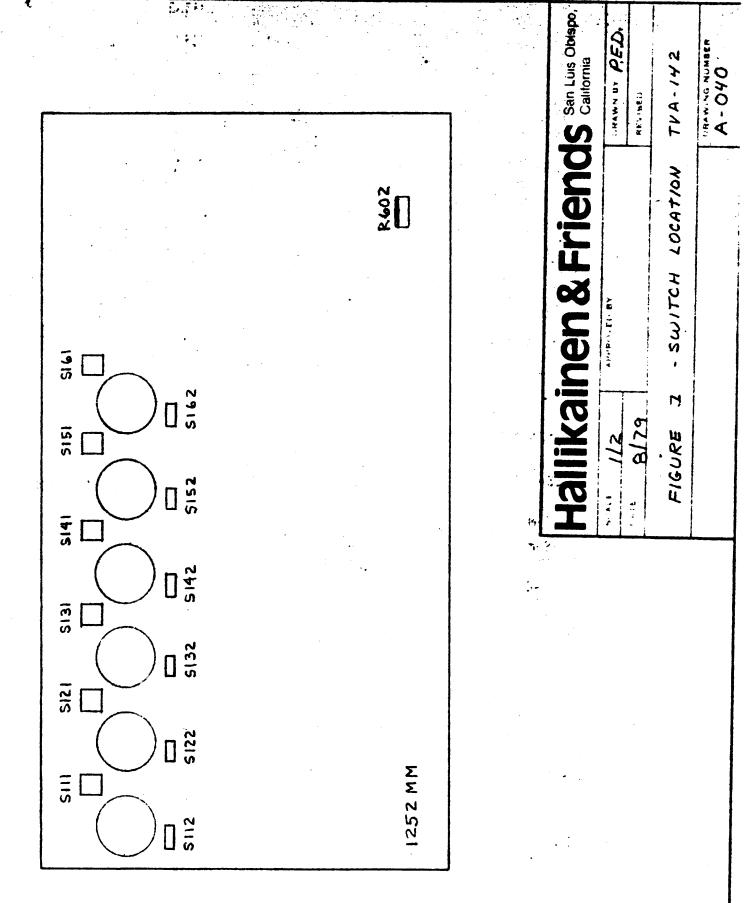

		 14. (1997) - 1977) - 1977)
		· · ·
		4
R119 PGM,GAIN	R 219 AUD. GAIN	١
	1 1 1 1 1 1 1 1 1 1 247 R246 R 314 UG MON, AUD V.U. Q MON.	1. 1.
1261 OM		•••

1

į

• .

1. 4

.

Hallikainen & Friends Sán Luis Obispo. California				
1/2	APPROVED BY	RAWN BY PIE.D.		
8/79		HEVISED		
FIGURE 2 - CONTROL LOCATION TVA - 131				
Andre en angelen in Maria en angelen genangen angelen angelen en en angelen an	anda — adapta ang ang ang pang pang pang pang pang p	DRAWING NUMBER		

•

. •.

TVA 132 PARTS LIST

Component Designation	н&ғ <u>Р/N</u>	Description
C01	1535-1261	Capacitor, Tantalum, Mallory TAC126K025P04, 12 uF, 25V
C02	same as COl	
C03	1508-3010	Capacitor, Ceramic, Mallory GP-330, 300 pF, 1000 V
C04	same as CO3	
C05	same as CO3	
C06	same as CO3	
C07	1508-1041	Capacitor, Ceramic, Mallory MAG 2501, .1 uF, 25V
C08	same as CO7	
C09	same as CO7	e de la construcción de la constru La construcción de la construcción d
C10	same as CO7	
C101	1508-2200	Capacitor, Ceramic, Mallory GP-422 22pF, 1000 V
C102	1529-5600	Capacitor, Polystyrene, Mallory SX-456, 56 pF, 500 V.
C103	same as C101	
C104	1529-1510	Capacitor, Polystyrene, Mallory SX-315 150 pF, 500 V
C105	1510-1070	Capacitor, Electro lytic, Arco ME-7G-100, 100 uF, 50 V
C106	same as C101	
C107	same as C105	
C108	same as C101	
C109	same as C104	

Component Designation	H&F P/N	Description
C110	same as C105	
C111	same as C101	
C112	same as C105	
C113	same as C101	
C114	same as C104	
C115	same as C105	
C116	same as C101	
C117	same as C105	
C201	same as C101	
C202	same as C102	
C203	same as C101	
C204	same as C104	
C205	same as C105	
C206	same as C101	
C207	same as C105	
C208	same as C101	
C209	same as C104	
C210	same as C105	
C211	same as C101	
C212	same as C105	
C213	same as C101	
C214	same as C104	

Component Designation	H&F P/N	Description
C215	same as C105	
C216	same as C101	
C217	same as C105	
C301	same as C101	
C302	same as C104	
C303	same as C105	
C304	same as C101	
C305	same as C104	
C306	same as C105	
C401	same as C101	
C402	same as C102	
C403	same as C105	
C404	same as C101	
C405	same as C104	
C406	same as C105	
C501	same as C101	
C502	same as C102	
C503	same as C105	•
C504	same as C101	
C505	same as C104	
C506	same as C105	
D01	4800-4002	Diode, Silicon

iode, Silicon, 1N4002, 1 A 100 PIV

Component Designation	н&F Р/N	Description
D02	same as DO1	
J01	2100-0106	Connector, 6 pin, Molex 09-60-1061
J101	2100-0104	connector, 4 pin, Molex 09-60-1041
J201	same as J101	
J401	2100-0110	Connector, 10 pin, Molex 09-60-1101
J402 J403 J501	2100-0103 2100-0105 same as J401	Connector, 3 pin, Molex 09-60-1031 Connector, 5 pin, Molex 09-60-1051
J502 J503 M01	same as J402 same as J403 2900-0001	VU Meter, Dixson 330 994E, W/lamps
M02	same as MO1	
R101	4711-4103	Resistor, Carbon, ½ watt, 5%, 10K
R102	4711-4473	Resistor, Carbon, ½ watt, 5%, 4.7K
R103	same as R102	
R104	same as R101	· · ·
R105	same as R102	
R106	same as R102	
R107	same as R101	
R108	same as R102	
R109	same as R102	
R110	same as R101	
R111	same as R102	
R112	same as R102	

Component Designation	H&F <u>P/N</u>	Description
R113	same as R101	
R114	same as R102	
R115	same as R102	
R116	same as R101	
R117	same as R102	
R118	same as R102	
R119	4766-2503	Trim Pot, CTS X201R503B, 50K
R120	4711-4822	Resistor, Carbon, ½ watt, 5%, 8.2K
R121	same as R102	
R131	same as R101	
R132	same as R101	
R133	same as R101	
R134	4711-4301	Resistor, Carbon, ½ watt, 5%, 300 ohm
R135	same as R134	
R136	same as R101	
R137	same as R102	
R138	same as R101	
R139	same as R134	
R140	same as R134	
R141	same as R101	
R142	same as R102	
R143	same as R101	

Component Designation	н&F <u>Р/N</u>	Description
R144	same as R134	
R145	same as R134	
R146	4766-2103	Trim Pot, CTS X201R103B, 10K
R147	same as R146	·
R201	same as R101	
R202	same as R102	
R203	same as R102	
R204	same as R101	
R205	same as R102	
R206	same as R102	
R207	same as R101	
R208	same as R102	
R209	same as R102	
R210	same as R101	
R211	same as R102	
R212	same as R102	
R213	same as R101	
R214	same as R102	
R215	same as R102	
R216	same as R101	
R217	same as R102	
R218	same as R102	

.

.

.

Component Designation	н&ғ <u>Р/N</u>	Description
R219	same as R119	
R220	same as R120	
R231	same as R101	
R232	same as R102	
R233	same as R101	
R234	same as R134	
R235	same as R134	
R236	same as R101	
R237	same as R102	
R238	same as R101	
R239	same as R134	
R240	same as R134	
R241	same as R101	
R242	same as R102	
R243	same as R101	
R244	same as R134	
R245	same as R134	
R246	same as R146	
R247	same as R146	
R301	same as R101	
R302	same as R101	
R303	same as R101	

. •

Component Designation	н&F <u>Р/N</u>	Description
R304	same as R101	
R305	same as R101	
R306	same as R101	
R307	same as R101	
R308	same as R102	
R309	same as R134	
R310	same as R101	
R311	same as R101	
R312	same as R102	
R313	same as R134	
R314	same as R146	
R401	0010-0007	Pot Assembly, 10K
R402	same as R101	
R403	same as R102	
R404	4711-4273	Resistor, Carbon, ½ watt, 5%, 27K
R405	same as R134	
R406	same as R101	
R407	same as R102	
R408	same as R101	
R409	same as R134	
R501	same as R401	
R502	same as R101	

Component Designation	H&F <u>P/N</u>	Description
R503	same as R102	
R504	same as R404	
R505	same as R134	
R506	same as R101	
R507	same as R102	
R508	same as R101	
R509	same as R134	
S401	0010-0006	Selector Switch Assembly
S501	same as S401	
T401	5605-0001	Transformer, UTC PC-0-26, 10K:10K
T501	same as T401	
TB1	2100-0035	Terminal Strip, Magnum, 2061-15-06-AB
TB2	same as TB1	
TB3	2100-0036	Terminal Strip, Magnum, 2051-15-06-AB
TB4	same as TB3	
U101	3130-5534	Operational Amplifier, NE5534
U102	same as U101	
U103	same as U101	
U104	same as U101	
U105	same as U101	
U106	same as U101	
U107	same as U101	

Component Designation	н 6 ғ <u>Р/N</u>	Description
U201	same as U101	
U202	same as U101	
U203	same as U101	
U204	same as U101	
U205	same as U101	
U206	same as U101	
U207	same as U101	
U301	same as U101	
U302	same as U101	
U401	same as U101	
U402	same as U101	
U501	same as U101	
U502	same as U101	

TVA 132 PARTS LIST (non designated parts)

H&F <u>P/N</u> Description Chassis back 1400-0506 Rack Panel 1400-0507 1400-0508 Chassis front 1400-0509 Chassis box 2100-0005 IC Socket, 8 pin 2100-0019 Buss HKP, Single D fuse holder Rogan RB6725K7M ½ B1k knob 2410-0002 Mallory TCBS6N 3/8" spacer 2803-0006 HH. Smith 8349 1-2" spacer 2807-8349 Regulator, 7818/LM340T-18, +18 V 3130-7818 Regulator, 7918/LM 320T-18, -18 V 3130-7918 4104-0005 Buss AGC ½, ½ Amp Fuse Stancor P8613 36 V Transformer 5633-8613 6028-7239 Belden 17239B Line cord 6036-0939 H.H. Smith #939 Strain relief

0010-0006 SWITCH ASSEMBLY

н&F <u>Р/N</u>	Description
1400-0501	Switch bracket
1706-1271	H&F 1271 SW P.C. Board
2100-0130	Connector, Molex 09-50-7101, 10-pin
2100-0158	Pin, Molex 08-50-0108
5157-0005	Switch, Schadow 5XF, 17.5 FE/BLK/24/GR 5 station DPDT

0010-0007 POT ASSEMBLY

.

.

H&F P/N	Description
2100-0123	Connector, Molex 09-50-7031, 3 pin
2100-0156	Pin, Molex 08-50-0108
4757-0103	Pot, Bournes 82A1A-B28-D15, 10K

TVA 142 PARTS LIST

Component Designation	H&P P/N	Description
C01	1535-1261	Capacitor, Tantalum, Mallory TAC126K025PU4, 12 uF, 25 V
C02	same as COl	
C03	same as CO1	
CO4	same as CO1	
C05	same as COl	
C06	same as CO1	
C07	same as CO1	
C08	same as CO1	
C09	same as CO1	
C10	same as CO1	
C111	1508-3010	Capacitor, Ceramic, Mallory GP-330, 300pF, 1 KV
C112	same as C111	
C113	1529-2000	Capacitor, Polystyrene, Mallory SX-420, 20pF, 500 V
C11 4	1529-5600	Capacitor, Polystyrene, Mallor SX-456, 56 pF, 600 V
C115	same as C113	
C116	1510-5060	Capacitor, Electrolytic, Arco ME4G050, 50 uF, 25 V
C121	same as C111	
C122	same as C111	
C123	same as C113	
C124	same as C114	

Component Designation	н&ғ <u>Р/N</u>	Description
C125	same as C113	
C126	same as C116	
C131	same as C111	
C132	same as C111	
C133	same as C113	
C134	same as C114	
C135	same as C113	
C136	same as C116	
C141	same as C111	
C142	same as C111	
C143	same as C113	
C144	same as C114	
C145	same as C113	
C146	same as C116	
C151	same as C111	
C152	same as C111	
C153	same as C113	
C154	same as C114	
C155	same as C113	
C156	same as C116	
C161	same as C111	
C162	same as C111	

Component Designation	H&F <u>P/N</u>	Description
C163	same as C113	
C164	same as C114	
C165	same as C113	
C166	same as C116	
C201	1529-7500	Capacitor, Polystyrene, Mallory SX-475, 75pF, 600 V
C202	1508-2200	Capacitor, Ceramic, Mallory GP-422, 22pF, 1 KV
C203	1529 - 1510	Capacitor, Polystyrene, Mallory SX-315 150 pF, 630 V
C204	same as C202	
C211	1529-3000	Capacitor, Polystyrene, Mallory SX-430, 30 pF, 600 V
C221	same as C211	
C231	same as C211	
C241	same as C211	
C251	same as C211	
C261	same as C211	
C301	same as C201	
C302	same as C202	
C303	same as C203	
C304	same as C204	
C311	same as C211	
C321	same as C211	

Component Designation	н& г <u>Р/N</u>	Description
C331	same as C211	
C341	same as C211	
C351	same as C211	
C361	same as C211	
C401	same as C2O3	
C402	same as C2O2	
C403	same as C2O3	
C404	same as C204	
C511	1508-1031	Capacitor, Ceramic, Mallory TA-110, .01 uF, 100 V
C512	same as C511	
C521	same as C511	
C522	same as C511	
C531	same as C511	
C532	same as C511	
C541	same as C511	
C542	same as C511	
C551	same as C511	
C552	same as C511	
C561	same as C511	
C562	same as C511	
C601	same as CO1	
C602	1508-2240	Capacitor, Ceramic, Mallory MAG-25022, .22 uF, 25 V

.

Component Designation	H&F <u>P/N</u>	Description
D501	0010-0005	Peak Flas her Di spla y Assembly
D511	4800-4002	Diode, Silicon, 1N4002
D512	same as D511	
D521	same as D511	
D522	same as D511	
D531	same as D511	
D532	same as D511	
D541	same as D511	
D542	same as D511	
D551	same as D511	
D552	same as D511	
D561	same as D511	
D562	same as D511	
J01	2100-0106	Connector, 6-pin, Molex 09-60-1061
J111	2100-0104	Connector, 4-pin, Molex 09-60-1041
J121	same as J111	
J131	same as J111	
J141	same as J111	
J151	same as J111	
J161	same as J111	
J511	2100-0105	Connector, 5-pin, Molex 09-60-1051
J521	same as J511	

Component Designation	н&ғ <u>Р/N</u>	Description
J531	same as J511	
J541	same as J511	
J551	same as J511	
J561	same as J511	
J601	2100-0103	Connector, 3-pin, Molex 09-60-1031
Q511	4849-2222	Transistor, 2N2222
Q512	same as Q511	
Q521	same as Q511	
Q522	same as Q511	
Q531	same as Q511	
Q532	same as Q511	
Q541	same as Q511	
Q542	same as Q511	
Q551	same as Q511	
Q552	same as Q511	
Q561	same as Q511	
Q562	same as Q511	
R111	4711-4472	Resistor, ½ watt, 5%, 4.7 K
R112	same as R111	
R113	4711-4152	Resistor, ½ watt, 5%, 1.5 K
R114	4711-4473	Resistor, ½ watt, 5%, 47 K
R115	same as R111	

Component Designation	HSF <u>P/N</u>	Description
R116	4711-4164	Resistor, दे watt, 5%, 160 K
R117	same as R114	
R118	0010-0001	Control Assembly, 1 K
R121	same as R111	
R122	same as R112	
R123	same as R113	
R12 4	same as R114	
R125	same as R112	
R126	same as R116	
R127	same as R114	
R128	same as R118	
R131	same as R111	
R132	same as R111	
R133	same as R113	
R134	same as R114	
R135	same as R111	
R136	same as R116	
R137	same as R114	
R138	same as R118	
R141	same as R111	
R142	same as R111	
R143	same as R113	

Component Designation		Description
R144	same as R114	
R145	same as R111	
R146	same as R116	
R147	same as R114	
R148	same as R118	
R151	same as R111	
R152	same as R111	
R153	same as R113	
R154	same as R114	
R155	same as R111	
R156	same as R116	
R157	same as R114	
R158	same as R118	
R161	same as R111	
R162	same as R111	
R163	same as R113	
R164	same as R114	
R165	same as R111	
R166	same as R116	
R167	same as R114	
R168	same as R118	:
R201	4711-4393	Resistor, ½ watt, 5%, 39 K

Component Designation	H&F P/N	Description
R202	same as R111	
R203	4711-4103	Resistor, ½ watt, 5%, 10 K
R20 4	same as R203	
R205	same as R111	
R206	4711-4301	Resistor, ½ watt, 5%, 300 ohm
R207	same as R206	
R211	4711-4561	Resistor, ½ watt, 5%, 560 ohm
R212	same as R111	
R221	same as R211	
R222	same as R111	
R231	same as R211	
R232	same as R111	
R241	same as R211	· · · · · · · · · · · · · · · · · · ·
R242	same as R111	
R251	same as R211	
R252	same as R111	
R261	same as R211	
R262	same as R111	
R301	same as R201	
R302	same as R111	
R303	same as R203	
R304	same as R203	

•

.

Component Designation	н& ғ <u>Р/N</u>	Description
R305	same as R203	
R306	same as R206	
R307	same as R206	
R311	same as R211	
R312	same as R111	
R321	same as R211	
R322	same as R111	
R331	same as R211	
R332	same as R111	
R341	same as R211	
R342	same as R111	
R351	same as R211	
R352	same as R111	
R361	same as R211	
R362	same as R111	
R401	same as R203	
R402	same as R111	
R403	same as R203	
R404	same as R203	
R405	same as R111	
R406	same as R206	
R407	same as R206	

.

.

Component Designation	H&F <u>P/N</u>	Description
R511	same as R203	
R512	same as R203	
R513	4711-4222	Resistor, ½ watt, 5%, 2.2 K
R514	same as R513	
R521	same as R206	
R522	same as R206	
R523	same as R513	
R524	same as R513	
R531	same as R206	
R532	same as R206	
R533	same as R513	
R534	same as R513	
R541	same as R206	
R542	same as R206	
R543	same as R513	
R544	same as R513	
R551	same as R203	
R552	same as R203	
R553	same as R513	
R554	same as R513	
R561	same as R203	
R562	same as R203	

Component Designation	н& F <u>Р/N</u>	Description
R563	same as R513	
R564	same as R513	
R601	4711-4100	Resistor, ½ watt, 5%, 10 ohm
R602	4766-2502	Trim Pot, CTS 201R50-2B, 5K
R603	4711-4332	Resistor, ½ watt, 5%, 3.3 K
R604	same as R203	
R605	same as R203	
R606	4711-4824	Resistor, दे watt, 5%, 820 K
R607	same as R206	
R608	same as R203	
R609	same as R203	
R610	same as R606	
R611	same as R206	
S111	5134-0003	Dip Switch, AMP 435470-5, DPDT
S112	5134-0002	Dip Switch, AMP 435665-2, SPST
S121	same as S111	
S122	same as S112	
S131	same as S111	
S132	same as S112	
S141	same as S111	
S142	same as S112	
S151	same as S111	
S152	same as S112	

Component Designation	H&F P/N	Description
S161	same as S111	
S162	same as S112	
\$511	0010-0002	H&F Switch Assembly
\$521	same as S511	
8531	same as S511	
\$541	same as S511	
\$551	same as S511	
S561	same as \$511	
T111	5605-0003	Transformer, Sescom custom, 150/15K:15K
T121	same as T111	
T131	same as T111	
T141	same as T111	
T151	same as T111	
T161	same as T111	
TB1	2100-0035	Terminal Strip, Magnum, 2061-15-06-AB
TB2	same as TB1	
TB3	2100-0036	Terminal Strip, Magnum, 2051-15-06-AB
TB 4	same as TB3	
U111	3130-5534	Operational Amplifier, NE5534
U121	same as U111	
U131	same as U111	
V141	same as Ulll	

•

.

Component Designation	н&ғ <u>Р/N</u>	Description
U151	same as U111	
U161	same as U111	
U201	same as U111	
U202	same as U111	
U212	3717-0001	Optical Isolator, Vactec VIL 5C2
U222	same as U212	
U232	same as U212	
U242	same as U212	
U252	same as U212	
U262	same as U212	
U301	same as U111	
U302	same as U111	
U312	same as U212	
U322	same as U212	
U332	same as U212	
U342	same as U212	
U352	same as U212	
U362	same as U212	
U401	same as U111	
U402	same as U111	
U501	3130-7914	Hex Schmidt Trigger, 74C914
U502	3130-7907	Hex Buffer, 74C907

-

.

Component Designation	н & F <u>Р/N</u>	Description
U503	same as U502	
U504	same as U501	
U505	same as U502	
U506	same as U502	
U601	3130-0555	Timer, NE555V
U602	same as U601	

.

TVA 142 PARTS LIST (Non-designated Parts)

н&ғ <u>Р/N</u>	Description
1400-0110	Chassis Top
1400-0503	Rack Panel
1400-0504	Chassis Front
1400-0505	Chassis Rear
1400-0509	Chassis Box
2100-0005	Dip Socket, 8-pin
2100-0006	Dip Socket, 14-pin
2100-0019	Fuse holder, Buss HKP
2100-0158	Contact, Molex 08-50-0108
2100-0226	Connector, Molex 09-50-3061, 6-pin locking
2180-2214	Crimp connector, Waldom CE02214
2410-0001	Knob, Rogan RB6735K7M ½ B1k
2803-0006	Spacer, Mallory TCBS 6N, 3/8"
2807-8349	Spacer, H.H. Smith 8349, $1-\frac{1}{2}$ "
3130-7812	Regulator, 7812, +12 V
3130-7818	Regulator, 7818, +18 V
3130-7918	Regulator, 7918, -18 V
5104-0005	Fuse, Buss AGC ½, ½ amp
5633-8613	Transformer, Stancor P8613, 36 V
6028-7239	Line cord, Belden 17239B
6036-0939	Strain Relief, H.H. Smith 939

0010-0001 CONTROL ASSEMBLY, 1 K

.

H&F P/N	Description
2100-0124	Connector, Molex 09-50-7014, 4-pin
2100-0158	Pin, Molex 08-50-0108
4757-0102	Pot, Bournes 86AZAB28B10R51, 1K

0010-0002 SWITCH ASSEMBLY

H&F P/N	Description
2100-0125	Connector, Molex 09-50-7051, 5-pin
2100-0158	Pin, Molex 08-50-0108
3714-5053	LED, Monsanto MV5053, Red
3714-5153	LED, Monsanto MV5153, Orange
5142-0001	Switch, Capitol HLB

0010-0005 PEAK FLASHER DISPLAY ASSEMBLY

HSF P/N	Description
2100-0123	Connector, Molex 09-50-7031, 3-pin polarized
2100-0158	Contacts, Molex 08-50-0108
3714-5053	LED, Monsanto MV5053, Red
3714-5153	LED, Monsanto MV5153, Orange

Universal Power Supply

<u>Description</u>: The H&F Universal power supply is a single printed circuit board that performs the following functions: rectification, filtering, and regulation. It can be loaded in various configurations to provide up to three supply voltages, two positive and one negative. Thru drilling out plated holes, the supplies can run on two separate transformers.

<u>Part Numbers</u>: Due to the variety of applications of this supply, several part numbers exist. Note that the regulators are not included in the assembly, but are added when the assembly is finally placed in a finished product.

Part Number	Description	
0010-0003	Bipolar supply plus separate positive supply.	
0010-0004	Bipolar supply	

Theory of Operation: Consult schematic drawing B-057. Each supply can be run on a separate transformer winding, if desired. This is accomplished by drilling out the appropriate plated through holes.

In the bipolar supply, MOV11 and MOV12 protect the remainder of the circuitry from transient line voltages. The diodes (D11 - D14) provide bipolar DC (referenced to common #1) from the center tapped transformer secondary. C11 and C14 provide filtering, while C12 and C15 provide a high frequency low impedance source for the regulators, insuring stability. U11 and U12 regulate the filtered DC down to the desired voltage. D15 and D17 protect the regulators from having a higher output voltage than input voltage (possible if input capacitors accidentally shorted). C13 and C15 insure stable operation of the regulators, and improve transient regulation. D16 and D18 protect the regulators from opposite polarity signals that may come from the load. Such may occur if the positive and negative outputs are shorted together.

The remaining supply circuitry operates in the same manner. Note that if only one transformer winding is used, MOV21 and MOV22 may be deleted.

Parts List

Component Designation	H&F P/N	Description
	0010-0003	Subassembly, Bipolar supply plus positive supply
	0010-0004	Subassembly, Bipolar supply
C12,C15,C22	1508-1042	Mallory MAG5001, Capacitor, Ceramic, 0.1 uF, 50V
C11,C14,C21	1510-1180	Mallory TCG112U05N2C, Capacitor, Electrolytic, 1100 uF, 50 V.
C13,C16,C23	1535-1261	Mallory TAC126KO25PO4, Capacitor, Tantalum, 12 uF, 25 V.
	1706-1241	H&F 1241PS Printed Circuit Board
	2100-0002	Amp 50865-1, Component Pin
P2	2100-0126	Molex 09-50-7061, 6 pin connector
•	2100-0158	Molex 08-50-0108, connector pin
Pl	2100-0206	Molex 09-65-1061, 6 pin locking connector
MOV11-MOV22	4741-0039	GE V39ZAL, Metal Oxide Varistor, 39 V
D11 - D22	4800-4002	1N4002, diode, 1A, 100 PIV

1341PA POWER AMPLIFIER

The 1341PA is a ten watt monitor amplifier. Power for the amplifier is provided by a 1351PS power supply. These two printed circuit modules are designed to be used as part of an audio system, such as the H&F TVA132 mixing system output module.

The 1341PA has all components mounted on a single printed circuit board, except for the output transistors and an optional gain control. Provision is made for an input transformer, should a balanced input be required. A reed relay is incorporated to mute the amplifier.

<u>Theory of Operation</u>: The H&F 1341PA power amplifier utilizes an audio power driver integrated circuit, two driver transistors, two output transistors, and associated components to drive ten watts into eight ohms. Protective circuitry is included to protect the amplifier from output faults. A ground switched relay, when operated, mutes the amplifier audio.

The amplifier is capable of driving four or sixteen ohm loads at slightly reduced power. Typical power into eight ohms may approach 20 watts, however, continuous tone operation at more than ten watts should be avoided to prevent overheating of the output transistors or power transformer.

Unbalanced audio is presented to the amplifier input at J1-2. C11 blocks any DC which may be present. R1, R2, and R3 form a voltage divider which attenuates the input level 11 dB. The input impedance is 46 K.

Cl blocks DC at the integrated circuit input. Such DC could be present due to bias current on the input.

54

When the mute relay (K1) is operated, R2 is shorted, shunting the audio to ground. This reduces the input impedance slightly, to 33K.

R5 and R4 set the gain of the amplifier to 19.6 (25.8 dB). Overall power amplifier gain is 25.8 dB less 11 dB from the input divider, resulting in 14.8 dB. C2 and R4 increase the negative feedback at very low frequencies and DC. This provides a reduction in gain for DC, lowering the output DC offset voltage. The low frequency cutoff as determined by C1, R3, C2, and R4 is below 5 Hz.

C5 sets the gain-bandwidth product and a high frequency pole at 50 KHz. C3 is a ripple capacitor. Its value must equal C5.

R6, R9, R11, R13, and R14 set the dual-slope output protection limits. C6 and C7 are compensation capacitors for the output protection circuitry.

R10 and R16 act as "base pull-down" resistors for the output devices. These resistors tend to turn the transistors off. The driver transistors, Q1 and Q2, provide current to the pull-down resistors and the bases of the output devices to force them into conduction, when required.

R3 and R7 set the idle current on the output devices. R7 is adjusted for the lowest possible output current without cross-over distortion. C4 bypasses the bias applied to the output transistors, reducing high frequency distortion and improving transient response.

Ul is a low distortion, low noise audio power driver. It includes circuitry for dual slope protection of the output transistors.

The pins of Ul are described as follows:

1 - +Input	Audio Input
2Input	Feedback Input
3 - Compensation	Sets dominant pole in transfer function
4 - Ripple Filter	Improves negative supply rejection

Drives output devices, part of bias 5 - Sink Output circuit 6 - Bias 7 - Bias 8 - Source Output Drives output devices, part of bias circuit 9 - Output Sense Biases IC, part of protection circuit 10 - +Current Limit 11 - +SOA Diode Safe Operating Area Protection 12 - - SOA Diode Safe Operating Area Protection 13 - - Current Limit Ground through 39K for shut-down 14 - Shut-down 15 - V+ Positive Supply, +30 V max 16 - V-Negative Supply, -30 V max

D1 and D2 protect the output devices in the event the protection circuitry is activated while driving an inductive load.

Q1 is an NPN driver transistor, driving Q3, the PNP positive output transistor.

Q2 is a PNP driver transistor, driving Q4, the NPN negative output transistor.

R17 and C8 provide output high frequency compensation.

L1 is 20 turns of #20 wire on a 10 ohm 2 watt carbon resistor. This isolates capacitive loads from the amplifier.

Kl is a 12 volt relay used to mute the audio. The mute relay draws 15 mA, and the voltage on the control input when open circuit is 24 VDC. R18 provides the additional 12 volt drop required to operate Kl from a 24 volt supply. D3 protects the relay from more positive voltages handled by the same ground switch. D4 shunts the reverse current when Kl is released. D4 reduces switching transients and protects the external switching circuitry.

The output of the 1341PA is available on J2. The power supply (the H&F 1351PS) connects to J3.

C9 and C10 provide power supply bypassing.

<u>Bias Adjustment</u>: R7 on the 1341PA adjusts the bias on the output transistors to minimize cross-over distortion and idle current.

Adjust R7 fully counterclockwise, setting the idle current at a minimum.

Connect an audio generator to the amplifier input. Adjust the audio generator for 20 KHz at 4 mV.

Connect an oscilloscope to the amplifier output. The audio should be present with some cross-over distortion. Adjust R7 slowly clockwise until the cross-over distortion just disappears. Do not go past this point, or the transistors will draw excessive current and heat excessively.

<u>Special Applications</u>: The 1341PA amplifier is capable of delivering in excess of 20 watts into a four or eight ohm load, with adequate heat sinking and power supplies. It may be used in any application where a high quality monitor amplifier with muting is required.

Certain options are readily available, including: transformer balanced input, remote gain control, and thermal shut-down.

<u>Balanced Input</u>: Replace Cll with a 15K : 15K audio transformer, such as Sescom MI-32 or H&F 5605-0003. The large pad on the PC should be drilled to accommodate the mounting of the transformer used. The input winding connects to pins 2 and 3 of Jl. The output winding connects to the pads at the ends of Rl and R2. The electrostatic shield connects to pin 1 of Jl. Jl pin 1 is a square pad. <u>Remote Gain Control</u>: R2 is replaced with a 15K audio taper pot. A Molex 2 position wafer (H&F 2100-0102, Molex 09-60-1021) is installed in place of R2. A 2 position Molex plug (H&F 2100-0122, Molex 09-50-7021) is connected to the pot leads. Pin 1 of the connector (the square pad on the PC) connects to ground and should go to the shield on the cable going to the CCW lead on the pot. Pin 2 goes to the center conductor on the cable going to the pot, all connects to the wiper contact on the pot. A 10K pot may be used if desired, however, the amplifier gain (maximum) will be reduced by 2.4 dB.

<u>Thermal Shut-down</u>: Ul pin 14 may be grounded through a 39K resistor to shut down the amplifier. If an appropriate thermistor or thermal switch is mounted on the output transistor heat sink, the amplifier will shut down should excessive temperatures occur.

Parts List

Component Designation	н&F <u>Р/N</u>	Description
	0010-1341	1341PA Power Amplifier Assembly
	0010-0008	Inductor Assembly, 25 turns #20 wire on 10 ohm, 2W, 10%, Carbon Resistor
	1400-0103	Heat Sink
C6, C7	1508-1020	Mallory GP210, Capacitor, Ceramic, .001 uF
C4, C8 C9, C10	1508-1043	Mallory TAO10, Capacitor, Ceramic, 0.1 uF
C3, C5	1508-3300	Mallory CNO433, Capacitor, Ceramic, 33 pF
C1	1510-1050	Mallory VTT1A50, Capacitor, Electrolytic, 1 uF, 25 V
C11	1510-1061	Mallory TT25X10, Capacitor, Electrolytic, 10 uF, 25 V
C2	1510-1062	Mallory VTT10B25, Capacitor, Electrolytic, 10 uF, 25 V
	2100-0008	DIP socket, 16 pin, gold, solder
	2100-0042	AMP 1-331677-7, Spring Socket
	2100-0043	AMP 1-331677-4, Spring Socket
J1, J2	2100-0103	Molex 09-60-1031, 3 pin polarizing wafer
J3	2100-0104	Molex 09-60-1041, 4 pin polarizing wafer
	2100-0154	Molex 08-50-0114, pins for 2100-0293
	2100-0293	Molex 10-17-2032, TO-220 Socket
	2800-0001	Smith 6291, TO-220 Insulator
U1	3130-0391	LM391-60, Power Amplifier Driver
K1	4500-0112	EAC 1A12A, Reed Relay, 12 VDC, SPST, N)
R17	4711-1279	Resistor, Carbon, 2.7 ohm, 1W, 10%

Parts List (cont)

· .

Component Designation	H&F <u>P/N</u>	Description
R10, R16	4711-4101	Resistor, Carbon, 100 ohm, W, 5%
R11, R13, R18	4711-4102	Resistor, Carbon, 1 K, W, 5%
R3, R5	4711-4105	Resistor, Carbon, 100 K, ½W, 5%
R2	4711-4153	Resistor, Carbon, 15 K, ½W, 5%
R6	4711-4243	Resistor, Carbon, 24 K, ŁW, 5%
R1	4711-4333	Resistor, Carbon, 33 K, W, 5%
R8	4711-4392	Resistor, Carbon, 3.9 K, W, 5%
R4	4711-4512	Resistor, Carbon, 5.1 K, W, 5%
R9, R15	4711-4913	Resistor, Carbon, 91 K, W, 5%
R7	4766-2103	CTS X201R103B, 10 K Trimpot
R12, R14	4790-5278	IRC PW-5, Resistor, WW, 0.27 ohms, 5W, 10%
D1 - D4	4800-4002	1N4002, Diode, 1A, 100 PIV
Q1	4846-0344	NSC BD344
Q2	4846-0345	NSC BD345
Q3	4846-0346	NSC BD346
Q4	4846-0347	NSC BD347

1351PS POWER SUPPLY

The H&F 1351PS power supply is a bipolar unregulated supply designed to power the 1341PA power amplifier.

Power transformer T51 is mounted on the chassis near the printed circuit assembly. The secondary leads are terminated in a 3 pin plug, P51. The secondary center-tap is connected to the center pin of P51. P51 plugs in to J51 on the 1351PS board.

RV51 and RV52 are transient voltage suppressors to protect the 1341 power amplifier.

D51 is a full wave bridge rectifier. The positive lead provides positive DC. C51 and C52 filter the positive DC. C53 provides high frequency bypassing. D51's negative lead and C54, C55, and C56 form the negative supply.

P52 carries the bipolar power to J3 on the 1341PA power amplifier printed circuit assembly.

Parts List

.

Component Designation	н& г <u>Р/N</u>	Description
C53, C56	1508-1043	Mallory TAO10, Capacitor, Ceramic, 0.1 uF, 100 V
C51, C52 C54, C55	1510-3080	Mallory TC50300A, Capacitor, Electrolytic, 3000 uF, 50 V
	1706-1351	Printed Circuit Board
J51	2100-0103	Molex 09-60-1031, 3 pin polarized wafer
P51, P52	2100-0123	Molex 09-50-7031, 3 pin socket
RV51, RV52	4741-0033	GE V33ZA5, Varistor
DB51	4810-0100	Mallory FWLD100, Diode Bridge, 6A, 100 PIV
	6039-0088	Weckesser G-88, Cable Tie, 7 inch

10/79 3/80

SERVICE BULLETIN

TVA-142	#01
TVA-131	#01
TVA. 132	#01

SERIAL NUMBERS AFFECTED: All PURPOSE: Availability of Spare Parts Kits and 24-Hour Emergency Parts Service

Spare Parts Kits are now available for the TVA-142 and TVA-131. Basic Spare Parts Kits include semiconductor and electromechanical devices such as switches and pots. Complete Spare Parts Kits are available for users who require a replacement part for all components due to limited parts availability locally. Prices are shown for each kit with a complete description on the following pages.

Remember, Hallikainen & Friends maintains a 24-Hour Emergency Parts Service at (805) 541-0200. After hours, ask specifically for "Emergency Parts Service". Out-of-Warranty parts are subject to a minimum charge.

BASIC SPARE PARTS KIT TVA-131 P/N 0040-1310

<u>Qty:</u>	H&F P/N:	Description:
1	0040-0920	Meter Lamp Replacement Kit
1	0010-0006	Selector Switch Assembly
1	0010-0007	Pot Assembly, 10K
2	3130- 5534	Operational Amplifier, NE5534
2	3130-7818	Regulator, +18V, 7818/LM340T-18
2	3130-7918	Regulator, -18V, 7918/LM320T-18
2	4800-4002	Silicon Diode, 1A, 100 P.I.V.
2	5104-0005	Fuse, AGC 1/2, 1/2A

TOTAL: \$95.00

COMPLETE SPARE PARTS KIT TVA-131 P/N 0040-1311

<u>Qty:</u>	H&F P/N:	Description:
1	0040-1310	Basic Spare Parts Kit
2	1508 - 1041	Cap., Ceramic, .luF, 25V
2	1508-2200	Cap., Ceramic, 22pF, 1KV
2	1508-3010	Cap., Ceramic, 300 pF, 1KV
2	1510-1070	Cap., Electrolytic, 100uF, 50V
2	1529-1510	Cap., Polystyrene, 150pF, 500V
2	1529-5600	Cap., Polystyrene, 56pF, 500V
2	1535 - 1261	Cap., Tantalum, 12uF, 25V
2	2100-0005	I.C. Socket, 8 pin
1	2100-0103	Connector, 3 pin
1	2100-0104	Connector, 4 pin
1	2100-0106	Connector, 6 pin
1	2100-0110	Connector, 10 pin
1	2100-0123	Connector, 3 pin
l	2100-0124	Connector, 4 pin
1	2100-0126	Connector, 6 pin
1	2100-0131	Connector, 10 pin
10	2 100- 0158	Connector Pin
1	2410-0002	Knob
2	4 711- 4103	Resistor, 10K
1	2100-0019	Fuse Holder

TVA-131....Continued P/N 0040-1311

<u>Qty:</u>	H&F P/N:	Description:
2	4711-4273	Resistor, 27K
2	4711-4301	Resistor, 300
2	4711-4473	Resistor, 4.7K
2	4711-4822	Resistor, 8.2K
2	4766-2103	Trim Pot, 10K
2	4766-2503	Trim Pot, 50K
1	5605-0003	Transformer, 150/15K:15K
1	5633-8613	Transformer, Power, 36V
		TOTAL: \$165.00

with	2900-0001	Meter, V	.V.
	P/N 0040-1312	TOTAL:	\$255.00

Due to changes in model numbers, there is some change in part numbering for spare parts kits.

The complete TVA series spare parts kit numbering system is shown below.

TVA-131

Output Module with balanced 600 ohm monitor outputs.

BASIC SPARE PARTS KIT0040-1310COMPLETE SPARE PARTS KIT0040-1311COMPLETE SPARE PARTS KIT WITH VU METER 0040-1312

TVA-132 Option 0 (standard)

Output Module with speaker level monitor outputs.

BASIC SP	ARE PAI	RTS KIT	Γ			0040-1320
COMPLETE	SPARE	PARTS	KIT			0040-1321
				VU	METER	0040-1322

TVA-132 Option 1

Output Module with balanced 600 ohm monitor outputs.

BASIC SPA	ARE PAR	TS KIT	ſ				0040-1310
COMPLETE	SPARE	PARTS	KIT				0040-1311
COMPLETE	SPARE	PARTS	KIT	WITH	VU	METER	0040-1312

TVA-142

MIC/LINE Mixer Module.

BASIC SPARE PARTS KI		0040-1420
COMPLETE SPARE PARTS	5 KIT	0040-1421

BASIC SPARE PARTS KIT

TVA-132 - Option 0 P/N 0040-1320

Qty:	H&F P/N:	Description:
1	0040-1310	TVA-131 Basic Spare Parts Kit
1	3130-0391	LM391-60 Power Amp Driver
1	4500-0112	Reed Relay, 12 VDC, SPST, NO
1	4846-0344	NSC BD-344 Transistor
l	4846-0345	NSC BD-345 Transistor
1	4846-0346	NSC BD-346 Transistor
1	4846-0347	NSC BD-347 Transistor

TOTAL: \$120.00

TVA-132 Option 0 P/N 0040-1321

Qty	H&F_P/N	Description
1	0040-1311	TVA-131 Complete Spare Parts Kit
1	0010-0008	Inductor Assembly
2	1508-3300	Cap., Ceramic, 33 pF
2	1508-1020	Cap., Ceramic, .001 uF
6	1508-1043	Cap., Ceramic, O.l uF, 100 V
1	1510-1050	Cap., Electrolytic, 1 uF, 25 V
1	1510-1061	Cap., Electrolytic, 10 uF, 25 V
1	1510-1062	Cap., Electrolytic, 10 uF, 25 V
4	1510-3080	Cap,, Electrolytic, 3000 uF, 50 V
1	2100-0008	DIP Socket, 16 pin
3	2100-0103	Connector, 3 pin
1	2100-0104	Connector, 4 pin
1	2100-0123	Connector, 3 pin
1	2800-0001	Insulator for TO-220
1	4 711-1 279	Resistor, Carbon, 2.7 Ohm, 1W
2	4711-4101	Resistor, Carbon, 100 Ohm, ±W
3	4711-4102	Resistor, Carbon, 1 K, ‡W
2	4711-4104	Resistor, Carbon, 100 K, ‡ W
1	4711-4153	Resistor, Carbon, 15 K, ‡W
1	4711-4243	Resistor, Carbon, 24 K, ‡W
1	4711-4333	Resistor, Carbon, 33 K, ‡W
1	4711-4392	Resistor, Carbon, 3.9 K, $\frac{1}{4}$ W

.

TVA-132 Option 0

Continued

P/N 0040-1321

Carbon, 5.1 K, ‡W
C ar bon, 91 K, ‡W
Varistor
ОК
WW, 0.27 ohm, 5W
de
ge, 6A, 100 PIV
X, Power Transformer
\$5.00

COMPLETE SPARE PARTS KIT WITH VU

P/N 0040-1322

Above with 1 2900-0001 VU meter

•

.

Total: \$275.00

.

BASIC SPARE PARTS KIT TVA-142

Description: Qty: H&F P/N: 1 0010-0001 Control Assembly, 1K 0010-0002 Switch Assembly 1 2 3130-0555 Timer, NE555 2 31**30-**5534 Operational Amplifier, NE5534 2 3130-7812 7812/LM340T-12, +12 Regulator 7818/LM340T-18, +18 Regulator 2 3130-7818 2 3130-7907 Hex Buffer, 74C907 2 3130-7914 Hex Schmidt Trigger, 74C914 7918/LM320T-18, -18 Regulator 2 3130-7918 VTL-5C2 Optical Isolator, Vactec 2 3717-0001 2 4800-4002 Diode, Silicon, 1N4002 4849-2222 2 Transistor, 2N2222 Buss AGC-1/2, 1/2 Amp Fuse 2 5104-0005 Dip Switch, SPDT, Amp 435665-2 1 5134-0002 Dip Switch, DPDT, Amp 435470-5 5134-0003 1

TOTAL: \$92.00

TVA-142

.

•

<u>Qty:</u>	<u>H&F P/N:</u>	Description:
1	0000-	Basic Spare Parts Kit
2	1508-1031	Cap., Ceramic, .01, 100V
2	1508-1042	Cap., Ceramic, .01uF, 50V
2	1508-2200	
2	1508-2240	Cap., Ceramic, 22pF, 1KV
		Cap., Ceramic, .22uF, 25V
2	1508-3010	Cap., Ceramic, 300pF, 1000V
2	1508-1180	Cap., Electrolytic, 1100uF, 50V
2	1510-5060	Cap., Electrolytic, 50uF, 25V
2	1529-1510	Cap., Polystyrene, 150pF, 600V
2	1529-2000	Cap., Polystyrene, 20pF, 500V
2	1529-3000	Cap., Polystyrene, 30pF, 600V
2	1529-5600	Cap., Polystyrene, 56pF, 600V
2	1529-7500	Cap., Polystyrene, 75pF, 600V
2	1535-1261	Cap., Tantalum, 12uF, 25V
3	2100-0002	Component Pin
2	2100-0005	Dip Socket, 8 pin
2	2100-0006	Dip Socket, 14 pin
. 1	2100-0103	Connector, 3 pin
l	2100-0104	Connector, 4 pin
l	2100-0105	Connector, 5 pin

TVA-142....Continued

Qty:	H&F P/N:	Description:
1	2100-0106	Connector, 6 pin
1	2100-0123	Connector, 3 pin
1	2100-0124	Connector, 4 pin
1	2100-0125	Connector, 5 pin
1	2100-0126	Connector, 6 pin
10	2100-0158	Connector Pin
1	2410-0001	Knob
2	3714- 5053	LED, Red, MV 5053
2	3714-5153	LED, Orange, MV 5153
2	4711-4100	Resistor, 10
2	4711-4103	Resistor, 10K
2	4 711- 4152	Resistor, 1.5K
2	4 711- 4164	Resistor, 160K
2	4711-4222	Resistor, 2.2K
2	4711 - 4301	Resistor, 300
2	4711 - 4332	Resistor, 3.3K
2	4711-4393	Resistor, 39K
2	4711 - 4472	Resistor, 4.7K
2	4 711- 4473	Resistor, 47K
2	4 711- 4561	Resistor, 560

.

.

TVA-142...Final Page

<u>Qty:</u>	H&F P/N:	Description:
2	4711-4824	Resistor, 820K
2	4741 - 0039	Metal Oxide Varistor, 39V
2	4766-2502	Trim Pot, 5K
1	5605-0003	Transformer, 150/15K:15K
1	5633-8613	Transformer, Power, 36V
		•

.

TOTAL: \$185.00

•

SERVICE BULLETIN

TVA-142 #02

SERIAL NUMBERS AFFECTED: PURPOSE: A11

Increased gain for mic channels

If desirable, 10 dB gain may be added to the mic preamps to allow for microphones with lower than normal output. Modifications can be made to any or all the channels as necessary by changing the feedback components in the mic section of Ull1-Ul61. Modification time is about 5 minutes per channel.

To add 10 dB to Channel 1, remove the cover and locate Ull1 through Ul61. Remove Cl13 and Rl16 (20 pF and 160 K) from the Channel 1 preamp. They can easily be removed from the top of the board by removing the solder on the pads with a solder sucker or wick. Form and trim the leads of a 470 K resistor and 10 pF ceramic or mica capacitor to fit back in the holes. Resolder the connections on top of the board.

Modification of remaining channels involves replacing the C123-163 capacitors and R126-166 resistors, repeating the above procedure.

Parts are available from Hallikainen & Friends if not locally available.

p/n 4711-4474 470 K Resistor, 1/4 w, 5% 10¢ ea. p/n 1508-1000 10 pF Ceramic Capacitor 50¢ ea.



PARTS KIT PRICE LIST

1 July 1982

H&F P/N	Description	Price (\$)
0040-0010	TVA142 Mike Gain Increase Kit	5.00
0040-0020	TVA132 Lamp Kit	10.00
0040-1120	LOG112/121 Logging System Semiconductor Kit	150.00
0040-1310	TVA132-1 Basic Spare Parts Kit	95.00
0040-1311	TVA132-1 Complete Spares Kit, less VU Meter	165.00
0040-1312	TVA132-1 Complete Spares Kit, with VU Meter	255.00
0040-1320	TVA132-0 Basic Spare Parts Kit	120.00
0040-1321	TVA132-0 Complete Spares Kit, less VU Meter	185.00
0040-1322	TVA132-0 Complete Spares Kit, with VU Meter	275.00
0040-1420	TVA142-0 Basic Spare Parts Kit	92.00
0040-1421	TVA142-0 Complete Spare Parts Kit	185.00
0040-1423	TVA142-1 Complete Spare Parts Kit	195.00
0040-1429	TVA142 Crosstalk Reduction Kit	50.00
0040-1711	TEL171 Semiconductor Kit	135.00

Hallikainen & Friends 101 Suburban Road, San Luis Obispo, CA 93401-7590 (805) 541-0200