

INSTRUCTION MANUAL

**FM-5A
FM-5AS
5 KILOWATT
FM BROADCAST
TRANSMITTERS**

June, 1988

IM No. 597-0033

BROADCAST ELECTRONICS, INC.



IMPORTANT INFORMATION

EQUIPMENT LOST OR DAMAGED IN TRANSIT

When delivering the equipment to you, the truck driver or carrier's agent will present a receipt for your signature. Do not sign it until you have (a) inspected the containers for visible signs of damage and (b) counted the containers and compared with the amount shown on the shipping papers. If a shortage or evidence of damage is noted, insist that notation to that effect be made on the shipping papers before you sign them.

Further, after receiving the equipment, unpack it and inspect thoroughly for concealed damage. If concealed damage is discovered, immediately notify the carrier, confirming the notification in writing, and secure an inspection report. This item should be unpacked and inspected for damage WITHIN 15 DAYS after receipt. Claims for loss or damage will not be honored without proper notification of inspection by the carrier.

TECHNICAL ASSISTANCE AND REPAIR SERVICE

Technical assistance is available from Broadcast Electronics by letter or prepaid telephone or telegram. Equipment requiring repair or overhaul should be sent by common carrier, prepaid, insured and well protected. Do not mail equipment. We can assume no liability for inbound damage, and necessary repairs become the obligation of the shipper. Prior arrangement is necessary. Contact Customer Service Department for a Return Authorization.

FOR TECHNICAL ASSISTANCE
Phone (217) 224-9600 Customer Service

WARRANTY ADJUSTMENT

Broadcast Electronics, Inc. warranty is included in the Terms and Conditions of Sale. In the event of a warranty claim, replacement or repair parts will be supplied F.O.B. factory. At the discretion of Broadcast Electronics, the customer may be required to return the defective part or equipment to Broadcast Electronics, Inc. F.O.B. Quincy, Illinois. Warranty replacements of defective merchandise will be billed to your account. This billing will be cleared by a credit issued upon return of the defective item.

RETURN, REPAIR AND EXCHANGES

Do not return any merchandise without our written approval and Return Authorization. We will provide special shipping instructions and a code number that will assure proper handling and prompt issuance of credit. Please furnish complete details as to circumstances and reasons when requesting return of merchandise. All returned merchandise must be sent freight prepaid and properly insured by the customer.

REPLACEMENT PARTS

Replacement and Warranty Parts may be ordered from the address below. Be sure to include equipment model and serial number and part description and part number.

Broadcast Electronics, Inc.
4100 N. 24th St., P.O. Box 3606
Quincy, Illinois 62305
Tel: (217) 224-9600
Telex: 25-0142
Cable: BROADCAST

PROPRIETARY NOTICE

This document contains proprietary data of Broadcast Electronics, Inc. No disclosure, reproduction, or use of any part thereof may be made except by prior written permission.

MODIFICATIONS

Broadcast Electronics, Inc. reserves the right to modify the design and specifications of the equipment in this manual without notice. Any modifications shall not adversely affect performance of the equipment so modified.

WARNING

OPERATING HAZARDS

READ THIS SHEET AND OBSERVE ALL SAFETY PRECAUTIONS

ALL PERSONS WHO WORK WITH OR ARE EXPOSED TO POWER TUBES, POWER TRANSISTORS, OR EQUIPMENT WHICH UTILIZES SUCH DEVICES MUST TAKE PRECAUTIONS TO PROTECT THEMSELVES AGAINST POSSIBLE SERIOUS BODILY INJURY. EXERCISE EXTREME CARE AROUND SUCH PRODUCTS. UNINFORMED OR CARELESS OPERATION OF THESE DEVICES CAN RESULT IN POOR PERFORMANCE, DAMAGE TO THE DEVICE OR PROPERTY, SERIOUS BODILY INJURY, AND POSSIBLY DEATH.

DANGEROUS HAZARDS EXIST IN THE OPERATION OF POWER TUBES AND POWER TRANSISTORS

The operation of power tubes and power transistors involves one or more of the following hazards, any one of which, in the absence of safe operating practices and precautions, could result in serious harm to personnel.

- A. HIGH VOLTAGE - Normal operating voltages can be deadly. Additional information follows.
- B. RF RADIATION - Exposure to RF radiation may cause serious bodily injury possibly resulting in blindness or death. Cardiac pacemakers may be affected. Additional information follows.
- C. BERYLLIUM-OXIDE POISONING - Dust or fumes from BeO ceramics used as thermal links with conduction cooled power tubes and power transistors are highly toxic and can cause serious injury or death. Additional information follows.
- D. HOT SURFACES - Surfaces of air-cooled radiators and other parts of tubes can reach temperatures of several hundred degrees centigrade and cause serious burns if touched. Additional information follows.

HIGH VOLTAGE

Many power tubes operate at voltages high enough to kill through electrocution. Personnel should always break the primary circuits of the power supply and discharge high voltage capacitors when direct access to the tube is required.

RADIO FREQUENCY RADIATION

Exposure of personnel to RF radiation should be minimized, personnel should not be permitted in the vicinity of open energized RF generating circuits, or RF transmission systems (waveguides, cables, connectors, etc.), or energized antennas. It is generally accepted that exposure to "high levels" of radiation can result in severe bodily injury including blindness. Cardiac pacemakers may be affected.

The effect of prolonged exposure to "low level" RF radiation continues to be a subject of investigation and controversy. It is generally agreed that prolonged exposure of personnel to RF radiation should be limited to an absolute minimum. It is also generally agreed that exposure should be reduced in working areas where personnel heat load is above normal. A 10 mW/cm² per one tenth hour average level has been adopted by several U.S. Government agencies including the Occupational Safety and Health Administration (OSHA) as the standard protection guide for employee work environments. An even stricter standard is recommended by the American National Standards Institute which recommends a 1.0 mW/cm² per one tenth hour average level exposure between 30 Hz and 300 MHz as the standard employee protection guide (ANSI C95.1-1982).

RF energy must be contained properly by shielding and transmission lines. All input and output RF connections, such as cables, flanges and gaskets must be RF leakproof. Never operate a power tube without a properly matched RF energy absorbing load attached. Never look into or expose any part of the body to an antenna or open RF generating tube or circuit or RF transmission system while energized. Monitor the tube and RF system for RF radiation leakage at regular intervals and after servicing.

DANGER--BERYLLIUM OXIDE CERAMICS (BeO) - AVOID BREATHING DUST OR FUMES

BeO ceramic material is used as a thermal link to carry heat from a tube or transistor to the heat sink. Do not perform any operation on any BeO ceramic which might produce dust or fumes, such as grinding, grit blasting, or acid cleaning. Beryllium oxide dust or fumes are highly toxic and breathing them can result in serious personal injury or death. BeO ceramics must be disposed of only in a manner prescribed by the device manufacturer.

HOT SURFACES

The anode portion of power tubes is often air-cooled or conduction-cooled. The air-cooled external surface normally operates at a high temperature (up to 200° to 300°C). Other portions of the tube may also reach high temperatures, especially the cathode insulator and the cathode/heater surfaces. All hot surfaces may remain hot for an extended time after the tube is shut off. To prevent serious burns, take care to prevent and avoid any bodily contact with these surfaces both during and for a reasonable cool-down period after tube operation.

SCOPE OF MANUAL

This manual consists of two sections providing the following information for the Broadcast Electronics FM-5A, 5 kW FM Broadcast Transmitter.

- A. PART I - Contains information relative to installation, operation, and maintenance applicable to the overall transmitter.
- B. PART II - Contains detailed information for the following transmitter modular units.
 - 1. IPA
 - 2. AUTOMATIC POWER CONTROL
 - 3. TRANSMITTER CONTROLLER

PART I - TABLE OF CONTENTS

| <u>PARAGRAPH</u> | | <u>PAGE NO.</u> |
|------------------|----------------------------|-----------------|
| SECTION I | GENERAL INFORMATION | |
| 1-1 | Introduction | 1-1 |
| 1-3 | Related Publications | 1-1 |
| 1-5 | Equipment Description | 1-1 |
| 1-7 | Equipment Specifications | 1-2 |
| SECTION II | INSTALLATION | |
| 2-1 | Introduction | 2-1 |
| 2-3 | Unpacking | 2-1 |
| 2-6 | Environmental Requirements | 2-1 |
| 2-8 | Cooling Air Requirements | 2-1 |
| 2-12 | Installation | 2-5 |
| 2-14 | Primary AC Power | 2-5 |
| 2-15 | FM-5A | 2-5 |
| 2-18 | FM-5AS | 2-5 |
| 2-19 | Equipment Placement | 2-5 |
| 2-22 | Component Installation | 2-7 |
| 2-43 | Remote Control | 2-8 |
| 2-45 | Wiring | 2-10 |
| 2-46 | Voltage Taps | 2-10 |
| 2-59 | Optional Equipment Wiring | 2-15 |
| 2-60 | Ground | 2-15 |
| 2-61 | Signal Inputs | 2-15 |
| 2-62 | External Interlocks | 2-15 |
| 2-64 | AC Power Connections | 2-15 |
| 2-65 | FM-5A | 2-17 |
| 2-67 | FM-5AS | 2-17 |
| 2-69 | Initial Checkout | 2-17 |

COPYRIGHT © 1988 BROADCAST ELECTRONICS, INC.

| <u>PARAGRAPH</u> | | <u>PAGE NO.</u> |
|------------------|-----------------------------------|-----------------|
| SECTION III | OPERATION | |
| 3-1 | Introduction | 3-1 |
| 3-3 | Controls and Indicators | 3-1 |
| 3-5 | Operation | 3-1 |
| 3-6 | Turn On | 3-1 |
| 3-15 | Turn Off | 3-3 |
| SECTION IV | THEORY OF OPERATION | |
| 4-1 | Introduction | 4-1 |
| 4-4 | Electrical Description | 4-1 |
| 4-5 | FM Exciter | 4-1 |
| 4-8 | Intermediate Power Amplifier | 4-1 |
| 4-12 | Power Amplifier | 4-2 |
| 4-14 | Power Amplifier Cavity | 4-2 |
| 4-15 | Output Coupling | 4-2 |
| 4-16 | Plate Tuning | 4-2 |
| 4-17 | Neutralization | 4-5 |
| 4-18 | Second Harmonic Suppressor | 4-5 |
| 4-19 | Output Circuit | 4-5 |
| 4-20 | Automatic Power Control | 4-5 |
| 4-22 | Automatic RF Output Level Control | 4-5 |
| 4-24 | VSWR Foldback Protection | 4-6 |
| 4-25 | Soft Start | 4-6 |
| 4-26 | Transmitter Controller | 4-6 |
| 4-30 | Momentary Power Interruption | 4-6 |
| 4-31 | Overloads | 4-7 |
| 4-32 | Indicators | 4-7 |
| 4-34 | Metering | 4-7 |
| 4-37 | Optional Three-Phase AC Voltmeter | 4-7 |
| 4-38 | Power Supplies | 4-7 |
| 4-44 | Detailed Description | 4-8 |
| 4-45 | FM-5A Power Supply | 4-8 |
| 4-47 | Sequence of Operation | 4-11 |
| 4-52 | PA Plate Power Supply | 4-11 |
| 4-57 | PA Screen Grid Power Supply | 4-12 |
| 4-58 | PA Control Grid Power Supply | 4-12 |
| 4-60 | PA Filament Supply | 4-13 |
| 4-61 | FM-5AS Power Supply | 4-13 |
| 4-63 | Sequence of Operation | 4-13 |
| 4-68 | PA Plate Power Supply | 4-14 |
| 4-70 | PA Screen Grid Power Supply | 4-17 |
| 4-71 | PA Control Grid Power Supply | 4-17 |
| 4-73 | PA Filament Supply | 4-17 |
| 4-74 | RF Circuitry | 4-17 |
| 4-75 | FM Exciter | 4-17 |
| 4-76 | Intermediate Power Amplifier | 4-17 |
| 4-77 | Power Amplifier | 4-18 |
| 4-86 | PA Metering | 4-22 |
| 4-87 | Automatic Power Control | 4-22 |

| <u>PARAGRAPH</u> | | <u>PAGE NO.</u> |
|------------------|---|-----------------|
| SECTION V | MAINTENANCE | |
| 5-1 | Introduction | 5-1 |
| 5-3 | Safety Considerations | 5-1 |
| 5-9 | First Level Maintenance | 5-2 |
| 5-13 | Air Filter | 5-3 |
| 5-16 | Blower Maintenance | 5-3 |
| 5-20 | Second Level Maintenance | 5-4 |
| 5-23 | General | 5-4 |
| 5-24 | PA Stage | 5-4 |
| 5-27 | IPA Stage | 5-5 |
| 5-28 | Adjustments | 5-5 |
| 5-30 | Second Harmonic Suppressor | 5-7 |
| 5-53 | Neutralization | 5-10 |
| 5-88 | Troubleshooting | 5-16 |
| 5-91 | Component Replacement on Circuit Boards | 5-19 |
| SECTION VI | PARTS LISTS | |
| 6-1 | Introduction | 6-1 |
| SECTION VII | DRAWINGS | |
| 7-1 | Introduction | 7-1 |
| APPENDIX A | MANUFACTURERS DATA | |
| A-1 | Introduction | A-1 |

LIST OF ILLUSTRATIONS

| <u>FIGURE NO.</u> | <u>DESCRIPTION</u> | <u>PAGE NO.</u> |
|-------------------|--|-----------------|
| 1-1 | FM-5A Transmitter | 1-3 |
| 2-1 | FM-5A Installation Drawing | 2-3 |
| 2-2 | Acceptable AC Power Input Configurations | 2-6 |
| 2-3 | Controller Circuit Board Jumper-Plug Programming | 2-9 |
| 2-4 | Remote Logic Programming and Wiring | 2-11 |
| 2-5 | Transformer Taps | 2-13 |
| 2-6 | IPA Voltage Taps | 2-14 |
| 2-7 | Optional Equipment Wiring | 2-16 |
| 2-8 | External Interlock Circuit | 2-16 |
| 2-9 | FM-5A Primary AC Wiring | 2-18 |
| 2-10 | FM-5AS Primary AC Wiring | 2-19 |
| 3-1 | Controls and Indicators | 3-2 |
| 4-1 | FM-5A Block Diagram | 4-3 |
| 4-2 | FM-5A Power Supply Simplified Schematic | 4-9 |
| 4-3 | FM-5AS Power Supply Simplified Schematic | 4-15 |
| 4-4 | RF Circuit Simplified Schematic | 4-19 |
| 4-5 | PA Cavity | 4-21 |

LIST OF ILLUSTRATIONS (Cont'd)

| <u>FIGURE NO.</u> | <u>DESCRIPTION</u> | <u>PAGE NO.</u> |
|-------------------|---|-----------------|
| 5-1 | Typical PA Efficiency Curve At 98.1 MHz | 5-6 |
| 5-2 | PA Input Tuning Curve | 5-6 |
| 5-3 | PA Output Tuning Curve | 5-7 |
| 5-4 | Second Harmonic Suppressor Coarse Setting | 5-9 |
| 5-5 | Neutralization Strap Coarse Setting | 5-14 |
| 5-6 | PA Neutralization | 5-15 |
| 5-7 | FM-5A Cabinet Component Locator, Front | 5-20 |
| 5-8 | FM-5AS Cabinet Component Locator, Front | 5-21 |
| 5-9 | FM-5A Cabinet Component Locator, Rear | 5-22 |
| 5-10 | PA Cavity Component Locator | 5-23 |
| 5-11 | PA Tube Socket | 5-24 |

LIST OF TABLES

| <u>TABLE NO.</u> | <u>DESCRIPTION</u> | <u>PAGE NO.</u> |
|------------------|--|-----------------|
| 1-1 | Electrical Characteristics | 1-4 |
| 1-2 | Physical Characteristics | 1-6 |
| 2-1 | FM-5A Packing List | 2-2 |
| 3-1 | Controls and Indicators | 3-3 |
| 3-2 | Indicator Checklist | 3-8 |
| 5-1 | Typical Meter Indications (5 kW RF Output) | 5-17 |
| 5-2 | Typical Power Demand (5 kW RF Output) | 5-18 |
| 6-1 | Replacement Parts List Index | 6-1 |

PART II - TABLE OF CONTENTS

- I - IPA
- II - AUTOMATIC POWER CONTROL
- III - TRANSMITTER CONTROLLER

SECTION I
GENERAL INFORMATION

1-1. INTRODUCTION.

1-2. Information presented by this section provides a general description of the FM-5A FM transmitter and lists equipment specifications.

1-3. RELATED PUBLICATIONS.

1-4. The following list of publications provides data for equipment associated with the FM-5A transmitter.

| <u>PUBLICATION NUMBER</u> | <u>EQUIPMENT</u> |
|---------------------------|--|
| 597-0002 | FX-30 FM Exciter |
| 597-0008 | FC-30 SCA Generator |
| 597-0009 | FS-30 Stereophonic Generator |
| 597-0036 | Microprocessor Video Diagnostic System |

1-5. EQUIPMENT DESCRIPTION.


1-6. The Broadcast Electronics FM-5A is a 5 kW FM Transmitter designed for continuous operation in the 87.5 MHz to 108 MHz FM broadcast band. The RF power amplifier, IPA, FM exciter, and the control circuitry are housed in a single cabinet (see Figure 1-1). The transmitter incorporates a folded half wave cavity PA stage, a solid-state control system, a solid-state IPA, and an exciter with a digital frequency synthesizer. The following list provides ordering information for the transmitter and spare parts kits.

| <u>MODEL NO.</u> | <u>PART NUMBER</u> | <u>DESCRIPTION</u> |
|------------------|--------------------|--|
| FM-5A | 909-5000-200 | FM-5A 5000 Watt FM transmitter, complete with final tube including FX-30 FM exciter, for operation on () MHz, 50 Ohm output, transmitter output power to be () Watts, three phase 208/240V ac, 60 Hz power supply. |
| FM-5A | 909-5000-300 | Same as 909-5000-200 for operation from 50 Hz 208/240V ac delta power source. |
| FM-5A | 909-5000-380 | Same as 909-5000-200 for operation from 50 Hz 380V ac wye power source. |
| FM-5AS | 909-5000-205 | Same as 909-5000-200 for operation from a single phase 208/240V ac 60 Hz power supply. |
| FM-5AS | 909-5000-305 | Same as 909-5000-200 for operation from a single phase 208/240V ac 50 Hz power supply. |

| | |
|--------------|---|
| 909-0097 | Optional filament voltage regulator, 60 Hz. |
| 909-0097-300 | Optional filament voltage regulator, 50 Hz. |
| 909-0091-003 | Optional microprocessor video diagnostic system, factory installation. |
| 909-0091-040 | Optional microprocessor video diagnostic system, field installation kit. |
| 909-0098 | Optional three-phase voltage metering. |
| 979-0035 | Recommended spare parts kit, includes meters, switches, relays, etc. Does not include semiconductors. |
| 979-0036 | Recommended semiconductor spare parts kit. |
| 243-3500 | Spare 4CX3500A tube. |

1-7. EQUIPMENT SPECIFICATIONS.

1-8. Refer to Table 1-1 for electrical specifications or Table 1-2 for physical specifications of the FM-5A FM Transmitter.

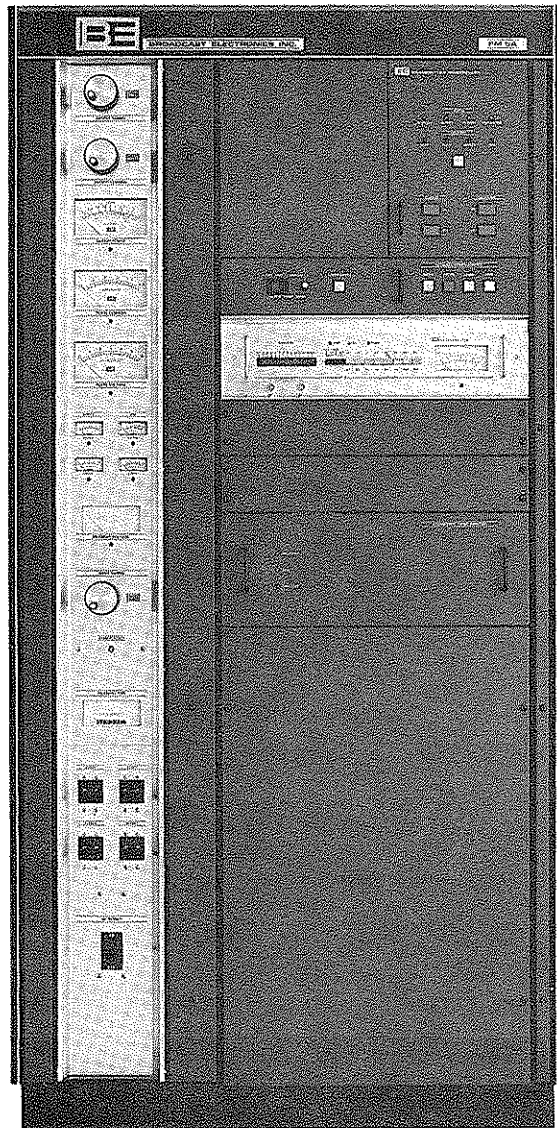

COPYRIGHT © 1988 BROADCAST ELECTRONICS, INC.

597-0033-1

FIGURE 1-1. FM-5A TRANSMITTER

TABLE 1-1. ELECTRICAL CHARACTERISTICS
(Sheet 1 of 2)

| PARAMETER | SPECIFICATIONS |
|------------------------------------|---|
| RF POWER OUTPUT | 2500 to 5500 Watts (as ordered). |
| AUTOMATIC POWER CONTROL RESOLUTION | ±2%. |
| RF FREQUENCY RANGE | 87.5 to 108 MHz (as ordered). |
| RF OUTPUT IMPEDANCE | 50 Ohms Resistive. |
| RF OUTPUT CONNECTOR | 1 5/8 Inch (4.13 cm) EIA flange (removable flange supplied). |
| MAXIMUM VSWR | 1.8:1 (Will operate into higher VSWR with automatic power reduction). |
| TUBE COMPLEMENT | 4CX3500A (1). |
| FM S/N RATIO | 72 dB below ±75 kHz Deviation @ 400 Hz, measured in a 30 Hz to 15 kHz bandwidth with 75 microsecond deemphasis. |
| ASYNCHRONOUS AM S/N RATIO | 55 dB below reference carrier with 100% AM @ 400 Hz, 75 microsecond deemphasis (no FM present). |
| SYNCHRONOUS AM S/N RATIO | 40 dB below reference carrier with 100% AM @ 400 Hz, (FM at ±75 kHz @ 400 Hz). |
| RF HARMONIC SUPPRESSION | Meets all FCC/DOC requirements and CCIR recommendations. |
| FREQUENCY STABILITY | ±300 Hz, 0° to 50°C, temperature compensated crystal oscillator. |
| TYPE OF MODULATION | Direct frequency modulation at carrier frequency. |
| MODULATION CAPABILITY | Greater than ±200 kHz. |
| PRE-EMPHASIS | FCC 75 uS, CCIR 50 uS (where specified), or 25 uS (Dolby). |

TABLE 1-1. ELECTRICAL CHARACTERISTICS
(Sheet 2 of 2)

| PARAMETER | SPECIFICATIONS |
|-----------------------------------|---|
| MONAURAL AUDIO INPUT IMPEDANCE | 600 Ohms balanced, resistive, 50 dB common mode suppression. |
| AUDIO INPUT LEVEL | +10 dBm nominal for ± 75 kHz deviation @ 400 Hz. |
| MONAURAL AUDIO FREQUENCY RESPONSE | ± 0.5 dB, 30 Hz to 15 kHz, selectable 25, 50, or 75 microsecond pre-emphasis or flat. |
| MONAURAL OR COMPOSITE: | |
| a) HARMONIC DISTORTION | 0.08% or less. |
| b) INTERMODULATION DISTORTION | 0.08% or less, 60 Hz/7 kHz, 4:1 ratio. |
| c) TRANSIENT IMD | 0.1% or less (square wave/sine wave). |
| COMPOSITE INPUTS | 3, BNC Connectors. |
| COMPOSITE INPUT IMPEDANCE | 10 k Ohm nominal, resistive. |
| COMPOSITE INPUT LEVEL | 3.5V p-p nominal for ± 75 kHz deviation. |
| AC INPUT POWER: | |
| FM-5A | 196 to 252 VRMS, 50 or 60 Hz (as ordered), three phase AC, 28 Amperes Maximum. |
| FM-5AS | 196 to 252 VRMS, 50 or 60 Hz (as ordered), single phase AC, 55 Amperes Maximum. |
| AC POWER CONSUMPTION | 8300 Watts typical at a 5 kW RF power output, 0.92 Power Factor. |
| OVERALL EFFICIENCY | 60% Typical (AC line input to RF output). |

TABLE 1-2. PHYSICAL CHARACTERISTICS

| PARAMETER | SPECIFICATIONS |
|-----------------------------|--|
| AMBIENT TEMPERATURE RANGE | +14°F to +122°F (-10°C to +50°C). |
| MAXIMUM ALTITUDE | 7500 Feet above sea level (2286 Meters). |
| MAXIMUM HUMIDITY | 95%, Non-condensing. |
| HEAT DISSIPATION | 3500 Watts Maximum (11,945 BTU/Hr) at 5000 Watts Output. |
| COOLING AIR REQUIREMENT | 800 ft ³ /min overall (22.6 m ³ /min). |
| SIZE: | |
| WIDTH | 34.5 Inches (87.63 cm). |
| DEPTH | 37.25 Inches (94.61 cm). |
| HEIGHT | 69.8 Inches (177.32 cm). |
| MAXIMUM HEADROOM REQUIRED | 81 Inches @ 108 MHz. |
| WEIGHT: | |
| UNPACKED | 1,000 Pounds (454 kg). |
| PACKED | |
| DOMESTIC | 1,200 Pounds (544 kg). |
| INTERNATIONAL | 1,500 Pounds (680 kg). |
| CUBAGE: | |
| UNPACKED | 53 Cubic Feet (1.5 m ³). |
| PACKED | |
| DOMESTIC | 55.4 Cubic Feet (1.57 m ³). |
| INTERNATIONAL | 60 Cubic Feet (1.7 m ³). |
| AIR INLET SIZE (Rear Panel) | 17 1/2 Inches X 14 Inches (44.5 cm X 35.6 cm). |
| AIR OUTLET SIZE (Top) | 33 Inches X 31 1/2 Inches (83.8 cm X 80 cm). |

SECTION II INSTALLATION

2-1. INTRODUCTION.

2-2. This section contains information required for installation and preliminary checkout of the Broadcast Electronics FM-5A FM Transmitter.

2-3. UNPACKING.

2-4. The equipment becomes the property of the customer when the equipment is delivered to the carrier. Carefully unpack the transmitter. Perform a visual inspection to determine that no apparent damage has been incurred during shipment. All shipping materials should be retained until it is determined that the unit has not been damaged. Claims for damaged equipment must be promptly filed with the carrier or the carrier may not accept the claim.

2-5. The contents of the shipment should be as indicated on the packing lists (see Table 2-1). If the contents are incomplete, or if the unit is damaged electrically or mechanically, notify both the carrier and Broadcast Electronics, Inc.

2-6. ENVIRONMENTAL REQUIREMENTS.

2-7. Table 1-2 provides environmental conditions which must be considered prior to transmitter installation.

2-8. COOLING AIR REQUIREMENTS.



2-9. If outside air is to be used to cool the transmitter, the air inlet duct must be sized to allow adequate air flow. The air must be dry and well filtered. If intake louvers are used, operation of the louvers must be electrically interlocked with the transmitter operation.

2-10. If the heated transmitter air is to be ducted from the room, the duct system must not introduce any back-pressure on the equipment. Proper allowances for air flow will ensure that only a limited amount of heat is dissipated into the equipment interior. The duct system must allow for a minimum air flow of 800 cubic feet of air per minute (22.6 m³/min).

2-11. As a minimum requirement, any duct work must have a cross-sectional area equal to the exhaust area of the cabinet (refer to Figure 2-1). Sharp bends in the duct system will introduce back pressure and are not permissible. A radius bend must be used if a right angle turn is required. An exhaust fan may be used to overcome duct losses or overcome wind pressures if the duct is vented to the outside.

TABLE 2-1. FM-5A PACKING LIST

| ITEM | DESCRIPTION | BE PART NO. | QTY. |
|------|--|--------------|------|
| 1 | PA Tube, 4CX3500A | 243-3500 | 1 |
| 2 | Manual, FM-5A FM Transmitter | 597-0033 | 1 |
| 3 | Manual, FX-30 FM Exciter (Not included when shipped less exciter) | 597-0002-001 | 1 |
| 4 | Cabinet Door Keys | NPN | 2 |
| 5 | Exciter Accessory Kit - Less Rails and Coaxial Cables (Not included when shipped less exciter) | 961-0001 | 1 |
| 6 | Test Data Sheets, Set | 592-0021 | 1 |
| 7 | Flange, 1 5/8 Inch EIA | 427-0010 | 1 |
| 8 | Battery, 9 Volt (Controller) | 350-0002 | 1 |
| 9 | Extender Circuit Board (Controller) | 919-0061 | 1 |
| 10 | Hex Key, 5/32 Inch (Lower Front Panel Screws) | 710-0219 | 1 |
| 11 | Spade Lugs (for Remote Control Terminal Strip) | 410-1489 | 40 |
| 12 | Programmable Jumpers, 8-Pin DIP | 340-0006 | 5 |

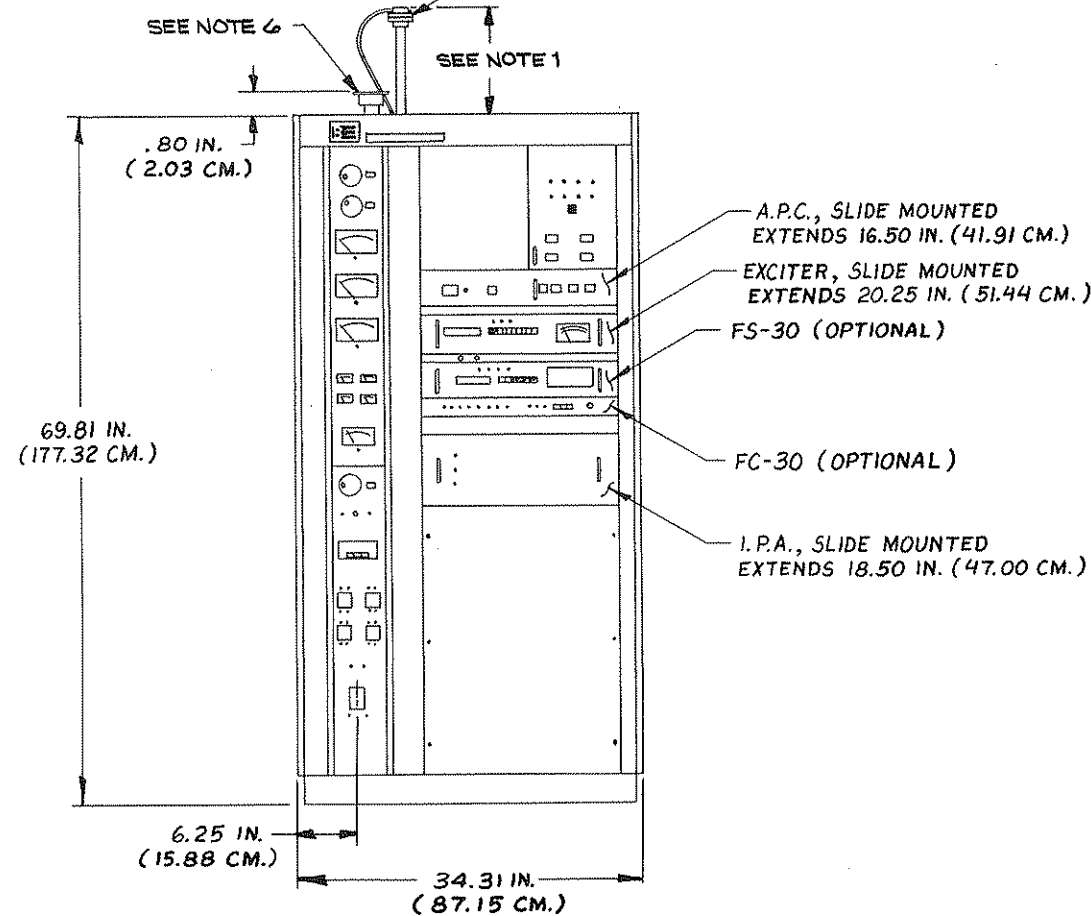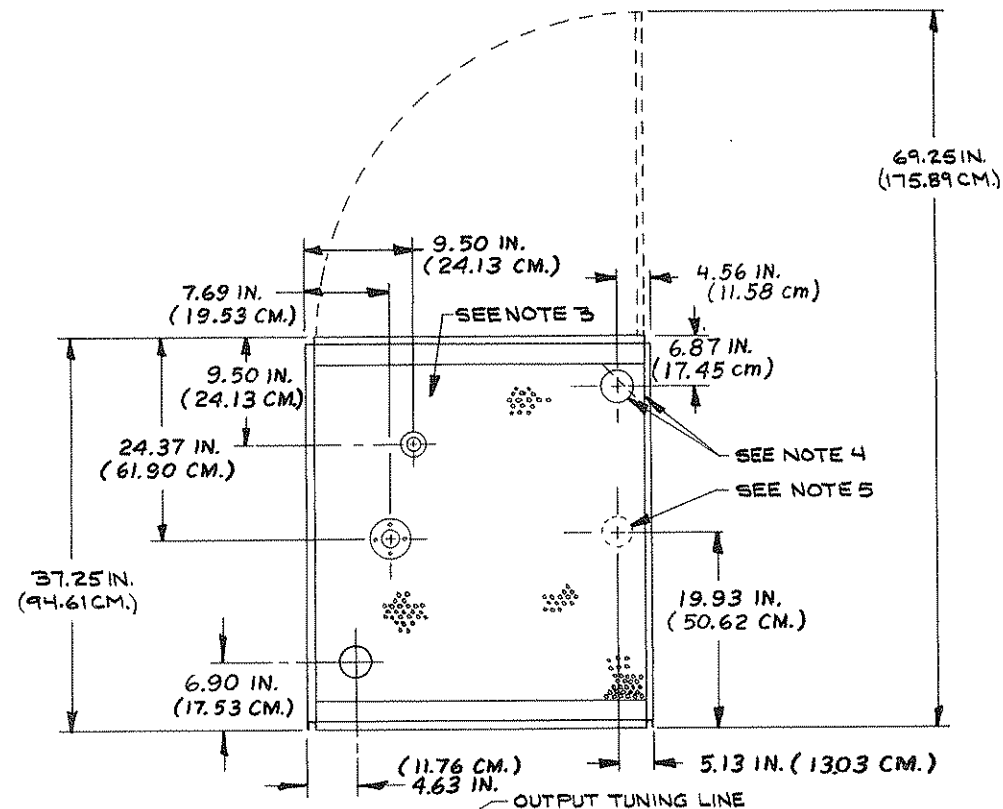

NOTES:

1. TUNING LINE HEIGHT IS DETERMINED BY FREQUENCY OF TRANSMITTER.
MAX. = 11 IN. @ 108 MHz
MIN. = 1 IN. @ 87.5 MHz
2. AIR INLET AT REAR OF CABINET, FILTER REQUIRED - P/N 407-0062.
3. AIR OUTLET AT TOP OF CABINET, 33 IN X 31 1/2 IN. (83.82 cm X 80.01 cm).
4. ACCESS FOR A.C. POWER THROUGH 1 3/8" (3.49 cm) DIA. HOLE IN TOP COVER IN REAR OR THROUGH BASEPLATE IN RIGHT REAR CORNER. GROUND STRAP ENTRY POINT IN LOWER RIGHT CORNER.
5. ACCESS FOR REMOTE CONTROL AND AUDIO CONNECTIONS THROUGH 2" (5.08 cm) DIA. HOLE IN BASEPLATE OR THROUGH EITHER 1 3/8" (3.49 cm) DIA. HOLE IN TOP COVER.
6. OUTPUT RF CONNECTION IS 1 5/8" (4.13 cm) EIA FLANGE, B.E. P/N 427-0010; FLANGE IS REMOVABLE IF UNFLANGED CONNECTION IS DESIRED. NO CENTER CONDUCTOR BULLET IS SUPPLIED, B.E. P/N 427-0009 RECOMMENDED.
7. CUBAGE: 53.0 Ft.³/1.5 M³.
8. WEIGHT: 1000 LBS. (455 KG).
9. HEAT DISSIPATION: 3500 WATTS MAXIMUM (11,945 BTU/Hr.) AT 5KW OUTPUT.
10. COOLING AIR REQUIREMENT (OVERALL): 800 CFM.
11. AC POWER INPUT:
THREE PHASE: 196-252 VAC, 3 WIRE, 3 PHASE AT 40 AMPERES PER PHASE MAXIMUM LINE CURRENT, 60 Hz WITH 909-5000-200 (50 Hz WITH 909-5000-300). 909-5000-380 REQUIRES 340-436 PHASE TO PHASE VAC, 50 Hz, 4 WIRE, 3 PHASE AT 40 AMPERES PER PHASE MAXIMUM LINE CURRENT. FUSED DISCONNECT SWITCH RECOMMENDED. FOR PROPER SIZING OF FUSES REFER TO NATIONAL ELECTRICAL CODE OR LOCAL CODES.

SINGLE PHASE: 196-252 VAC, 60 Hz, SINGLE PHASE AT 55 AMPERES MAXIMUM. FUSED DISCONNECT SWITCH RECOMMENDED. FOR PROPER SIZING OF FUSES REFER TO NATIONAL ELECTRICAL CODE OR LOCAL CODES.
12. A.C. POWER CONSUMPTION: 8.5KW @ .90 P.F. FOR 5KW RF OUTPUT.

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

| | | | |
|--|---|---------------------------------|--|
| <small>PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC.</small> | DWN. BY J. HOUGHTON | NEXT ASSY. | BROADCAST ELECTRONICS INC. 4100 N. 24TH ST. QUINCY, IL 62305 217/224-9600 TELEX 260142 CABLE BCST ELECT QUI |
| | CHKD. | PRODUCT USED ON FM-5A | |
| <small>TOLERANCE (DECIMAL) U.O.S. .X ± .030 .XXX ± .005 .XX ± .015 ANGLES ± 1°</small> | <small>DFTG. SUPVR. MFG.</small> | <small>FINISH</small> | SHEET 1 OF 1 SCALE REV J |
| <small>TYPE SIZE DWG. NO. 909-5000-200 R C 907-5000-300 F-380</small> | | | |

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

2-12. INSTALLATION.

2-13. Each transmitter is wired, operated, tested and inspected at the factory prior to shipment and is ready for installation when received. Prior to installation, this publication should be studied to obtain an understanding of the operation circuitry nomenclature, and installation requirements. Installation is accomplished as follows: 1) placement, 2) component installation, 3) remote control connections, 4) wiring, and 5) initial checkout.

2-14. PRIMARY AC POWER.

2-15. FM-5A. The FM-5A transmitter is designed for operation from a closed-delta or wye connected three-phase source. Operation from an unsatisfactory power source will void the warranty on this transmitter as any resultant damage is beyond the control of the manufacturer. Before attempting installation of the transmitter, assure that the proper power source is installed. Acceptable power input configurations are shown in Figure 2-2.

2-16. An open-delta, V to V, T to T, T to L, or Scott connected power source will provide unsatisfactory transmitter performance as transients and unstable power can damage components of the FM-5A and provide degraded transmitter specifications. Any of these systems will develop a considerable imbalance between phases in voltage, phase angle, or both voltage and phase angle. These problems can result in premature failure of power supply and RF circuit components.

2-17. It is important that the local electric utility be consulted to ensure that the correct service is provided before connection of the FM-5A transmitter to a primary power source. The proper power source can readily be identified by the use of three transformers with one winding each or one transformer with three windings instead of the use of two transformers as required for the unacceptable configurations.

2-18. FM-5AS. The FM-5AS transmitter is designed for operation from a 220V ac 50/60 Hz single phase power source. Consult the local electric utility company to ensure that the correct service is provided before connection of the transmitter to the primary power source.

2-19. EQUIPMENT PLACEMENT.

2-20. Access holes in the top and bottom of the cabinet allow either overhead or under-floor ducting of interconnecting wiring (see Figure 2-1). The floor must be capable of supporting the total transmitter weight of approximately 130 pounds per square foot. The floor support should be more than marginal to maintain the proper cabinet alignment and reduce vibration.

2-21. After it has been determined where and how the cabinet will be positioned, set the cabinet in place on a smooth and level location.

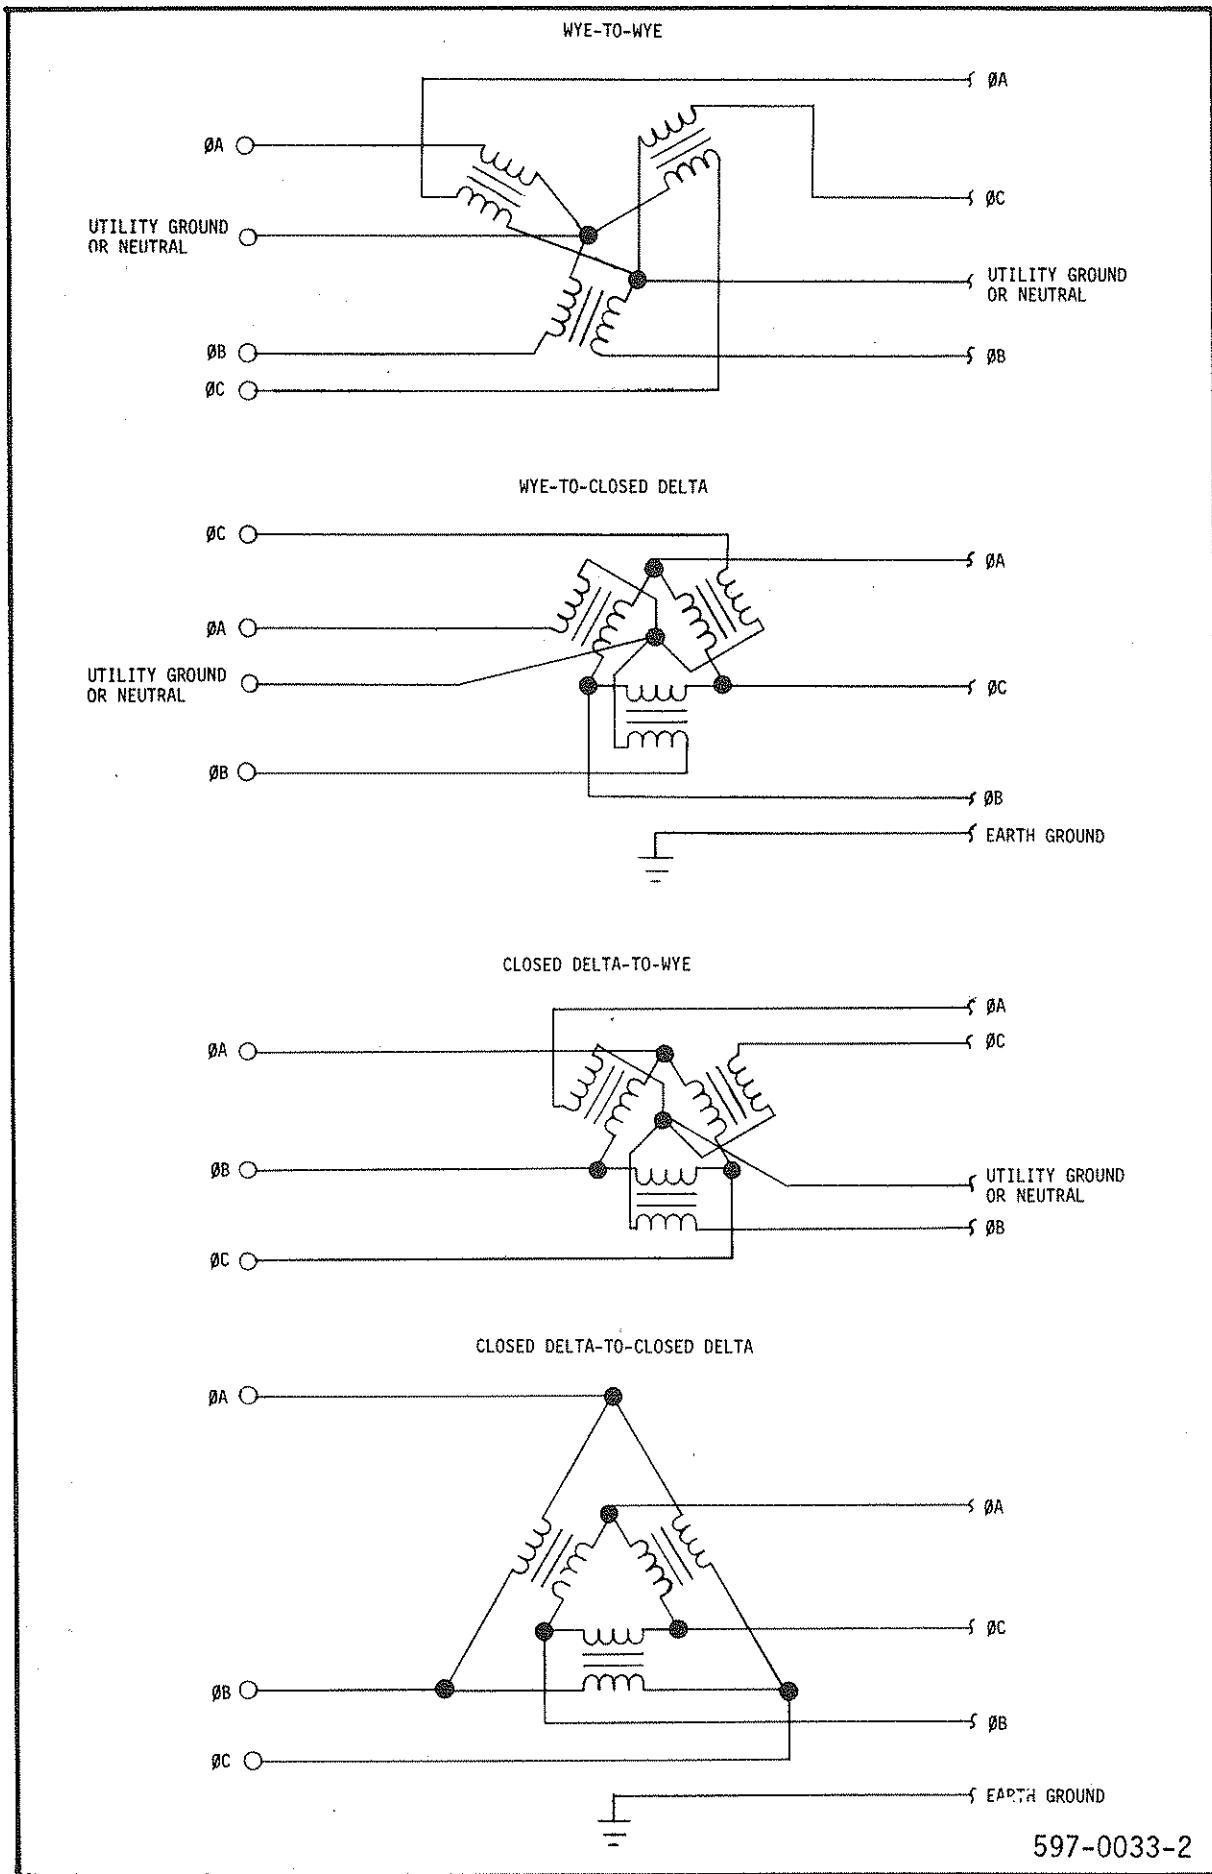


FIGURE 2-2. ACCEPTABLE AC POWER INPUT CONFIGURATIONS

2-22. COMPONENT INSTALLATION.

WARNING

ENSURE PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

2-23. Interconnecting wires and cables are tied in for shipment. Remove all tape, wire ties, string, and packing material used for shipment. Remove the cover from the FAILSAFE SOLENOID ASSEMBLY and cut loose all tie wraps, freeing the plunger. A No. 2 Phillips screwdriver is required. Replace the cover. Also, remove all ties from the shorting stick hanger.

2-24. Cables, connectors, and miscellaneous components to be installed are shipped in separate cartons. The following text provides information concerning the installation of these items.

NOTE

ENSURE ADJUSTMENTS ARE NOT MOVED FROM THEIR FACTORY PRESET POSITIONS DURING INSTALLATION.

2-25. Connect the antenna to the transmitter. A 1 5/8 inch EIA flange is provided with the transmitter to assist installation. The flange can be left off if unflanged connections are desired. A center conductor bullet may be required (BE P/N 427-0009).

2-26. Open the transmitter rear door.

2-27. Remove the lower front access panel. A 5/32 inch hex key is shipped with the transmitter for this purpose. Be careful, as this panel is heavy.

2-28. Open the cavity access door.

2-29. Disconnect the plate line B+ banana plug along the right side of the plate line.

2-30. Remove all tape and shims from the plate line at the shelf to free the plate line. Raise and rotate the plate line to lock the plate line in the up position.

2-31. Carefully remove all packing material from over the tube socket.

2-32. Carefully install the PA tube with a steady downward pressure. Do not rotate or rock the tube during installation or the tube socket may be damaged.

2-33. After the PA tube is fully seated, rotate and lower the fixed portion of plate line over the PA tube. Slowly lower the fixed portion of plate line down with both hands until the plate line stops contact with the cavity shelf.

2-34. Reconnect the plate RF choke banana plug into the plate line and verify that the choke is straight and perpendicular to the line with all connections secure. The plate line may be rotated as required. The choke turns do not touch when properly formed.

2-35. Secure the plate line to the tube with the strap clamp provided until the line does not slip from the PA tube when upward pressure is applied to the plate line. A flat-blade screwdriver with a 1/4 inch tip is required.

2-36. Close and latch the cavity access door.

2-37. On top of the transmitter, loosen the PA tuning line clamp. A flat-blade screwdriver with a 1/4 inch (0.64 cm) tip is required.

2-38. Raise the PA tuning line until the scribed line is aligned with the top of the cavity clamping flange and secure the strap clamp. The coarse PA tuning chart provided as Figure 5-3 may be referenced to estimate the location of this scribed line.

2-39. Assure the coarse PA input tuning cyclometer on the rear of the PA input enclosure is set to the value listed on the factory final test data sheets and the control is locked.

2-40. Remove the retainers from each set of slide rails inside the transmitter.

2-41. Install the nine-volt battery in the transmitter controller battery holder. Refer to Figure 2-3 and assure all jumper plugs are correctly positioned.

2-42. Using a miniature flat-blade screwdriver, mechanically zero all meters.


2-43. REMOTE CONTROL.

2-44. Many transmitter functions may be remotely controlled (see Figure 2-4). The transmitter will interface with most modern remote control units such as the sixteen channel Mosely MRC-1600. Programmable circuitry on the controller input filter circuit board provides either positive or negative remote indication logic to meet any interfacing requirement. The circuitry is shipped from the factory with negative remote indication logic and +2.5V dc full-scale remote meter indications. If re-programming of the transmitter remote indications is required, proceed as follows:

WARNING

ENSURE NO PRIMARY POWER IS CONNECTED TO THE TRANSMITTER BEFORE PROCEEDING.

- A. Remove the REMOTE INDICATION PROGRAMMING access panel on the controller cabinet rear-panel.

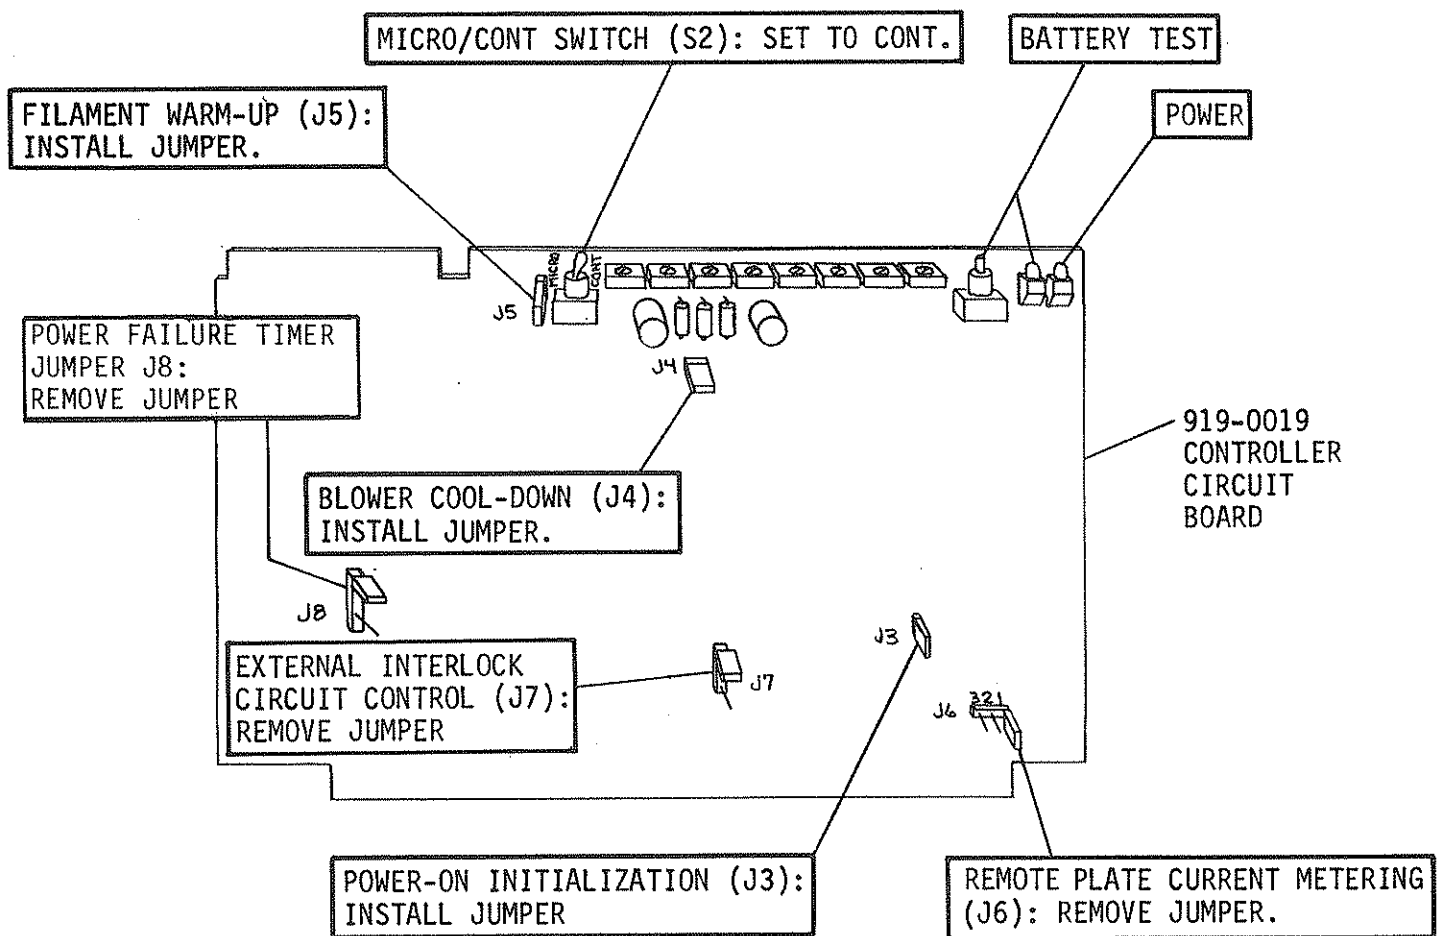

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.
597-0032-39

FIGURE 2-3. CONTROLLER CIRCUIT BOARD JUMPER-PLUG PROGRAMMING

- B. Refer to Figure 2-4 and program the input filter circuit board for the desired remote indication logic and meter indications:
1. Install the inverter integrated circuits in receptacles U1 and U2 for negative remote indication logic.
 2. Install the resistor network in receptacle R35 for +2.5 volt dc remote meter indications.
 3. Install 8-Pin DIP programmable jumpers in receptacles U1, U2, and R35 for positive remote indication logic and +5 volt dc remote meter indications.

- C. Replace the access panel.
- D. Complete the remote control installation by connecting the remote control unit wiring to the transmitter REMOTE INTERFACE PANEL terminal strips (refer to Figure 2-4).

2-45. WIRING.

WARNING

ENSURE PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

2-46. VOLTAGE TAPS. Ensure that the transmitter is wired for the input voltage and line frequency to be used. The screen transformer, the plate transformer, the bias transformer, the filament transformer, and the plate supply choke must be checked and changed if required (see Figure 2-5).

2-47. Check the IPA voltage taps per Figure 2-6 and change the wiring if required. Normally these taps are chosen to limit IPA regulator dissipation over the normal line voltage excursions. The 208-250V selection is typically acceptable.

2-48. The transmitter controller, FM exciter, stereo generator, and SCA generator should be checked as follows:


- A. The primary ac line voltage with which the transmitter will be used (220V or 230/240V) must be visible on the ac line voltage selector circuit board located adjacent to the ac input connector on each unit.
- B. If an ac line voltage selector must be changed, remove the ac line voltage selector circuit board with a small pair of needle-nose pliers. Reinsert the circuit board so that the correct ac line voltage is visible when the circuit board is reinserted into the receptacle.

2-49. Loosen the exciter front-panel turn-lock fastener and pull the exciter forward, out of the rack until the slide rail stops are encountered.

2-50. Loosen the eight turn-lock fasteners on the top of the exciter and remove the top cover.


2-51. Remove any packing material from the inside of the exciter.

2-52. Ensure the TEST/NORMAL switch on the metering assembly is set to NORMAL.

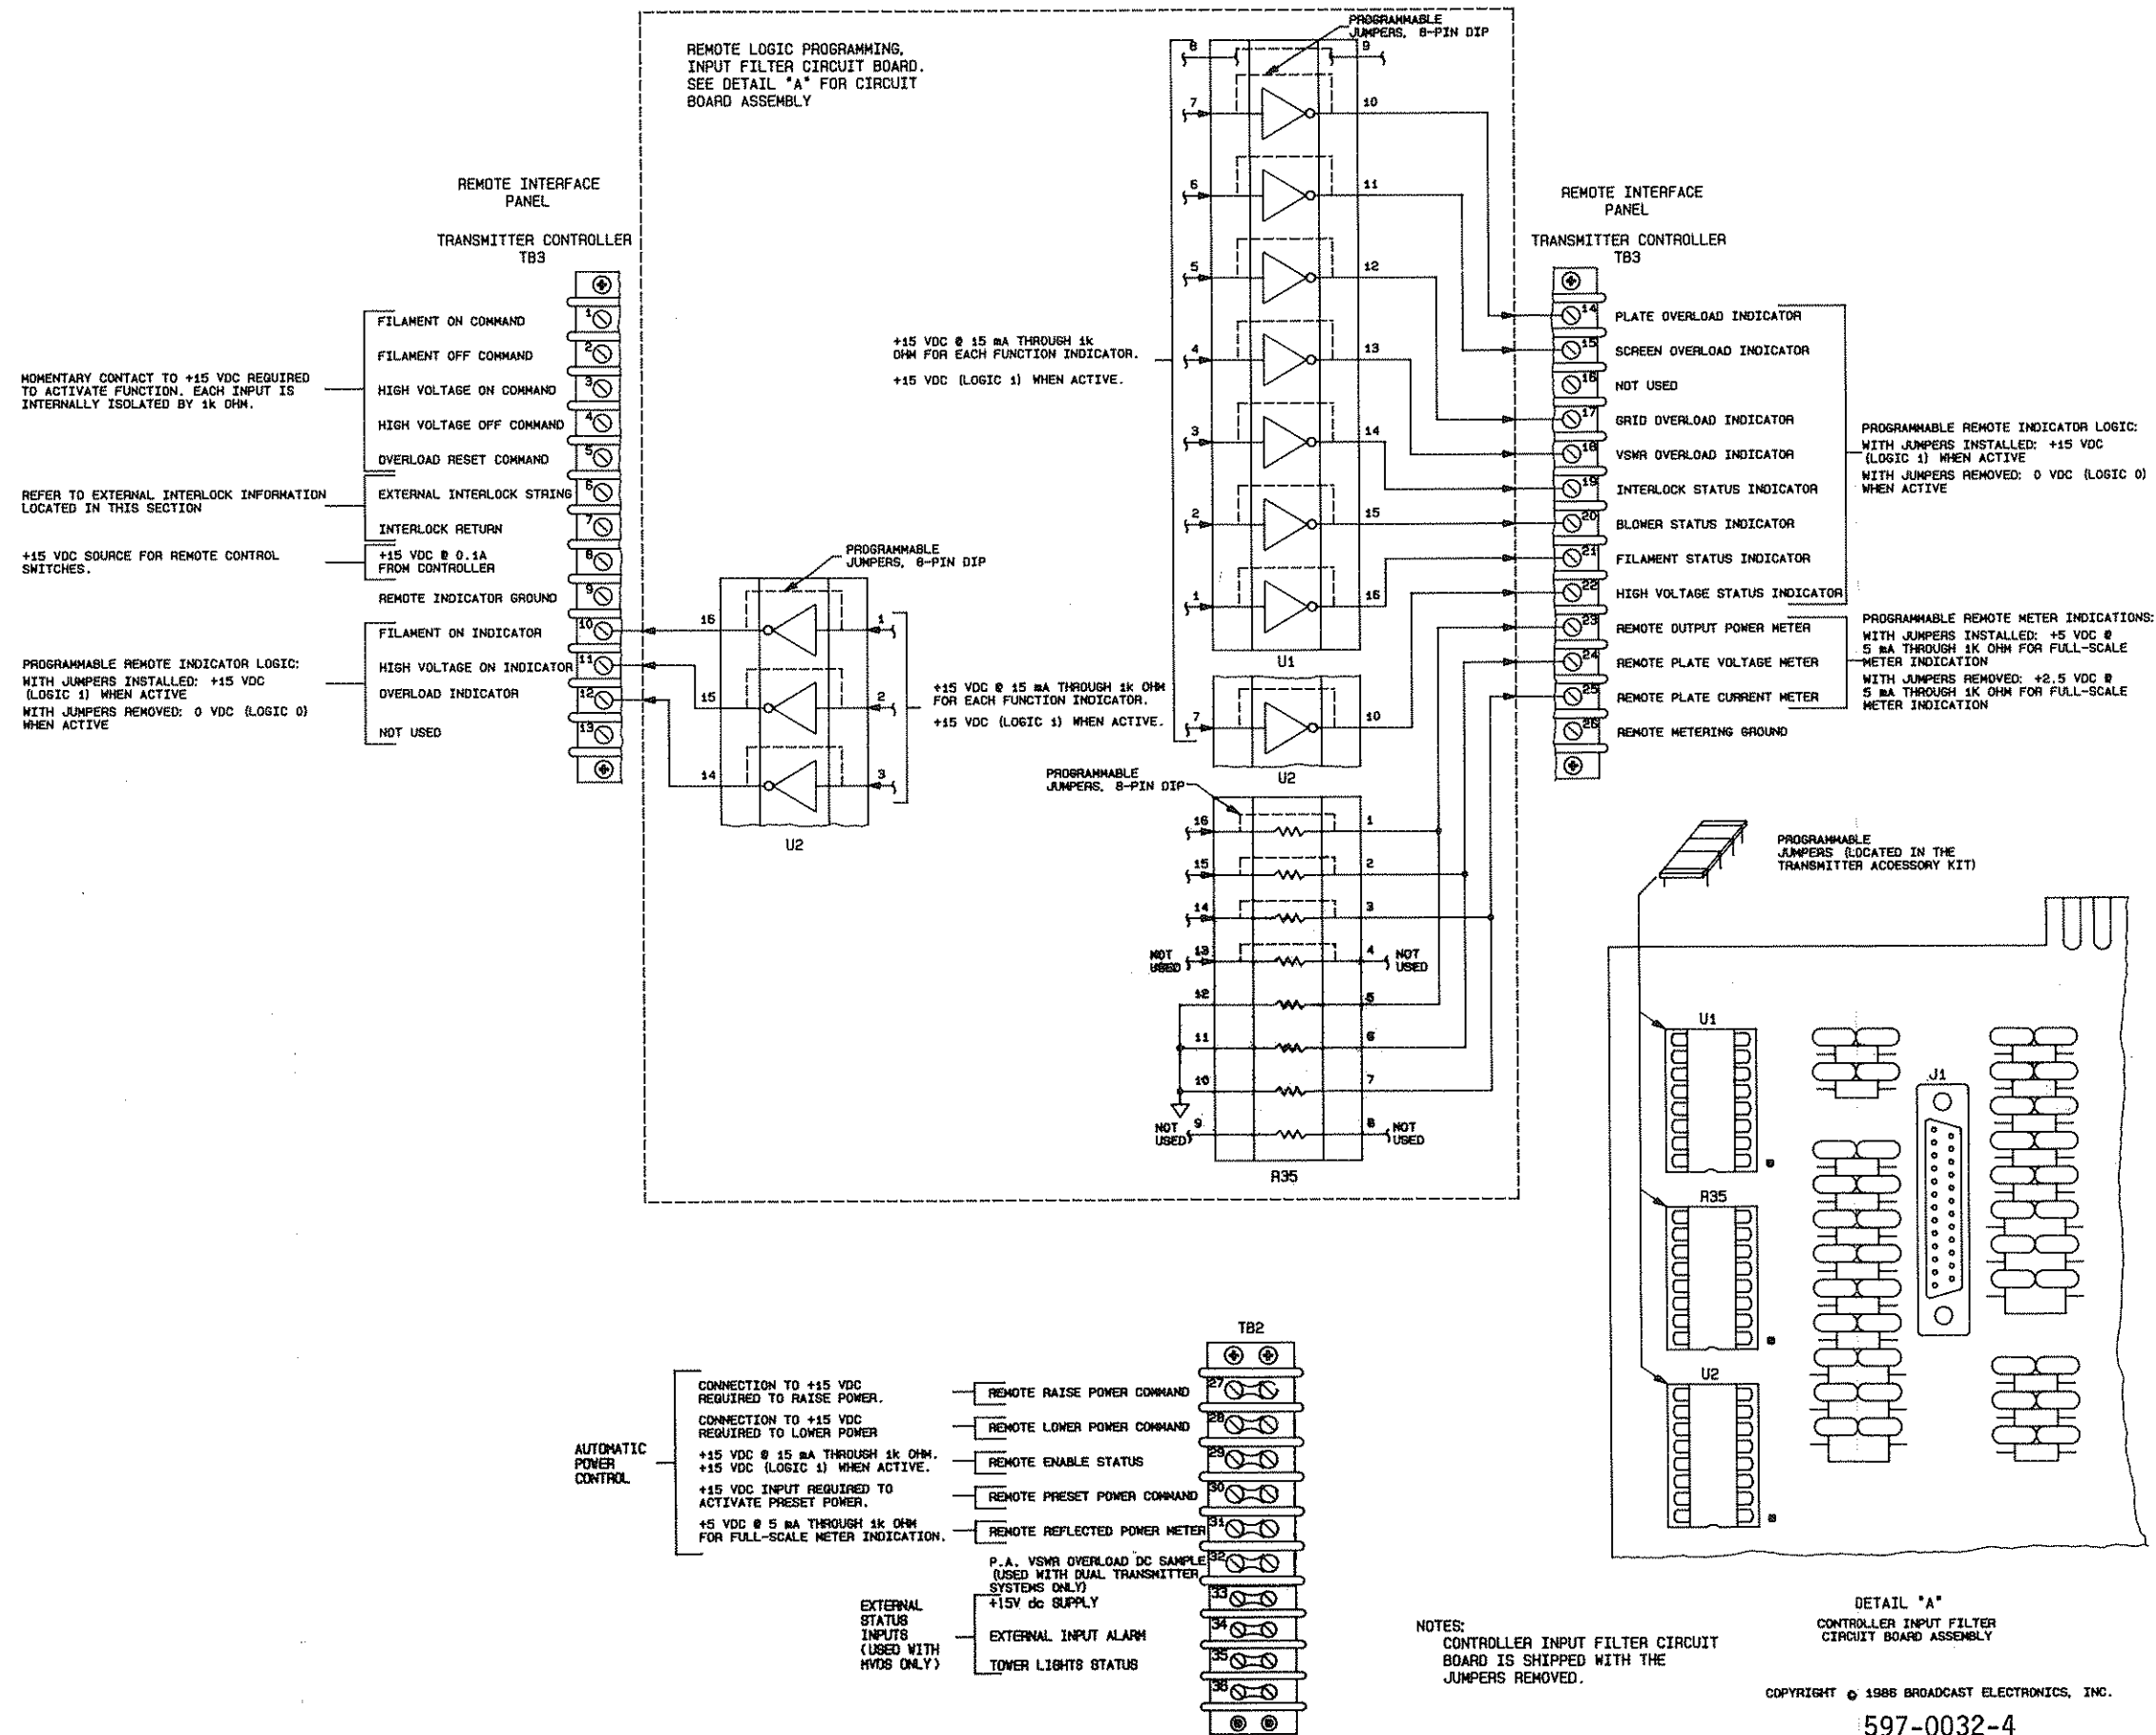


597-0032-4


FIGURE 2-4. REMOTE LOGIC PROGRAMMING AND WIRING

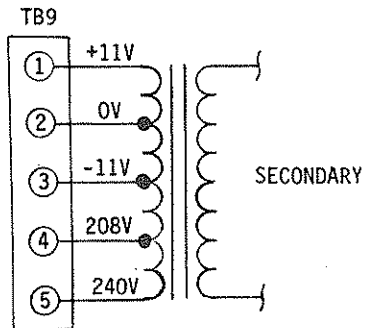

T2--SCREEN TRANSFORMER

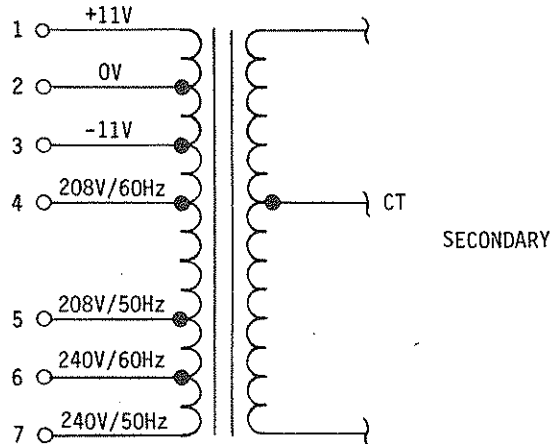



T5--FILAMENT TRANSFORMER

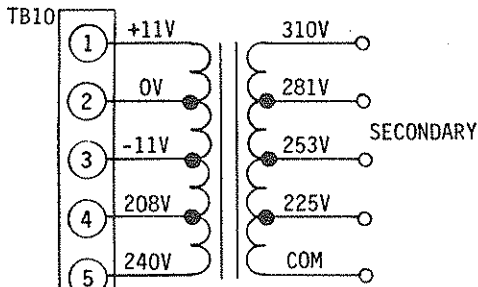

T4--BIAS TRANSFORMER

CAUTION

AFTER RETAPPING THE FILAMENT TRANSFORMER, THE CORRECT FILAMENT VOLTAGE MUST BE OBTAINED WITH THE FILAMENT ADJUST CONTROL NEAR THE CENTER OF ITS RANGE.

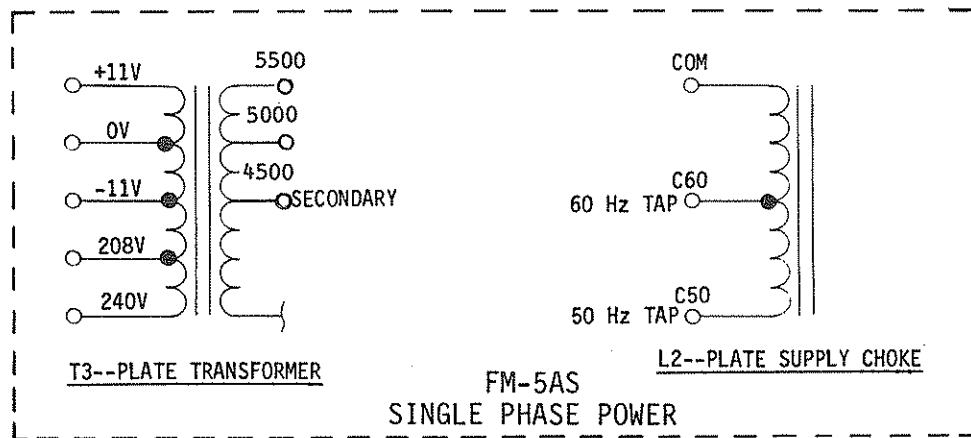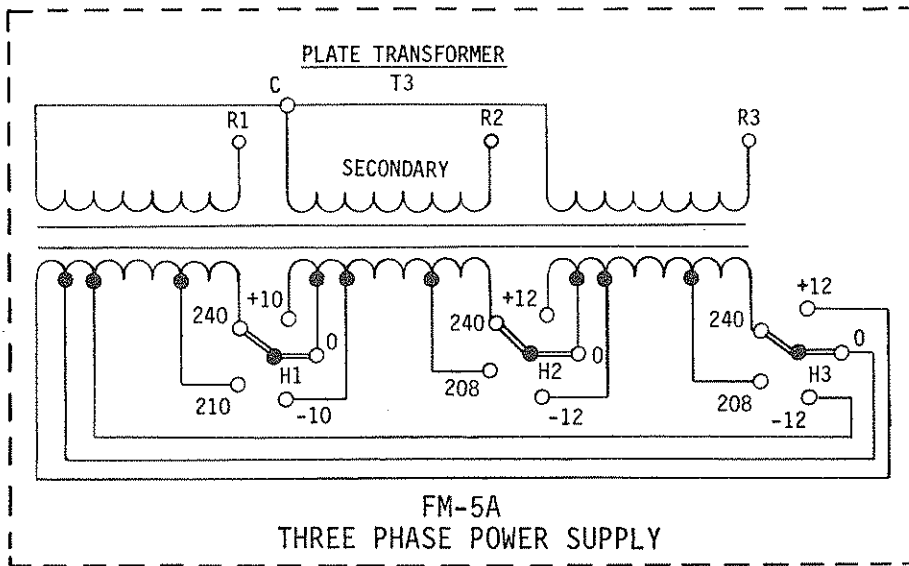

T3--PLATE TRANSFORMER


FM-5AS
SINGLE PHASE POWER

L2--PLATE SUPPLY CHOKE

COPYRIGHT © 1988 BROADCAST ELECTRONICS, INC.

597-0033-8

FIGURE 2-5. TRANSFORMER TAPS

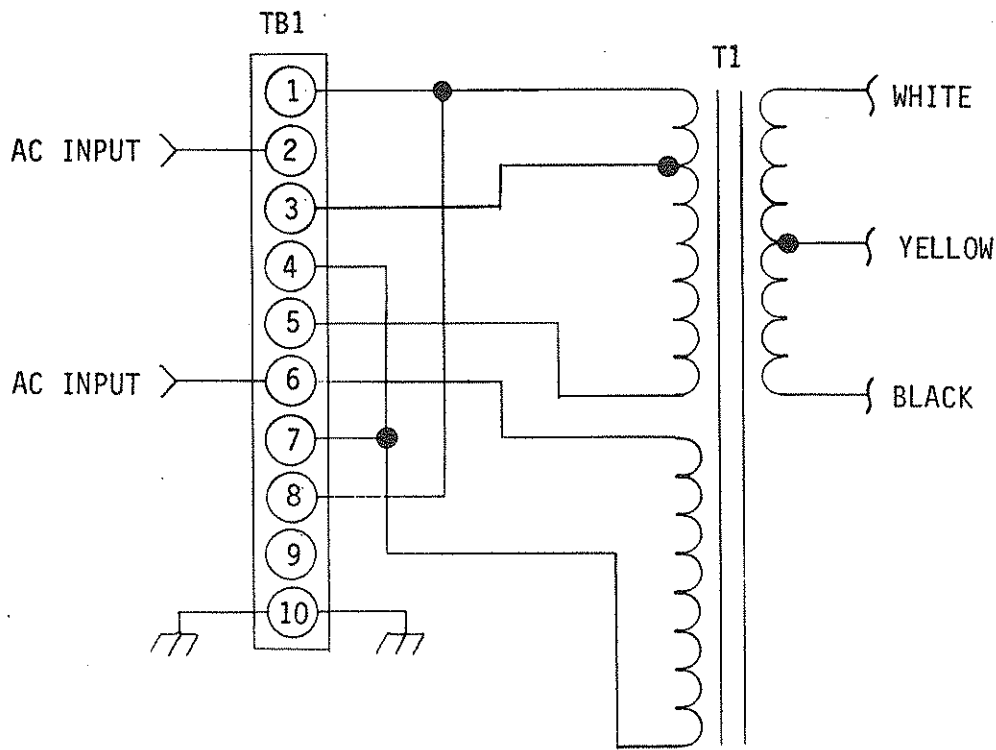

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.
597-0033-10

| LINE VOLTAGE | JUMPER | SECONDARY WIRING |
|--------------|---------------|------------------|
| 194-223V | 2-3, 4-5, 8-9 | BLACK AND WHITE |
| 213-256V | 2-3, 4-5, 8-9 | BLACK AND YELLOW |
| 208-250V | 1-2, 4-5, 8-9 | BLACK AND WHITE |
| 229-275V | 1-2, 4-5, 8-9 | BLACK AND YELLOW |

FIGURE 2-6. IPA VOLTAGE TAPS

2-53. Ensure the AUTO-PWR/MAN switch on the control assembly is set to AUTO and the NORM-EXT switch is set to NORM.

2-54. Refer to the final test data sheets shipped with the exciter and ensure the AFC/PLL assembly SYNTHESIZER FREQUENCY SELECTION jumpers are correctly positioned.

2-55. Remove the two shipping screws securing the modulated oscillator assembly, and allow the unit to float on its mountings.

2-56. Replace the top cover on the exciter and secure the eight turn-lock fasteners on the top of the cover.

2-57. Operate the exciter rear-panel POWER switch to ON.

2-58. Refer to the stereo generator and SCA generator manuals and complete any applicable checks or programming included in INSTALLATION.

2-59. OPTIONAL EQUIPMENT WIRING. Any optional equipment not provided with the transmitter should be mounted and wired at this time. Refer to Figure 2-7 for ac power connections.

2-60. GROUND. A common ground conductor must be connected to the common copper strap inside the cabinet (see Figure 2-9). This ground must be securely connected to the station common earth ground by the most direct route with No. 8 stranded copper wire or a two inch (5.08 cm) wide flat copper strap.

2-61. SIGNAL INPUTS. Refer to the applicable technical manual for the exciter, stereo generator, and SCA generator and wire the inputs and control connections to each unit. All audio wiring must be routed in the wiring channel away from the power supply components in the base.

2-62. EXTERNAL INTERLOCKS. The FM-5A is equipped with an external interlock circuit such as for a test load or remote control fail-safe connection. The external interlock circuit is independent of the transmitter safety interlock circuit and will disable only the high voltage plate supply when opened. The external interlock circuit however may be programmed to completely deenergize the transmitter. If the external interlock circuit is required to completely deenergize the transmitter, proceed as follows:

- A. Remove the EXTERNAL INTERLOCK PROGRAMMING access panel on the controller cabinet rear-panel.
- B. Refer to input filter circuit board assembly diagram AD919-0056 in PART II, TRANSMITTER CONTROLLER and install jumper J7 in position 2-3.
- C. Replace the access panel.


2-63. If an external interlock is desired, refer to Figure 2-8 and remove the jumper between TB3-6 and TB3-7. Install a normally closed interlock switch and interlock indicator as shown. The interlock must be electrically isolated from ground, any ac, or any dc potentials. If unused, ensure the factory installed jumper is connected between the terminals.

WARNING

ENSURE PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.


2-64. AC POWER CONNECTIONS. The following text presents three phase ac power connections for an FM-5A transmitter and single phase ac power connections for an FM-5AS transmitter. Refer to the following information and connect the FM-5A/FM-5AS transmitters to the appropriate power supply.

**AC DISTRIBUTION PANEL
(P/O CONTACTOR PANEL ASSEMBLY)**

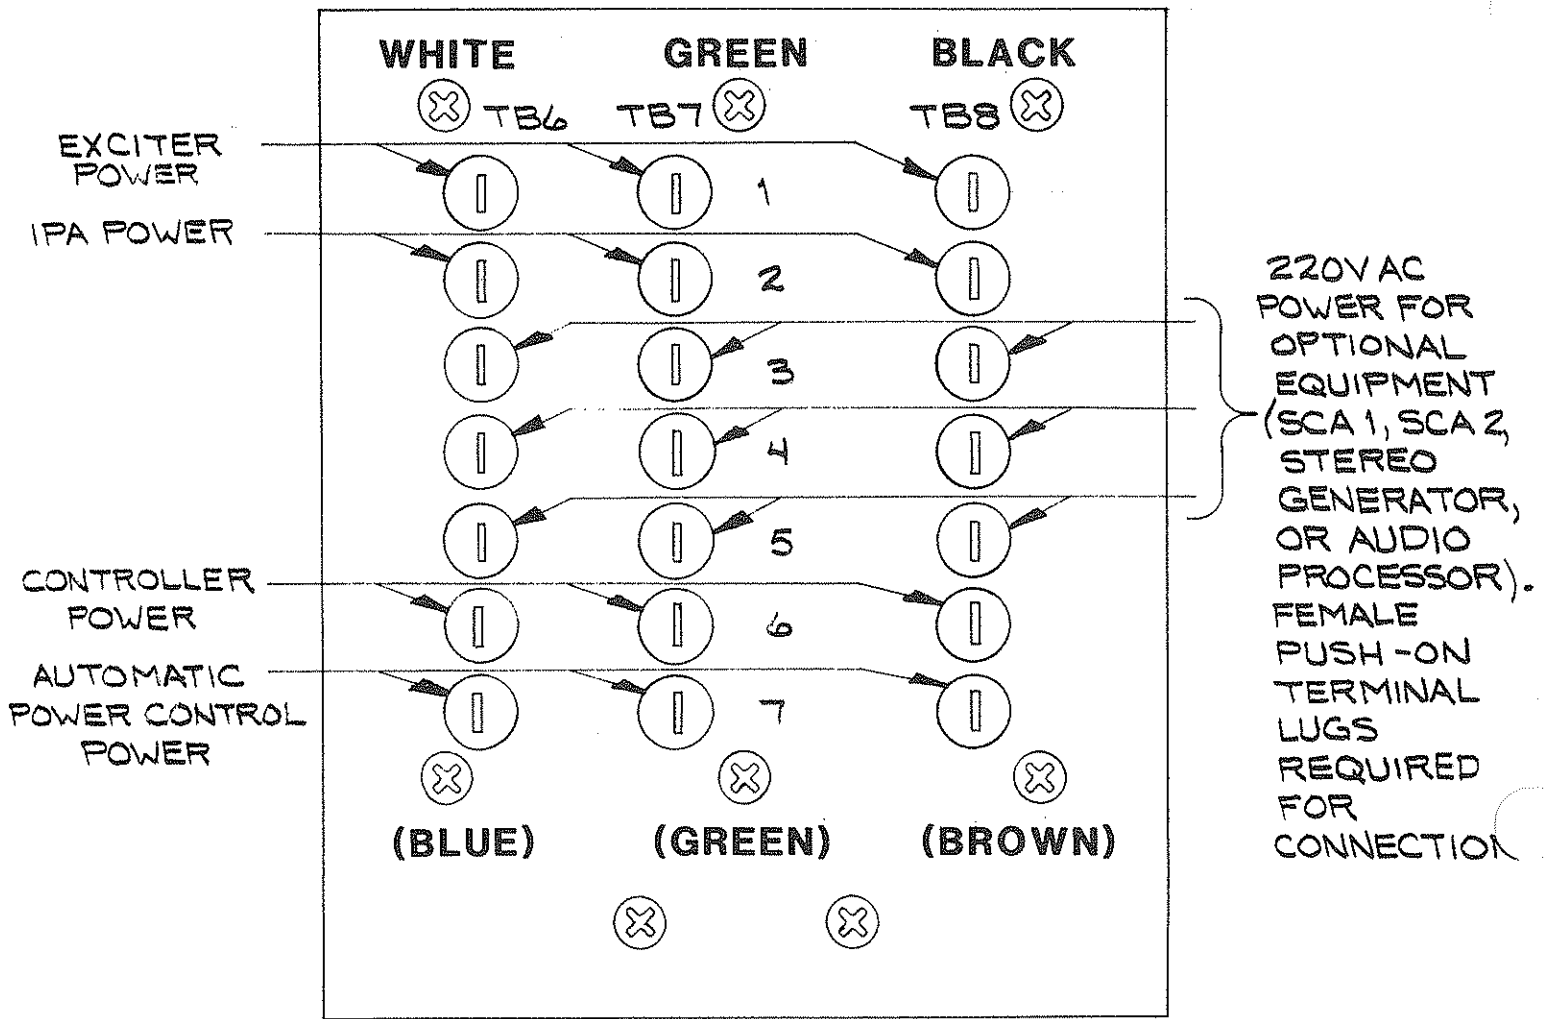

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.
597-0032-34

FIGURE 2-7. OPTIONAL EQUIPMENT WIRING

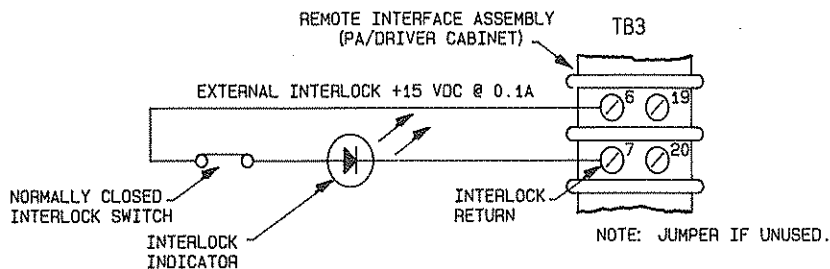

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.
597-0032-100

FIGURE 2-8. EXTERNAL INTERLOCK CIRCUIT

WARNING

ENSURE PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

2-65. FM-5A. A three phase source of 196V to 252V ac, 50 Hz or 60 Hz at 40 Amperes per phase is required for the FM-5A transmitter ac input. Ensure the power source is supplied from an acceptable ac transformer configuration (refer to PRIMARY AC POWER). For operating safety, the power source must be routed to the transmitter through a fused power disconnect (refer to 2-9).

2-66. Refer to Figure 2-9 and connect the 40 Ampere three phase service to TB1 on the transmitter base-plate through a fused service disconnect. Ensure a utility company ground conductor is securely connected to the transmitter ground system. For a three phase WYE service, ensure the neutral wire is connected to ac input terminal TB1-4.

WARNING

ENSURE PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

2-67. FM-5AS. A single phase source of 196V to 252V ac, 50 or 60 Hz at 70 Amperes is required for the FM-5AS transmitter ac input. For operating safety, the power source must be routed to the transmitter through a fused power disconnect (refer to Figure 2-10).

2-68. Refer to Figure 2-10 and connect the 70 Ampere service to TB1 on the transmitter base-plate through a fused service disconnect. Ensure a utility company ground conductor is securely connected to the transmitter ground system and the neutral wire is securely connected to TB1-2.


2-69. INITIAL CHECKOUT.

WARNING

ENSURE PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.


2-70. Ensure that the transmitter is completely installed, the transmitter is connected to a suitable RF load, and the station monitors are connected to the MON port in the RF low-pass filter output. The MON port provides a harmonic-filtered RF sample which is approximately 40 dB below the carrier power level. Check the following:

- A. Ensure primary power is correctly wired.
- B. Ensure all ground connections are secure.
- C. Ensure all RF connections are secure.

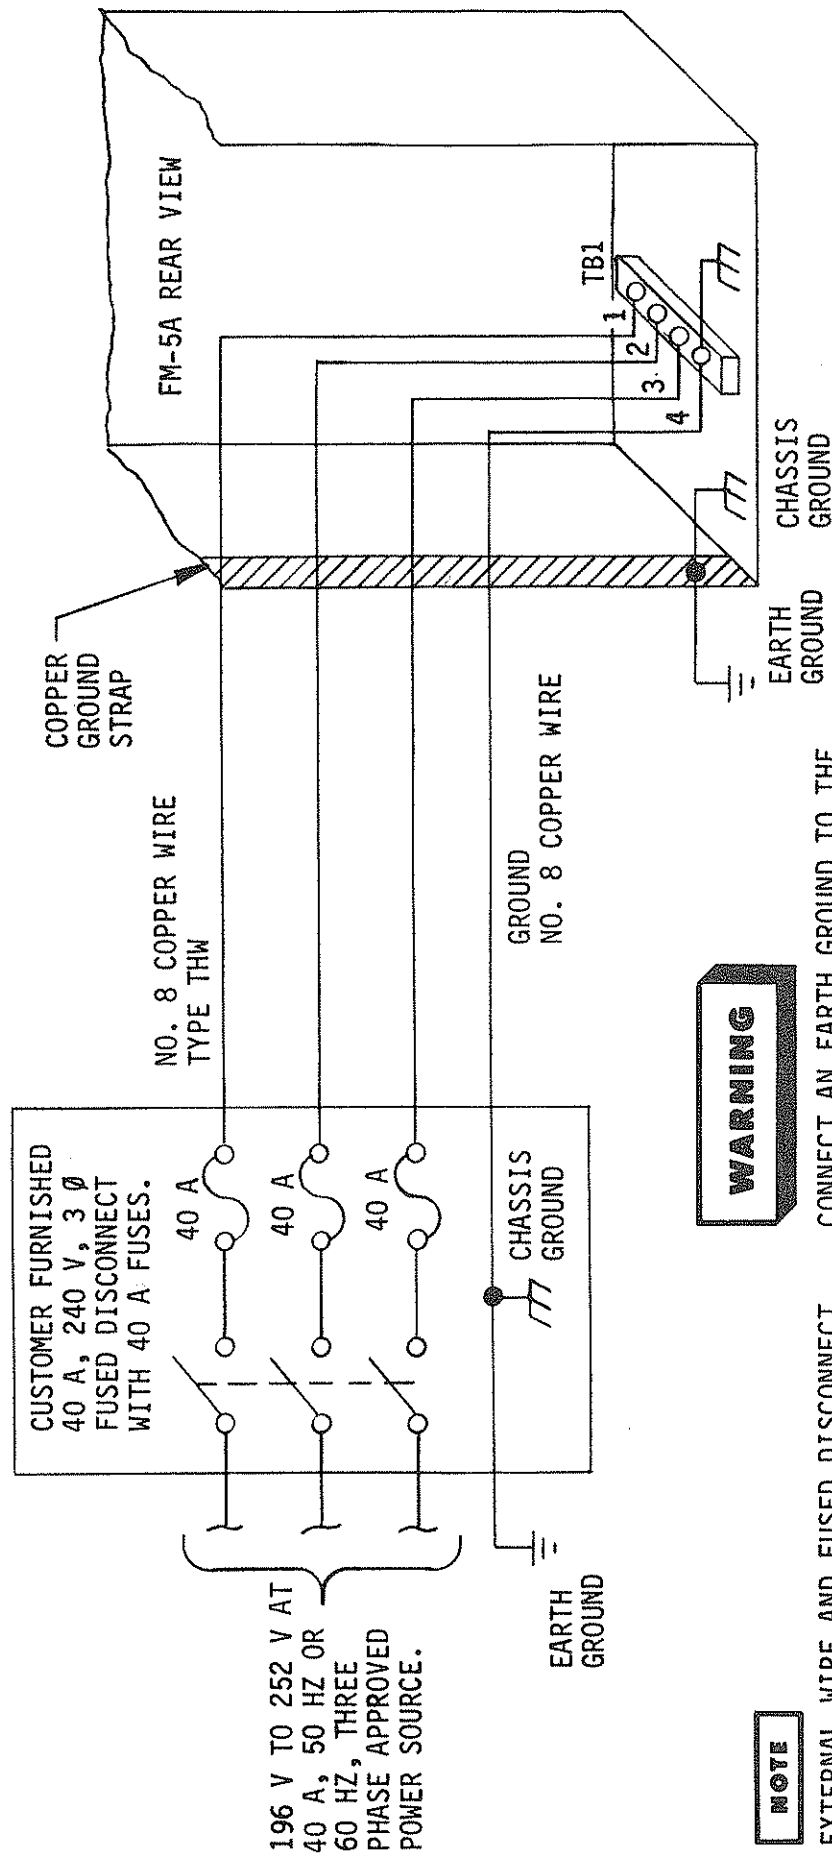

597-0033-7
COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

FIGURE 2-9. PRIMARY AC WIRING

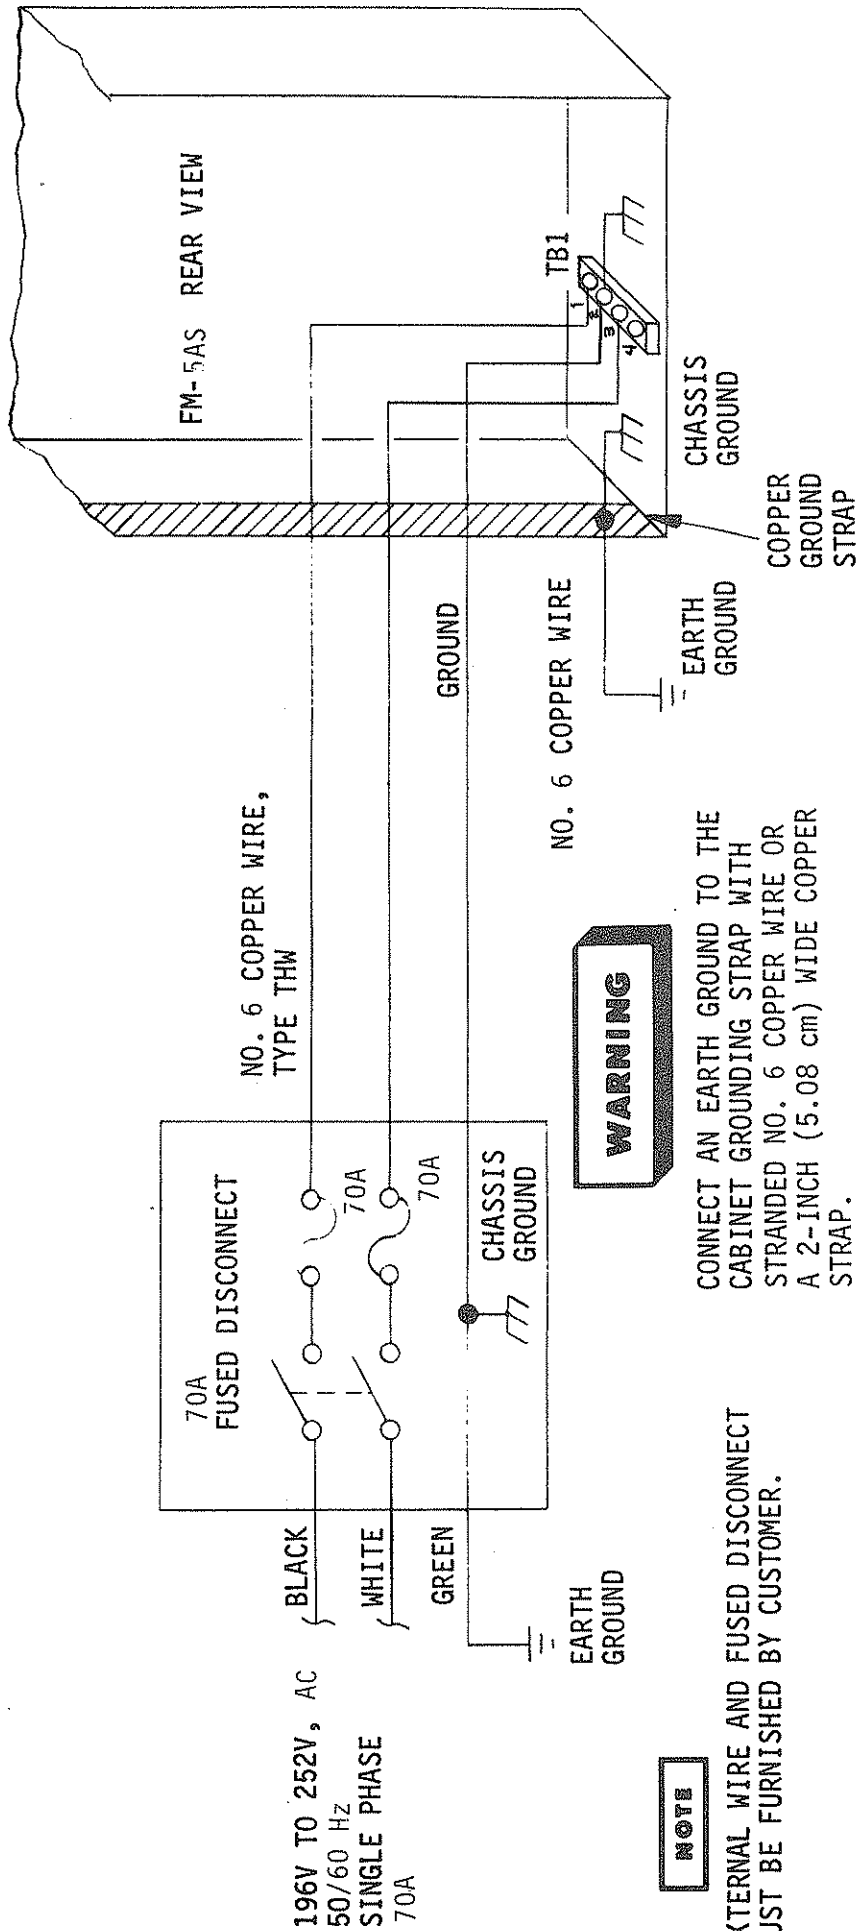

NOTE

EXTERNAL WIRE AND FUSED DISCONNECT MUST BE FURNISHED BY CUSTOMER.

WARNING

CONNECT AN EARTH GROUND TO THE CABINET GROUNDING STRAP WITH STRANDED NO. 6 COPPER WIRE OR A 2-INCH (5.08 cm) WIDE COPPER STRAP.

597-0032-7
COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

2-10. FM-5AS PRIMARY AC WIRING

- D. Ensure all connections at terminal boards are secure.
- E. Rotate the blower and fans by hand to ensure no obstructions are present.
- F. Using an insulator, check relay operation manually to be certain all have free movement.

2-71. Remove any extra hardware and wire lying within the cabinets and close all doors. Replace the lower front access panel using the black hex-head screws and hex wrench shipped with the transmitter.

2-72. The following procedure will refer to the factory final test data sheets supplied with the transmitter. Some differences in the actual operation may be noted due to differences in primary power or antenna systems. Ensure all controls are preset to the positions indicated on the final test data sheets.

2-73. Adjust the FILAMENT ADJUST control fully counterclockwise (minimum).

2-74. Operate all five front-panel circuit breakers to OFF.

2-75. Operate the OUTPUT POWER METER switch to FWD.

2-76. Close the wall-mounted fused disconnect.

2-77. Extend the exciter forward, out of the rack on the slide rails to expose the R.F. POWER OUTPUT ADJ. control access hole in the left side of the top cover. Adjust the control fully counterclockwise (minimum output). A tool is provided inside the exciter for this adjustment.

2-78. Operate the AC POWER and the BLOWER circuit breakers to ON.

2-79. The controller INTERLOCK STATUS indicator will illuminate. If the INTERLOCK STATUS indicator does not illuminate, open the wall-mounted fused disconnect and check the following:

- A. Ensure all doors are closed.
- B. Ensure all panels are installed.
- C. Ensure the shorting stick is in place on the hanger switch.

2-80. If installed, the external interlock indicator will illuminate. If the external interlock indicator remains extinguished, open an appropriate power source disconnect if required and check the interlock switch.

- 2-81. If the wall-mounted fused disconnect was opened in the preceding steps, close the disconnect and continue the checkout.
- 2-82. The POWER indicator on the controller circuit board inside the transmitter controller will illuminate.
- 2-83. The APC ON switch/indicator will be illuminated.
- 2-84. Depress the APC REMOTE DISABLE switch/indicator to illuminate the switch/indicator.
- 2-85. Depress the controller circuit board BATTERY TEST switch. The controller circuit board TEST indicator will illuminate.
- 2-86. Operate the DRIVER and the FILAMENT circuit breakers to ON.
- 2-87. Depress the FILAMENT ON switch/indicator. The switch/indicator will illuminate and the blower will start operation.
- 2-88. The BLOWER STATUS and FILAMENT STATUS indicators will illuminate and the blower will start operation.

NOTE At high altitudes, the BLOWER STATUS indicator may not illuminate. If this occurs, proceed as follows:

WARNING: ENSURE PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

- A. Disconnect primary ac power by opening the wall-mounted fused disconnect.
 - B. Open the transmitter rear door.
 - C. Using a flat-tip screwdriver, remove the two blower air switch mounting screws. Turn the air switch over so that the adjustment may be accessed, then re-mount the air switch.
 - D. Using a miniature flat-tip screwdriver, adjust the air switch adjustment slightly counterclockwise.
 - E. Attempt transmitter operation.
 - F. If required, disconnect primary power and repeat the adjustment.
- 2-89. Depress the exciter multimeter +20 switch.
- A. The multimeter must indicate +20 volts ± 2 volts.

- 2-90. Depress the exciter multimeter -20 switch.
- A. The multimeter must indicate -20 volts \pm 2 volts.
- 2-91. Depress the exciter multimeter +5 switch.
- A. The multimeter must indicate +5 volts \pm 0.5 volts.
- 2-92. Depress the exciter multimeter AFC switch.
- A. The multimeter will indicate a potential within the range of +2.5 volts to +13.5 volts, dependent upon carrier frequency. The correct voltage is noted on the final test data sheets.
- 2-93. Depress the exciter multimeter FWD switch.
- 2-94. The FILAMENT VOLTAGE meter indication must be less than 5V. An excessively high FILAMENT VOLTAGE meter indication would indicate improper PA tube installation or an improperly tapped filament transformer.
- 2-95. Adjust the FILAMENT ADJUST control to obtain a FILAMENT VOLTAGE meter indication of 5 volts.
- 2-96. Verify the GRID VOLTAGE meter indication without drive (refer to the factory test data sheets).
- 2-97. Depress the APC ON switch/indicator. The switch/indicator will go out.
- 2-98. Depress the RAISE switch/indicator for approximately three seconds. The switch/indicator will flash.
- 2-99. Depress the APC ON switch/indicator to illuminate the switch/indicator. The LOWER switch/indicator will flash until the APC returns the screen variable auto-transformer to minimum.
- 2-100. Depress the APC ON switch/indicator. The switch/indicator will go out.
- 2-101. Depress the HIGH VOLTAGE ON switch/indicator. The switch/indicator will illuminate and high voltage will be applied.
- 2-102. The exciter multimeter should indicate approximately three Watts.
- 2-103. Operate the SCREEN circuit breaker to ON.
- 2-104. Adjust the exciter output to approximately five Watts.
- 2-105. Depress the exciter multimeter PAV switch.

- A. The multimeter will indicate a potential within the range of +6.5 volts to +7.5 volts (assuming an RF output power of 5 Watts).
- 2-106. Depress the exciter multimeter PAI switch.
- A. The multimeter will indicate approximately 1.5 amperes (assuming RF output power of 5 Watts).
- 2-107. Depress the exciter multimeter FWD switch.
- 2-108. Adjust the INPUT TUNING control to obtain a maximum indication on the GRID CURRENT meter.
- 2-109. Adjust the exciter output to approximately 7.5 Watts.
- 2-110. The IPA FWD POWER indicator will illuminate. If the IPA VSWR indicator illuminates during the remainder of the initial checkout procedure, this indicates that the IPA load is incorrect. To correct the situation, readjust the INPUT TUNING control for a maximum indication on the GRID CURRENT meter.
- 2-111. The OUTPUT POWER and PLATE CURRENT meters will indicate a low level of less than 20% full-scale.
- 2-112. Adjust the OUTPUT TUNING control for a maximum OUTPUT POWER meter indication.
- 2-113. Depress the APC RAISE switch/indicator. The switch/indicator will flash. Hold the switch/indicator depressed until a 400 mA PLATE CURRENT meter indication is noted.
- 2-114. Adjust the OUTPUT TUNING control for a maximum OUTPUT POWER meter indication.
- 2-115. Adjust the INPUT TUNING control to obtain a maximum indication on the GRID CURRENT meter.
- 2-116. Depress the APC RAISE switch/indicator. Hold the switch/indicator depressed until a 50% indication is obtained on the OUTPUT POWER meter.
- 2-117. Depress and hold the OUTPUT POWER meter switch to VSWR CAL. Adjust the VSWR CAL control for 50% indication on the OUTPUT POWER meter.
- 2-118. Release the OUTPUT POWER METER switch. The OUTPUT POWER meter must indicate a VSWR of less than 1.2. An excessive VSWR indicates improper load connections.
- 2-119. Operate the OUTPUT POWER METER switch to FWD.

2-120. Adjust the OUTPUT TUNING for maximum indication on the OUTPUT POWER meter, concurrent with a minimum indication on the PLATE CURRENT meter.

2-121. Depress and hold the APC RAISE switch/indicator. Hold the switch/indicator depressed until a 100% power indication is noted on the OUTPUT POWER meter. If a plate or screen current overload occurs, it may be necessary to adjust the OUTPUT LOADING for better efficiency before increasing power to 100%.

2-122. Adjust the OUTPUT LOADING and OUTPUT TUNING controls to obtain the values stated on the factory test data sheets.

2-123. Check the FILAMENT VOLTAGE meter and adjust the FILAMENT ADJUST control as required. The meter must indicate 5 volts.

2-124. Peak the INPUT TUNING for maximum indication on the GRID CURRENT meter.

2-125. Adjust the exciter RF output power to the value stated on the factory test data sheets.

2-126. All meter indications should agree approximately to the values stated on the factory test data sheets. Some readjustment of the OUTPUT TUNING and OUTPUT LOADING controls may be required to compensate for individual antenna systems. The OUTPUT TUNING control should now be touched up for best PA efficiency on the lower current side of resonance.

2-127. Depress the APC RAISE or LOWER switch/indicators as required to obtain an 100% OUTPUT POWER METER indication.

2-128. Depress the APC ON switch/indicator. The switch/indicator will illuminate and the transmitter will maintain a constant 100% rated RF output.

2-129. Recalibrate the VSWR CAL control to 100%.

2-130. Apply programming to the exciter. The presence of programming may be noted on the exciter MODULATION meter.

2-131. If installed, check the external interlock operation as follows:

WARNING

OBSERVE PROPER SAFETY PRECAUTIONS WHEN PERFORMING THE FOLLOWING PROCEDURE.

- A. Open the external interlock. The controller HIGH VOLTAGE STATUS indicator and the external interlock indicator will extinguish and the high voltage plate supply will be disabled.

- B. Close the external interlock. The plate supply will be restored, the transmitter will resume operation, and the controller HIGH VOLTAGE STATUS indicator and the external interlock indicator will illuminate.

2-132. To adjust the automatic power control unit to maintain a level other than 100%, the APC ON switch/indicator must be illuminated. Depress and hold either the RAISE or the LOWER switch/indicator as desired until the desired percentage of transmitter power output is indicated by the OUTPUT POWER meter. The automatic power control circuitry operates in small increments and will take some time to track the reference to the new set point. The automatic power control circuitry will then maintain this new established RF output level. The VSWR CAL control must be re-calibrated and the transmitter must be retuned for maximum efficiency at this new level.

2-133. If remote operation is desired, the REMOTE DISABLE switch/indicator must be out. TB2-29 on the remote interface terminal block carries a remote enabled signal which can be connected to a relay or logic circuit to control a light or alarm to remind the engineer of the status of the remote disable switch. This feature will hopefully prevent inadvertent remote lockout if the engineer should leave the transmitter site and forget to enable remote operation.

SECTION III
OPERATION

3-1. INTRODUCTION.

3-2. This section identifies all controls and indicators associated with the FM-5A FM transmitter and provides standard operating procedures.

3-3. CONTROLS AND INDICATORS.

3-4. Refer to Figure 3-1 for the location of all controls and indicators associated with normal operation of the FM-5A transmitter. The function of each control or indicator is described in Table 3-1.

3-5. OPERATION.

NOTE

THE FOLLOWING PROCEDURE IS PRESENTED UNDER THE ASSUMPTION THAT THE TRANSMITTER IS FULLY INSTALLED AND IS FREE OF ANY DISCREPANCIES.

NOTE

3-6. TURN ON.

3-7. Operate all circuit breakers to ON.

3-8. Depress the REMOTE DISABLE switch/indicator to illuminate the switch/indicator.

3-9. Depress the FILAMENT ON switch/indicator, then depress the HIGH VOLTAGE ON switch/indicator. Each switch/indicator will illuminate as it is depressed.

3-10. If all interlocks are closed, the transmitter will be operational after a short delay to allow PA tube filament warm-up.

3-11. Check and log all meter indications and the status of the various indicators to assure proper equipment operation. A sample log sheet is provided as Table 3-2.

3-12. Operate the OUTPUT POWER METER switch to FWD to check the forward power output. To check VSWR, proceed as follows:

- A. Depress and hold the OUTPUT POWER meter switch to VSWR CAL.
- B. Adjust the VSWR CAL control to obtain a 100% indication on the OUTPUT POWER meter.
- C. Release the OUTPUT POWER METER switch to check VSWR.

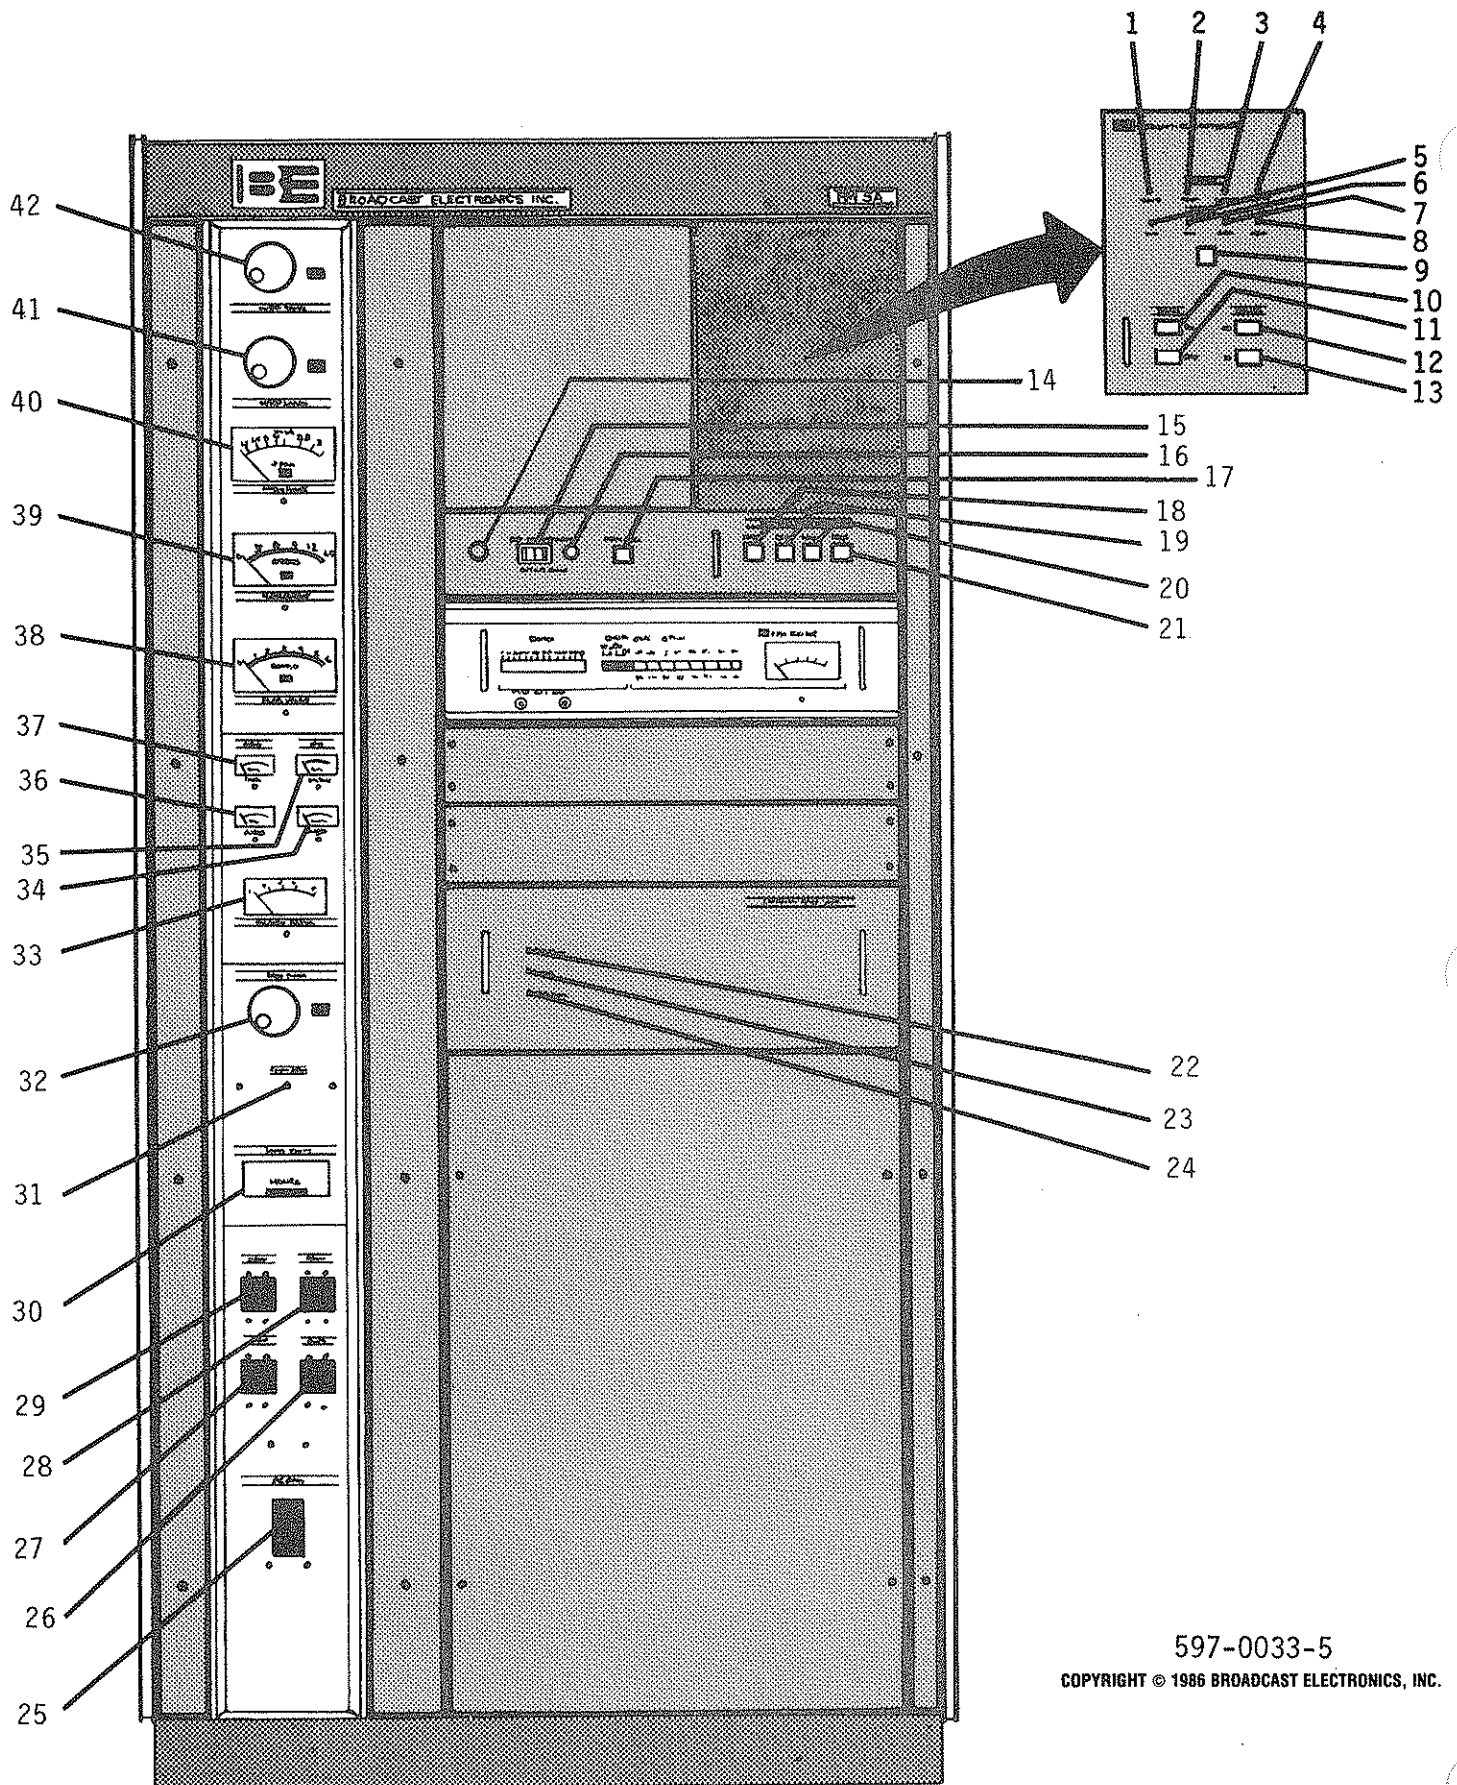


FIGURE 3-1 CONTROLS AND INDICATORS

- 3-13. Select the type of RF output power control:
- A. If manual power control is desired, proceed as follows:
 1. Depress the APC ON switch/indicator to extinguish the switch/indicator.
 2. Depress the APC RAISE or LOWER switch/indicator to raise or lower the transmitter RF output power as indicated by the OUTPUT POWER meter.
 - B. If automatic power control is desired, depress the APC ON switch/indicator to illuminate the switch/indicator. To adjust the level at which the automatic power control circuitry will maintain, proceed as follows:
 1. Depress the APC ON switch/indicator to illuminate the switch/indicator.
 2. Depress and hold the APC RAISE or LOWER switch/indicator to establish a new RF power output level as indicated by the OUTPUT POWER meter.
- 3-14. If remote operation is desired, depress the REMOTE DISABLE switch/indicator to extinguish the switch/indicator. This will enable both local and remote operation.
- 3-15. TURN OFF.
- 3-16. Depress the FILAMENT OFF switch/indicator. After a period of blower operation to allow the PA tube to cool, the equipment will de-energize.
- 3-17. Operate the AC POWER circuit breaker to OFF.
- 3-18. If the transmitter is disconnected from ac for longer than one hour, remove the controller battery.

TABLE 3-1. CONTROLS AND INDICATORS
(Sheet 1 of 5)

| INDEX NO. | NOMENCLATURE | FUNCTION |
|-----------|----------------------------|--|
| 1 | INTERLOCK STATUS Indicator | Indicates all transmitter safety interlocks are closed when illuminated. The external interlock is not included. |
| 2 | BLOWER STATUS Indicator | Indicates proper operation of the blower when illuminated. |
| 3 | FILAMENT STATUS Indicator | Indicates primary ac power is applied to the PA filament transformer when illuminated. |

TABLE 3-1. CONTROLS AND INDICATORS
(Sheet 2 of 5)

| INDEX NO. | NOMENCLATURE | FUNCTION |
|-----------|----------------------------------|---|
| 4 | HIGH VOLTAGE STATUS Indicator | Indicates the plate power supply is operational when illuminated. |
| 5 | VSWR OVERLOAD Indicator | Indicates a PA stage VSWR overload has occurred when illuminated. |
| 6 | PLATE OVERLOAD Indicator | Indicates a PA plate circuit overload has occurred when illuminated. |
| 7 | SCREEN OVERLOAD Indicator | Indicates a PA screen circuit overload has occurred when illuminated. |
| 8 | GRID OVERLOAD Indicator | Indicates a PA grid power supply overload has occurred when illuminated. |
| 9 | OVERLOAD RESET Switch/Indicator | SWITCH: Clears the overload circuit memory when depressed. INDICATOR: Indicates an overload condition exists when illuminated. |
| 10 | FILAMENT ON Switch/Indicator | SWITCH: Energizes the filament contactor when depressed to apply PA filament voltage. INDICATOR: Indicates a filament-on command has been received by the transmitter controller. |
| 11 | FILAMENT OFF Switch | Deenergizes all transmitter power. The blower and flushing fans will run for approximately one minute after the FILAMENT OFF switch has been depressed. |
| 12 | HIGH VOLTAGE ON Switch/Indicator | SWITCH: Energizes the plate contactor when depressed to activate the plate power supply, the screen power supply, and the exciter. INDICATOR: Indicates a high voltage-on command has been received by the transmitter controller. |
| 13 | HIGH VOLTAGE OFF Switch | Deenergizes the plate and screen power supplies and mutes RF drive when depressed. |

TABLE 3-1. CONTROLS AND INDICATORS
(Sheet 3 of 5)

| INDEX NO. | NOMENCLATURE | FUNCTION |
|-----------|---|---|
| 14 | AM NOISE TEST Receptacle | Test receptacle for AM noise measurements. |
| 15 | OUTPUT POWER METER FWD/VSWR/VSWR CAL Switch | Selects the parameter to be displayed by the OUTPUT POWER meter. |
| 16 | OUTPUT POWER METER VSWR CAL Control | Allows calibration of the OUTPUT POWER meter VSWR display. |
| 17 | REMOTE DISABLE Switch/Indicator | SWITCH: Inhibits or enables transmitter remote operation. INDICATOR: Indicates remote operation is inhibited when illuminated. |
| 18 | AUTOMATIC POWER CONTROL PRESET Switch/Indicator | SWITCH: Selects transmitter operation at a preset RF power output level. INDICATOR: Indicates transmitter operation at a preset RF power level (such as half power) has been selected when illuminated. |
| 19 | AUTOMATIC POWER CONTROL APC ON Switch/Indicator | SWITCH: Selects APC control of transmitter operation. INDICATOR: Indicates the transmitter is under APC control when illuminated. |
| 20 | AUTOMATIC POWER CONTROL LOWER Switch/Indicator | SWITCH: In the automatic mode, moves the APC reference downward when depressed. In the manual mode, operates the screen control motor in a direction which will reduce transmitter RF output power when depressed. INDICATOR: Indicates pulsed screen control motor operation in a direction which will lower transmitter RF power output when illuminated. Goes out when minimum level is obtained. |

TABLE 3-1. CONTROLS AND INDICATORS
(Sheet 4 of 5)

| INDEX NO. | NOMENCLATURE | FUNCTION |
|-----------|--|---|
| 21 | AUTOMATIC POWER CONTROL RAISE Switch/Indicator | <p>SWITCH: In the automatic mode, moves the APC reference upward when depressed. In the manual mode, operates the screen control motor in a direction which will raise transmitter RF output power when depressed.</p> <p>INDICATOR: Indicates pulsed screen control motor operation in a direction which will raise transmitter RF power output when illuminated. Goes out when maximum level is obtained.</p> |
| 22 | INTERMEDIATE POWER AMPLIFIER FWD POWER Indicator | Indicates the IPA stage RF output power exceeds 75 Watts when illuminated. |
| 23 | INTERMEDIATE POWER AMPLIFIER VSWR Indicator | Indicates the PA stage input circuit VSWR is excessive when illuminated (greater than 10 Watts reflected to the IPA). |
| 24 | INTERMEDIATE POWER AMPLIFIER OVER TEMP Indicator | Indicates an IPA stage regulator heat sink over-temperature condition exists when illuminated. |
| 25 | AC POWER Circuit Breaker | Provides overload protection and primary power control for the transmitter AC input. |
| 26 | BLOWER Circuit Breaker | Provides overload protection and primary power control for the blower, flushing fans, the automatic power control unit, and the transmitter controller. |
| 27 | FILAMENT Circuit Breaker | Provides overload protection and primary power control for the PA tube filament supply, the control grid bias supply, and the hum null circuitry. |
| 28 | DRIVER Circuit Breaker | Provides overload protection and primary power control for the FM exciter and intermediate power amplifier. |
| 29 | SCREEN Circuit Breaker | Provides overload protection and primary power control for the PA screen grid power supply. |

TABLE 3-1. CONTROLS AND INDICATORS
(Sheet 5 of 5)

| INDEX NO. | NOMENCLATURE | FUNCTION |
|-----------|---|---|
| 30 | FILAMENT TIME Meter | Indicates hours of filament circuit operation. |
| 31 | FILAMENT ADJUST Control | Adjusts the PA tube filament voltage. |
| 32 | INPUT TUNING Control and Cyclometer | Tunes the PA stage input circuit to resonance. |
| 33 | FILAMENT VOLTAGE Meter | Indicates the PA tube filament voltage. |
| 34 | GRID CURRENT Meter | Indicates the PA tube control grid current. |
| 35 | GRID VOLTAGE Meter | Indicates the PA tube control grid voltage. |
| 36 | SCREEN CURRENT Meter | Indicates the PA tube screen grid current. |
| 37 | SCREEN VOLTAGE Meter | Indicates the PA tube screen grid voltage. |
| 38 | PLATE VOLTAGE Meter | Displays the PA stage plate potential. |
| 39 | PLATE CURRENT Meter | Displays the PA stage plate current. |
| 40 | OUTPUT POWER Meter | Displays transmitter percentage of RF output power or output VSWR as selected by the OUTPUT POWER METER FWD/VSWR/VSWR CAL switch. |
| 41 | OUTPUT LOADING Control and Cyclometer | Adjusts the PA stage output loading. |
| 42 | OUTPUT TUNING Control and Cyclometer | Tunes the PA stage output circuit to resonance. |

TABLE 3-2. INDICATOR CHECKLIST

| INDICATOR | STATUS | |
|----------------------------------|--------------------------|--------------------------|
| INTERLOCK STATUS | <input type="radio"/> | <input type="radio"/> |
| BLOWER STATUS | <input type="radio"/> | <input type="radio"/> |
| FILAMENT STATUS | <input type="radio"/> | <input type="radio"/> |
| HIGH VOLTAGE STATUS | <input type="radio"/> | <input type="radio"/> |
| VSWR OVERLOAD | <input type="radio"/> | <input type="radio"/> |
| PLATE OVERLOAD | <input type="radio"/> | <input type="radio"/> |
| SCREEN OVERLOAD | <input type="radio"/> | <input type="radio"/> |
| GRID OVERLOAD | <input type="radio"/> | <input type="radio"/> |
| OVERLOAD RESET SWITCH/INDICATOR | <input type="checkbox"/> | <input type="checkbox"/> |
| FILAMENT ON SWITCH/INDICATOR | <input type="checkbox"/> | <input type="checkbox"/> |
| HIGH VOLTAGE ON SWITCH/INDICATOR | <input type="checkbox"/> | <input type="checkbox"/> |
| REMOTE DISABLE SWITCH/INDICATOR | <input type="checkbox"/> | <input type="checkbox"/> |
| PRESET SWITCH/INDICATOR | <input type="checkbox"/> | <input type="checkbox"/> |
| APC ON SWITCH/INDICATOR | <input type="checkbox"/> | <input type="checkbox"/> |
| LOWER SWITCH/INDICATOR | <input type="checkbox"/> | <input type="checkbox"/> |
| RAISE SWITCH/INDICATOR | <input type="checkbox"/> | <input type="checkbox"/> |
| IPA FWD POWER | <input type="radio"/> | <input type="radio"/> |
| VSWR | <input type="radio"/> | <input type="radio"/> |
| OVER TEMP | <input type="radio"/> | <input type="radio"/> |
| METER | INDICATION | |
| OUTPUT POWER | POWER % | VSWR :1 |
| PLATE CURRENT | A | |
| PLATE VOLTAGE | kV | |
| SCREEN VOLTAGE | V | |
| SCREEN CURRENT | mA | |
| GRID VOLTAGE | V | |
| GRID CURRENT | mA | |
| FILAMENT TIME | HOURS | |

NOTE

OPERATIONAL STATUS SHOWN BY SHADED INDICATOR

597-0032-4

SECTION IV
THEORY OF OPERATION

4-1. INTRODUCTION.

4-2. This section presents general theory of operation for the FM-5A FM Transmitter.

4-3. The FM-5A transmitter is divided into functional blocks which are discussed by the following text. Each circuit is discussed in further detail by the modular assembly publications in Part II of this manual. These functional blocks consist of the FM exciter, the intermediate power amplifier (IPA), the power amplifier, the automatic power control (APC), the transmitter controller, and the associated power supplies and control circuits. Each functional block contains an integral power supply except for the power amplifier which obtains dc power from components mounted along the sides and base of the transmitter enclosure. Refer to the block diagram (Figure 4-1) and the overall schematic diagram in Section VII as required for the following explanation.

4-4. ELECTRICAL DESCRIPTION.

4-5. FM EXCITER.

4-6. The Broadcast Electronics FX-30 is a totally solid-state wideband FM exciter providing a continuously variable RF output from 3 to 30 watts into a 50 Ohm load at any frequency within the 87.5 to 108 MHz FM broadcast band. The exciter may be programmed to any frequency within this band in 10 kHz increments. The FX-30 exciter is mounted in slides to allow easy access to the internal semi-modular exciter circuitry.

4-7. The FX-30 will accept multiple wideband composite inputs from a stereo generator or SCA generator as well as a 600 Ohm balanced audio input (see Figure 4-1). Refer to publication 597-0002 for detailed explanation of the FM exciter features.

4-8. INTERMEDIATE POWER AMPLIFIER.

4-9. The intermediate power amplifier consists of a broadband solid-state amplifier assembly and a regulated power supply with over-voltage and over-current protection circuitry. The IPA is contained in a slideout drawer for ease of maintenance. Both the amplifier and the regulator are mounted on easily removable heat sinks built around a fan which provides forced-air cooling.

4-10. The IPA RF stage consists of two bipolar RF power transistors operated push-pull as a class C amplifier. A stripline directional coupler provides forward and reflected power samples. The IPA exhibits a power gain of 10 dB to output approximately 150 Watts to drive the PA stage.

4-11. A green FWD PWR indicator on the front panel illuminates to indicate sufficient RF output level exists for normal PA stage operation. A yellow VSWR illuminates to indicate excessive IPA stage reflected power and requires adjustment of the INPUT TUNING control to correct a mismatch. A red OVER TEMP indicator indicates that an over-temperature condition exists within the IPA. Refer to the IPA section in Part II of this manual for a more detailed description.

4-12. POWER AMPLIFIER.

4-13. The FM-5A uses a single 4CX3500A tetrode to provide 5000 Watts of RF power on a single frequency within the FM broadcast band of 87.5 MHz to 108 MHz. The power amplifier operates in a high-gain, grid-driven class C configuration. A simplified input circuit matches the 50 Ohm output of the IPA up to the higher grid input impedance. Use of a large coaxial cavity results in high PA efficiency for comparatively low power consumption. Removal of the PA tube is a simple and quick procedure due to the cavity arrangement. A dual-blower cooling system forces air through the tube socket, anode fins, and out through the main transmission line chimney. A differential air pressure sensor monitors the effectiveness of the cooling system and removes power to the tube if air flow is interrupted.

4-14. POWER AMPLIFIER CAVITY. The patented PA cavity used in the FM-5A employs a folded half-wave resonator constructed with coaxial aluminum and copper tubing. This cavity design eliminates the high voltage blocking capacitors and high current sliding contacts of conventional cavities by connecting the main transmission line conductor directly to the anode of the power tube. A grounded concentric transmission line center conductor tunes this cavity by varying the length inserted into the open end of the main conductor opposite the tube. The main conductor is insulated from ground and carries the anode dc potential. DC power is fed at the RF voltage null point, approximately one-quarter wave from the anode for effective RF decoupling. A large surface area without sliding contacts results in minimal RF loss at this point in the cavity.

4-15. OUTPUT COUPLING. Energy is coupled into the transmission line by an adjustable untuned loop which functions in the electromagnetic field within the cavity. One end of the output loop is connected to ground, while the other connects to the center conductor of the output transmission line through flexible straps.

4-16. PLATE TUNING. Plate tuning is accomplished by adjusting a threaded rod which mechanically expands or contracts a beryllium copper bellows on the end of the grounded transmission line center conductor inserted into the main line. Coarse frequency adjustment is accomplished by pre-setting the length of the center conductor into the cavity.

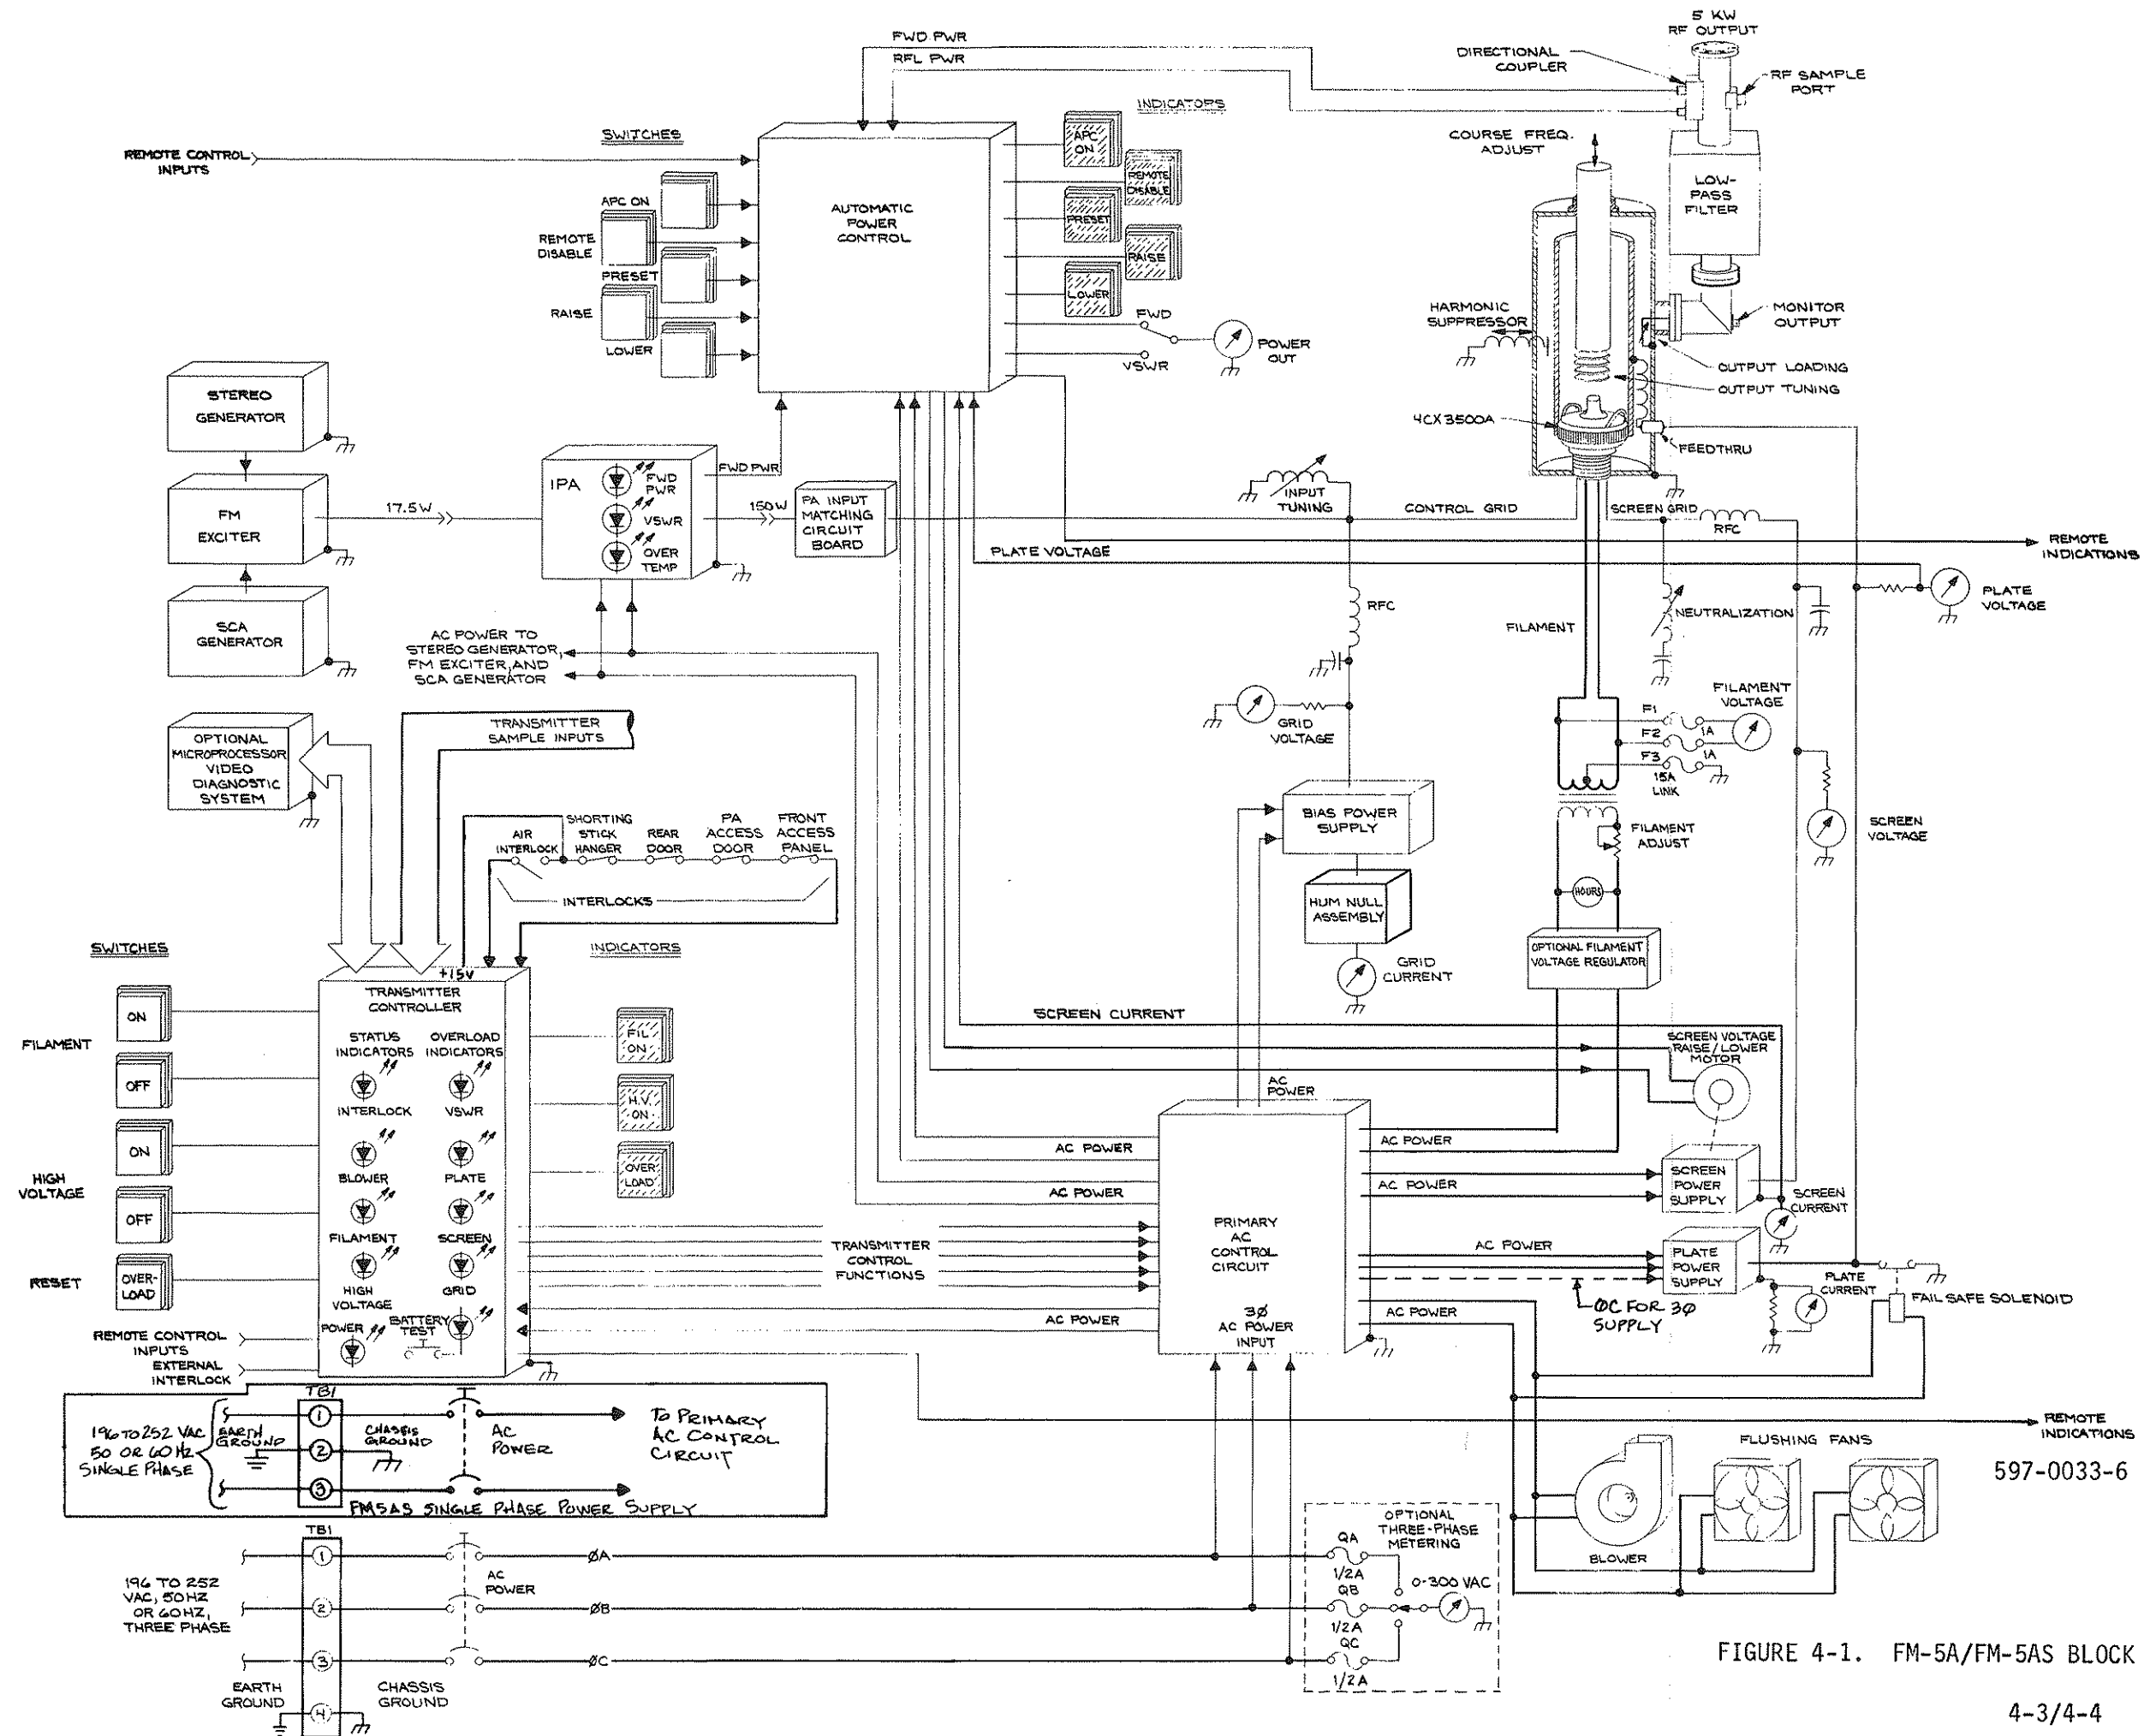


FIGURE 4-1. FM-5A/FM-5AS BLOCK DIAGRAM

4-17. NEUTRALIZATION. Neutralization is accomplished in the FM-5A by distributed inductance added in series between the screen connection and the screen bypass capacitors, developing a counteractive voltage swing between the screen and the cathode. This cancels out the voltage fed through the internal capacitances of the tube and the stray capacitances of the tube socket. This form of self-neutralization results in very stable operation, and requires no adjustment when the power tube is replaced.

4-18. SECOND HARMONIC SUPPRESSOR. A patented second harmonic suppressor is included in the FM-5A PA cavity. This consists of a capacitive disc and a lossy series inductance to ground coupled to the main transmission line at the fundamental frequency RF voltage null point. Here the second harmonic exhibits a high impedance and the suppressor forces its standing wave to diminish, reducing the amplitude of the second harmonic. This unique method of harmonic suppression has minimal effect on the fundamental frequency and does not add losses to the PA cavity at the fundamental frequency.

4-19. OUTPUT CIRCUIT. A separate low-pass filter is contained within the FM-5A cabinet to attenuate all residual second and higher order harmonics. This filter functions over the entire FM broadcast band. Three RF directional couplers are mounted after the filter in the output transmission line connection. Two of these supply filtered forward and reflected power RF samples to the automatic power control and the third port supplies a forward power sample at 40 dB below carrier at 50 Ohms for external test equipment.

4-20. AUTOMATIC POWER CONTROL.

4-21. The automatic power control unit (APC) measures several transmitter parameters and allows manual or automatic power output control, allows switch selected operation at a preset lower power level, and provides VSWR foldback protection and soft-start features.

4-22. AUTOMATIC RF OUTPUT LEVEL CONTROL. Part of the APC circuitry rectifies PA forward power and reflected power samples and supplies these to the power meter selector switch and to the transmitter controller for further evaluation. The APC also monitors screen current and IPA forward power and adjusts the PA screen voltage via a dc servo motor-driven variable autotransformer to maintain a constant transmitter RF output. If excessive PA reflected power, excessive screen current, or low IPA power are measured, the "raise power" command will be inhibited to prevent an overload from occurring. Manual screen control is assumed by switching the APC off. In the manual mode the raise and lower switches directly control the dc servo motor to vary the screen voltage supply. In the automatic mode, the switches control a reference voltage stored as an eight-bit binary word in a digital memory. This digital memory is maintained by a nine-volt battery so that the transmitter can automatically return to the desired power level whenever power is applied. This memory has a very long life, approximately the battery shelf life.

4-23. The dc servo motor control circuit uses a pulsed duty-cycle modulation scheme to vary the motor speed. When large excursions of screen voltage are required, a greater duty cycle drives the motor. Fine adjustment of screen voltage utilizes a shorter pulse duty-cycle and therefore slower motor speed. This feature, combined with an analog deadband in the circuitry, eliminates hunting in this servo loop. The front panel RAISE and LOWER push switches are illuminated by the actual motor drive voltage. Their illumination intensity and rate indicates the actual servo system drive.

4-24. VSWR FOLDBACK PROTECTION. PA forward power is automatically reduced if output reflected power becomes excessive enough to overload the transmitter. As the condition which caused the high VSWR returns to normal, RF power will be proportionately raised until full power is again restored.

4-25. SOFT START. A soft start circuit monitors PA plate voltage and reduces the screen voltage to zero upon its absence. When the plate supply is energized, as during initial turn on, the circuit will gradually increase the screen voltage until the stored power setting is achieved. This circuit prevents inadvertent VSWR overloads at turn on, such as during icing of an antenna.

4-26. TRANSMITTER CONTROLLER.

4-27. Each transmitter timed control function and all overload sensing is performed by a built-in solid-state controller. The controller incorporates extensive use of RFI filtering and optical isolation in conjunction with CMOS logic to assure maximum reliability.

4-28. Adjustable timers on the primary controller circuit board determine filament warm-up time, blower run-down time, overload-recycle time, and AC restart. The plate, screen, grid, and VSWR overload limits can also be adjusted by potentiometers on the controller circuit board. The range of all controls is limited, however so that the safe operating limits of the transmitter cannot be exceeded by incorrect adjustment.

4-29. The POWER indicator on the controller circuit board illuminates to indicate power is applied to the circuit. The BATTERY TEST indicator indicates the status of the battery backed-up memory supply. When the transmitter is operating on ac power and the BATTERY TEST switch is depressed, illumination of the BATTERY TEST indicator indicates the battery is capable of maintaining the transmitter control memory for more than eight hours.

4-30. MOMENTARY POWER INTERRUPTION. In the event of a momentary power interruption, proper action will resume immediately after power returns. If an extended power failure occurs, information maintained by the nine-volt battery will enable the controller to initiate a start cycle to automatically return the transmitter to operation without assistance. If the transmitter safety interlock string opens during a power failure, the automatic restart feature will be defeated and the transmitter will enter the off condition when power is reapplied.

4-31. OVERLOADS. If an overload occurs, the transmitter will deenergize, allow the overload to clear, then automatically return to operation. If four overloads occur within 60 seconds, the transmitter will deenergize. The overload must be manually cleared and the transmitter HIGH VOLTAGE ON switch/indicator depressed before operation will resume. Single overloads of greater than 220 milliseconds duration will immediately deenergize the high voltage and filament supplies.

4-32. INDICATORS. Eight LEDs and three switch/indicators are provided on the front panel as status and overload indicators. The first overload that occurs will be latched into the controller and will illuminate the appropriate red VSWR, PLATE, SCREEN, or GRID LED and the yellow overload reset switch/indicator. All further overloads are monitored by the controller but will not be displayed by the LEDs.

4-33. The green STATUS indicators illuminate to indicate an operational condition as follows. The INTERLOCK LED indicates that the interlock loop is closed. The BLOWER LED indicates that the air pressure is correct for the PA stage to operate. The FILAMENT LED indicates that the filament contactor has been energized. The HIGH VOLTAGE LED indicates that the high voltage contactor has been energized.

4-34. METERING.

4-35. Nine meters on the front of the transmitter indicate transmitter parameters. An iron-vane voltmeter is used to measure filament voltage. Currents are measured in the ground side of each supply to prevent high voltages across the meters. A FILAMENT TIME meter indicates hours of filament circuit operation.

4-36. Additionally, the exciter parameters are displayed by two meters and three status indicators (refer to publication 597-0002).

4-37. OPTIONAL THREE-PHASE AC VOLTMETER. A three-phase ac voltmeter option provides accurate monitoring of the primary ac input voltages for FM-5A transmitters. The option consists of an ac voltmeter and an overload-protected three-position switch. The meter and switch are located on the lower front-panel for easy operator access.

4-38. POWER SUPPLIES.

4-39. The FM-5A transmitter is designed for operation from a 196 to 252 volt three phase ac input. The FM-5A plate supply is a conventional three phase power supply circuit. The remaining FM-5A transmitter power supplies are single phase circuits which are obtained from two phases of the three phase input. The FM-5AS transmitter is designed for operation from a 196 to 252 volt single phase ac input. All FM-5AS transmitter power supplies are single phase circuits obtained from the transmitter ac input.

4-40. The grid bias and screen power supplies consist of conventional full-wave rectification and choke input filter sections. A hum-null assembly consisting of a small unfiltered full-wave rectified supply injects a 120 Hz pulsating dc voltage in series with the ground return of the grid bias supply to cancel residual ripple from the screen supply in the tetrode amplifier.

4-41. The FM-5A plate supply is a three-phase primary, six-phase secondary supply. The primary circuit is connected in a closed delta arrangement and the secondary is connected in a wye configuration. The supply consists of a 3-phase full-wave bridge rectifier network with an LC filter section. Advantages of this type of supply is good regulation and low ripple which requires little filtering. The FM-5AS plate supply consists of a single phase full-wave rectifier network with a resonant LC filter stage. Power is applied to each plate supply through a step-start circuit to reduce the inrush current at power-on. This limits stress and extends component life.

4-42. An optional filament voltage regulator provides a stable filament voltage supply for the power amplifier tube. The device will regulate a wide range of ac input potentials into a stable $240 \pm 1\%$ volt output. The regulator connects in series with the filament transformer at TB12. The input connects to terminals 1 and 4 and the output connects to terminals 5 and 7.

4-43. Each modular section of the transmitter contains its own ac operated power supply. In addition, battery back-up supplies in the transmitter controller and automatic power control maintain operational information during power outages. The battery in the APC can be left connected at all times. However, the controller battery will discharge if left connected during periods of extended power outages (several days). Both batteries are common nine-volt alkaline types.

4-44. DETAILED DESCRIPTION.

4-45. FM-5A POWER SUPPLY.

4-46. A 196 volt to 252 volt, 50 Hz or 60 Hz, three-phase ac input is required for proper operation of the FM-5A transmitter. The following supplies operate from the ac input (typical values are shown for the rated RF power output):

| <u>PARAMETER</u> | <u>APPROXIMATE VALUES</u> |
|--------------------|---------------------------|
| A. PA PLATE | +5300V at 1.3 Amperes |
| B. PA SCREEN GRID | +600V at 0.070 Amperes |
| C. PA CONTROL GRID | -315V at 0.040 Amperes |
| D. PA FILAMENT | 5V ac at 90 Amperes |
| E. HUM NULL | +12.6V at 0.040 Amperes |

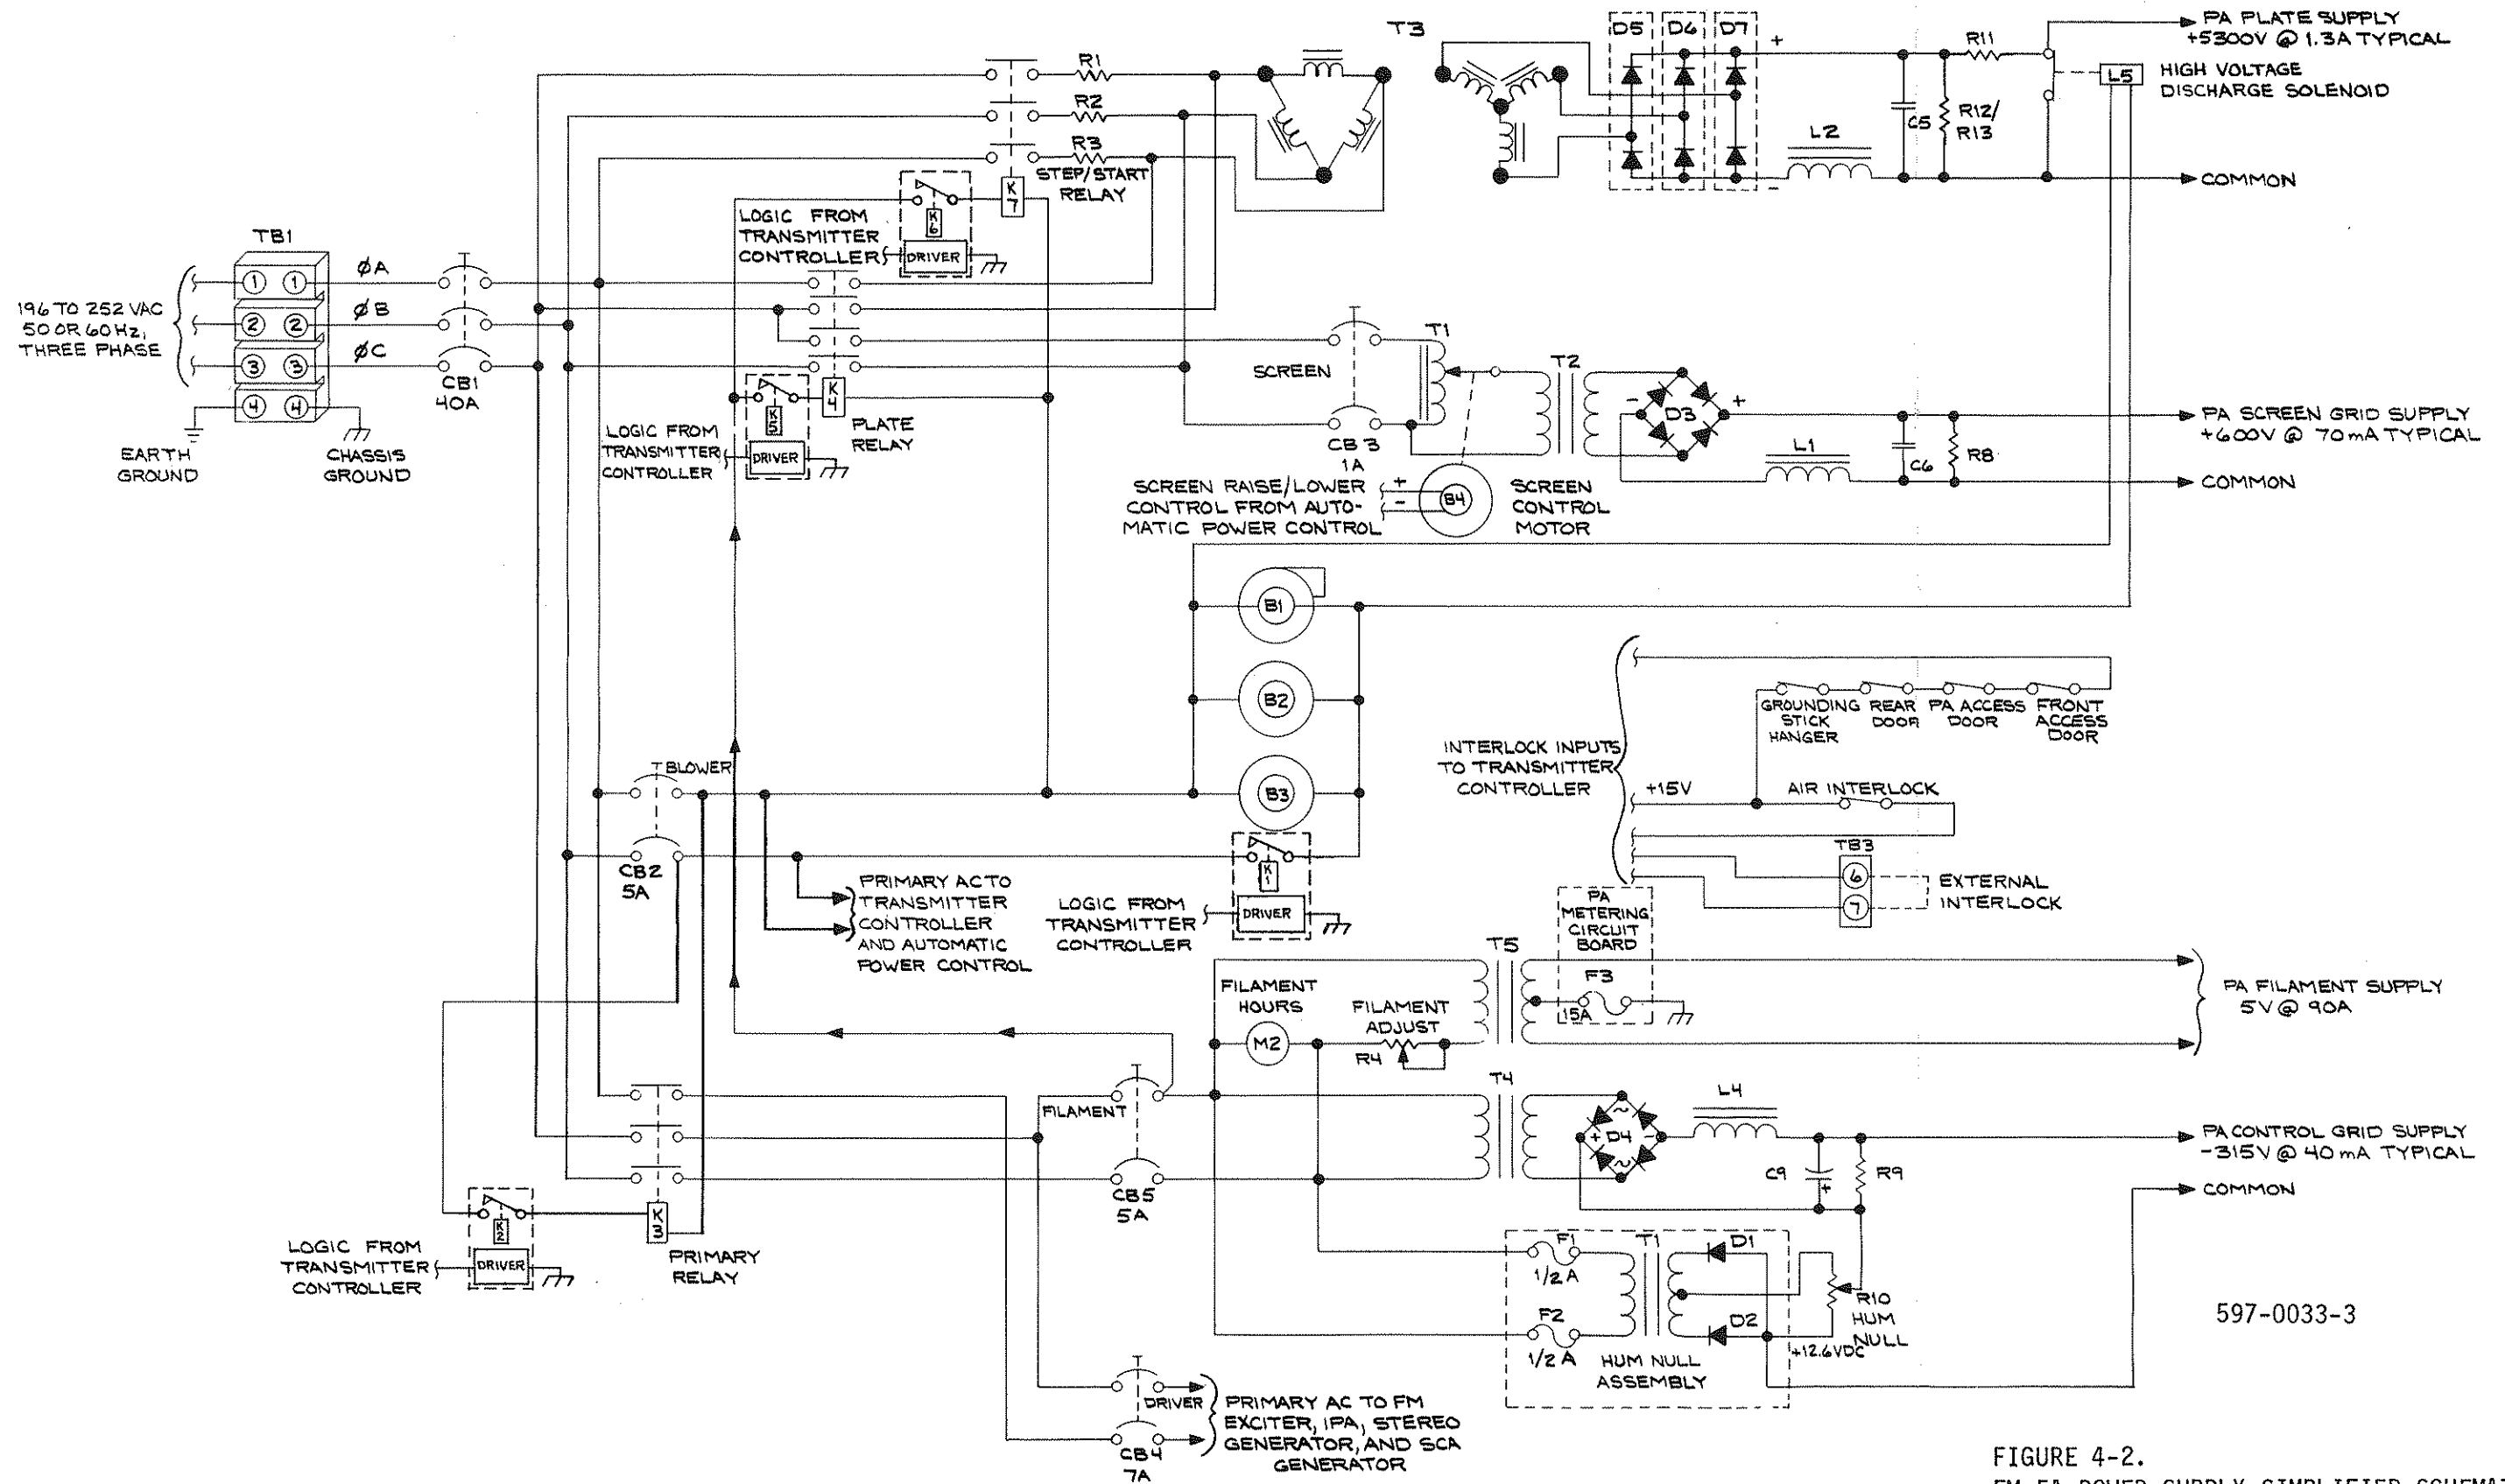


FIGURE 4-2.
FM-5A POWER SUPPLY SIMPLIFIED SCHEMATIC

4-47. SEQUENCE OF OPERATION. Power is applied through the AC POWER circuit breaker (CB1) to contacts of the step/start relay (K7), contacts of the plate relay (K4), and contacts of the primary relay (K3) (see Figure 4-2). Power is also applied through the BLOWER circuit breaker (CB2) to the transmitter controller, the automatic power control unit, and to blower control relay K1.

4-48. When the FILAMENT ON switch/indicator is depressed, K1 will apply power to the blower (B1) and the flushing fans (B2 and B3), and energize the high voltage shorting solenoid (K5). After the blower comes up to speed, the air interlock closes and all safety interlocks are closed, K2 will energize the primary relay (K3) which applies power to the PA filament supply, the PA control grid supply, the hum-null power supply, the FM exciter, the IPA stage, and the optional stereo and SCA generators.

4-49. Assuming the HIGH VOLTAGE ON switch/indicator has been depressed, and the PA filament heating delay of at least ten seconds has expired, K6 will pulse the step/start relay (K7). After the current inrush to the plate supply has been limited by the step/start resistors (R1, R2, and R3), K5 will energize the plate relay (K4) to apply full input to the plate and screen power supplies.

4-50. If during a start sequence a safety interlock opens, the entire start sequence will be cancelled and must be re-initiated manually. If a safety interlock opens during operation, the entire power supply section will deenergize. However, if the interlock is promptly closed, the blower and flushing fans will resume operation to cool the PA tube but a new start sequence will have to be initiated manually. Whenever power is removed from the blower and flushing fans, the high voltage discharge solenoid will short the plate supply to ground.

4-51. If the HIGH VOLTAGE OFF switch/indicator is depressed, the plate and screen power supplies will deenergize. If the FILAMENT OFF switch/indicator is depressed, all remaining power supplies will deenergize. The blower and flushing fans will continue operation for 30 seconds or more to cool the PA tube, then deenergize.

4-52. PA PLATE POWER SUPPLY. The plate power supply is a three-phase primary, six-phase secondary supply. The primary circuit is connected in a closed delta arrangement and protected by circuit breaker CB1. Component stress at power on is eliminated by a step/start circuit which limits supply inrush current.

4-53. The secondary of the high voltage transformer is connected in a wye configuration. Due to the physical construction of the transformer, each phase appearing in the secondary will lead and lag a respective phase appearing in the primary by 60 degrees. The secondary phase separation of 60 degrees divided into one primary phase of 360 degrees equals six secondary phases.

4-54. Minimal filtering is required as only 4.2 percent ripple is output from the rectifiers. One requirement of the multiphase supply, however is that the primary ac input must be balanced to within the percentage of ripple voltage which is to be obtained from the supply. Constant primary ac line unbalance can be corrected by the use of primary taps or a tapped three-phase autotransformer.

4-55. Filtering for the supply is accomplished by a one-section choke-input filter. The choke is inserted in the negative leg of the rectified output to eliminate the dc potential between the choke and ground. The negative leg of the supply is referenced to ground through the PA stage current meter shunt. A single shunt capacitor bypasses residual ac ripple at frequencies of 300 to 360 Hz and higher to ground. A bleeder resistor connected across the supply increases regulation and, in conjunction with high voltage discharge solenoid K5, enhances safety. A series resistance in the anode dc feedline limits peak energy in case of arc-overs in the power amplifier stage or high voltage discharge solenoid operations.

4-56. Component stress at power-on is eliminated by a step/start circuit which limits plate supply inrush current. The step/start circuit is interlocked through contacts of the filament circuit breaker and the primary relay to assure that the filament circuit is energized before a high-voltage-on sequence can be initiated. The controller will energize the step/start relay via K6. After 100 milliseconds, the controller will energize the plate relay via K5. The step/start relay will deenergize after it has been energized for 160 milliseconds. In this manner, the current limiting resistors will only be subject to heating during a 100 millisecond interval between step/start relay and plate relay closures.

4-57. PA SCREEN GRID POWER SUPPLY. The screen power supply is a full-wave bridge-rectified supply with a single L-section filter. The primary of the screen transformer is connected through CB3 to the step/start and plate relays. The output of the screen supply is adjustable with a variable autotransformer connected in the primary of the screen transformer. A dc motor connected to the variable autotransformer allows both manual and automatic control of the screen voltage. The choke in this supply is connected in the negative leg of the supply to eliminate the dc potential between the choke and ground. A bleeder resistor connected across this supply improves regulation and enhances safety by discharging C6.

4-58. PA CONTROL GRID POWER SUPPLY. The control grid bias supply is a full-wave bridge-rectified supply with a single L-section filter. The primary of the supply is connected to the primary ac input through CB5 and the primary relay (K3). A bleeder resistor connected across this supply improves regulation and enhances safety by discharging C9, a relatively high capacity electrolytic capacitor.

4-59. Hum Null Supply. The ground path for the grid bias supply is routed through the hum-null circuit which introduces a small 120 Hz pulsating dc component into the control grid bias supply to cancel hum in the PA tube from the screen supply. The amount of voltage added to the negative side of the control grid bias supply is adjusted by R10. This voltage is out-of-phase with the 120 Hz ripple component of the screen supply.

4-60. PA FILAMENT SUPPLY. The PA filament supply is connected to the primary ac input through circuit breaker CB5 and the primary relay (K3). A FILAMENT ADJUST control (R4) in the primary of the filament transformer allows filament voltage adjustment. A FILAMENT TIME meter (M2) indicates hours of filament circuit operation. A fusible link in the center-tap of the filament transformer secondary provides overload protection for the filament supply wiring if a short-circuit to ground should develop in either leg of the filament supply. Individual fuses protect the wiring to the iron-vane FILAMENT VOLTAGE meter.

4-61. FM-5AS POWER SUPPLY.

4-62. A 196 volt to 252 volt, 50 Hz or 60 Hz, single-phase ac input is required for operation of the FM-5AS transmitter. The following supplies operate from the ac input (typical values are shown for the rated RF power output):

| <u>PARAMETER</u> | <u>APPROXIMATE VALUES</u> |
|--------------------|---------------------------|
| A. PA PLATE | +5300V at 1.3 Amperes |
| B. PA SCREEN GRID | +525V at 0.060 Amperes |
| C. PA CONTROL GRID | -315V at 0.040 Amperes |
| D. PA FILAMENT | 5V ac at 90 Amperes |
| E. HUM NULL | +12.6V at 0.040 Amperes |

4-63. SEQUENCE OF OPERATION. Power is applied through the AC POWER circuit breaker (CB1) to contacts of the step/start relay (K7), contacts of the plate relay (K4), and contacts of the primary relay (K3) (see Figure 4-3). Power is also applied through the BLOWER circuit breaker (CB2) to the transmitter controller, the automatic power control unit, and to blower control relay K1 and to primary control relay K2.

4-64. When the FILAMENT ON switch/indicator is depressed, K1 will apply power to the blower (B1) and the flushing fans (B2 and B3), and energize the high voltage shorting solenoid (K5). After the blower comes up to speed, the air interlock closes and all safety interlocks are closed, K2 will energize the primary relay (K3) which applies power to the PA filament supply, the PA control grid supply, the hum-null power supply, the FM exciter, the IPA stage, and the optional stereo and SCA generators.


4-65. Assuming the HIGH VOLTAGE ON switch/indicator has been depressed, and the PA filament heating delay of at least ten seconds has expired, K6 will pulse the step/start relay (K7). After the current inrush to the plate supply has been limited by the step/start resistors (R1 and R2), K5 will energize the plate relay (K4) to apply full input to the plate and screen power supplies.

4-66. If during a start sequence an interlock opens, the entire start sequence will be cancelled and must be re-initiated manually. If an interlock opens during operation, the entire power supply section will deenergize. However, if the interlock is promptly closed, the blower and flushing fans will resume operation to cool the PA tube but a new start sequence will have to be initiated manually. Whenever power is removed from the blower and flushing fans, the high voltage discharge solenoid will short the plate supply to ground.

4-67. If the HIGH VOLTAGE OFF switch/indicator is depressed, the plate and screen power supplies will deenergize. If the FILAMENT OFF switch/indicator is depressed, all remaining power supplies will deenergize. The blower and flushing fans will continue operation for 30 seconds or more to cool the PA tube, then deenergize.

4-68. PA PLATE POWER SUPPLY. The plate power supply is a full-wave bridge-rectified supply with a two-section filter. The first filter section includes a 120 Hz resonant choke. This section provides good load regulation, low 120 Hz ripple, and lower stored energy than conventional filter sections with similarly sized components. The filter location in the negative leg of the rectifier output eliminates the dc potential between the choke and ground. A pi-section filter follows the resonant choke which reduces high frequency components which are passed by the resonant choke. The choke in the pi-section is also connected in the negative leg of the supply to eliminate the dc potential between the choke and ground. A bleeder resistor connected across the supply improves regulation, and in conjunction with high voltage discharge solenoid K5, enhances safety. A series resistance in the anode dc feed limits peak energy in case of arc-overs in the power amplifier stage and during high voltage discharge solenoid operation.

4-69. Component stress at power-on is eliminated by a step/start circuit which limits plate supply inrush current. The step/start circuit is interlocked through contacts of the filament circuit breaker and the primary relay to assure that the filament circuit is energized before a high-voltage-on sequence can be initiated. The controller will energize the step/start relay via K6. After 100 milliseconds, the controller will energize the plate relay via K5. The step/start relay will deenergize after it has been energized for 160 milliseconds. In this manner, the current limiting resistors will only be subject to heating during a 100 millisecond interval between step/start relay and plate relay closures. The limiting resistors are disconnected from the lines after 160 milliseconds, improving reliability.

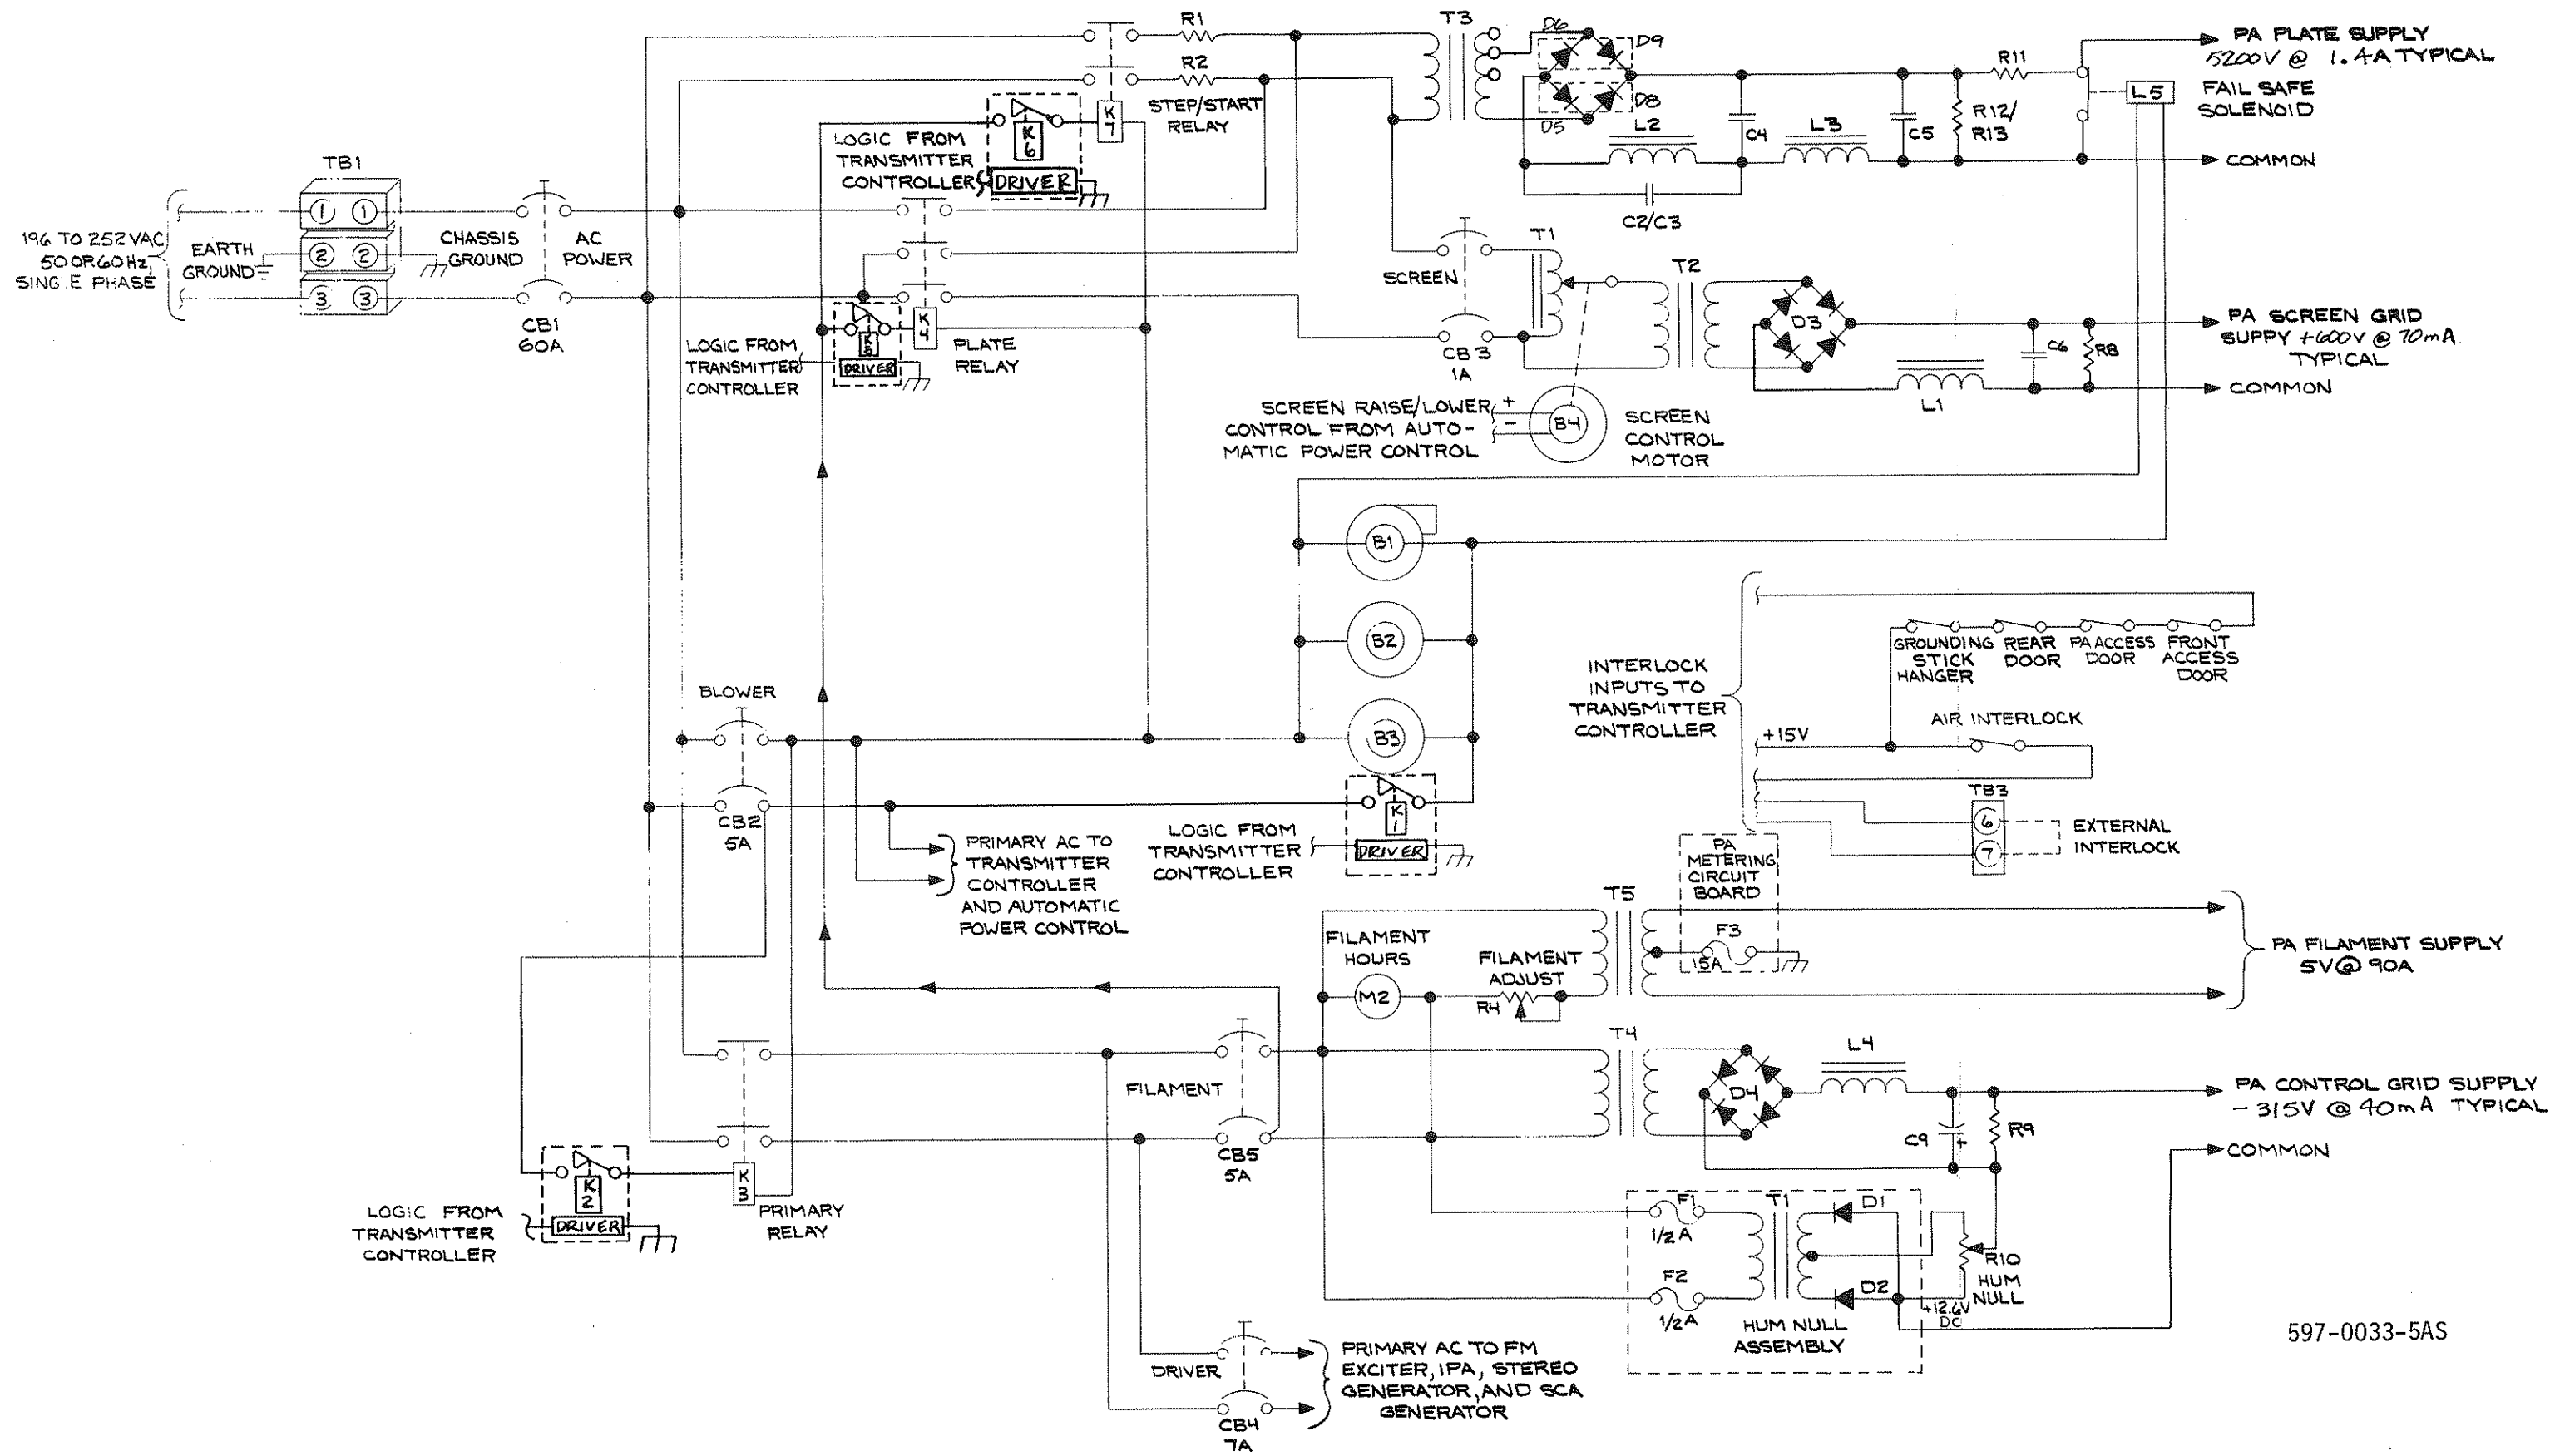

597-0033-5AS

FIGURE 4-3.
FM-5AS POWER SUPPLY SIMPLIFIED SCHEMATIC

4-70. PA SCREEN GRID POWER SUPPLY. The screen power supply is a full-wave bridge-rectified supply with a single L-section filter. The primary of the screen transformer is connected through CB3 to the step/start and plate relays. The output of the screen supply is adjustable with a variable autotransformer connected in the primary of the screen transformer. A dc motor connected to the variable autotransformer allows both manual and automatic control of the screen voltage. The choke in this supply is connected in the negative leg of the supply to eliminate the dc potential between the choke and ground. A bleeder resistor connected across this supply improves regulation and enhances safety by discharging C6.

4-71. PA CONTROL GRID POWER SUPPLY. The control grid bias supply is a full-wave bridge-rectified supply with a single L-section filter. The primary of the supply is connected to the primary ac input through CB5 and the primary relay (K3). A bleeder resistor connected across this supply improves regulation and enhances safety by discharging C9, a relatively high capacity electrolytic capacitor.

4-72. Hum Null Supply. The ground path for the grid bias supply is routed through the hum-null circuit which introduces a small 120 Hz pulsating dc component into the control grid bias supply to cancel hum in the PA tube from the screen supply. The amount of voltage added to the negative side of the control grid bias supply is adjusted by R10. This voltage is out-of-phase with the 120 Hz ripple component of the screen supply.

4-73. PA FILAMENT SUPPLY. The PA filament supply is connected to the primary ac input through circuit breaker CB5 and the primary relay (K3). A FILAMENT ADJUST control (R4) in the primary of the filament transformer allows filament voltage adjustment. A FILAMENT TIME meter (M2) indicates hours of filament circuit operation. A fusible link in the center-tap of the filament transformer secondary provides overload protection for the filament supply wiring if a short-circuit to ground should develop in either leg of the filament supply. Individual fuses protect the wiring to the iron-vane FILAMENT VOLTAGE meter.

4-74. RF CIRCUITRY.

4-75. FM EXCITER. The FM exciter generates the modulated FM signal. Approximately 17.5 Watts of driver is required to operate the FM-5A RF circuitry (see Figure 4-4). Refer to publication 597-0002 for a complete description of the FM exciter.

4-76. INTERMEDIATE POWER AMPLIFIER. The IPA provides an approximate gain of 10 to output approximately 150 Watts of power to drive the FM-5A PA stage. The unit is totally self-contained with an internal controller and power supply. The amplifiers are configured as a class B push-pull stage. A complete description of the IPA is provided in Part II of this manual.

4-77. POWER AMPLIFIER. The PA stage contains a single 4CX3500A tetrode operated class C in a folded half-wave cavity to output 5 kW of RF power with approximately 150 Watts of RF drive.

4-78. PA Input Circuit. The grid impedance-matching circuit used in the FM-5A transmitter consists of a combination of series inductor and shunt capacitor circuit board elements, implemented with a printed circuit board. The inductors and capacitors are etched into the copper-clad laminate. Multiple LC sections match the 50 Ohm source impedance to the 300 to 400 Ohm input impedance of the grid-driven RF power amplifier.

4-79. This input matching design provides wide bandwidth and improves reliability, stability, and maintainability of the transmitter. A single tuning control in the input circuit is sufficient to tune and match the 50 Ohm driver impedance to the high input impedance of the grid over the 88 to 108 MHz FM broadcast band with a 4:1 range of RF power levels. The input-matching circuit also eliminates separately mounted components which can be microphonically sensitive to vibrations due to mechanical instability in the cooling air flow.

4-80. The grid circuit is adjusted for proper operation with two paralleled "hairpin-shaped" inductors which connect to ground. These controls employ sliding shorts to tune the grid capacitance to resonance. One inductor is mechanically connected to the front panel input tuning control while the other inductor is connected to a counter in the rear of the FM-5A. Fine tuning is accomplished by adjusting either one of the inductors (normally the front panel control). A resistive loading component is included in the input circuit to broaden its overall response. The filament bypassing and grid blocking capacitors are specially fabricated in a sandwich-type construction with etched copper-clad Kapton dielectrics for high capacitance with negligible inductance.

4-81. The screen grid ring is connected through eight flexible adjustable straps to four copper-clad Kapton bypass capacitors to ground. Self-neutralization is accomplished by adjusting the length of the straps, thereby varying the series inductance. This introduces an out-of-phase current component causing a voltage swing across the screen to cathode which cancels out feed-thru components. A spark gap is included to safely bypass energy if the tube should arc internally.


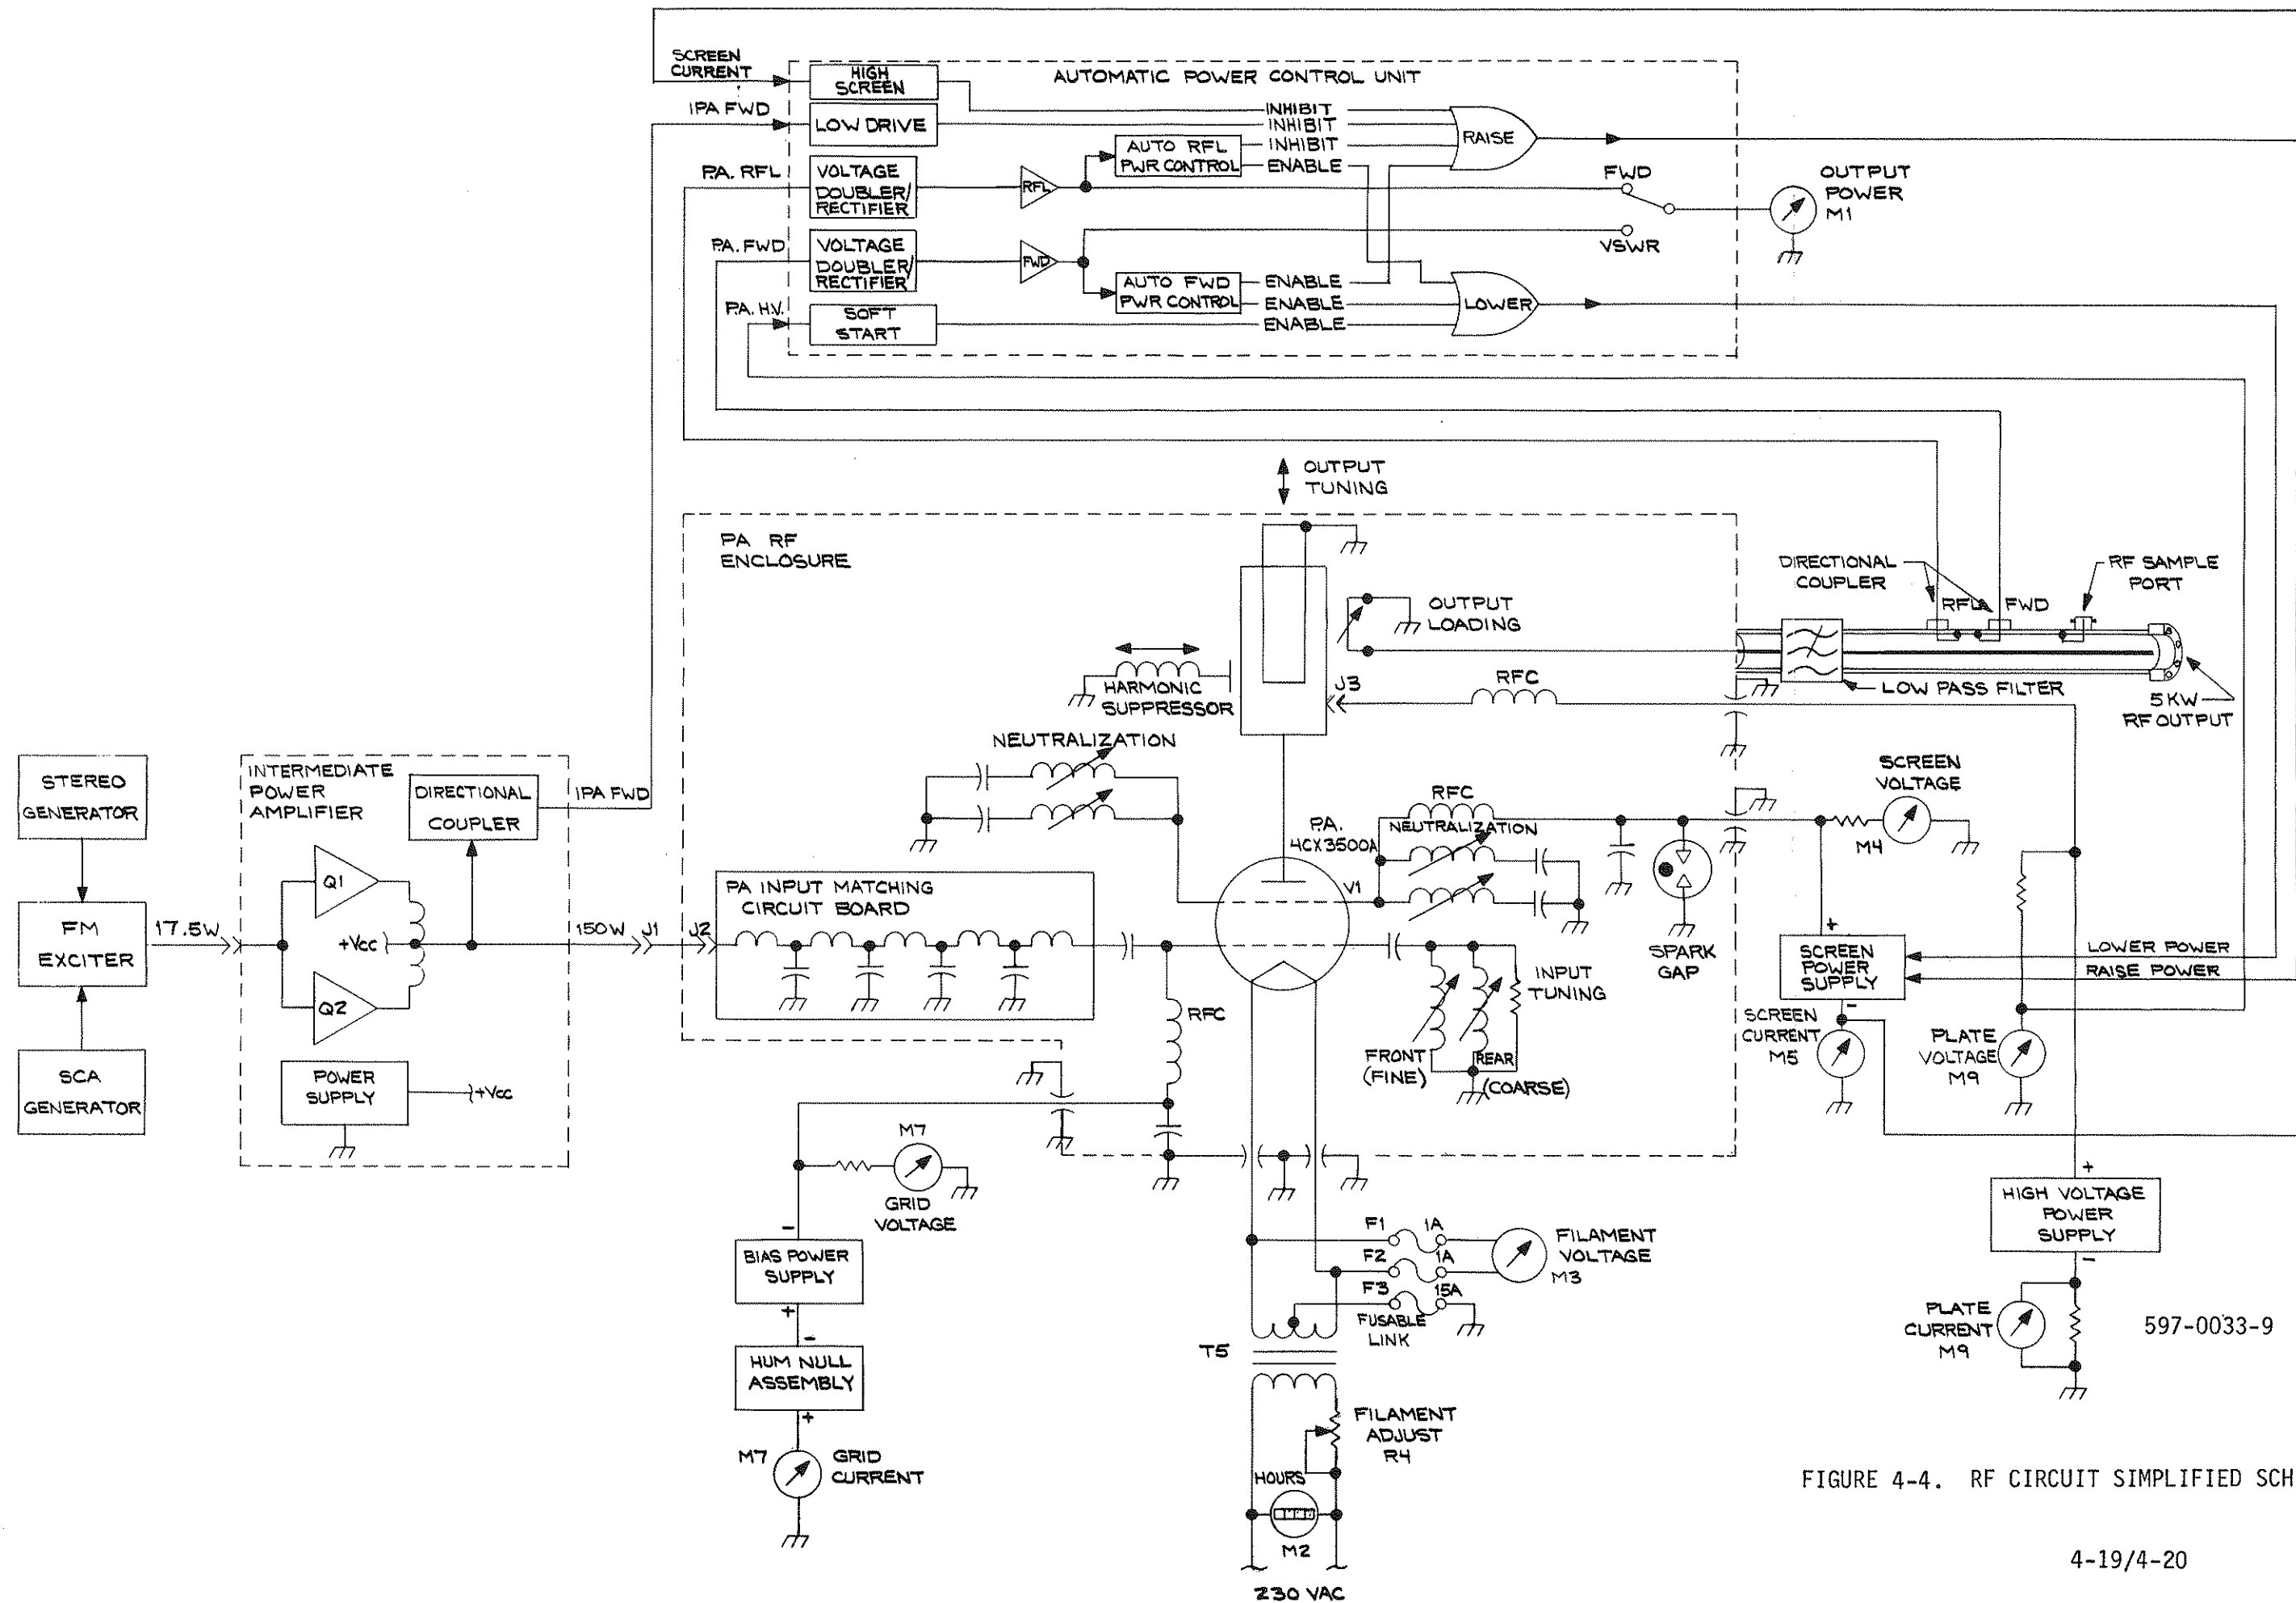


FIGURE 4-4. RF CIRCUIT SIMPLIFIED SCHEMATIC

NOTES:

1. TUNING OPERATED AT ZERO RF AND DC POTENTIAL.
2. NO PLATE BLOCKING CAPACITOR.

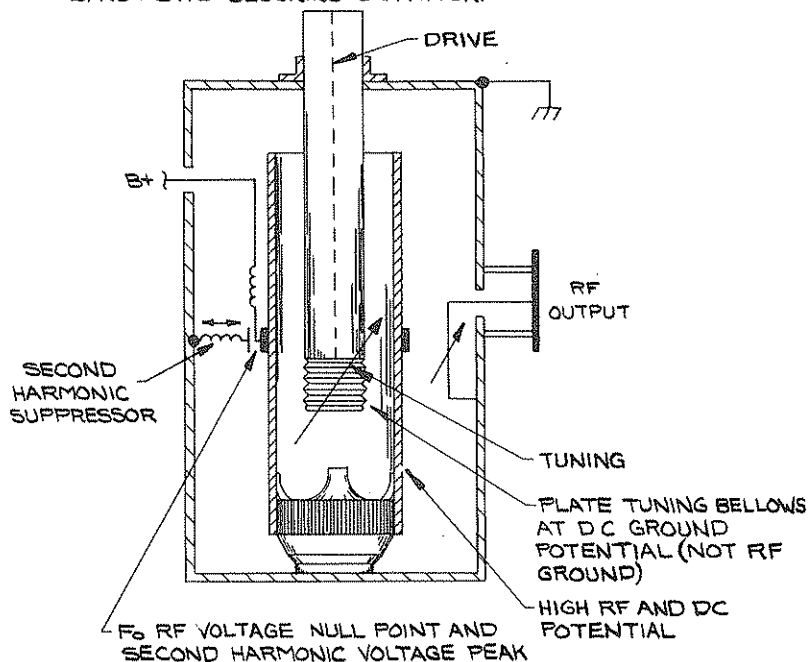

COPYRIGHT © 1988 BROADCAST ELECTRONICS, INC.

597-0032-32

FIGURE 4-5. PA CAVITY

4-82. Power Amplifier Cavity. The PA cavity used in the FM-5A employs a folded half-wave resonator constructed with coaxial aluminum and copper tubing. This cavity design eliminates the high voltage blocking capacitors and high current shorting contacts of conventional cavities by connecting the main transmission line conductor directly to the anode of the power tube (see Figure 4-5). A grounded concentric transmission line center conductor tunes this cavity with a variable re-entrant length inserted into the end of the main conductor opposite the tube. The main conductor is insulated from ground and carries the anode dc potential. DC power is fed at the RF voltage null point, approximately one-quarter wave from the anode, for effective RF decoupling. A large surface area without sliding contacts results in minimal loss at this point. Incorporated into the tank design is a second-harmonic suppressor. Rather than attenuating the second harmonic after the signal has been generated and amplified, the circuitry in the FM-5A essentially eliminates formation of this signal by series LC trapping the second harmonic waveform at the point where the wave exhibits a high impedance, approximately one-quarter wave length from the anode.

4-83. Plate tuning is accomplished by an adjustable bellows on the grounded or center portion of the plate line which is maintained at chassis ground potential. The PA plate potential is applied to the main conductor (the fixed portion of the plate line) at the fundamental frequency RF voltage null point. This point is also the point at which the second harmonic will peak in voltage. The basic LC circuit placed at this point will essentially eliminate the second harmonic component in the plate current waveform.

4-84. PA Output Circuit. Output coupling is accomplished with an untuned loop intercepting the magnetic field concentration at the voltage null point of the main line. The PA loading control varies the angular position of the plane of the loop with respect to the plate line, changing the amount of magnetic field which it intercepts. Multiple phosphor bronze leaves connect one side of the output loop to ground and the other side to the center conductor of the output transmission line connection. This allows for mechanical movement of the loop by the PA loading control without utilizing any sliding contacts. The grounded loop improves immunity to lightning and static buildup on the antenna connection.

4-85. A pair of directional couplers located in the output transmission line provide RF output voltages proportional to the PA forward and reflected power. The RF output voltages are rectified and amplified to provide power and VSWR indications on the OUTPUT POWER meter, samples for the transmitter controller, and inputs to the automatic power control unit. An additional port in the transmission line provides a point to connect a station modulation monitor.

4-86. PA METERING. Eight meters are used to indicate transmitter power tube parameters. An iron vane filament voltmeter is included to accurately measure filament voltage at the cavity feedthrough terminals. Six of the meters measure samples derived from the PA metering circuit board mounted over the filament feedthrough terminals on the side of the cavity input enclosure. Additional samples from this circuit board are routed to the controller for overload and diagnostic features. Fuses mounted on this circuit board are used to protect the filament meter wiring. Plate voltage metering is obtained from a high voltage meter multiplier circuit board. Power output metering is derived from circuitry within the automatic power control unit. A FILAMENT TIME meter indicates total elapsed time of filament circuit operation.

4-87. AUTOMATIC POWER CONTROL. The automatic power control unit (APC) monitors a number of transmitter parameters to function as part of a closed loop which maintains a constant RF output level from the transmitter (see Figure 4-4).

4-88. PA forward and reflected power samples are voltage doubled and rectified, then amplified and applied to the OUTPUT POWER meter to provide indications of transmitter operation. The amplified power samples are also applied to the forward and reflected automatic power control circuits which control the adjustable screen supply autotransformer when automatic power control is enabled. As RF power varies, the forward automatic power control circuit will act to maintain the established RF output level. If inadequate IPA drive exists for normal operation or if PA reflected power increases (or screen current is high), any power increase will be inhibited. If the PA reflected power increases to a point which may damage the RF circuitry of the transmitter, the circuit will reduce the RF output to a safe level and the transmitter will continue to operate. Full power will be automatically re-established when the VSWR condition is corrected.

4-89. As an additional function, a soft start circuit monitors PA plate voltage. This circuit reduces the PA screen potential to minimum whenever plate voltage is off. Whenever the plate voltage is energized, the circuit will gradually increase the PA screen voltage until the rated transmitter RF output is established unless limited by low IPA drive, a high VSWR condition or high screen current.

SECTION V
MAINTENANCE

5-1. INTRODUCTION.

5-2. This section provides general maintenance information, electrical adjustment procedures, and troubleshooting information for the FM-5A Transmitter. Maintenance is divided into two categories depending upon the complexity of the procedure and the test equipment required to complete the maintenance procedure.

5-3. SAFETY CONSIDERATIONS.

WARNING

NEVER OPEN THE EQUIPMENT UNLESS ALL TRANSMITTER PRIMARY POWER IS DISCONNECTED. USE THE GROUNDING STICK PROVIDED TO ENSURE ALL COMPONENTS AND ALL SURROUNDING COMPONENTS ARE DISCHARGED BEFORE ATTEMPTING MAINTENANCE ON ANY AREA WITHIN THE TRANSMITTER.

WARNING

WARNING

5-4. The FM-5A transmitter contains high voltages and currents which, if regarded carelessly, could be fatal. The transmitter has many built-in safety features, however good judgement, care, and common sense are the best accident preventives. The maintenance information contained in this section should be performed only by trained and experienced maintenance personnel.

5-5. It is very dangerous to attempt to make measurements or replace components with power energized, therefore such actions are not recommended. The design of the equipment provides safety features such that when a door is opened or access panel is removed, interlock switches will deenergize all dc power supplies and release the fail-safe discharge solenoid across the plate supply. Do not short out or bypass interlock switches as a maintenance short cut.

5-6. The PA cavity access door actuates an interlock switch if the door is opened during transmitter operation. All dc supplies will be deenergized and the plate supply will be shorted to ground. AC power to the entire cabinet may be disconnected with the front panel AC POWER ON/OFF circuit breaker.

5-7. A grounding stick is provided as a safety feature. The grounding stick consists of a metal hook with a phenolic handle. The metal end is connected to chassis ground. Use the grounding stick to touch every part in the area or circuit on which maintenance is to be performed before attempting maintenance.

5-8. The grounding stick rests on a hook switch. When the grounding stick is removed, the associated hook switch will open the transmitter interlock string and deenergize all transmitter dc potentials until the grounding stick is replaced on its respective hook switch.

5-9. FIRST LEVEL MAINTENANCE.

WARNING BEFORE ATTEMPTING TRANSMITTER MAINTENANCE,
WARNING ASSURE THE REMOTE DISABLE SWITCH/INDICATOR
IS ILLUMINATED, THEN DISCONNECT POWER FROM
THE TRANSMITTER.

WARNING IF A FAULT WILL NOT ALLOW THE REMOTE DISABLE
WARNING SWITCH/INDICATOR TO ILLUMINATE, DISCONNECT
POWER FROM THE TRANSMITTER, THEN UNPLUG P1
FROM J1 ON THE REAR OF THE TRANSMITTER CON-
TROLLER.

5-10. First level or preventive maintenance consists of those precautionary measures applied to equipment to forestall future failures rather than to eliminate failures after they have occurred. These procedures are performed on a regularly scheduled periodic basis, and the results recorded in a maintenance log. Preventive maintenance of the FM-5A transmitter falls into the category of good housekeeping and is limited to whatever cleaning may be necessary and checking the performance levels using the meters and various indicators built into the equipment.

WARNING NEVER OPEN THE EQUIPMENT UNLESS ALL TRANSMITTER
WARNING PRIMARY POWER IS DISCONNECTED. USE THE GROUND-
WARNING ING STICK PROVIDED TO ENSURE ALL COMPONENTS AND
ALL SURROUNDING COMPONENTS ARE DISCHARGED BEFORE
ATTEMPTING MAINTENANCE ON ANY AREA WITHIN THE
TRANSMITTER.

5-11. On a regular basis, clean the equipment of accumulated dust. Check for overheated components, tighten loose hardware, and lubricate mechanical surfaces as required. A lubricant such as "Lubriplate" should be applied sparingly to the tuning drives, cables, the PA tuning line right angle gear mechanism, and the cyclometer drives behind the front panel. The PA output loading screw drive should be opened (four screws) and lubricated every 36 months, or more often if resistance is noted.

5-12. Periodically, the transmitter controller battery should be checked by depressing the controller battery test switch. If the green battery test indicator fails to illuminate, the battery should be replaced. A good-quality alkaline battery is recommended for replacement. Typically, it is a good practice to replace the transmitter controller and automatic power control unit battery annually, regardless of the battery condition.

5-13. AIR FILTER.

5-14. Air filter replacement is accomplished outside the transmitter without interrupting equipment operation. The filter should be checked once each week with replacement done on an as-needed basis. A dirty filter could result in dirt accumulation leaking into the cabinet from seams, door jambs, etc. Never reverse a dirty filter. Replace the filter. The transmitter controller and APC also contain air filters which should be checked monthly and cleaned as necessary.

5-15. The transmitter uses one disposable type air filter 1 inch X 16 inches X 20 inches (2.54 cm X 40.64 cm X 50.8 cm) mounted in the rear door of the cabinet. Additional filters may be ordered for replacement (P/N 407-0062) or locally purchased. Always mount the filter with the airflow arrow pointing towards the blower.

5-16. BLOWER MAINTENANCE.

WARNING

WARNING

WARNING

NEVER OPEN THE EQUIPMENT UNLESS ALL TRANSMITTER PRIMARY POWER IS DISCONNECTED. USE THE GROUNDING STICK PROVIDED TO ENSURE ALL COMPONENTS AND ALL SURROUNDING COMPONENTS ARE DISCHARGED BEFORE ATTEMPTING MAINTENANCE ON ANY AREA WITHIN THE TRANSMITTER.

5-17. Inspect the blower and the cabinet flushing fans for dust accumulation and periodically clean the blower and fans using a paint brush and vacuum cleaner. Both the fan and blower bearings are sealed and do not permit lubrication. If a bearing fails, the motor must be replaced. The blower and fan mounting bolts should be checked for tightness.

5-18. The blower and fan motors are cooled by the air passing around each motor. If the ambient air temperature is too high or if the air flow is restricted, then the lubricant will gradually vaporize from the motor bearings and bearing failure will occur. If very dirty air passes over the motors, accumulated dust will impair the motor cooling unless the accumulation is wiped from and blown out of the motor.

5-19. The blower and fan impeller blades should be inspected and cleaned periodically. If the transmitter is operated in a very dusty environment, dust will build up on the concave side of the blower and fan impellers. If this happens, air flow will be reduced and unbalance will result with a possibility of damage to the blower or fans.

5-20. SECOND LEVEL MAINTENANCE.

WARNING BEFORE ATTEMPTING TRANSMITTER MAINTENANCE,
WARNING ASSURE THE REMOTE DISABLE SWITCH/INDUCTOR
IS ILLUMINATED, THEN DISCONNECT POWER FROM
THE TRANSMITTER.

WARNING IF A FAULT WILL NOT ALLOW THE REMOTE DISABLE
WARNING SWITCH/INDICATOR TO ILLUMINATE, DISCONNECT
POWER FROM THE TRANSMITTER, THEN UNPLUG P1
FROM J1 ON THE REAR OF THE TRANSMITTER CON-
TROLLER.

5-21. Second level maintenance consists of procedures required to restore the transmitter to satisfactory operation after a fault has occurred.

5-22. The maintenance philosophy of the FM-5A transmitter consists of problem isolation to a specific area. Subsequent troubleshooting provided by each applicable assembly publication in Part II of this manual will assist isolation to a replaceable assembly or component. If desired, a replaceable assembly may be returned to the factory for repair or exchange.

5-23. GENERAL.

5-24. PA STAGE. Power amplifier tube life is a result of several circuit parameters. Usually, the first indication of the decline of a tube is a slight reduction in power output. This can normally be corrected by a small increase in filament voltage. It may be wise to order a new tube at this time. Further reductions in power output can be compensated in the same manner only a limited number of times. Refer to the Eimac application paper titled "Extending Transmitter Tube Life" included in the "Manufacturers Data" section of this manual. Excess control grid or screen grid dissipation will shorten the life of a tube. Also, excess plate dissipation signals nothing but trouble. PA efficiency versus RF power is plotted on Figure 5-1 and should be referenced to estimate PA efficiency for a particular power level.

5-25. PA Tube Warranty. The FM-5A transmitter PA tube is covered by warranty from the Varian/Eimac Company, the tube manufacturer, not Broadcast Electronics, Inc. However, a tube purchased from Broadcast Electronics which is defective must be returned to Broadcast Electronics with a customer-completed warranty claim service report. A warranty claim service report form is shipped with each tube obtained from Broadcast Electronics, Inc. Following this procedure will expedite immediate shipment of a new tube. Contact the Broadcast Electronics, Inc. Customer Service Department for additional details as required. It is recommended that the warranty report be filled out as soon as the new tube is placed in operation while the nominal voltages are known.

5-26. PA Frequency Change. PA tuning versus frequency is plotted in Figures 5-2 and 5-3. These curves should be referenced for coarse tuning information if the transmitter output frequency is to be changed. Also, refer to paragraph 5-30 for second harmonic suppressor adjustment and paragraph 5-53 for neutralization adjustment.

WARNING

BERYLLIUM OXIDE CERAMICS (BeO) - AVOID BREATHING DUST OR FUMES.

WARNING

THE WHITE CASE MATERIAL OF THE FM-5A IPA STAGE RF AMPLIFIER TRANSISTORS IS MADE OF BeO CERAMIC MATERIAL. DO NOT PERFORM ANY OPERATION ON ANY BeO CERAMIC WHICH MIGHT PRODUCE DUST OR FUMES, SUCH AS GRINDING, GRIT BLASTING, OR ACID CLEANING. BERYLLIUM OXIDE DUST OR FUMES ARE HIGHLY TOXIC AND BREATHING THEM CAN RESULT IN SERIOUS PERSONAL INJURY OR DEATH. BeO CERAMICS MUST BE DISPOSED OF ONLY IN A MANNER PRESCRIBED BY THE DEVICE MANUFACTURER. USE CARE IN REPLACING TRANSISTORS OF THIS TYPE.

WARNING

WARNING

WARNING

WARNING

WARNING

5-27. IPA STAGE. The transistors in the intermediate power amplifier will normally last many times longer than the power amplifier tube unless some major fault occurs such as a regulator malfunction. For further information, refer to the IPA assembly publication in Part II of this manual.

5-28. ADJUSTMENTS.

WARNING

NEVER OPEN THE EQUIPMENT UNLESS ALL TRANSMITTER PRIMARY POWER IS DISCONNECTED. USE THE GROUNDING STICK PROVIDED TO ENSURE ALL COMPONENTS AND THE SURROUNDING COMPONENTS ARE DISCHARGED BEFORE ATTEMPTING ANY MAINTENANCE.

WARNING

WARNING

5-29. Adjustment of many controls is considered obvious and may be accomplished with the information provided on the applicable schematic diagram. Adjustment procedures for all controls on all circuit boards are provided by each applicable publication in Part II of this manual.


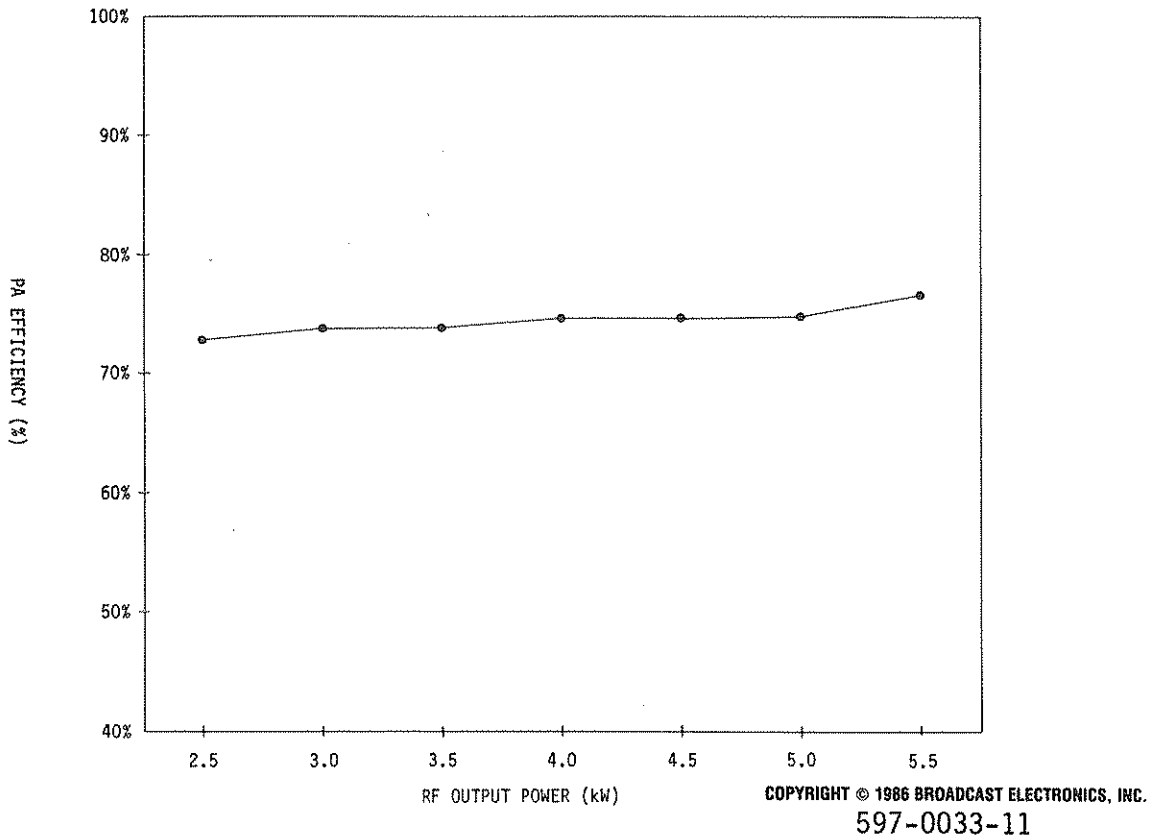


FIGURE 5-1. TYPICAL PA EFFICIENCY CURVE AT 98.1 MHz
(Within $\pm 2\%$ from 87.5 to 108 MHz)



NOTE: BOTH FRONT AND REAR COUNTERS MUST BE SET TO COARSE SETTINGS, THEN FINE TUNE USING FRONT ONLY.

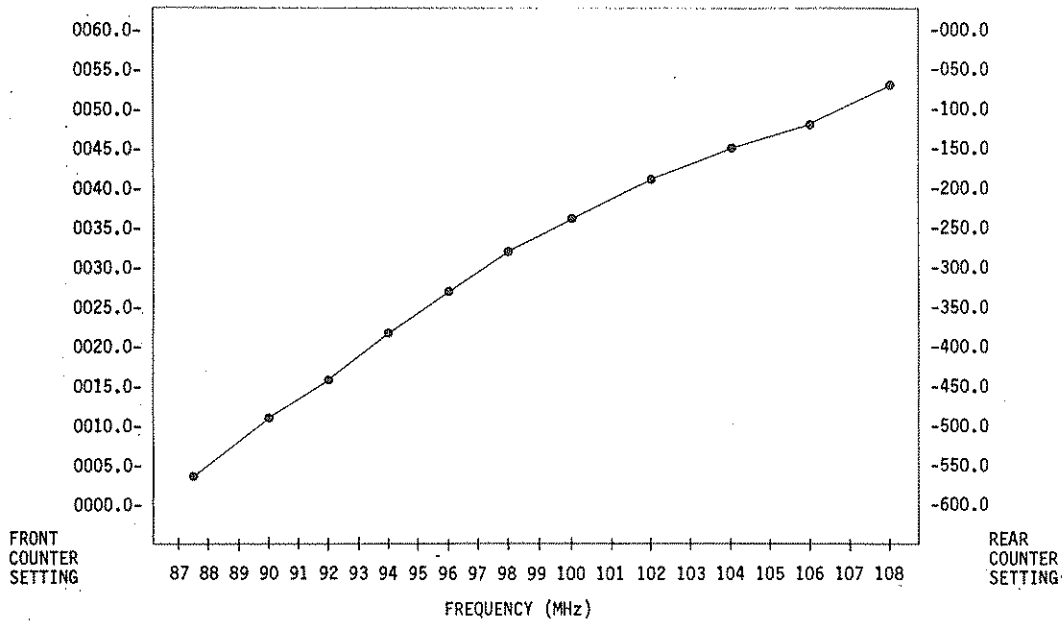

597-0032-30
COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

FIGURE 5-2. PA INPUT TUNING CURVE

DIMENSION
"L"

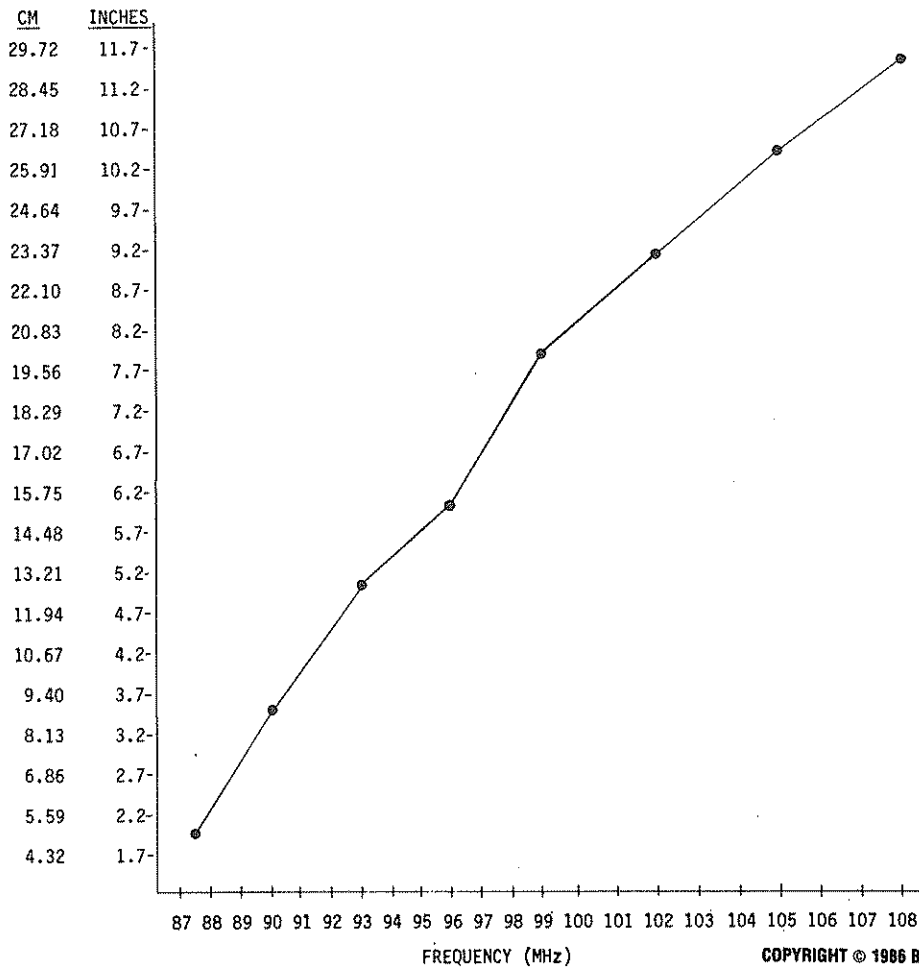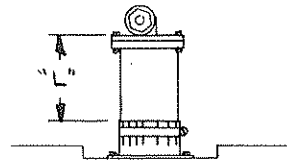

COPYRIGHT © 1966 BROADCAST ELECTRONICS, INC.

597-0032-31

FIGURE 5-3. PA OUTPUT TUNING CURVE

5-30. SECOND HARMONIC SUPPRESSOR. Adjustment of the second harmonic suppressor in the field will not normally be required, even if the PA tube is replaced. Adjustment should be attempted only when absolutely necessary. Misadjustment of the suppressor could result in sporadic operation, possibly damaging the PA tube, the cavity, or the low-pass filter. It is suggested the customer contact the Broadcast Electronics Customer Service Department before attempting this adjustment. If it is certain that adjustment of the second harmonic suppressor is required, proceed as follows.

5-31. Required Equipment. The following equipment is required to complete adjustment of the second harmonic suppressor.

- A. 1/16 inch (1.6 mm) hex wrench.
- B. Tektronix Model 492 Spectrum Analyzer or the equivalent capable of displaying frequencies at twice the transmitter frequency of operation.
- C. 50 Ohm 10 dB resistive attenuator pad, BNC jack to BNC plug (Texscan FP-50).
- D. A cable for the spectrum analyzer comprising the following:
 - 1. 10 feet (3.05 m) of Belden RG 58A/U coaxial cable (BE P/N 622-0050).
 - 2. Two BNC plugs (Pomona UG88/U--BE P/N 417-0205).
- E. Six inch scale, graduated in sixty-fourths of an inch.

WARNING

NEVER OPEN THE EQUIPMENT UNLESS ALL TRANSMITTER PRIMARY POWER IS DISCONNECTED. USE THE GROUNDING STICK PROVIDED TO ENSURE ALL COMPONENTS AND ALL SURROUNDING COMPONENTS ARE DISCHARGED BEFORE ATTEMPTING ANY MAINTENANCE.

WARNING

WARNING

5-32. Procedure. To adjust the second harmonic suppressor, proceed as follows. A graph to estimate the suppressor position is provided in Figure 5-4.

5-33. Deenergize all primary power to the transmitter.

5-34. Open the cabinet rear door.


5-35. Connect one end of the spectrum analyzer cable (Item D) to the RF sample port (J2) on the elbow near the cavity.

5-36. Connect the attenuator pad (Item C) in series with the cable and attach the attenuator pad to the spectrum analyzer input.

5-37. Close the cabinet rear door.


5-38. Energize the transmitter primary ac input.

5-39. Operate the transmitter at the normal power output and ensure all PA stage tuning and loading controls are correctly adjusted.

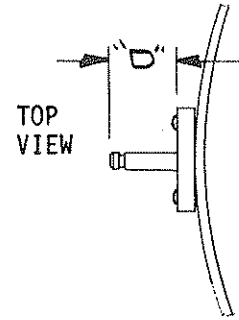

**DIMENSION
"D"**

| CM | INCHES |
|------|--------|
| 5.02 | 2.0 |
| 4.76 | 1.875 |
| 4.45 | 1.75 |
| 4.13 | 1.625 |
| 3.81 | 1.5 |
| 3.49 | 1.375 |
| 3.18 | 1.25 |
| 2.86 | 1.125 |
| 2.54 | 1.0 |
| 2.22 | 0.875 |

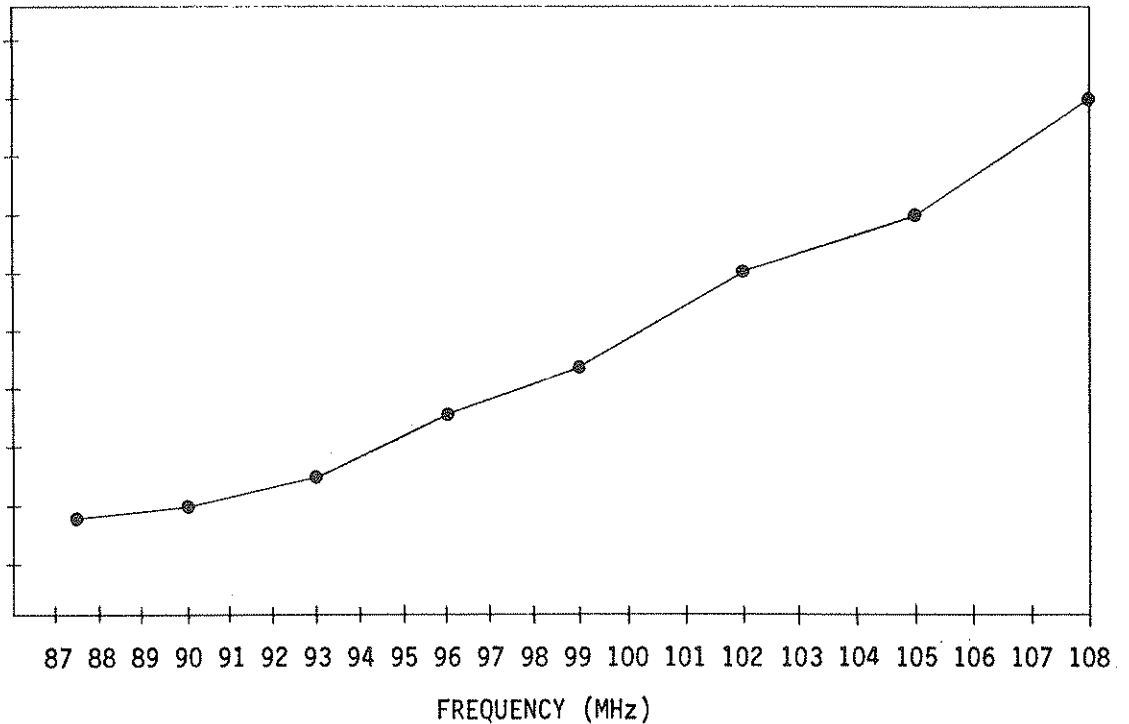

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.
597-0032-33

FIGURE 5-4. SECOND HARMONIC SUPPRESSOR COARSE SETTING

5-40. Record the level of the second harmonic displayed on the spectrum analyzer _____.

WARNING

DISCONNECT ALL TRANSMITTER PRIMARY POWER BEFORE PROCEEDING.

5-41. Disconnect all transmitter primary power.

5-42. Open the cabinet rear door.

5-43. Loosen the two hex-head lock-screws securing the second harmonic suppressor adjustment rod very slightly--just enough to allow in and out adjustment (see Figure 5-9).

CAUTION

THE SECOND HARMONIC SUPPRESSOR IS ADJUSTED BY SLIDING THE ADJUSTMENT ROD IN OR OUT. DO NOT ROTATE THE ROD.

CAUTION

NOTE

THE ORIGINAL HARMONIC SUPPRESSOR ADJUSTMENT DIMENSION IS RECORDED ON THE FACTORY FINAL TEST DATA SHEETS IF THE DIMENSION MUST BE REFERENCED.

NOTE

5-44. Move the second harmonic suppressor adjustment rod slightly (approximately 1/16 inch). Record the amount moved and the direction (in or out) _____. Slightly tighten the two screws to secure the rod in place.

5-45. Close the cabinet rear door.

5-46. Energize the transmitter primary ac input and operate the transmitter at the normal power output.

5-47. Repeat paragraphs 5-40 through 5-46, moving the second harmonic suppressor adjustment rod slightly in or out as required to minimize the second harmonic indication (paragraph 5-43 should not be repeated).

WARNING

DISCONNECT ALL TRANSMITTER PRIMARY POWER BEFORE PROCEEDING.

5-48. After the correct setting of the second harmonic suppressor is determined, disconnect all transmitter primary power.

5-49. Open the cabinet rear door.

5-50. Secure both hex-head lock-screws on the second harmonic suppressor bushing (see Figure 5-9).

5-51. Disconnect the spectrum analyzer cable from J2 on the transmission line.

5-52. Close the cabinet rear door. Record the new harmonic suppressor dimension here _____.

5-53. NEUTRALIZATION. PA neutralization in the field will not normally be required, even if the PA tube is replaced. If it is certain that adjustment of the neutralization circuitry is required, proceed as follows. Figure 5-5 provides approximate neutralization settings versus frequency.

CAUTION

INCORRECT NEUTRALIZATION CAN RESULT IN INSTABILITY WHICH COULD DAMAGE THE PA TUBE, CAVITY, OR LOW-PASS FILTER. CONSULT THE FACTORY BEFORE ATTEMPTING NEUTRALIZATION.

CAUTION

5-54. Required Equipment. The following equipment is required to complete PA neutralization.

- A. Spectrum analyzer (Tektronix Model 492 or equivalent).
- B. 25 Watt, 50 Ohm RF attenuator/termination with -20 dB sample output, type N receptacles (Bird Model 8340-030 or equivalent).
- C. Two locally fabricated cables, each comprising the following:
 - 1. 24 inches (61 cm) of Belden RG 58A/U coaxial cable (BE P/N 622-0050).
 - 2. Two BNC plugs (Pomona UG88/U--BE P/N 417-0205).
- D. Three adapters, BNC receptacle to type N plug (Pomona UG201A/U--BE P/N 417-3288).
- E. No. 2 Phillips screwdriver, 4-inch (10.2 cm) blade.
- F. Flat-tip screwdriver, 4-inch (10.2 cm) blade and 1/4 inch (0.64 cm) tip.
- G. Exciter line cord, P/O exciter accessory pack--BE P/N 682-0001).
- H. Fuse, AGC, 3A slow-blow, 120V (P/O exciter accessory pack--BE P/N 334-0300).
- I. Electrical extension cord, 3-wire, 12 feet (3.7 m) long;
- J. Six-inch scale, graduated in sixty-fourths of an inch.

5-55. Procedure. To adjust PA neutralization, proceed as follows:

5-56. Operate the transmitter at the normal power output and ensure all PA stage tuning and loading controls are correctly adjusted.

5-57. Secure the INPUT TUNING, OUTPUT LOADING, and OUTPUT TUNING control knobs in position with tape. The controls must not be moved until the entire procedure has been completed.

WARNING

ENSURE ALL TRANSMITTER PRIMARY POWER IS DISCONNECTED BEFORE OPENING THE EQUIPMENT.

- 5-58. Deenergize all primary power to the transmitter.
- 5-59. Open the cabinet door.
- 5-60. Disconnect the coaxial cable from the exciter RF OUTPUT connector.
- 5-61. Connect a BNC-to-type N adapter on each of the RF termination connectors.
- 5-62. Disconnect the cable from the PA RF INPUT (J1) connector.
- 5-63. Connect one cable and one BNC-to-type N adapter between the PA RF INPUT (J1) connector and the RF termination -20 dB output.
- 5-64. Connect one cable between the exciter RF OUTPUT connector and the input to the RF termination.
- 5-65. Disconnect wire No. 5 from TB1, terminal 7 on the rear of the exciter and connect a temporary wire jumper from TB1, terminal 6 to TB1, terminal 7. Flag the temporary jumper with a piece of tape marked "TEMPORARY".
- 5-66. Disconnect the line cord plug and remove the fuse from the AC LINE VOLTAGE SELECTOR on the exciter rear panel. Cover the line cord plug with a piece of tape marked "240 VOLTS".
- 5-67. Remove the AC LINE VOLTAGE SELECTOR circuit board with a small pair of needle-nose pliers and record the circuit board voltage indication V . Reinsert the circuit board so that "115/120V" is visible when the circuit board is inserted into the receptacle.
- 5-68. Replace the fuse with a slow-blow type rated at 3 Amperes.
- 5-69. Connect the accessory exciter line cord to the extension cord. Route the extension cord out through the top or bottom of the cabinet to a source of 110 to 120 Vac.
- 5-70. Connect the accessory exciter line cord (item G) to the exciter.
- 5-71. Connect the spectrum analyzer to the RF sample port (J2) in the transmitter output transmission line. Adjust the analyzer to obtain a reference level display and position the analyzer so that it may be viewed from the rear of the transmitter.

WARNING

PRIMARY AC POWER MUST REMAIN OFF THROUGHOUT THE FOLLOWING PROCEDURE.

5-72. Assure that the exciter is operating independently of the transmitter.

5-73. Note the position of the grounding stick in the rear of the cabinet.

WARNING

USE THE GROUNDING STICK PROVIDED TO ENSURE NO PA TUBE POTENTIALS ARE PRESENT IN THE FOLLOWING STEP BY GROUNDING THE PA TUBE PLATE AND SCREEN CONNECTIONS BEFORE PROCEEDING.

WARNING

5-74. Open the PA cavity access door and ground the PA tube plate and screen connections to ensure no potentials are present in the cavity before attempting to touch anything within the cavity.

5-75. After it has been determined that no PA tube potentials are present, refer to Figure 5-5 and estimate the amount of adjustment necessary for neutralization. Correct neutralization will be found very close to the present position of the neutralization adjustments.

WARNING

BE CAREFUL WHEN ADJUSTING THE NEUTRALIZATION STRAPS WITH FINGERS AS THE EDGES OF THE MATERIAL ARE VERY SHARP.



WARNING

5-76. Loosen the six screws (A, Figure 5-6) on top of each capacitor slightly--just enough to allow adjustment of each pair of inductors. When the neutralization procedure is properly completed, the height of all inductors will be approximately the same within 1/16 inch (0.16 cm).

5-77. Neutralization is adjusted in the following manner:

- A. Remove all foreign objects from the cavity then close the cavity access door.
- B. Note the spectrum analyzer indication.
- C. Open the cavity access door and adjust one pair of inductors very slightly. The inductors must be adjusted in pairs. Lightly secure the six screws on this capacitor plate.
- D. Remove all foreign objects from the cavity and close the cavity access door.

**DIMENSION
"H"**

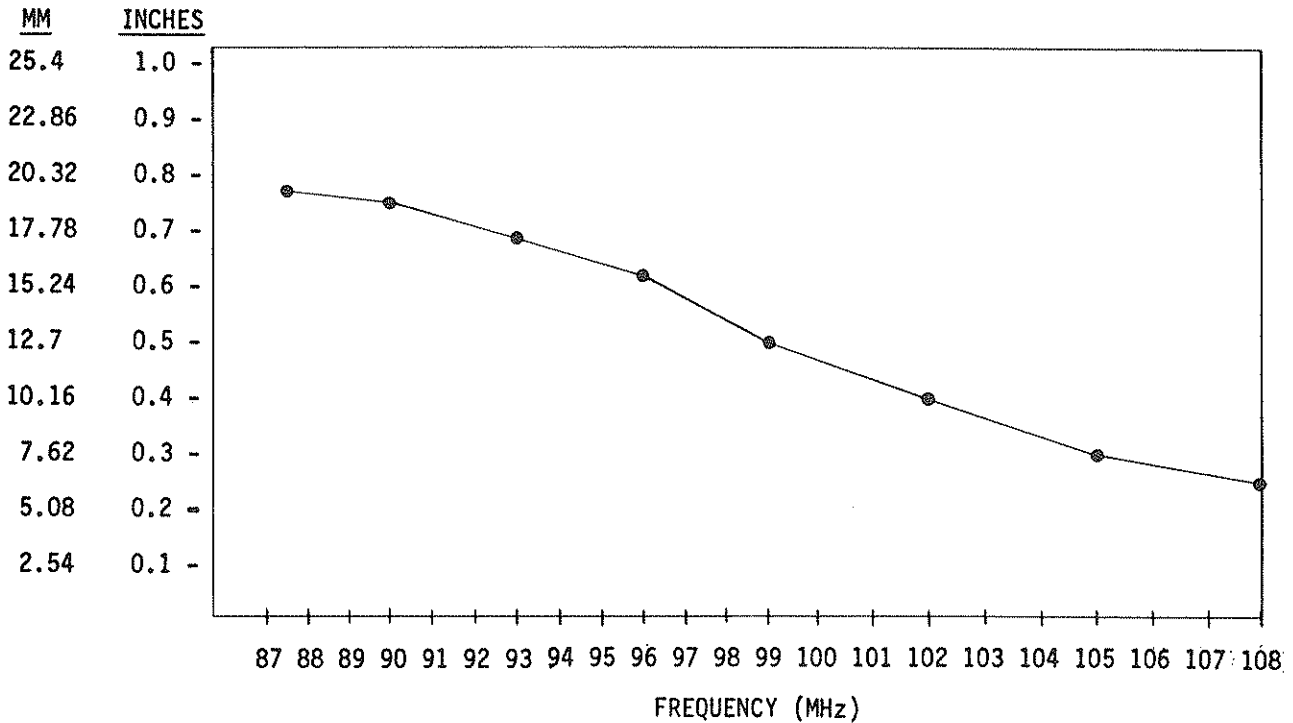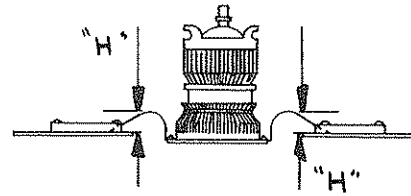

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.
597-0032-35

FIGURE 5-5. NEUTRALIZATION STRAP COARSE SETTING

- E. Note the change in the spectrum analyzer indication.
- F. Repeat steps A through E for each pair of inductors until a minimum spectrum analyzer indication is noted, then secure the six screws in each capacitor. When the neutralization procedure is properly completed, the height of all inductors will be approximately the same.
- G. Verify that all four capacitors are secured (six screws in each capacitor) before closing the cavity access door.

5-78. Close and latch the cavity access door. Assure that the cavity access door interlock switch is closed. Replace the grounding stick on its hanger.

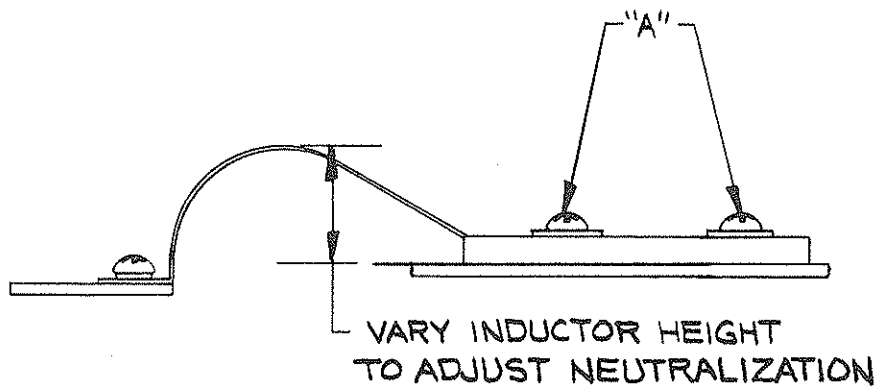
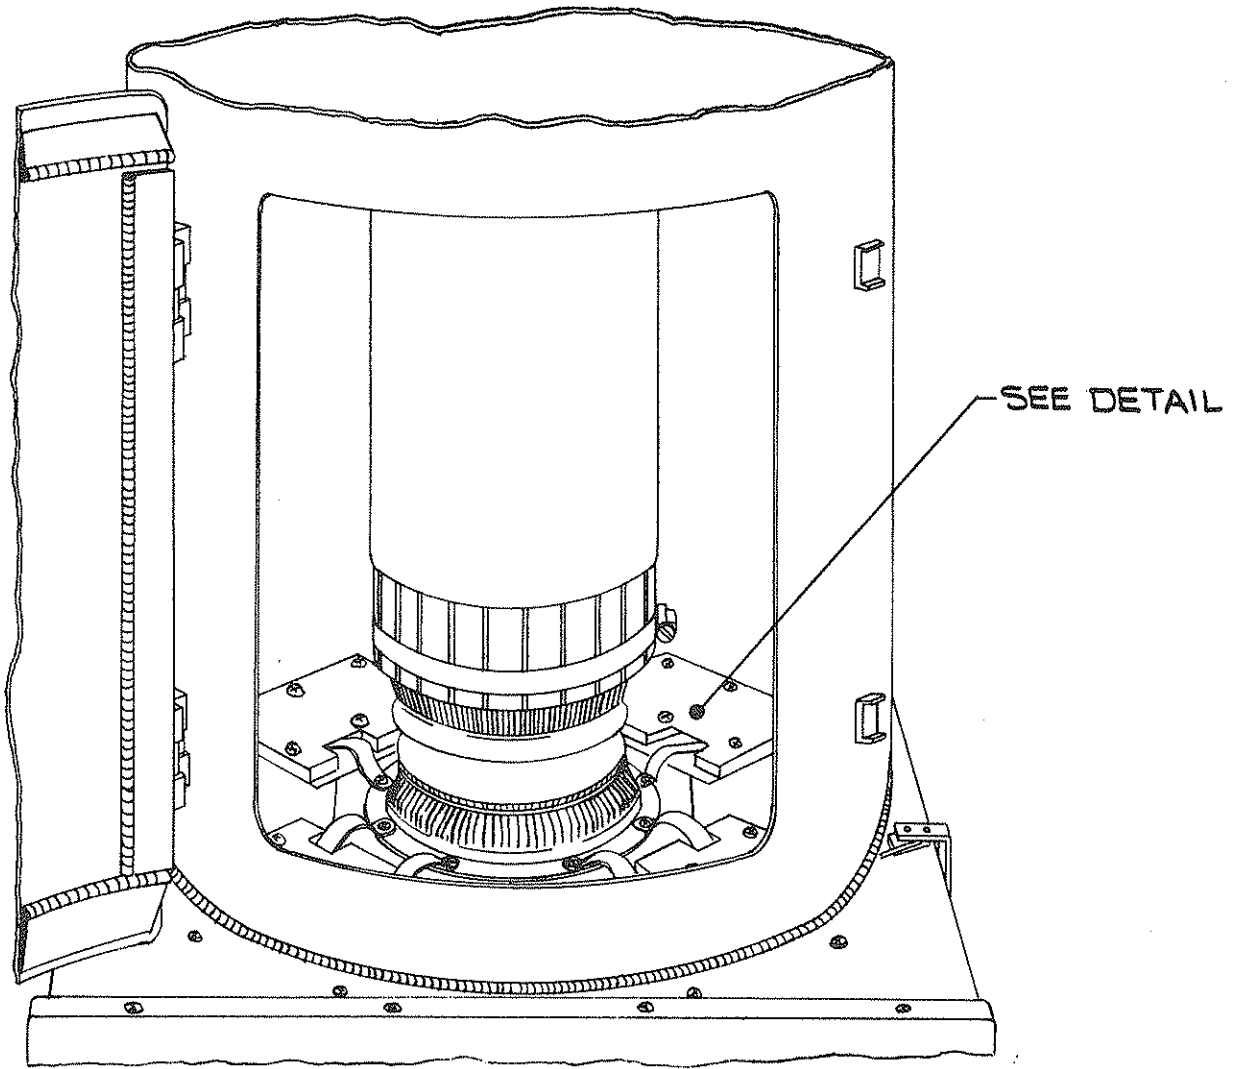


FIGURE 5-6. PA NEUTRALIZATION

5-15

5-79. Disconnect the spectrum analyzer from the output transmission line.

CAUTION

DO NOT CONNECT THE EXCITER TO THE LINE CORD WIRED INTO THE TRANSMITTER IN THE FOLLOWING STEP.

CAUTION

5-80. Remove the electrical extension cord and exciter line cord. Do not connect the exciter to the line cord wired into the transmitter at this time.

5-81. Remove the fuse from the exciter rear panel AC LINE VOLTAGE SELECTOR.

5-82. Remove the AC LINE VOLTAGE SELECTOR circuit board with a small pair of needle-nose pliers. Reinsert the circuit board so that the voltage recorded in paragraph 5-67 is visible when the circuit board is inserted into the receptacle.

5-83. Replace the fuse with a slow-blow type rated at 1.5 Amperes.

5-84. Remove the tape from the exciter line cord and connect the plug to the exciter.

5-85. Remove the temporary wire jumper from TB1 on the exciter rear panel and reconnect wire No. 5 to TB1-7.

5-86. Remove the cabling and test load connected between the exciter RF OUTPUT connector and the PA RF INPUT (J1) connector. Remove the adapter from the PA RF INPUT (J1) connector.

5-87. Reconnect the exciter to the IPA input and reconnect the IPA output to the PA input.

5-88. TROUBLESHOOTING.

WARNING

NEVER OPEN THE EQUIPMENT UNLESS ALL TRANSMITTER PRIMARY POWER IS DISCONNECTED. USE THE GROUNDING STICK PROVIDED TO ENSURE ALL COMPONENTS AND ALL SURROUNDING COMPONENTS ARE DISCHARGED BEFORE ATTEMPTING MAINTENANCE ON ANY AREA WITHIN THE TRANSMITTER.

WARNING

WARNING

5-89. Most troubleshooting consists of visual checks. Because of the voltages and high currents in the equipment, it is considered hazardous to work with power energized. Therefore, the various transmitter indicators (meters, LEDs, fuses, and circuit breakers) should be used to isolate the malfunction to one of the specific areas listed below. Typical meter indications are presented in Table 5-1 and transmitter primary power demand requirements are listed in Table 5-2.

- A. Power Supplies
- B. Exciter
- C. IPA
- D. Power Amplifier
- E. Automatic Power Control
- F. Transmitter Controller
- G. Transmitter Load

TABLE 5-1. TYPICAL METER INDICATIONS (5 kW RF OUTPUT)

| METER | SWITCH POSITION/INDICATION | |
|------------------|----------------------------|-------------|
| FM-5A | | |
| OUTPUT POWER | VSWR LESS THAN 1.2 | FWD 100% |
| PLATE CURRENT | 1.3 A | |
| PLATE VOLTAGE | 5300 V | |
| SCREEN VOLTAGE | 600 V | |
| SCREEN CURRENT | 70 mA | |
| GRID VOLTAGE | -315 V | |
| GRID CURRENT | 40 mA | |
| FILAMENT VOLTAGE | 5.0 V | |
| FM-5AS | | |
| OUTPUT POWER | VSWR LESS THAN 1.2 | FWD 100% |
| PLATE CURRENT | 1.3 A | |
| PLATE VOLTAGE | 5300 V | |
| SCREEN VOLTAGE | 600 V | |
| SCREEN CURRENT | 70 mA | |
| GRID VOLTAGE | -315 V | |
| GRID CURRENT | 40 mA | |
| FILAMENT VOLTAGE | 5.0 V | |

TABLE 5-2. TYPICAL POWER DEMAND (5 KW RF OUTPUT)

| | | | |
|-------------------|-------|-------|-------|
| FM-5A | | | |
| AC Line Frequency | 60 Hz | 50 Hz | 50 Hz |
| AC Line Voltage | 210 V | 224 V | 380 V |
| AC Line Current | 28 A | 28 A | 16 A |
| FM-5AS | | | |
| AC Line Frequency | 60 Hz | 50 Hz | 50 Hz |
| AC Line Voltage | 210 V | 224 V | 380 V |
| AC Line Current | 48 A | 48 A | 28 A |

CAUTION

MANY COMPONENTS IN THE TRANSMITTER ARE MOUNTED TO HEAT SINKS UTILIZING A FILM OF HEAT-SINK COMPOUND FOR THERMAL CONDUCTION.

CAUTION

CAUTION

IF ANY SUCH COMPONENT IS REPLACED, ENSURE A THIN FILM OF A ZINC-BASED HEAT-SINK COMPOUND IS USED (BE P/N 700-0028) TO ASSURE GOOD HEAT DISSIPATION.

CAUTION

5-90. Once the trouble is isolated, refer to the applicable assembly publication in Part II of this manual discussing the theory of operation and providing troubleshooting for the respective assembly to assist in problem resolution. Figures 5-7 through 5-11 provide drawings to assist component location.

5-91. COMPONENT REPLACEMENT ON CIRCUIT BOARDS. Circuit board repair requires that defective components be removed carefully to avoid damage to the board.

5-92. On all circuit boards, the adhesive securing the copper track to the board melts at almost the same temperature at which solder melts. A circuit board track can be destroyed by excessive heat or lateral movement during soldering. Use of a small iron with steady pressure is required for circuit board repairs.

5-93. To remove a component from a circuit board, cut the leads from the body of the defective component while the device is still soldered to the board.

5-94. Grip each component lead, one at a time, with long nose pliers. Turn the board over and touch a soldering iron to the lead at the solder connection. When the solder begins to melt, push the lead through the back side of the board and cut off the bent-over outer end of the lead. Each lead may now be heated independently and pulled out of each hole. The holes may be cleared of solder by carefully re-heating with a low wattage iron and removing the residual solder with a soldering vacuum tool.

5-95. Install the new component and apply solder from the bottom side of the board.

WARNING

MOST SOLVENTS WHICH WILL REMOVE ROSIN FLUX ARE VOLATILE AND TOXIC BY THEIR NATURE AND SHOULD BE USED ONLY IN SMALL AMOUNTS IN A WELL VENTILATED AREA, AWAY FROM FLAME, INCLUDING CIGARETTES AND A HOT SOLDERING IRON.

WARNING


WARNING

WARNING

OBSERVE THE MANUFACTURER'S CAUTIONARY INSTRUCTIONS.

5-96. After soldering, remove flux with a cotton swab moistened with a suitable solvent. Rubbing alcohol is highly diluted and is not effective. Solvents are available in electronic supply houses which are useful.

5-97. The board should be checked to ensure the flux has been removed and not just smeared about. Rosin flux is not normally corrosive, but rosin will absorb enough moisture in time to become conductive and cause problems.

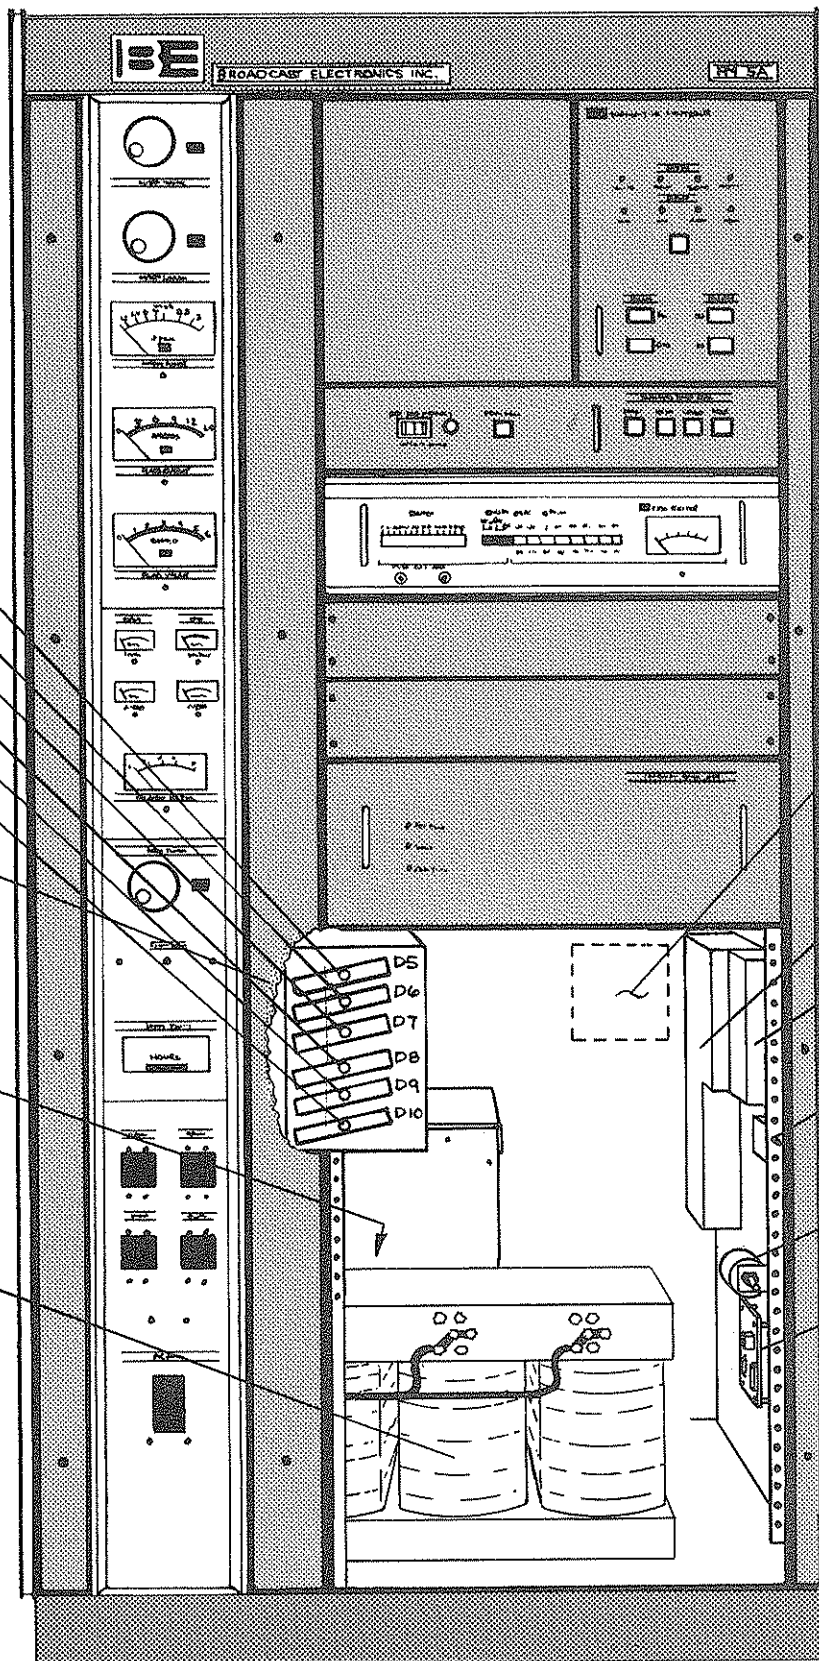

E105
E106
E107
E108
E109
E110

HIGH VOLTAGE RECTIFIERS D5 THRU D10

PLATE POWER SUPPLY

PLATE TRANSFORMER T3

OPTIONAL THREE-PHASE AC VOLTMETER

SCREEN POWER SUPPLY

BIAS POWER SUPPLY

FRONT COVER INTERLOCK S1


HUM NULL CONTROL R10

HUM NULL CIRCUIT BOARD

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.
597-0033-12

FIGURE 5-7. FM-5A CABINET COMPONENT LOCATOR, FRONT

WARNING: DISCONNECT POWER PRIOR TO SERVICING

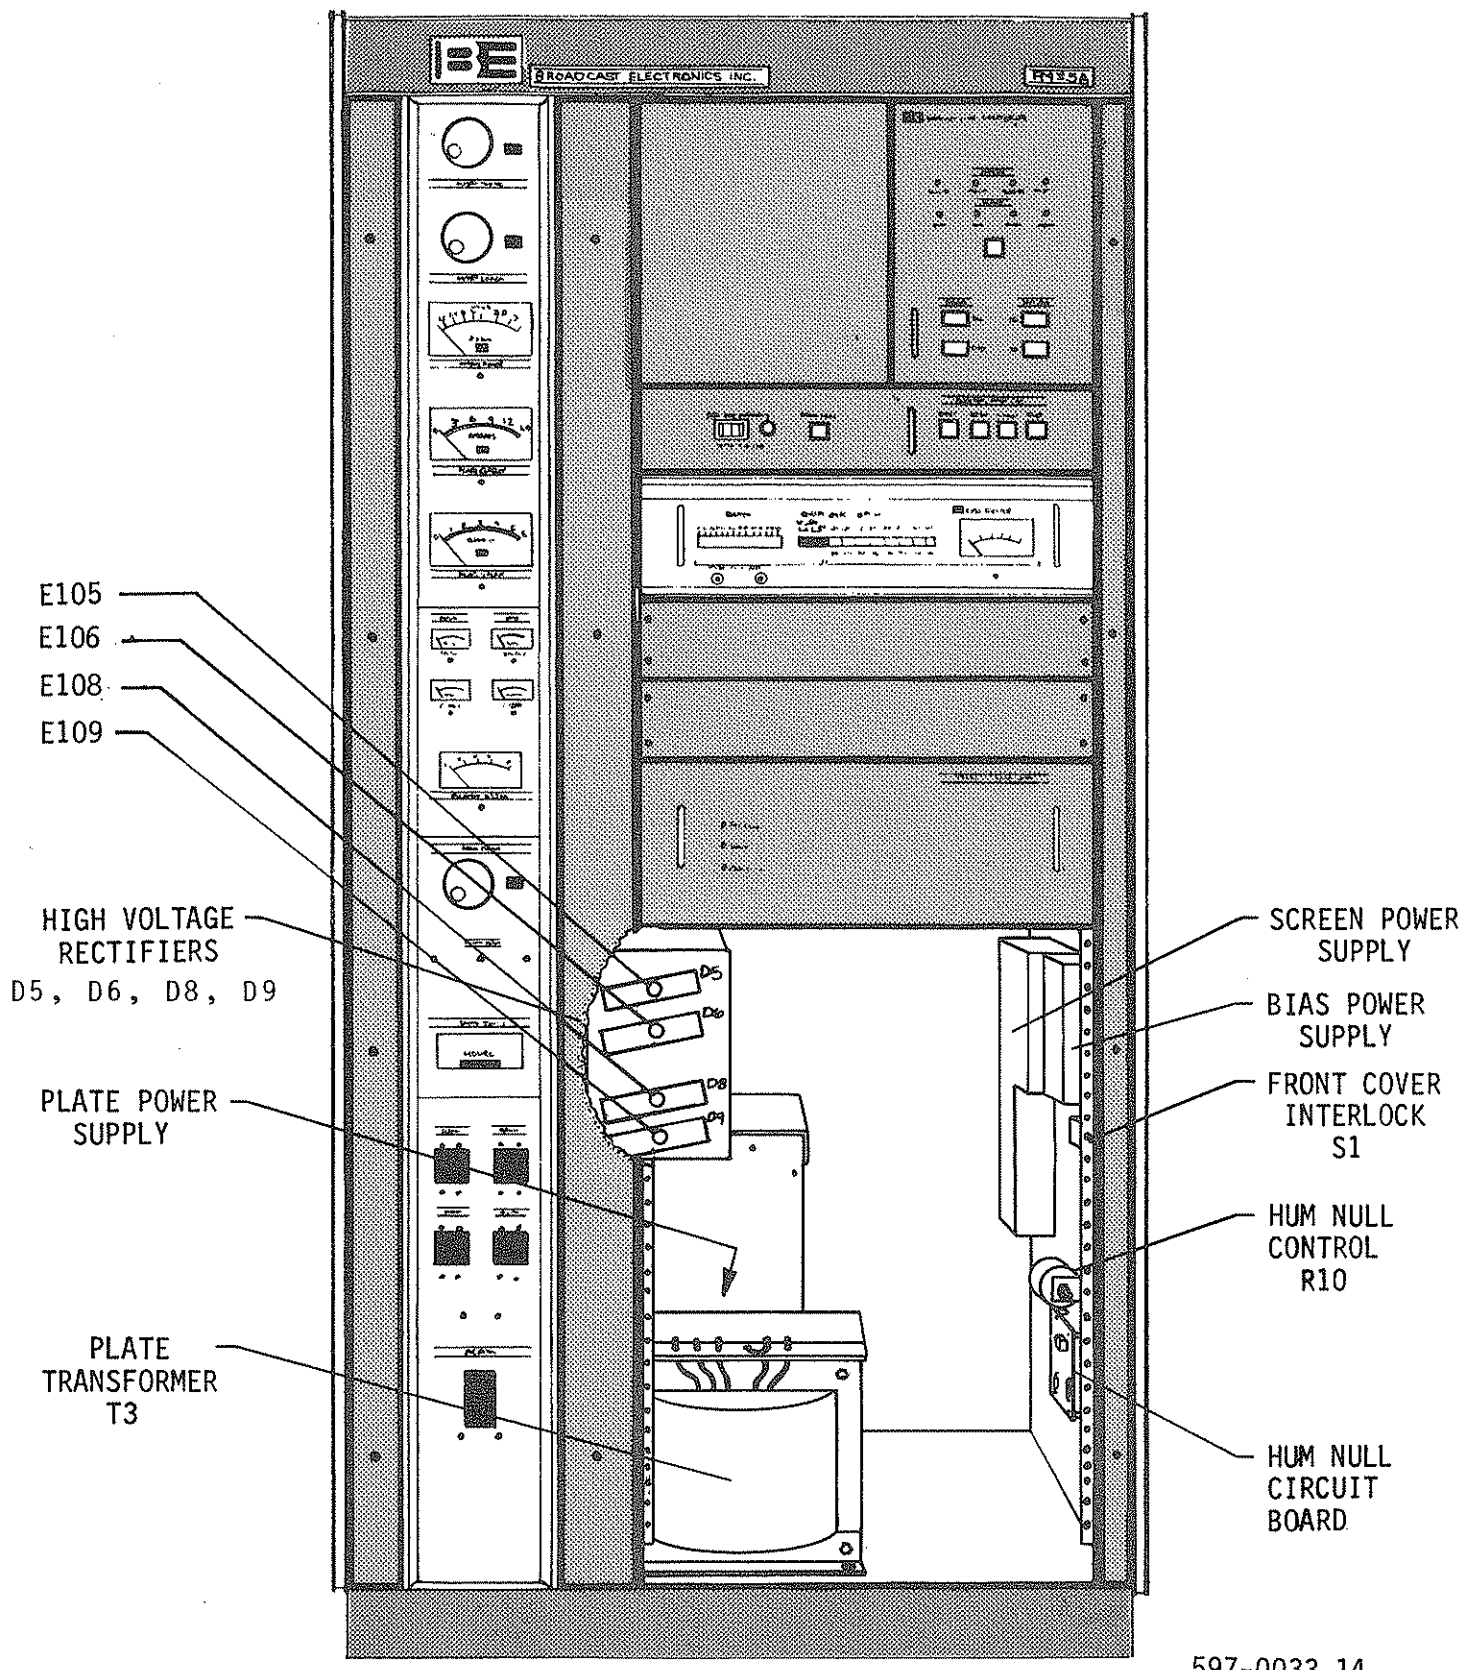


597-0033-14

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

FIGURE 5-8. FM-5AS CABINET COMPONENT LOCATOR, FRONT


WARNING: DISCONNECT POWER PRIOR TO SERVICING

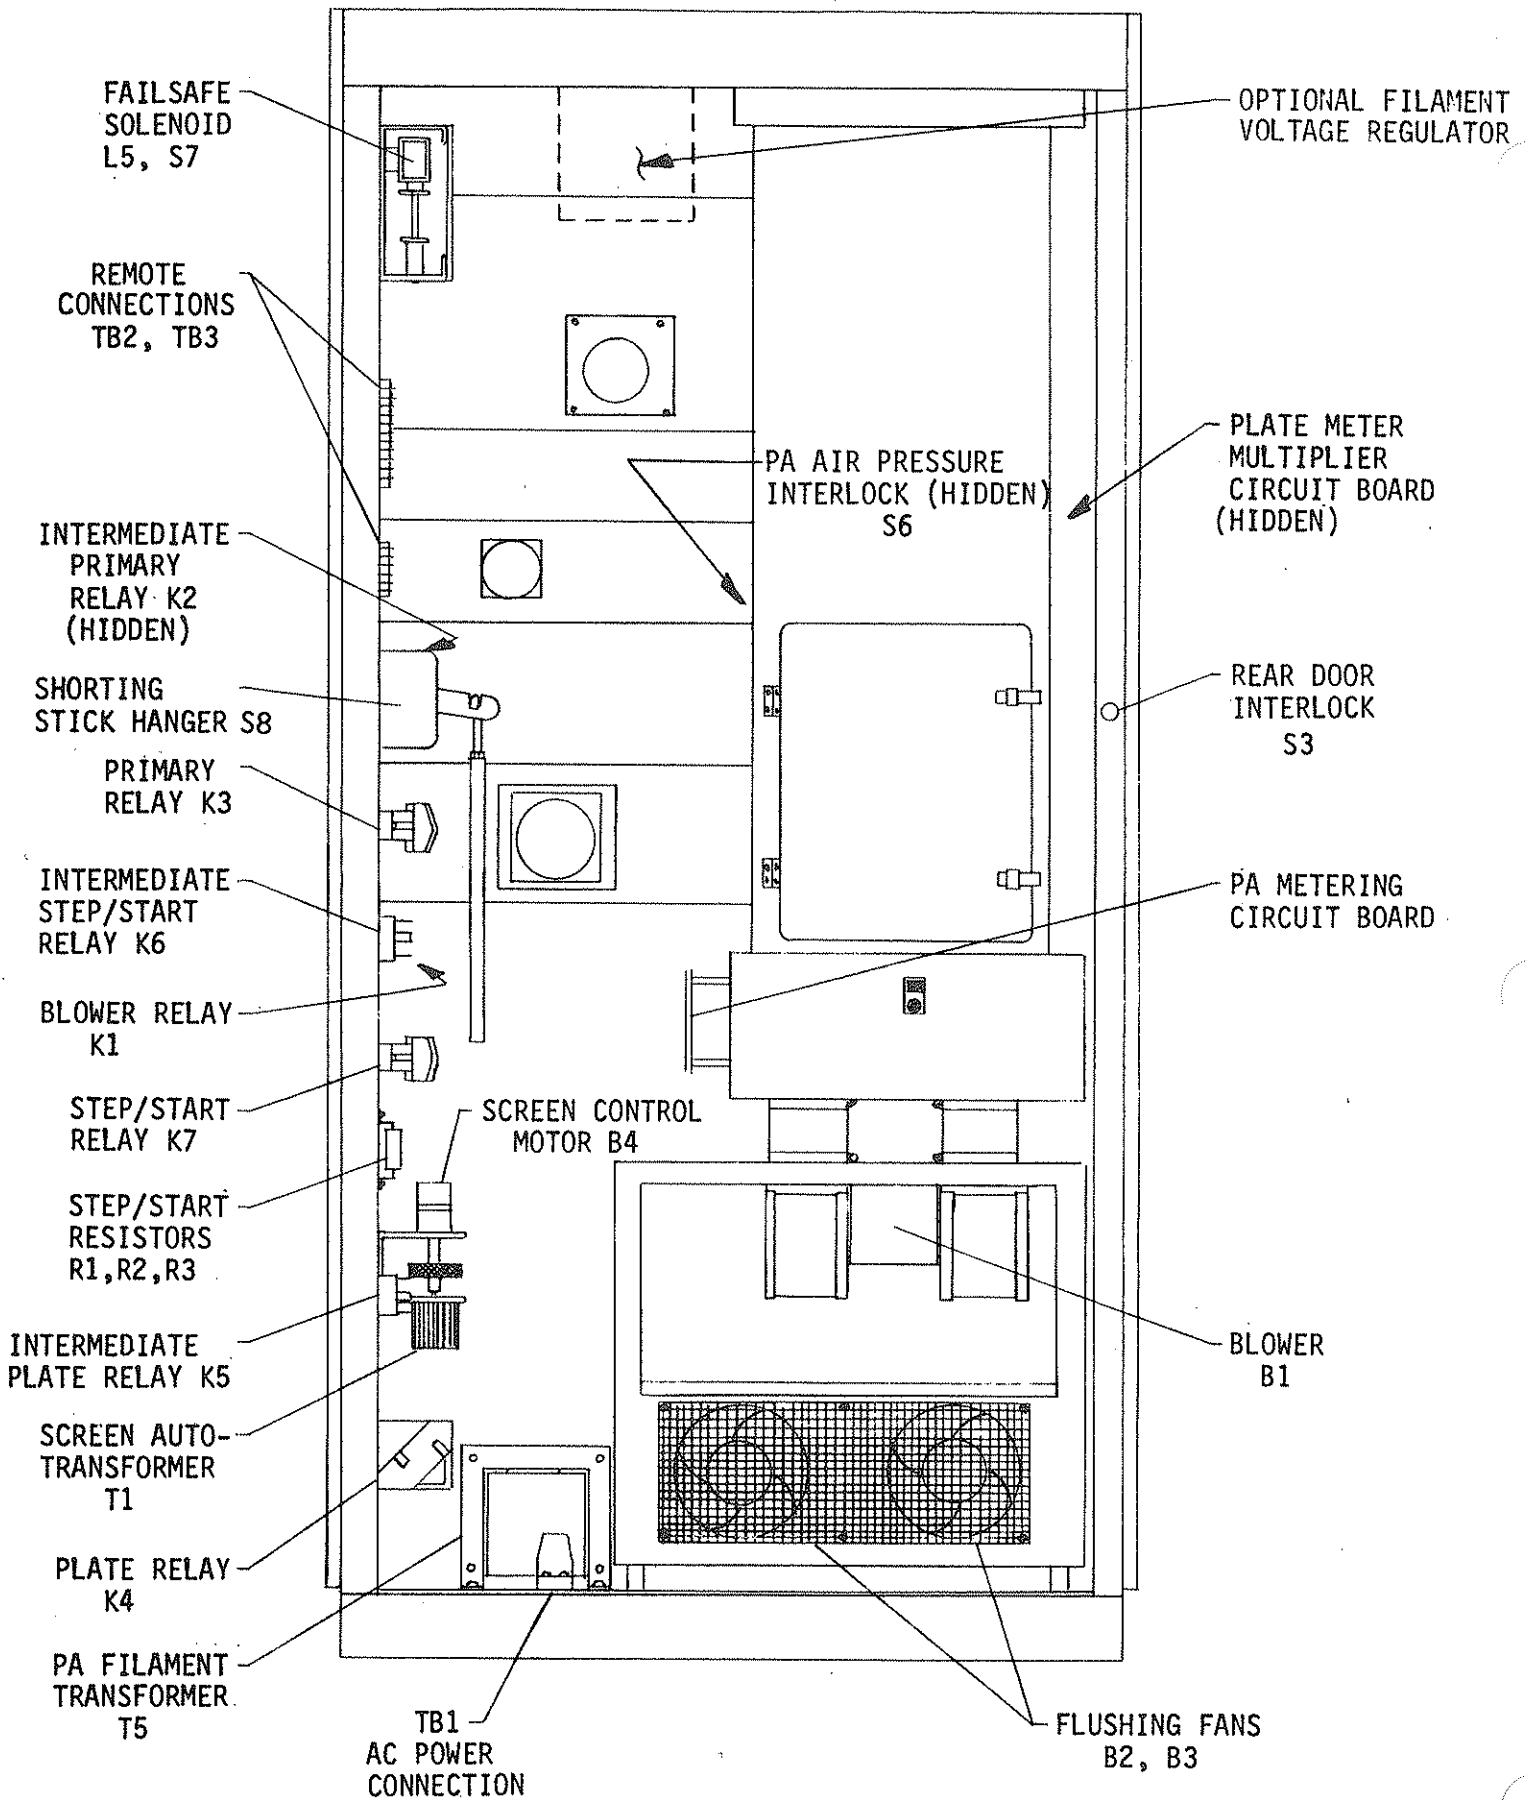

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC
597-0033-13

FIGURE 5-9. FM-5A/FM-5AS CABINET COMPONENT LOCATOR, REAR

WARNING: DISCONNECT POWER PRIOR TO SERVICING.

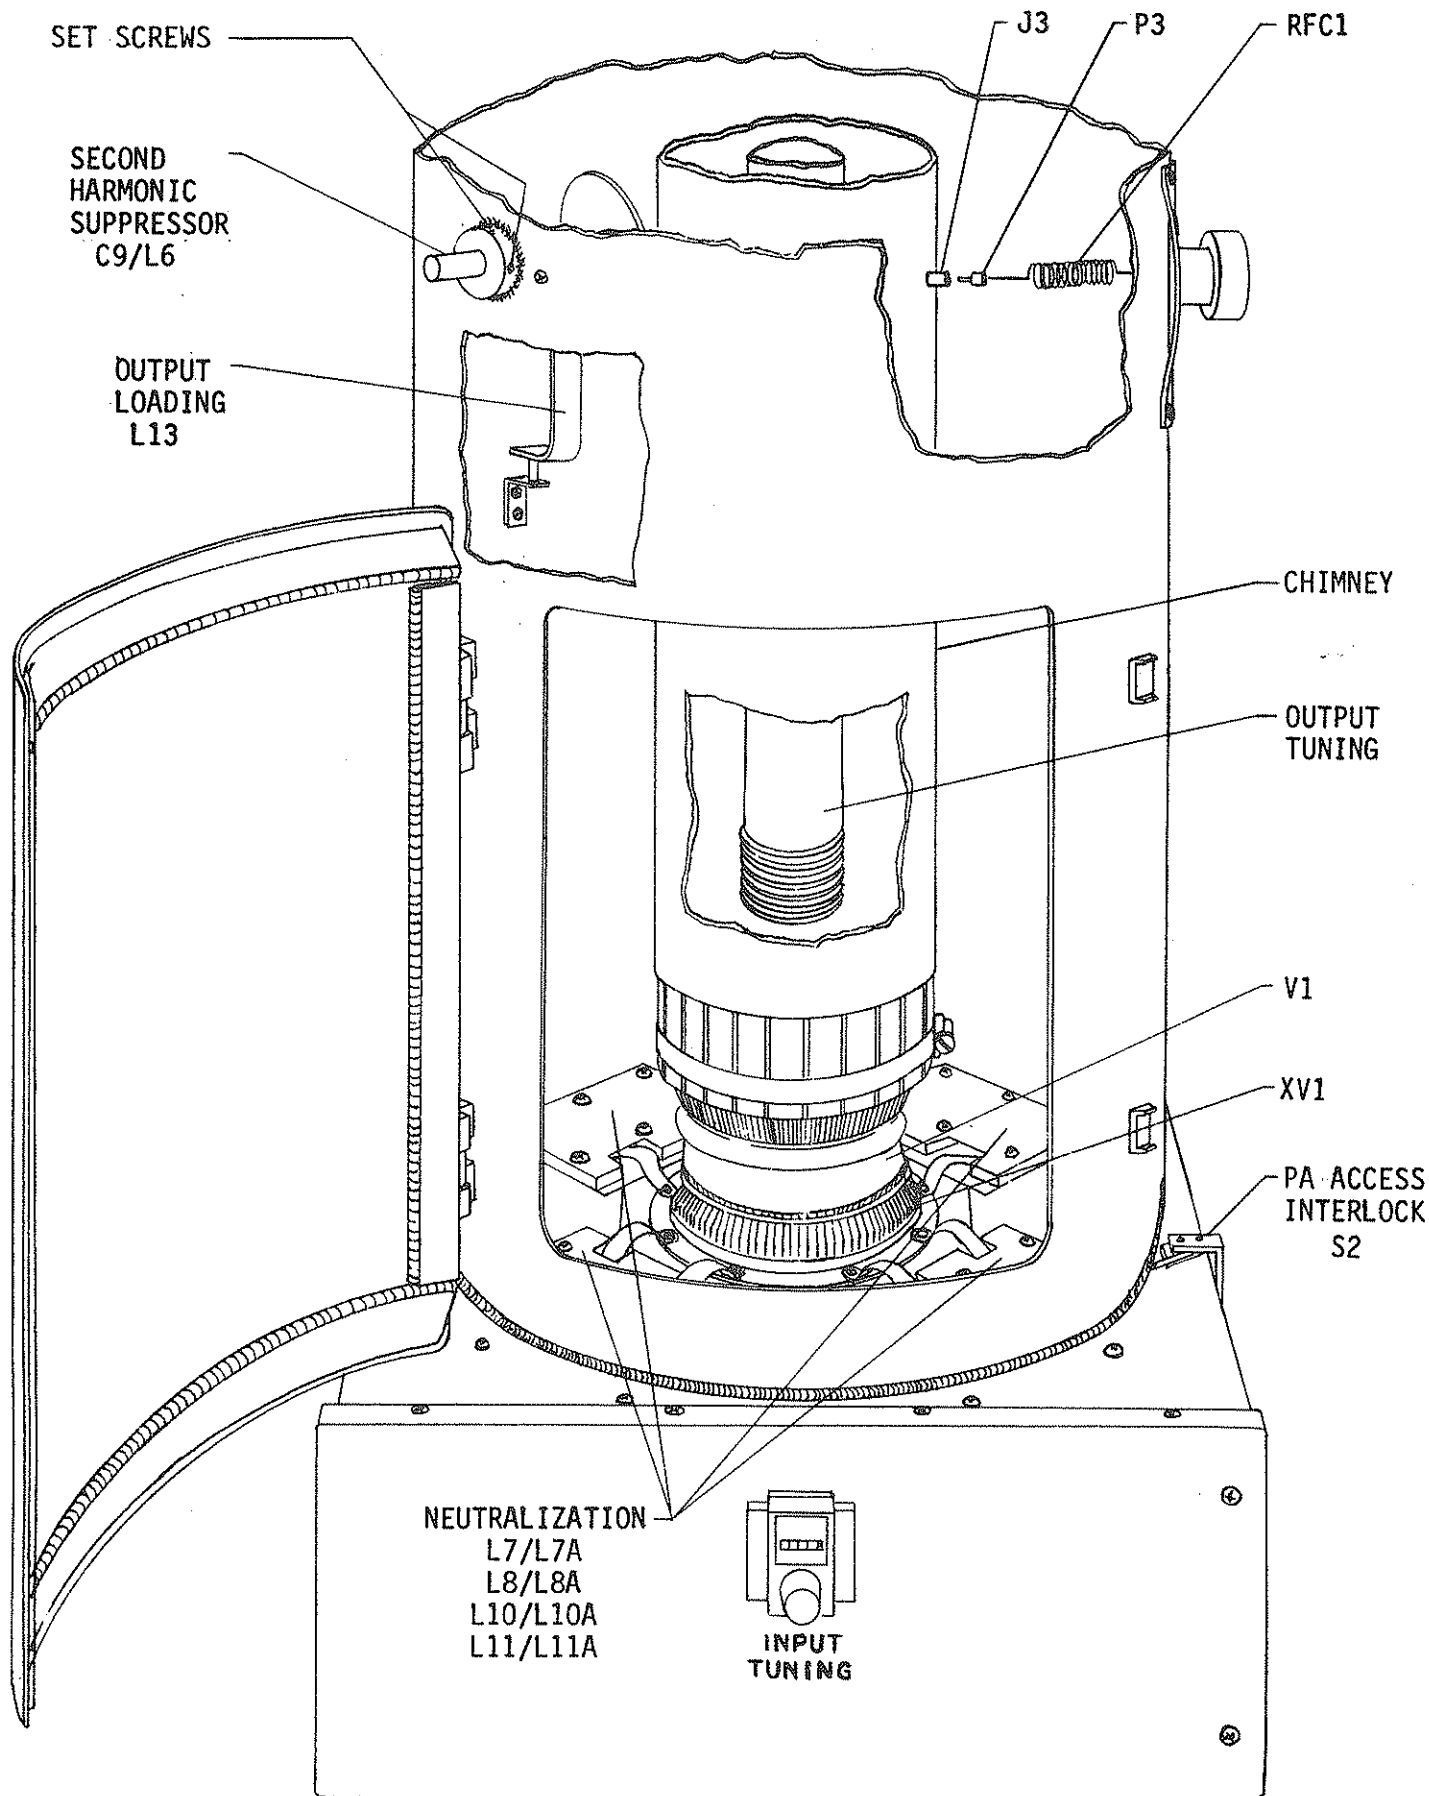

597-0032-36

FIGURE 5-10. PA CAVITY COMPONENT LOCATOR COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

WARNING: DISCONNECT POWER PRIOR TO SERVICING

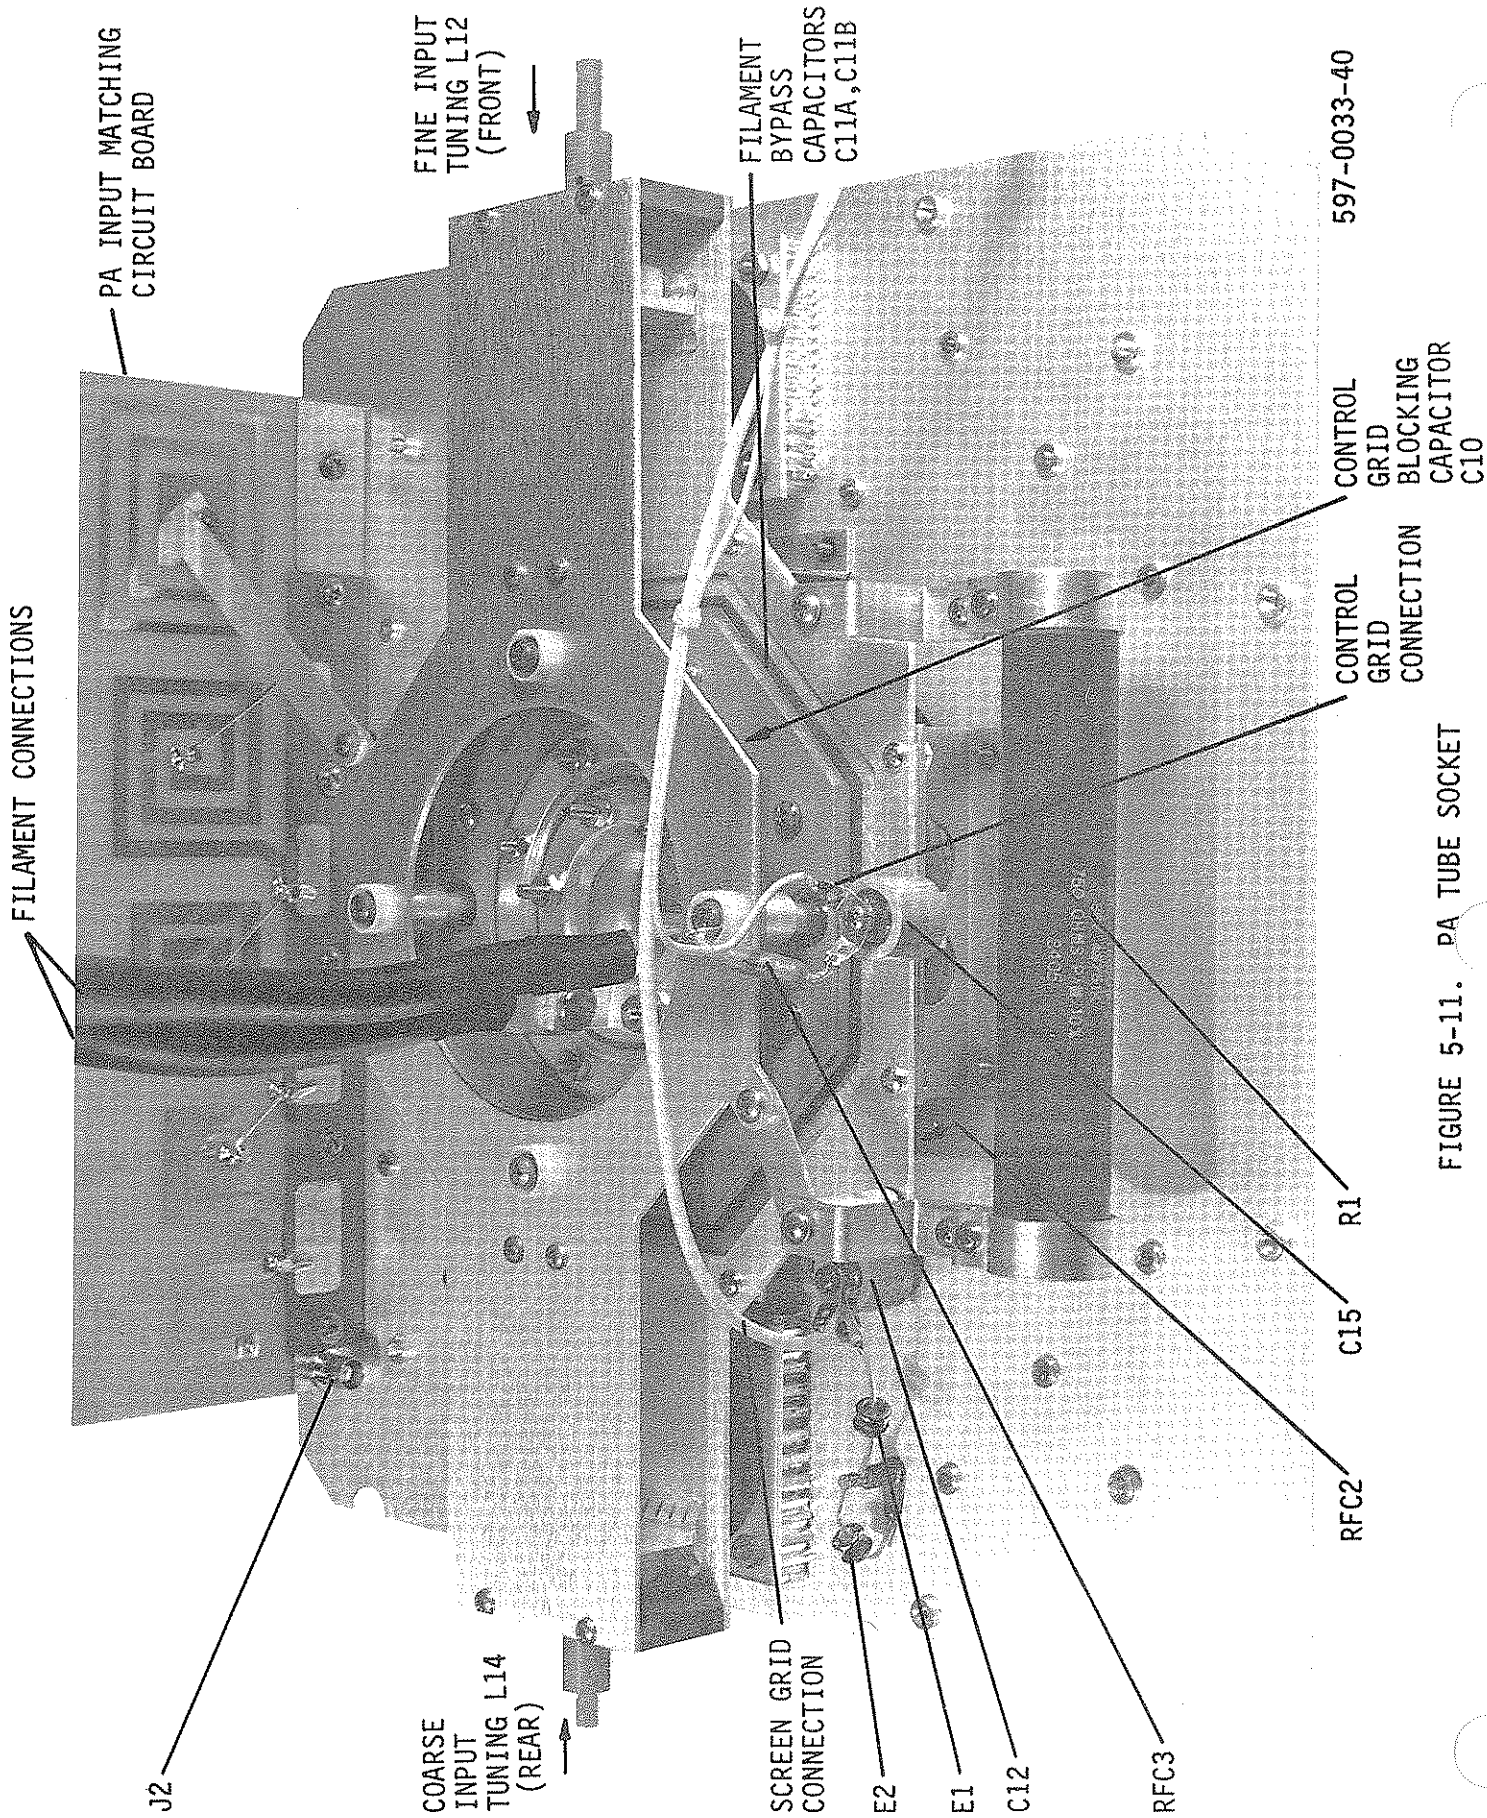


FIGURE 5-11. PA TUBE SOCKET

SECTION VI
PARTS LIST

6-1. INTRODUCTION.

6-2. This section provides descriptions and part numbers of electrical components, assemblies, and selected mechanical parts required for maintenance of the Broadcast Electronics FM-5A and FM-5AS FM Transmitters. Each table entry in this section is indexed by reference designators appearing on the applicable schematic diagram.

6-3. Parts located within modular assemblies are listed in Part II of this manual with each applicable assembly publication.

TABLE 6-1. REPLACEABLE PARTS LIST INDEX
(Sheet 1 of 2)

| TABLE | DESCRIPTION | PART NO. | PAGE |
|-------|--|---|------|
| 6-2 | ASSEMBLY, FM-5A TRANSMITTER | 909-5000- 200/-210, 300/-380, 205/-305 | 6-3 |
| 6-3 | ASSEMBLY, BASIC RACK | 959-0105 | 6-3 |
| 6-4 | ASSEMBLY, REMOTE INTERFACE RIBBON CABLE | 949-0037 | 6-3 |
| 6-5 | ASSEMBLY, REMOTE INTERFACE PANEL | 959-0117 | 6-4 |
| 6-6 | ASSEMBLY, FAIL-SAFE SOLENOID | 959-0083 | 6-4 |
| 6-7 | ASSEMBLY, GROUND STICK HANGER | 955-0038 | 6-4 |
| 6-8 | ASSEMBLY, CABLES | 949-0031 | 6-4 |
| 6-9 | CABLES, INTERCONNECT | 949-0027 | 6-4 |
| 6-10 | CABLES, CONTACTOR PANEL | 949-0061 | 6-4 |
| 6-11 | CABLES, PA METERING | 949-0068 | 6-5 |
| 6-12 | CABLES, TRANSMITTER CONTROLLER | 949-0069 | 6-5 |
| 6-13 | CABLES, AC POWER | 949-0135 | 6-5 |
| 6-14 | ASSEMBLY, BASE PLATE | 959-0120 | 6-5 |
| 6-15 | ASSEMBLY, HIGH VOLTAGE RECTIFIER, FM-5A | 959-0196 | 6-6 |
| 6-16 | ASSEMBLY, HIGH VOLTAGE RECTIFIER, FM-5AS | 959-0189 | 6-6 |
| 6-17 | ASSEMBLY, FAN AND BLOWER | 959-0108 | 6-6 |
| 6-18 | ASSEMBLY, CONTACTOR PANEL | 959-0118 | 6-6 |
| 6-19 | ASSEMBLY, SEMI-SOLID STATE RELAY | 919-0096 | 6-7 |
| 6-20 | SUB-ASSEMBLY, CONTACTOR PANEL | 959-0111 | 6-7 |
| 6-21 | ASSEMBLY, POWERSTAT | 959-0121 | 6-7 |
| 6-22 | ASSEMBLY, SCREEN AND BIAS SUPPLY | 959-0109 | 6-8 |

TABLE 6-1. REPLACEABLE PARTS LIST INDEX
(Sheet 2 of 2)

| TABLE | DESCRIPTION | PART NO. | PAGE |
|-------|--|---------------------------|------|
| 6-23 | ASSEMBLY, HUM NULL | 919-0063 | 6-8 |
| 6-24 | ASSEMBLY, METER MULTIPLIER AND BLEEDER PANEL | 959-0005 | 6-8 |
| 6-25 | ASSEMBLY, METER MULTIPLIER CIRCUIT BOARD, FM-5A | 919-0200 | 6-8 |
| 6-26 | ASSEMBLY, METER MULTIPLIER CIRCUIT BOARD, FM-5AS | 919-0079 | 6-9 |
| 6-27 | ASSEMBLY, METER PANEL | 959-0110 | 6-9 |
| 6-28 | ASSEMBLY, CAPACITOR | 959-0144 | 6-9 |
| 6-29 | ASSEMBLY, CAPACITOR | 955-0033 | 6-9 |
| 6-30 | ASSEMBLY, LOWER CONTROL PANEL | 959-0107/ 959-0107-001 | 6-10 |
| 6-31 | ASSEMBLY, RF ENCLOSURE | 959-0106 | 6-10 |
| 6-32 | ASSEMBLY, OUTPUT TUNING LINE | 959-0099 | 6-10 |
| 6-33 | ASSEMBLY, PA CHIMNEY | 959-0148 | 6-10 |
| 6-34 | ASSEMBLY, HV FEEDTHRU CAPACITOR | 959-0184 | 6-11 |
| 6-35 | ASSEMBLY, PLATE CHOKE COIL | 959-0149 | 6-11 |
| 6-36 | ASSEMBLY, OUTPUT LOOP | 959-0084 | 6-11 |
| 6-37 | ASSEMBLY, SECOND HARMONIC SUPPRESSOR | 959-0123 | 6-11 |
| 6-38 | ASSEMBLY, TUBE SOCKET AND INPUT TUNING | 959-0151 | 6-11 |
| 6-39 | ASSEMBLY, INPUT MATCHING CIRCUIT BOARD | 919-0064 | 6-12 |
| 6-40 | ASSEMBLY, SPARK GAP | 959-0161 | 6-12 |
| 6-41 | ASSEMBLY, SCREEN CHOKE | 959-0166 | 6-12 |
| 6-42 | ASSEMBLY, GRID CHOKE | 959-0152 | 6-12 |
| 6-43 | ASSEMBLY, SCREEN GRID AND CONTROL GRID FEEDTHRU | 959-0106 | 6-12 |
| 6-44 | ASSEMBLY, FILAMENT FEEDTHRU AND METER SHUNT | 959-0088 | 6-12 |
| 6-45 | ASSEMBLY, PA METERING CIRCUIT BOARD | 919-0062 | 6-12 |
| 6-46 | ASSEMBLY, OUTPUT LINE AND LOW-PASS FILTER | 959-0146 | 6-13 |
| 6-47 | ASSEMBLY, MODIFIED TRANSMISSION LINE ELBOW | 959-0113 | 6-13 |
| 6-48 | ASSEMBLY, LOW-PASS FILTER | 959-0114 | 6-13 |
| 6-49 | ASSEMBLY, OUTPUT ENCLOSURE DOOR | 959-0087 | 6-13 |
| 6-50 | ASSEMBLY, FILAMENT VOLTAGE REGULATOR | 909-0097/ 909-0097-300 | 6-13 |
| 6-51 | ASSEMBLY, THREE-PHASE AC VOLTMETER | 909-0098 | 6-14 |

TABLE 6-2. FM-5A TRANSMITTER ASSEMBLY - 909-5000-200, 909-5000-210, 909-5000-300,
909-5000-380, 909-5000-205, 909-5000-305

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|--------------------|--|------------------------|------|
| ---- | Assembly, Basic Rack | 959-0105 | 1 |
| ---- | Assembly, Intermediate Power Amplifier | 959-0131 | 1 |
| ---- | Assembly, R.F. Enclosure | 959-0106 | 1 |
| ---- | Assembly, Remote interface Ribbon Cable | 949-0037 | 1 |
| ---- | Assembly, Lower Control Panel | 959-0107/ -0107-001 | 1 |
| ---- | Assembly, Base Plate | 959-0120 | 1 |
| ---- | Assembly, Fan and Blower | 959-0108 | 1 |
| ---- | Assembly, Screen and Bias Supply | 959-0109 | 1 |
| ---- | Assembly, Meter Panel | 959-0110 | 1 |
| ---- | Assembly, High Voltage Rectifier, FM-5A | 959-0196 | 1 |
| ---- | Assembly, High Voltage Rectifier, FM-5AS | 959-0189 | 1 |
| ---- | Assembly, Contactor Panel | 959-0118 | 1 |
| ---- | Assembly, Transmitter Controller | 959-0046 | 1 |
| ---- | Assembly, Exciter, 19 inch (48.26 cm) Front Panel | 909-0093 | 1 |
| ---- | Assembly, Automatic Power Control | 959-0243 | 1 |
| ---- | Assembly, Remote Interface Panel | 959-0117 | 1 |
| ---- | Assembly, Meter Multiplier and Bleeder Panel | 959-0005 | 1 |
| ---- | Assembly, Ground Stick Hanger | 955-0038 | 1 |
| ---- | Assembly, Resistor Network for Automatic Power Control (listed in APC section) | 959-1000-007 | 1 |
| ---- | Assembly, Resistor Network for Automatic Power Control (listed in APC section) | 959-1000-008 | 1 |
| ---- | Assembly, Resistor Network for Automatic Power Control (listed in APC section) | 959-1000-009 | 1 |
| ---- | Assembly, Resistor Network for Automatic Power Control (listed in APC section) | 959-1000-010 | 1 |
| ---- | Assembly, 16-Pin DIP Jumper for Automatic Power Control (listed in APC section) | 959-1001 | 1 |
| ---- | Assembly, Resistor Network for Intermediate Power Amplifier (listed in IPA section) | 959-1000-001 | 1 |
| ---- | Assembly, Cables | 949-0031 | 1 |
| ----- FM-5A ----- | | | |
| ---- | Assembly, Cables, Miscellaneous | 949-0033 | 1 |
| ----- FM-5AS ----- | | | |
| ---- | Assembly, Cables, Miscellaneous | 949-0032 | 1 |
| ---- | Tube, 4CX3500A | 243-3500 | 1 |

TABLE 6-3. ASSEMBLY BASIC RACK - 959-0105

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|---|----------|------|
| S1,S3 | Interlock Switch, SPDY, 15A @ 125V ac, 0.5A @ 125V dc, 0.25A @ 250V dc | 346-3302 | 2 |
| S6 | Air Switch, 1823-2 Contacts: SPSY, 15A @ 120V to 480V ac Operating Range: 0.5 to 5.0 Inch/Water | 340-0011 | 1 |

TABLE 6-4. ASSEMBLY, REMOTE INTERFACE RIBBON CABLE - 949-0037

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|--------------------|----------|------|
| J1 | Receptacle, 26-Pin | 417-0047 | 1 |
| P1 | Plug, 25-Pin | 418-0609 | 1 |

TABLE 6-5. ASSEMBLY, REMOTE INTERFACE PANEL - 959-0117

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|--|------------|------|
| YB2 | 8-Pin Terminal Block | 412-0010-1 | 1 |
| YB3 | 26-Pin Terminal Block with ribbon cable plug | 412-0045 | 1 |
| ----- | Assembly, Fail-Safe Solenoid | 959-0083 | 1 |

TABLE 6-6. ASSEMBLY, FAIL-SAFE SOLENOID - 959-0083

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|--|----------|------|
| L5 | Solenoid, 230V ac, 50/60 Hz, DC Resistance: 360 Ohms \pm 10% | 281-0004 | 1 |
| S7 | Mechanical Switch Assembly, consisting of the following: | | |
| | Brass Side Terminals | 470-0181 | 2 |
| | Brass Center Disc | 423-1000 | 1 |
| YB11 | Barrier Strip, 2 Terminals | 412-0002 | 1 |
| ----- | Teflon Toggle Link | 425-0024 | 1 |
| ----- | Ceramic Insulator Stand-off | 441-2618 | 2 |

TABLE 6-7. ASSEMBLY, GROUND STICK HANGER - 955-0038

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|--|----------|------|
| S8 | Interlock Switch, SPDY, 11A @ 125V or 250V ac, 0.5A @ 125V dc, 0.25A @ 250V dc | 346-6100 | 1 |

TABLE 6-8. ASSEMBLY, CABLES - 949-0031

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|--------------------------------|----------|------|
| ----- | Cables, Interconnect | 949-0027 | 1 |
| ----- | Cables, Contactor Panel | 949-0061 | 1 |
| ----- | Cables, PA Metering | 949-0068 | 1 |
| ----- | Cables, Transmitter Controller | 949-0069 | 1 |
| ----- | Cables, AC Power | 949-0135 | 1 |
| ----- | Cables, Screen Bias Panel | 949-0064 | 1 |

TABLE 6-9. CABLE, INTERCONNECT - 949-0027

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|---|--|----------|------|
| J1A/B | Bulkhead Disconnect Type N to BNC (PA Input) | 417-0076 | 1 |
| P1A,P13 | Plug, Type N for RG-142 cable (IPA Output to PA Input) | 418-0031 | 2 |
| P1B | Plug, BNC for RG-142 cable (PA Input) | 417-0095 | 1 |
| EX OPT; LPF FWD;RFL; IPA P10; APC P9,P10 | Plug, BNC for RG-58 cable | 417-0205 | 6 |

TABLE 6-10. CABLES, CONTACTOR PANEL - 949-0061

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|----------------------------------|----------|------|
| P1,P2 | Plug, 6-Pin (on Blower and Fans) | 418-0670 | 2 |
| ----- | Pins for P1,P2 | 417-0053 | 9 |

TABLE 6-11. CABLES, PA MEYERING - 949-0068

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|---|----------|------|
| P1 | Plug, 12-Pin (on PA Metering Circuit Board) | 417-1271 | 1 |
| ---- | Pins for P1 | 417-0053 | 12 |

TABLE 6-12. CABLES, TRANSMITTER CONTROLLER - 949-0069

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------------|--|----------|------|
| P2,P3, P8,P9 | Plug, 25-Pin (on Transmitter Controller APC and IPA) | 418-3219 | 4 |
| P1 | Plug, 4-Pin (Temperature Sensor Circuit Board) | 418-0240 | 1 |
| P2 | Plug, 6-Pin (on PA Metering Circuit Board) | 418-0670 | 1 |
| ---- | Pins for P2 | 417-0053 | 6 |

TABLE 6-13. CABLES, AC POWER - 949-0135

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|-----------------------|----------|------|
| ---- | AC Line Cord and Plug | 682-0001 | 4 |

TABLE 6-14. ASSEMBLY BASE PLATE - 959-0120

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|--------------------|---|--------------|--------------|
| ----- FM-5A ----- | | | |
| C5 | Capacitor, Electrolytic, 4 uF, 8 kV, Non-PCB oil/paper | 047-0004 | 1 |
| L2 | Choke, 6.8 H, 1.8A Continuous | 361-0001 | 1 |
| Y3 | Transformer, Plate 3 Ø, 50/60 Hz Primary: 208/240V ±11V ac, Delta Connected; 346V to 433, Wye Connected Secondary: 2300V @ 1.4 Amperes Continuous, Wye Connected | 376-0115 | 1 |
| Y5 | Transformer, Filament Primary: 208/240V ±11V ac, 50/60 Hz, Single Phase Secondary: 5.5V ac @ 90 Ohms Continuous, Current Limiting | 373-0005 | 1 |
| YB1 | Terminal Block, 3 Terminals, 600V @ 100 Amperes | 412-0041 | 1 |
| ---- | End Barrier | 412-0043 | 1 |
| ---- | End Clamp | 412-0042-001 | 2 |
| ---- | Mounting Channel | 412-0044 | 0.23 inch |
| ----- FM-5AS ----- | | | |
| C2,C3 | Capacitor, Polypropylene film, 0.97 uF ±5%, 2500 VRMS @ 120 Hz, Non-Polarized | 047-0006 | 2 |
| C4,C5 | Capacitor, Electrolytic, 4 uF, 8 kV, Non-PCB oil/paper | 047-0004 | 2 |
| L2 | Tuned Reactor, 5.06/3.5 H ±5%, 21 Ohms dc Resistance, 1.4 Amperes continuous | 360-0069 | 1 |
| L3 | Choke, 3.5 H, 20 Ohms dc Resistance, 1.4 Amperes continuous | 360-0067 | 1 |
| Y3 | Transformer, Plate, Special construction for resonant choke input supply Primary: 208/240V ±12V ac, 50/60 Hz, Single Phase Secondary: 6200V/5900V @ 1.4 Amperes Continuous, 20 Ohms dc Resistance | 370-0091 | 1 |
| Y5 | Transformer, Filament Primary: 208/240V ±11V ac, 50/60 Hz, Single Phase Secondary: 5.5V ac @ 90 Ohms Continuous, Current Limiting | 373-0005 | 1 |
| YB1 | Terminal Block, 3 Terminals, 600V @ 100 Amperes | 412-0041 | 1 |
| ---- | End Barrier | 412-0043 | 1 |
| ---- | End Clamp | 412-0042-001 | 2 |
| ---- | Mounting Channel | 412-0044 | 0.23 inch |

TABLE 6-15. ASSEMBLY, HIGH VOLTAGE RECTIFIER, FM-5A - 959-0196

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-------------------|---|----------|------|
| D5 THRU D10 | Encapsulated high voltage diode assembly PIV: 18 kV $V_{F_{MAX}} = 21.0V$ dc @ 1.85 Amperes Configuration | 230-0009 | 6 |
| E105 THRU E110 | Spark Gap, 14,000 VDC \pm 2000 VDC | 140-0019 | 6 |

TABLE 6-16. ASSEMBLY, HIGH VOLTAGE RECTIFIER, FM-5AS - 959-0189

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-------------------------|---|----------|------|
| D5,D6,D8, D9 | Encapsulated high voltage diode assembly PIV: 18 kV $V_{F_{MAX}} = 21.0V$ dc @ 1.85 Amperes Configuration | 230-0009 | 4 |
| E105,E106, E108,E109 | Spark Gap, 14,000 VDC \pm 2000 VDC | 140-0019 | 4 |

TABLE 6-17. ASSEMBLY, FAN AND BLOWER - 959-0108

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|---|----------|------|
| B1 | Blower, Centrifugal, 600 ft ³ /min Motor: 230V ac, 2.1 Ampere, 50/60 Hz, 3100 R/M, 1/3 hp | 380-0005 | 1 |
| B2,B3 | Fan, 6 inch (15.24 cm), 250 ft ³ /min, 220V ac, 50/60 Hz, 40 Watt | 380-7650 | 2 |
| J1,J2 | Receptacle, 6-Pin | 418-0006 | 2 |
| ---- | Pins for J1 and J2 | 417-0036 | 9 |

TABLE 6-18. ASSEMBLY, CONTACTOR PANEL - 959-0118
(Sheet 1 of 2)

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|--------------------|--|----------|------|
| K1,K2 | Assembly, Semi-Solid State Relay | 919-0096 | 2 |
| K3 | Contactors, Coil: 208-240V, 60 Hz or 208-220V, 50 Hz Contacts: 3 Sets SPST, 25 Amperes, 600V | 341-0033 | 1 |
| ----- FM-5A ----- | | | |
| K4 | Contactors, Coil: 110/230V, 50/60 Hz Contacts: 3 Sets SPST, 40 Amperes, 600V | 341-0023 | 1 |
| ----- FM-5AS ----- | | | |
| K4 | Contactors, Coil: 110/230V, 50/60 Hz Contacts: 3 Sets SPST, 60 Amperes, 600V | 341-0049 | 1 |
| K5,K6 | Assembly, Semi-Solid State Relay | 919-0096 | 2 |
| K7 | Contactors, Coil: 208-240V, 60 Hz or 208-220V, 50 Hz Contacts: 3 Sets SPST, 25 Amperes, 600V | 341-0033 | 1 |

TABLE 6-18. ASSEMBLY, CONTACTOR PANEL - 959-0118
(Sheet 2 of 2)

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|--------------------|------------------------------------|----------|------|
| ----- FM-5A ----- | | | |
| R1,R2,R3 | Resistor, 5 Ohm \pm 5%, 25W, W/W | 130-5013 | 3 |
| ----- FM-5AS ----- | | | |
| R1,R2 | Resistor, 5 Ohm \pm 5%, 25W, W/W | 130-5013 | 2 |
| YB6 THRU YB8 | Barrier Strip, 7 Terminal | 412-0022 | 3 |
| YB12 | Barrier Strip, 4 Terminal | 412-0011 | 1 |
| ---- | Assembly, Powerstat | 959-0121 | 1 |

TABLE 6-19. SEMI-SOLID STATE RELAY ASSEMBLY - 919-0096

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|------------|---|----------|------|
| C1 | Capacitor, Ceramic Disc, 0.001 μ F, 1kV | 002-1034 | 1 |
| C2 | Capacitor, Electrolytic, 100 μ F, 35V | 020-1083 | 1 |
| C3 | Capacitor, Ceramic Disc, 0.03 μ F, 300V | 000-1051 | 1 |
| D1 | Diode, 1N4005, Silicon, 600V @ 1 Ampere | 203-4005 | 1 |
| D2 | Diode, Zener, 1N5359, 24V \pm 10%, 5W | 200-5359 | 1 |
| D3,D4 | Diode, 1N4005, Silicon, 600V @ 1 Ampere | 203-4005 | 2 |
| E1 THRU E5 | Terminal, Male, 0.25 Tab | 410-0064 | 5 |
| F1 | Fuse, PCB Mount, 250V, 1/2 Ampere | 330-0052 | 1 |
| K1 | Relay, Printed Circuit Board Mount Coil: 24V dc, 660 Ohms \pm 10% Contacts: SPST-NO, 0.5 to 15A @ 12 to 240V ac Resistance | 270-0054 | 1 |
| MOV1 | Metal Oxide Varistor, V250LA15A, 250V ac RMS | 140-0008 | 1 |
| R1 | Resistor, 4 k Ohm \pm 5%, 10W | 130-4044 | 1 |
| R2 | Resistor, 560 Ohm \pm 5%, 1/2W | 110-5633 | 1 |
| R3 | Resistor, 820 Ohm \pm 5%, 1/2W | 110-8233 | 1 |
| U1 | Integrated Circuit, 4N33, Optical Isolator, NPN Photo Transistor/Infared Emitting Diode Type, 1500V Isolation, Response: 30 kHz Maximum, Current: 50 mA Maximum, 6-Pin DIP | 229-0033 | 1 |
| XU1 | Socket, 6-Pin DIP | 417-0600 | 1 |
| ---- | Blank Circuit Board | 519-0096 | 1 |

TABLE 6-20. SUB-ASSEMBLY, CONTACTOR PANEL - 959-0111

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|------------------------------------|----------|------|
| R3 | Resistor, 5 Ohm \pm 5%, 25W, W/W | 130-5013 | 1 |

TABLE 6-21. ASSEMBLY, POWERSTAT - 959-0121

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|--|------------|------|
| B1 | Motor and Gearhead Assembly, 24V dc @ 235 mA, 9.1 r/min, Torque: 300 oz/in. | 381-0001 | 1 |
| D1,D2 | Diode, 1N4005, Silicon, 600V, 1 Ampere | 203-4005 | 2 |
| S4,S5 | Microswitch, Modified, SPDY, 125V @ 4 Amperes Inductive | 346-6100-1 | 2 |
| T1 | Autotransformer, Variable, 240V, 50/60 Hz, 0.7 Ampere Output | 374-0003 | 1 |
| YB5 | Barrier Strip, 4 Terminal | 412-0011 | 1 |

TABLE 6-22. ASSEMBLY, SCREEN AND BIAS SUPPLY - 959-0109

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|---|--------------|------|
| C6 | Capacitor, Electrolytic, 10 uF, 2 kV, Non-PCB oil filled | 047-0002 | 1 |
| C9 | Capacitor, Electrolytic, 80 uF, 450V | 028-8076 | 1 |
| D3,D4 | Diode Bridge, Silicon, 4 kV, 0.15 Ampere | 239-0440 | 2 |
| L1,L4 | Choke, 10 Henrys, 0.4 Amperes, 2500 Volt Insulation, 92 Ohm dc Resistance | 377-0002 | 2 |
| R8 | Resistor, 10 Ohm, 100W, W/W | 132-1053 | 1 |
| R9 | Resistor, 7.5 k Ohm, 50W, W/W | 180-0578 | 1 |
| R10 | Rheostat, 50 Ohm $\pm 10\%$, 25W, W/W | 195-0149-001 | 1 |
| T2 | Transformer, Screen Primary: 208/240V $\pm 11V$ ac, 50/60 Hz, Single Phase Secondary: 1100V @ 0.15 Amperes Continuous, 15 Ohm dc Resistance | 370-0009 | 1 |
| T4 | Transformer, Bias Primary: 208/240V $\pm 11V$ ac, 50/60 Hz, Single Phase Secondary: 1: 225V @ 0.2 Amperes Continuous 2: 253V @ 0.2 Amperes Continuous 3: 281V @ 0.2 Amperes Continuous 4: 310V @ 0.2 Amperes Continuous 1500 Volt Insulation, 70 Ohms dc Resistance | 370-0006 | 1 |
| YB9 | Barrier Strip, 6 Terminals | 412-0008 | 1 |
| YB10 | Barrier Strip, 5 Terminals | 412-0005-1 | 1 |
| ---- | Assembly, Hum Null | 919-0063 | 1 |
| ---- | Ceramic Stand-off | 441-9234 | 2 |

TABLE 6-23. ASSEMBLY, HUM NULL - 919-0063

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|---|----------|------|
| C1 | Capacitor, Electrolytic, 470 uF, 50V | 024-4783 | 1 |
| D1,D2 | Diode, 1N4005, Silicon, 600V, 1 Ampere | 203-4005 | 1 |
| F1,F2 | Fuse, AGC3, 250V, 1/2 Ampere | 330-0050 | 2 |
| T1 | Transformer, Circuit Board Mount Primary: Dual 115V @ 50/60 Hz, Single Phase Secondary: Dual 6.3V, 1 Ampere | 370-0512 | 1 |
| YB1 | Barrier Strip, 4 Terminal | 411-0815 | 1 |
| ---- | Blank Circuit Board | 519-0063 | 1 |

TABLE 6-24. ASSEMBLY, METER MULTIPLIER AND BLEEDER PANEL - 959-0005

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|--|----------|------|
| R11 | Resistor, 22 Ohm $\pm 20\%$, 150W, Non-Inductive | 139-0220 | 1 |
| R12,R13 | Resistor, 100 k Ohm $\pm 5\%$, 100W, W/W 132-1063 | 2 | 1 |
| ---- | Ceramic Stand-off | 441-0018 | 1 |
| ---- | Ceramic Stand-off | 441-9234 | 6 |
| ---- | Assembly, Meter Multiplier Circuit Board, FM-5A | 919-0200 | 1 |
| ---- | Assembly, Meter Multiplier Circuit Board, FM-5AS | 919-0079 | 1 |

TABLE 6-25. ASSEMBLY, METER MULTIPLIER CIRCUIT BOARD, FM-5A - 919-0200

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|------------|--|----------|------|
| C1 | Capacitor, Mica, 390 pF $\pm 5\%$, 100V | 042-3922 | 1 |
| D1 | Diode, Zener, 1N4739A, 9.1V $\pm 5\%$, 1W | 200-0009 | 1 |
| R1 THRU R6 | Resistor, 1 Meg Ohm $\pm 1\%$, 2W | 140-0003 | 1 |
| R7 | Resistor, 4.99 k Ohm $\pm 1\%$, 1/4W | 100-5041 | 1 |
| ---- | Blank Circuit Board | 519-0200 | 1 |

TABLE 6-26. ASSEMBLY, MEYER MULTIPLIER CIRCUIT BOARD, FM-5AS - 919-0079

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-------------|--|----------|------|
| C1 | Capacitor, Mica, 390 pF $\pm 5\%$, 100V | 042-3922 | 1 |
| D1 | Diode, Zener, 1N4739A, 9.1V $\pm 5\%$, 1W | 200-0009 | 1 |
| R1 THRU R10 | Resistor, 1 Meg Ohm $\pm 1\%$, 2W | 140-0003 | 10 |
| R11 | Resistor, 4.99 k Ohm $\pm 1\%$, 1/4W | 100-5041 | 1 |
| ---- | Blank Circuit Board | 519-0079 | 1 |

TABLE 6-27. ASSEMBLY, MEYER PANEL - 959-0110

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|--------------------|--|------------|------|
| C1 | Assembly, Capacitor | 955-0033 | 1 |
| C10 | Assembly, Capacitor | 959-0144 | 1 |
| C11 THRU C16 | Assembly, Capacitor | 955-0033 | 6 |
| M1 | OUTPUT POWER Meter, 4.5 inch (11.4 cm) Taut Band Type, FS = 200 μ A $\pm 2\%$, 208 Ohm Movement | 310-0004-2 | 1 |
| M3 | FILAMENT VOLTAGE Meter, 3.5 inch (8.89 cm), Iron Vane Type, \emptyset -10V AC $\pm 3\%$ Movement | 310-0024 | 1 |
| M4 | SCREEN VOLTAGE Meter, 1.5 inch (3.8 cm), Taut Band Type, FS = 1 mA $\pm 2\%$, 15 Ohm Movement | 317-0002-1 | 1 |
| M5 | SCREEN CURRENT Meter, 1.5 inch (3.8 cm) Taut Band Type, FS = 200 mA $\pm 2\%$, 0.25 Ohm Movement | 310-0015 | 1 |
| M6 | GRID VOLTAGE Meter, 1.5 inch (3.8 cm), Taut Band Type, FS = 1 mA $\pm 2\%$, 15 Ohm Movement | 317-0008 | 1 |
| M7 | GRID CURRENT Meter, 1.5 inch (3.8 cm), Taut Band Type, FS = 100 mA $\pm 2\%$, 0.5 Ohm Movement | 310-0014 | 1 |
| M8 | PLATE CURRENT Meter, 4.5 inch (11.4 cm), Taut Band Type, FS = 0.75V, 1000 Ohm/Volt Sensitivity | 310-0016 | 1 |
| ----- FM-5A ----- | | | |
| M9 | PLATE VOLTAGE Meter, 4 1/2 inch (11.4 cm), Taut Band Type, FS = 1 mA $\pm 1\%$, 15 Ohm Movement | 317-0007 | 1 |
| ----- FM-5AS ----- | | | |
| M9 | PLATE VOLTAGE Meter, 4 1/2 inch (11.4 cm), Taut Band Type, FS = 1 mA $\pm 1\%$, 15 Ohm Movement | 317-0001-1 | 1 |
| ---- | OUTPUT TUNING and OUTPUT LOADING Cyclometer | 290-0001 | 2 |
| ---- | OUTPUT TUNING and OUTPUT LOADING Knob, with Crank | 482-0007 | 2 |

TABLE 6-28. ASSEMBLY, CAPACITOR - 959-0144

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|---|----------|------|
| ---- | Capacitor, Ceramic, 0.001 μ F, 1 kV | 002-1034 | 1 |

TABLE 6-29. ASSEMBLY, CAPACITOR - 955-0033

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|---|----------|------|
| ---- | Capacitor, Ceramic, 0.001 μ F, 1 kV | 002-1034 | 1 |

TABLE 6-30. ASSEMBLY, LOWER CONTROL PANEL - 959-0107/-0107-001

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|---|--------------|------|
| FM-5A | | | |
| CB1 | AC POWER Circuit Breaker, 3-Pole, 240 Volt, 40 Amperes | 341-0027 | 1 |
| FM-5AS | | | |
| CB1 | AC POWER Circuit Breaker, 2-Pole, 240 Volt, 60 Amperes | 341-0050 | 1 |
| CB2 | BLOWER Circuit Breaker, 2-Pole, 250 Volt, 5 Amperes | 341-0010 | 1 |
| CB3 | SCREEN Circuit Breaker, 2-Pole, 250 Volt, 1 Ampere | 341-0008 | 1 |
| CB4 | DRIVER Circuit Breaker, 2-Pole, 250 Volt, 7 Amperes | 341-0025 | 1 |
| CB5* | FILAMENT Circuit Breaker, 2-Pole, 250 Volt, 5 Amperes | 341-0010 | 1 |
| M2 | FILAMENT TIME Meter, \emptyset - 99, 999.9 Hour, Non-Resettable, 60 Hz, 230 Volt, 3.5 inch (8.89 cm) | 310-0000 | 1 |
| ---- | Alternate FILAMENT TIME Meter, \emptyset - 99, 999.9 Hour Non-Resettable, 50 Hz, 230 Volt, 3.5 inch (8.89 cm) | 310-0000-001 | 1 |
| R4 | FILAMENT ADJUST Rheostat, 7.5 Ohm \pm 10%, 100W, W/W | 195-0445-001 | 1 |
| ---- | INPUT TUNING Cyclometer | 290-0001 | 1 |
| ---- | INPUT TUNING Knob, with Crank | 482-0007 | 1 |

* (Not applicable if transmitter is equipped with filament voltage regulator option 909-0097/-300. Refer to Table 6-50. Assembly, Filament Voltage Regulator For the Applicable Circuit Breaker).

TABLE 6-31. ASSEMBLY, RF ENCLOSURE - 959-0106

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|--|----------|------|
| 1 | Microswitch, SPDT, Roller Activated (PA Interlock) | 346-3300 | 1 |
| 1 | Assembly, Output Tuning Line | 959-0099 | 1 |
| 1 | Assembly, PA Chimney | 959-0148 | 1 |
| 1 | Assembly, HV Feedthru Capacitor | 959-0184 | 1 |
| 1 | Assembly, Output Loop | 959-0084 | 1 |
| 1 | Assembly, Second Harmonic Suppressor | 959-0123 | 1 |
| 1 | Assembly, Tube Socket and Input Tuning | 959-0151 | 1 |
| 1 | Assembly, Filament Feedthru and Meter Shunt | 959-0088 | 1 |
| 1 | Assembly, Output Line and Low-Pass Filter | 959-0146 | 1 |
| 1 | Assembly, Output Enclosure Door | 959-0087 | 1 |

TABLE 6-32. ASSEMBLY, OUTPUT TUNING LINE - 959-0099

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|-----------------------|--------------|------|
| ---- | Output Tuning Bellows | 463-0043 | 1 |
| ---- | Right Angle Drive | 448-0002-001 | 1 |

TABLE 6-33. ASSEMBLY, PA CHIMNEY - 959-0148

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|----------------------------------|----------|------|
| J3 | Receptacle, Binding Post, Banana | 417-0074 | 1 |

TABLE 6-34. ASSEMBLY, HV FEEDTHRU CAPACITOR - 959-0184

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|---|----------|------|
| C6 | Capacitor, HV Feedthru Assembly: Kapton Dielectric | 407-0097 | 1 |
| ---- | Plate Choke Coil Assembly | 959-0149 | 1 |

TABLE 6-35. ASSEMBLY, PLATE CHOKE COIL - 959-0149

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|-------------------|----------|------|
| P3 | Plug, Banana | 417-0007 | 1 |
| RFC1 | Coil, Plate Choke | 360-0028 | 1 |

TABLE 6-36. ASSEMBLY, OUTPUT LOOP - 959-0084

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|---------------------------------------|--------------|------|
| ---- | Strap, Output Loop | 463-0038 | 6 |
| ---- | Teflon Shoulder Washer | 423-0027 | 1 |
| ---- | Bullet Output Connector | 427-0009 | 1 |
| ---- | Screw, 1/4-20 X 2 inch, Silver Plated | 420-1516-001 | 1 |

TABLE 6-37. ASSEMBLY, SECOND HARMONIC SUPPRESSOR - 959-0123

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|------------------|----------|------|
| C9 | Capacitor, Plate | 474-0187 | 1 |
| L6 | Strap | 463-0047 | 1 |
| ---- | Shaft, Insulator | 446-0047 | 1 |
| ---- | Teflon Sleeve | 441-0067 | 1 |

TABLE 6-38. ASSEMBLY, TUBE SOCKET AND INPUT TUNING - 959-0151

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|---|--|----------|------|
| C7,C8 | Capacitor, Kapton, 1000 pF, 2 kV, Screen Bypass | 519-0037 | 2 |
| C10 | Capacitor, Kapton, 2000 pF, 1.5 kV, Grid Blocking | 519-0038 | 1 |
| C12,C15 | Capacitor, Ceramic, 500 pF \pm 20%, 5 kV | 008-5024 | 2 |
| C16,C17 | Capacitor, Kapton, 1000 pF, 2 kV, Screen Bypass | 519-0037 | 2 |
| L7,L7A, L8,L8A, L10,L10A, L11,L11A | Strap, Neutralization | 463-0040 | 8 |
| L12,L14 | INPUT TUNING Fingerstock | 469-0004 | 2 |
| R1 | Resistor, 250 Ohm \pm 10%, 50W, Non-Inductive | 139-7532 | 1 |
| XU1 | Tube Socket, 4CX3500A | 417-0350 | 1 |
| ---- | Ceramic Stand-off | 441-9234 | 1 |
| ---- | Assembly, Input Matching Circuit Board | 919-0064 | 1 |
| ---- | Assembly, Spark Gap | 959-0161 | 1 |
| ---- | Assembly, Screen Choke | 959-0166 | 1 |
| ---- | Assembly, Grid Choke | 959-0152 | 1 |
| ---- | Assembly, Cable, Screen Grid and Control Grid Feedthru | 959-0106 | 1 |

TABLE 6-39. ASSEMBLY, INPUT MATCHING CIRCUIT BOARD - 919-0064

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|---------------------------|--------------|------|
| J2 | Receptacle, BNC | 417-0014 | 1 |
| ---- | Inductance Circuit Board | 519-0064 | 1 |
| ---- | Capacitance Circuit Board | 519-0064-001 | 1 |

TABLE 6-40. ASSEMBLY, SPARK GAP - 959-0161

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|--------------------------------------|----------|------|
| E1,E2 | Spark Gap, 630V \pm 15% Break-Down | 140-0004 | 2 |
| ---- | Insulating stand-off | 413-2013 | 1 |

TABLE 6-41. ASSEMBLY, SCREEN CHOKE - 959-0166

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|--------------------------------------|----------|------|
| RFC2 | Choke, 80 - 200 mHz, 1100 mA Maximum | 360-0144 | 1 |

TABLE 6-42. ASSEMBLY, GRID CHOKE - 959-0152

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|--------------------------------------|----------|------|
| RFC3 | Choke, 80 - 200 mHz, 1100 mA Maximum | 360-0144 | 1 |

TABLE 6-43. ASSEMBLY, SCREEN GRID AND CONTROL GRID FEEDTHRU - 959-0106

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|---|----------|------|
| FL1,FL2 | Feedthru - Grid and Screen, 1200 pF, 2500V, 25 Ampere Maximum | 339-0012 | 1 |

TABLE 6-44. ASSEMBLY, FILAMENT FEEDTHRU AND MEYER SHUNT - 959-0088

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|---|--------------|------|
| C13,C14 | Capacitor, 700 pF, 1.5 kV, Filament Feedthru: | | |
| | Kapton Dielectric | 519-0039 | 4 |
| | Teflon Spacer | 441-0054-001 | 2 |
| ---- | Assembly, PA Metering Circuit Board | 919-0062 | 1 |

TABLE 6-45. ASSEMBLY, PA METERING CIRCUIT BOARD - 919-0062
(Sheet 1 of 2)

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|------------|--|----------|------|
| C1 THRU C6 | Capacitor, Mica, 390 pF \pm 5%, 100V | 042-3922 | 6 |
| D1 THRU D5 | Diode, Zener, 1N4739A, 9.1V \pm 5%, 1W | 200-0009 | 5 |
| F1,F2 | Fuse, AGC3, 250V, 1 Ampere | 330-0100 | 2 |
| F3 | Fuseable Link, 0.028 in (0.528 cm) of 28 AWG Silver-plated copper wire | 630-2806 | 1 |
| R1 THRU R3 | Resistor, 500 k Ohm \pm 1%, 2W | 140-0005 | 3 |
| R4,R5 | Resistor, 1 Ohm \pm 1%, 5W, W/W | 132-1111 | 2 |
| R6,R7 | Resistor, 5.1 k Ohm \pm 5%, 1/4W | 100-5143 | 2 |

TABLE 6-45. ASSEMBLY, PA MEYERING CIRCUIT BOARD - 919-0062
(Sheet 2 of 2)

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------------|-------------------------------------|----------|------|
| R8 | Resistor, 10 Ohm $\pm 5\%$, 1/2W | 110-1023 | 1 |
| R9 | Resistor, 22 Ohm $\pm 5\%$, 2W | 130-2223 | 1 |
| R10,R11 | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 2 |
| R12 | Resistor, 100 Ohm $\pm 5\%$, 1/2W | 110-1033 | 1 |
| R13 | Resistor, 47 Ohm $\pm 5\%$, 1/2W | 110-4723 | 1 |
| R14 | Resistor, 100 Ohm $\pm 5\%$, 1/4W | 100-1033 | 1 |
| R15 THRU R17 | Resistor, 1 k Ohm $\pm 5\%$, 1/4W | 100-1043 | 3 |
| R18 | Resistor, 100 Ohm $\pm 5\%$, 1/4W | 100-1033 | 1 |

TABLE 6-46. ASSEMBLY, OUTPUT LINE AND LOW-PASS FILTER - 959-0146

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|--|----------|------|
| ---- | Assembly, Modified Transmission Line Elbow | 959-0113 | 1 |
| ---- | Assembly, Low-Pass Filter | 959-0114 | 1 |

TABLE 6-47. ASSEMBLY, MODIFIED TRANSMISSION LINE ELBOW - 959-0113

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|-----------------|----------|------|
| J2 | Receptacle, BNC | 417-0203 | 1 |

TABLE 6-48. ASSEMBLY, LOW-PASS FILTER - 959-0114

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|-----------------------|----------|------|
| ---- | Low-Pass filter, 5 kW | 339-0013 | 1 |

TABLE 6-49. ASSEMBLY, OUTPUT ENCLOSURE DOOR - 959-0087

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|---|----------|------|
| ---- | Fingerstock, Horizontal | 469-0016 | 2 |
| ---- | Fingerstock, Vertical | 469-0017 | 2 |
| ---- | Pop Rivets, Closed End, 0.125 inch diameter X 0.316 inches long | 421-1113 | 32 |

TABLE 6-50. ASSEMBLY, FILAMENT VOLTAGE REGULATOR - 909-0097/909-0097-300

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|---|--------------|------|
| CB5 | FILAMENT Circuit Breaker, 2-Pole, 250V, 10 Amperes | 340-0030 | 1 |
| T1 | Transformer Filament Voltage Regulator, 60 Hz INPUT: 235V ac $\pm 20\%$, -10% OUTPUT: 240V ac $\pm 1\%$ @ 750VA | 370-0015 | 1 |
| ---- | Alternate transformer for 50 Hz | 370-0015-001 | 1 |

TABLE 6-51. THREE-PHASE AC VOLTMETER - 909-0098

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------------|--|----------|------|
| F1 THRU F3 | Fuse, AGC, 1/2 Ampere | 330-0050 | 3 |
| M1 | Meter, 3.5 Inch (8.9 cm) Iron Vane Type, FS= 300V ac +2%, 60 k Ohms Internal Resistance | 310-0032 | 1 |
| S1 | Switch, KS-46B Square D | 341-0021 | 1 |
| | Contactor: KA-1 Square D | 341-0020 | 4 |
| | Cam Assembly: Type "F" Square D | 341-0019 | 1 |
| XF1 THRU XF3 | Holder, Fuse, AGC | 415-2012 | 3 |


SECTION VII
DRAWINGS

7-1. INTRODUCTION.

7-2. This section provides assembly drawings, schematic diagrams, and wire lists as indexed below applicable to the overall FM-5A Transmitter.

| <u>FIGURE</u> | <u>TITLE</u> | <u>NUMBER</u> |
|---------------|--|-------------------------|
| 7-1 | OVERALL SCHEMATIC, FM-5A TRANSMITTER | DS909-5000 |
| 7-2 | OVERALL SCHEMATIC, FM-5AS TRANSMITTER | DS909-5000-205/ -305 |
| 7-3 | WIRING DIAGRAM, CONTACTOR PANEL, FM-5A | DW959-0111 |
| 7-4 | WIRING DIAGRAM, CONTACTOR PANEL, FM-5AS | DW959-0118 |
| 7-5 | WIRING DIAGRAM, LOWER CONTROL PANEL, FM-5A | CW959-0107 |
| 7-6 | WIRING DIAGRAM, LOWER CONTROL PANEL, FM-5AS | CW959-0134/ -001 |
| 7-7 | WIRING DIAGRAM, BASE PLATE, FM-5A | DA/W959-0120 |
| 7-8 | WIRING DIAGRAM, BASE PLATE, FM-5AS | DW959-0119 |
| 7-9 | WIRING DIAGRAM, SCREEN BIAS POWER SUPPLY PANEL | DW959-0109 |
| 7-10 | SCHEMATIC, HUM NULL CIRCUIT BOARD | BS919-0063 |
| 7-11 | ASSEMBLY, HUM NULL CIRCUIT BOARD | BA919-0063 |
| 7-12 | WIRING DIAGRAM, HIGH VOLTAGE BLEEDER PANEL | 597-0032-26 |
| 7-13 | SCHEMATIC, PLATE METER MULTIPLIER CIRCUIT BOARD, FM-5A | SB919-0200 |
| 7-14 | ASSEMBLY, PLATE METER MULTIPLIER CIRCUIT BOARD, FM-5A | AB919-0200 |
| 7-15 | SCHEMATIC, PLATE METER MULTIPLIER CIRCUIT BOARD, FM-5AS | SB919-0079 |
| 7-16 | ASSEMBLY, PLATE METER MULTIPLIER CIRCUIT BOARD, FM-5AS | AB919-0079 |
| 7-17 | WIRING DIAGRAM, PLATE METER MULTIPLIER CIRCUIT BOARD | 597-0032-27 |
| 7-18 | SCHEMATIC, PA RF ENCLOSURE | SC959-0106 |
| 7-19 | SCHEMATIC, PA METERING CIRCUIT BOARD | SC919-0062 |

| | | |
|------|--|---------------------|
| 7-20 | ASSEMBLY, PA METERING CIRCUIT BOARD | AC919-0062 |
| 7-21 | WIRING DIAGRAM, PA METERING CIRCUIT BOARD | WC919-0062 |
| 7-22 | SCHEMATIC DIAGRAM, SEMI-SOLID STATE RELAY | SB919-0096 |
| 7-23 | ASSEMBLY DIAGRAM, SEMI-SOLID STATE RELAY | AC919-0096 |
| 7-24 | WIRING DIAGRAM, FILAMENT VOLTAGE REGULATOR | WA909-0097/ -300 |
| 7-25 | SCHEMATIC DIAGRAM, THREE-PHASE AC VOLTMETER | SC909-0098 |

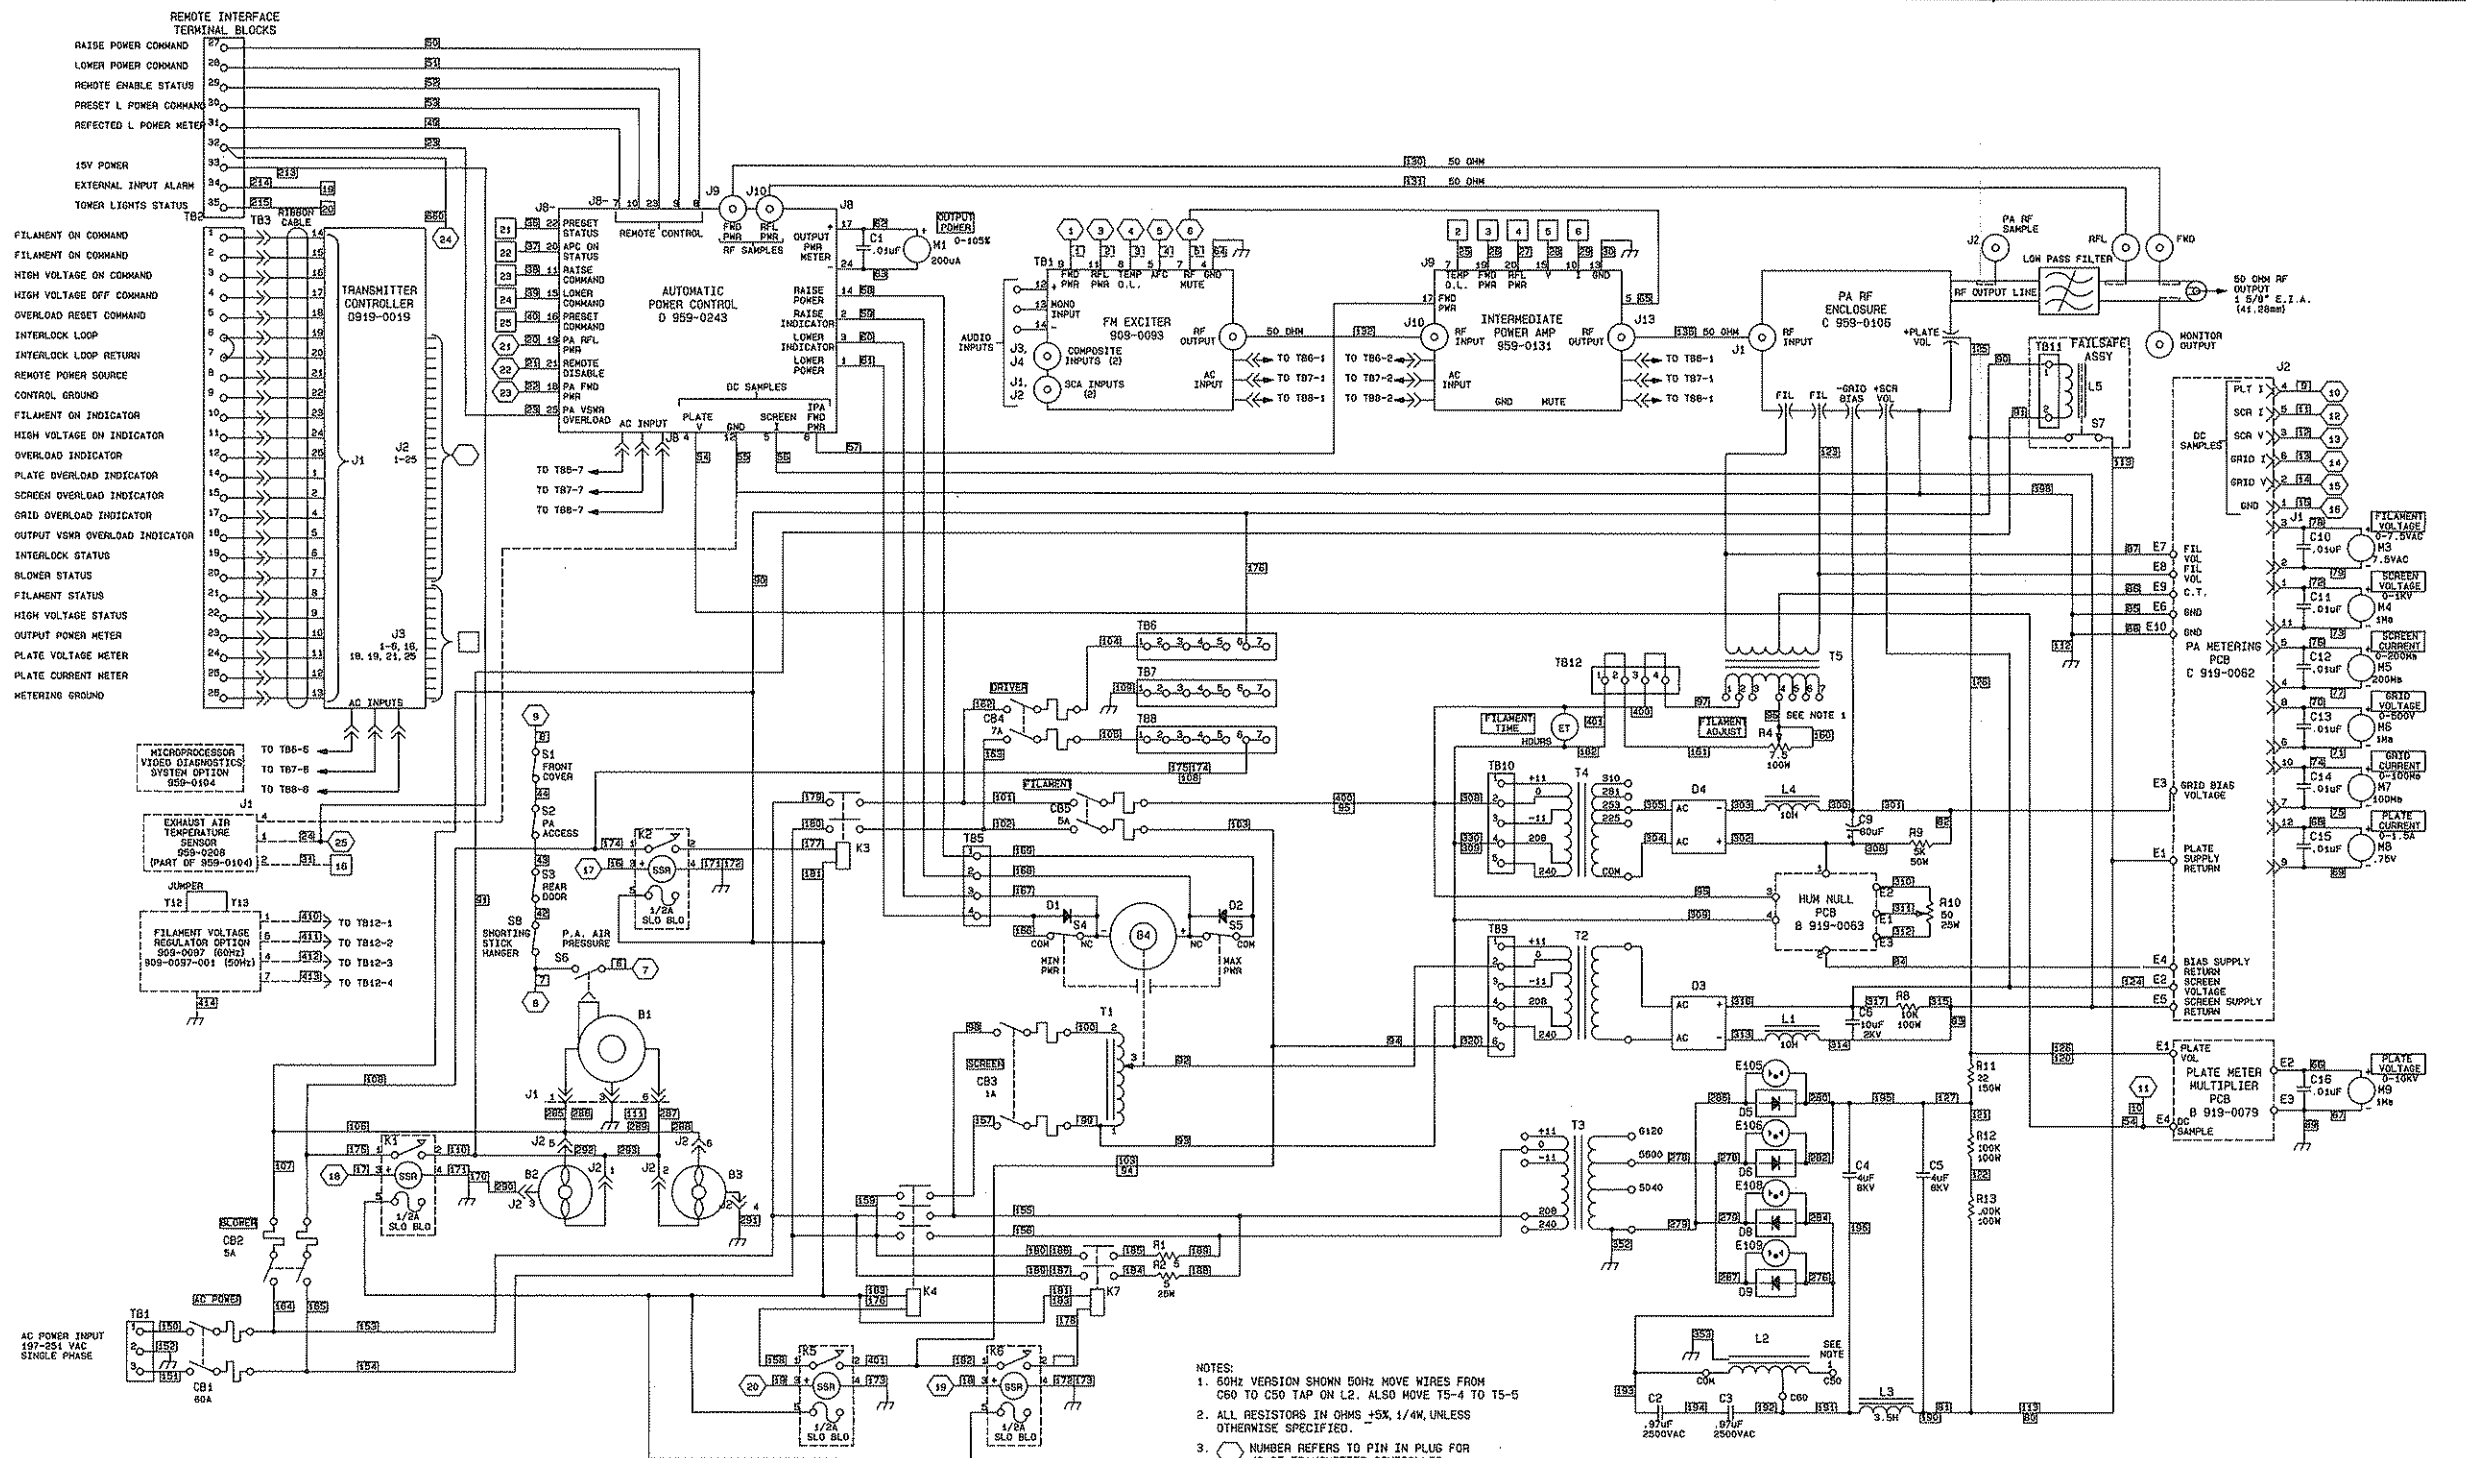


- REMOTE INTERFACE TERMINAL BLOCKS**
- 27 RAISE POWER COMMAND
 - 28 LOWER POWER COMMAND
 - 29 REMOTE ENABLE STATUS
 - 30 PRESET L POWER COMMAND
 - 31 REFLECTED L POWER METER
 - 32 15V POWER
 - 33 EXTERNAL INPUT ALARM
 - 34 TOWER LIGHTS STATUS
- TRANSMITTER CONTROLLER 0919-0019**
- 1 FILAMENT ON COMMAND
 - 2 FILAMENT ON COMMAND
 - 3 HIGH VOLTAGE ON COMMAND
 - 4 HIGH VOLTAGE OFF COMMAND
 - 5 OVERLOAD RESET COMMAND
 - 6 INTERLOCK LOOP
 - 7 INTERLOCK LOOP RETURN
 - 8 REMOTE POWER SOURCE
 - 9 CONTROL GROUND
 - 10 FILAMENT ON INDICATOR
 - 11 HIGH VOLTAGE ON INDICATOR
 - 12 OVERLOAD INDICATOR
 - 13 PLATE OVERLOAD INDICATOR
 - 14 SCREEN OVERLOAD INDICATOR
 - 15 GRID OVERLOAD INDICATOR
 - 16 OUTPUT VSWR OVERLOAD INDICATOR
 - 17 INTERLOCK STATUS
 - 18 BLOWER STATUS
 - 19 FILAMENT STATUS
 - 20 HIGH VOLTAGE STATUS
 - 21 OUTPUT POWER METER
 - 22 PLATE VOLTAGE METER
 - 23 PLATE CURRENT METER
 - 24 METERING GROUND

- NOTES:**
- 60Hz VERSION SHOWN 50Hz MOVE WIRES FROM C60 TO C50 TAP ON L2. ALSO MOVE T5-4 TO T5-5
 - ALL RESISTORS IN OHMS $\pm 5\%$, $1/4W$, UNLESS OTHERWISE SPECIFIED.
 - NUMBER REFERS TO PIN IN PLUS FOR J2 OF TRANSMITTER CONTROLLER.
 - NUMBER REFERS TO PIN IN PLUS FOR J3 OF TRANSMITTER CONTROLLER.
 - COMPONENTS NOT USED: D5, R3, R5, R6, R7, C7, C8 LAST COMPONENTS USED: R13, C16, M9, S8, T811, D9, T5, L5, C85, K7, B4.
 - WHEN OPTION 909-0097 INCLUDED REMOVE JUMPER LINKS ON T812 AND CONNECT VOLTAGE REGULATOR AS SHOWN. CONNECT TS PRIMARY AT T5-1 AND T5-6 FOR 909-0097 (60Hz) OR AT T5-1 AND T5-7 FOR 909-0097-001 (50Hz).
 - [[NNN]] WIRE NUMBERS.

COPYRIGHT © 1988 BROADCAST ELECTRONICS, INC.

COPYRIGHT © 1988 BROADCAST ELECTRONICS, INC.

| | | | | |
|--|---------------|--|---|--|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is intended for confidential use and shall not be reproduced or used or disclosed to other persons or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | | DWN. BY JAH 6-6-88 | MATERIAL SEE B/M 909-5000-205 909-5000-305 | BROADCAST ELECTRONICS INC. 4100 N. 24TH ST., P.O. BOX 3506 GAINESVILLE, FL 32605 217-224-9600 TELE 250142 CABLE BROADCAST FAX 217-224-9607 |
| TOLERANCE (DECIMAL) U.O.B. .X \pm .030 .XX \pm .005 .XXX \pm .015 | ANGLE \pm ° | FINISH SEE DWG RA582-0000 NEXT ASSY. | TITLE OVERALL SCHEMATIC | TYPE SIZE DWG. NO. 909-5000-205 (60Hz) 909-5000-305 (50Hz) REV S D |
| MODEL FM-SAS | | SCALE | | SHEET 1 OF 1 |

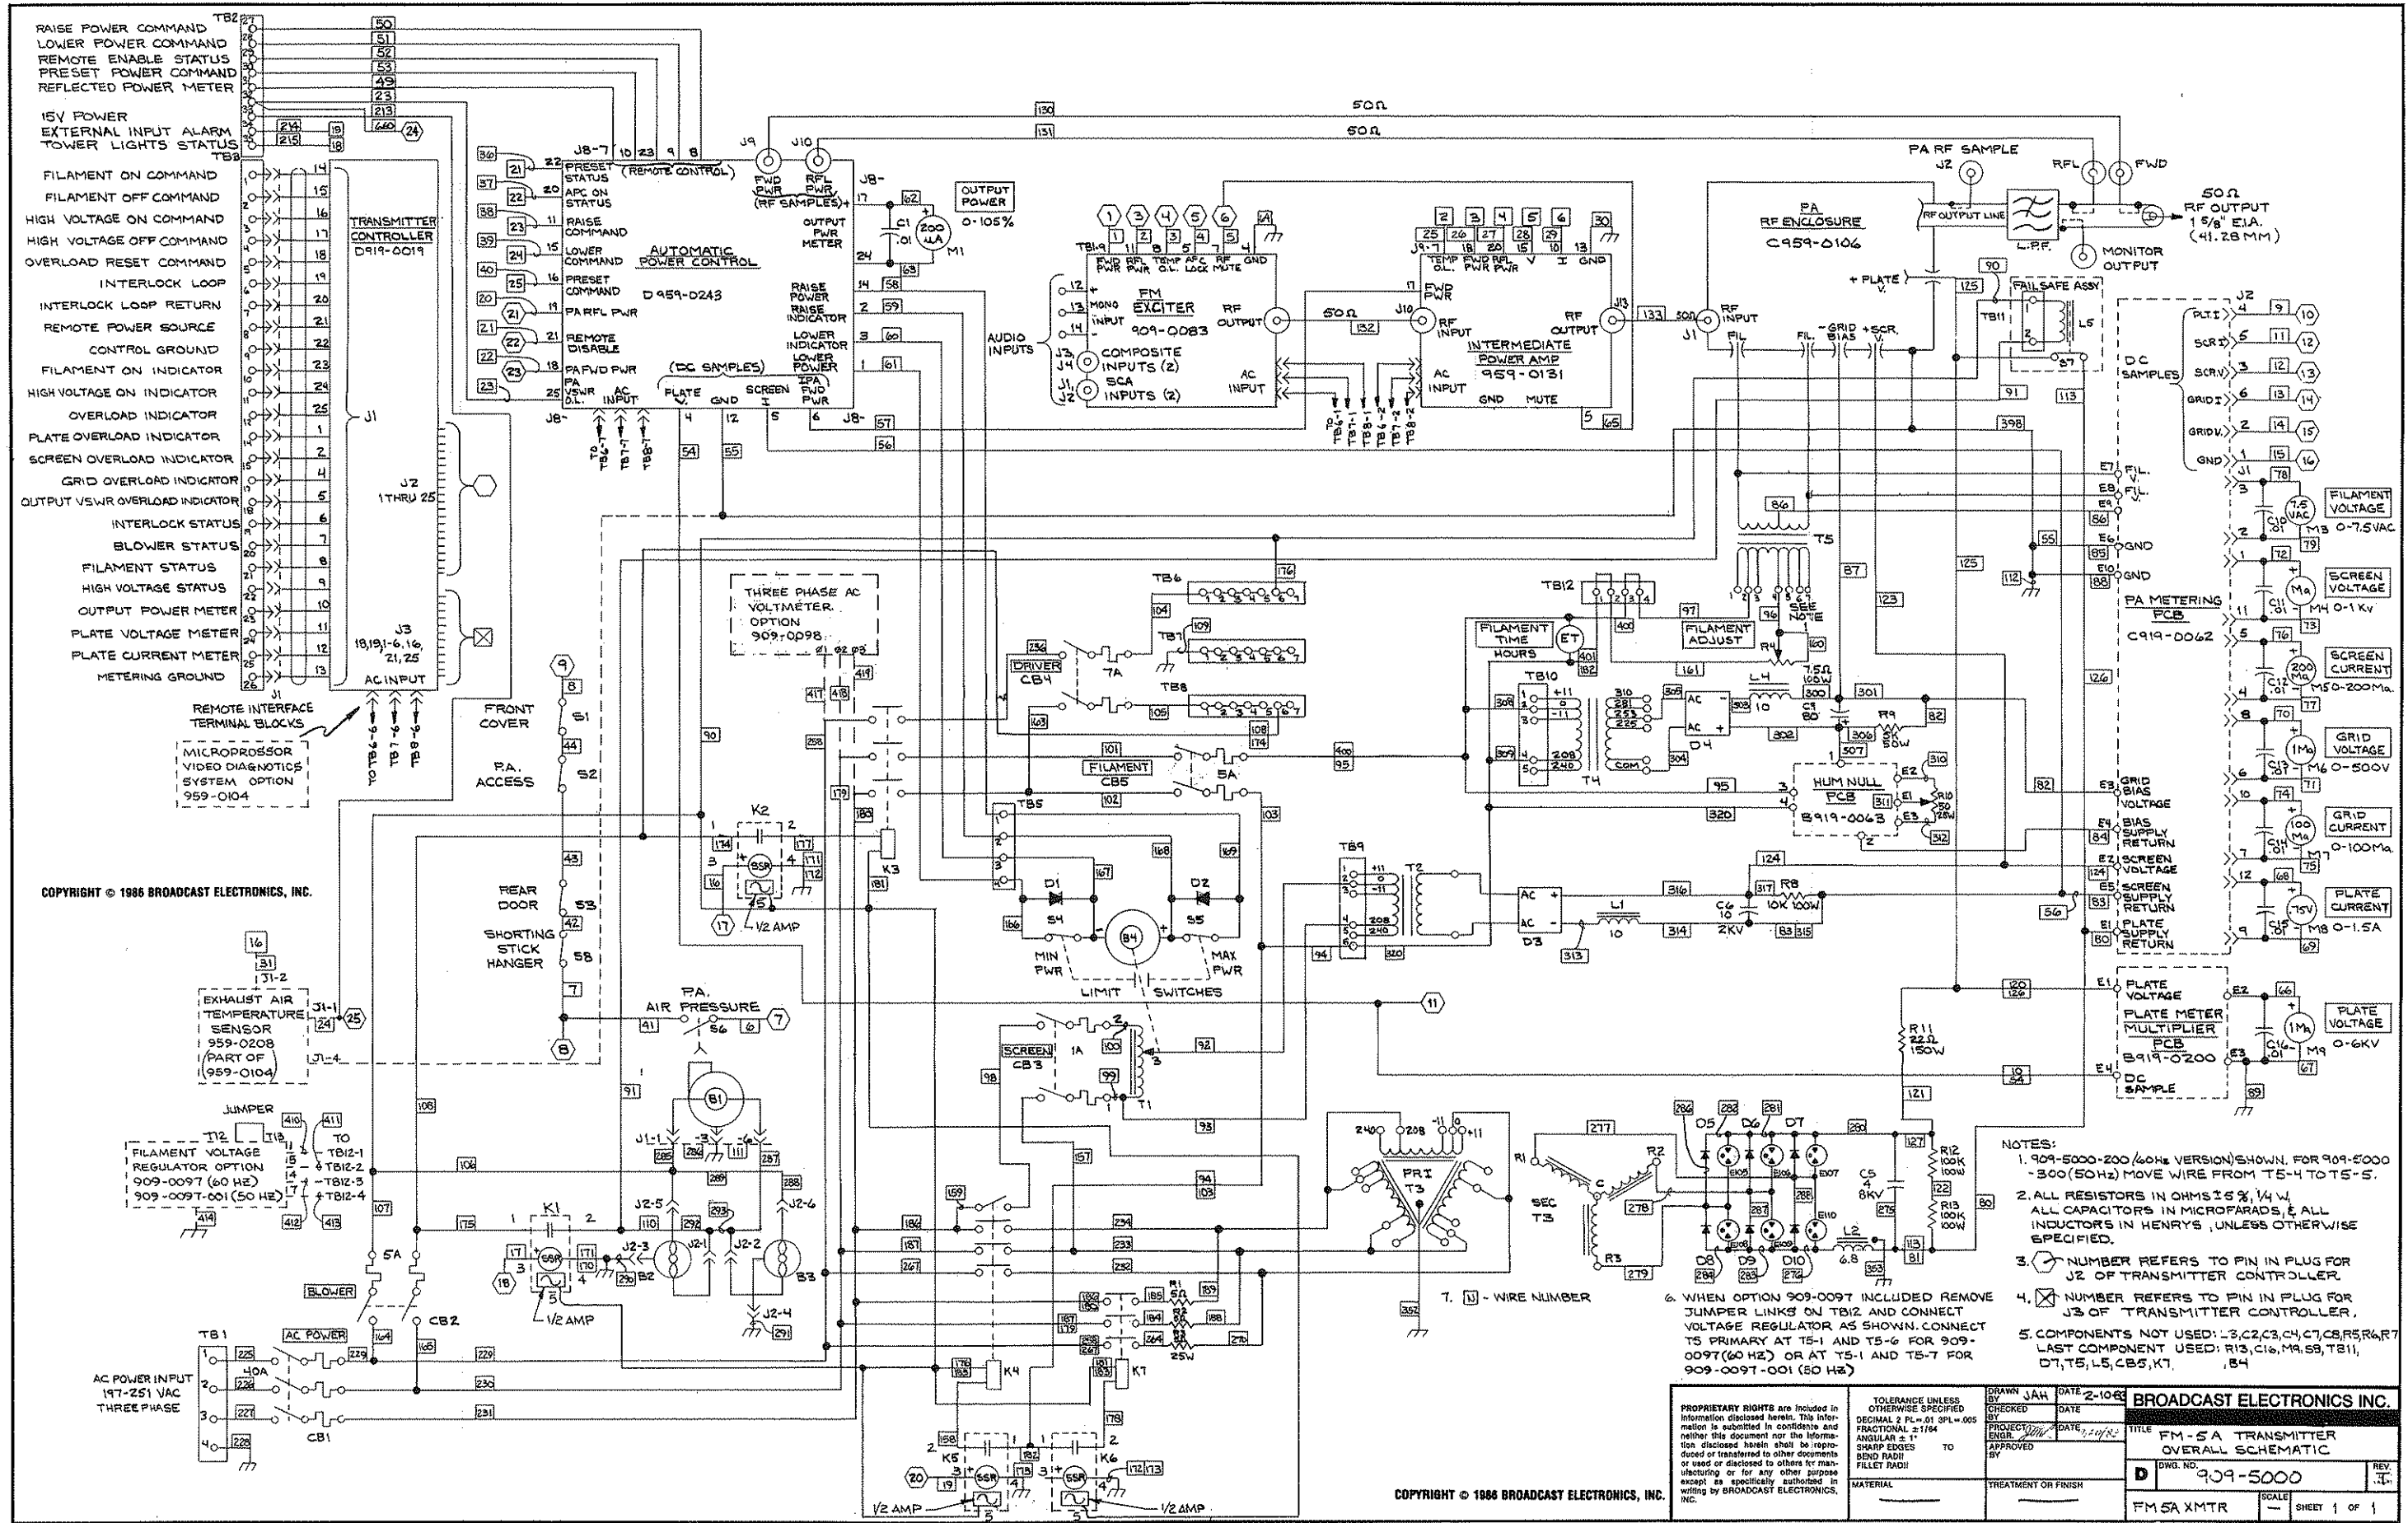


COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.



- NOTES:
1. 909-5000-200 (60 Hz VERSION) SHOWN. FOR 909-5000-300 (50 Hz) MOVE WIRE FROM T5-4 TO T5-5.
 2. ALL RESISTORS IN OHMS IS $\frac{1}{4}$ W. ALL CAPACITORS IN MICROFARADS, & ALL INDUCTORS IN HENRYS, UNLESS OTHERWISE SPECIFIED.
 3. \odot NUMBER REFERS TO PIN IN PLUG FOR J2 OF TRANSMITTER CONTROLLER.
 4. \otimes NUMBER REFERS TO PIN IN PLUG FOR J3 OF TRANSMITTER CONTROLLER.
 5. COMPONENTS NOT USED: L3, C2, C3, C4, C7, C8, R5, R6, R7. LAST COMPONENT USED: R13, C16, M9, S9, T8, T11, D7, T5, L5, C8, K7.

| | | | | | | | |
|---|--|--|--|---|--|--|--|
| PROPRIETARY RIGHTS ARE INCLUDED IN INFORMATION DISCLOSED HEREIN. THIS INFORMATION IS SUBMITTED IN CONFIDENTIAL AND NEITHER THIS DOCUMENT NOR THE INFORMATION DISCLOSED HEREIN SHALL BE REPRODUCED OR TRANSFERRED TO OTHER DOCUMENTS OR USED OR DISCLOSED TO OTHERS FOR MANUFACTURING OR FOR ANY OTHER PURPOSE EXCEPT AS SPECIFICALLY AUTHORIZED IN WRITING BY BROADCAST ELECTRONICS, INC. | | TOLERANCE UNLESS OTHERWISE SPECIFIED DECIMAL 2 PL-01 CPL=005 FRACTIONAL $\pm 1/64$ ANGULAR $\pm 1^\circ$ SHARP EDGES BEND RADI FILLET RADI | | DRAWN BY JAH CHECKED BY [Signature] PROJECT ENGINEER [Signature] DATE 1/29/83 APPROVED BY [Signature] | | DATE 2-10-83 BROADCAST ELECTRONICS, INC. TITLE FM-5A TRANSMITTER OVERALL SCHEMATIC DRG. NO. 909-5000 SCALE 1:1 SHEET 1 OF 1 | |
|---|--|--|--|---|--|--|--|


COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

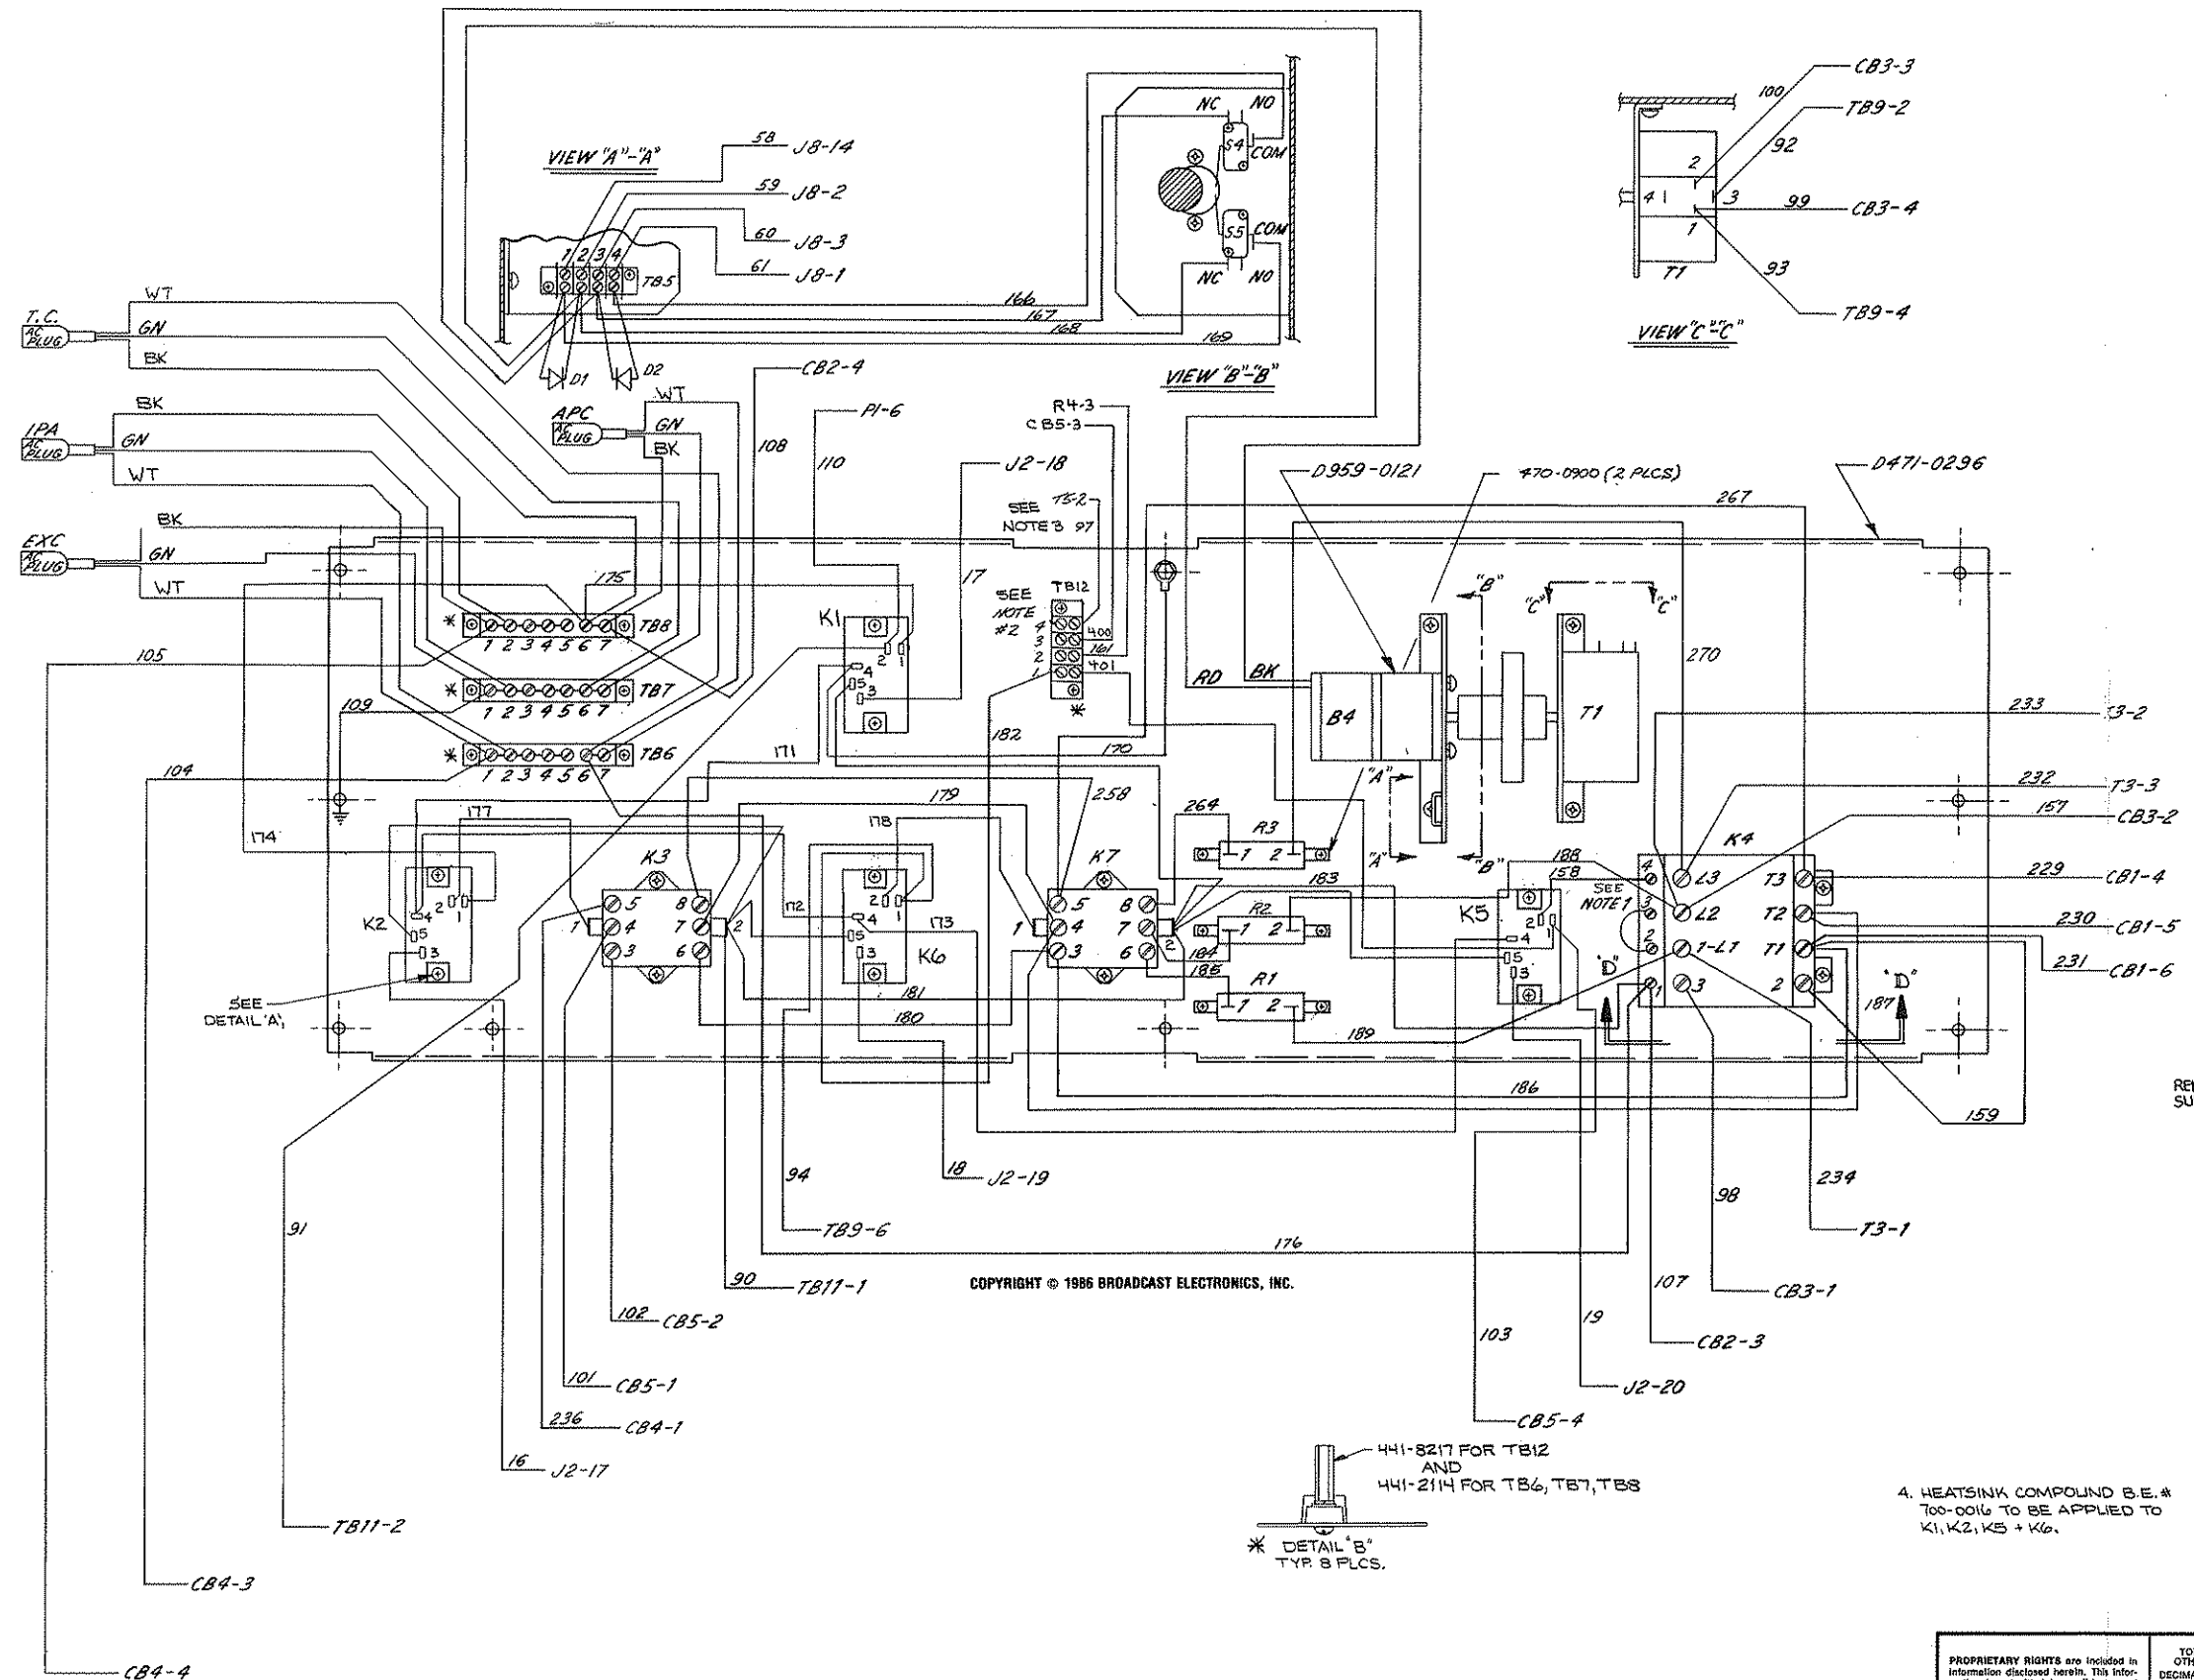

FOR SSR(K1+K5)
USE 410-0056,
FOR SSR(K2+K6)
USE 410-0051.

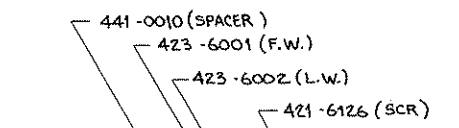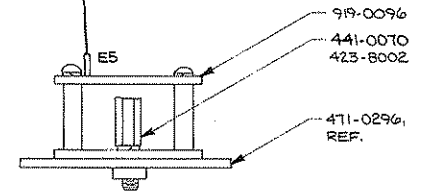

REMOVE (2) SCREWS
SUPPLIED BY VENDOR

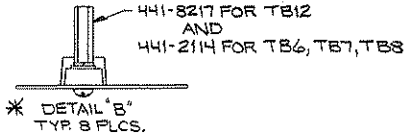


4. HEATSINK COMPOUND B.E.#
T00-0016 TO BE APPLIED TO
K1, K2, K5 + K6.

- NOTES:
1. JUMPERED FOR 220 VAC.
 2. JUMPER STRAPS FROM TB12-1 TO 2 AND TB12-3 TO 4 REMOVED WHEN OPTION 909-0097 OR 909-0097.300 IS INCLUDED. CONNECT OPTION WIRING TO TB12 AND GROUND STRAP.
 3. WIRE #97 GOES TO T5-1 WHEN OPTION 909-0097 OR 909-0097-001.


COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.


| | | | | |
|---|---|---|---|---|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transmitted in any form or by any means, except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | TOLERANCE UNLESS OTHERWISE SPECIFIED DECIMAL 2 PL = .01 DPL = .005 FRACTIONAL ± 1/64 ANGULAR ± 1° SHARP EDGES TO BEND RADI FILLET RADI | DRAWN BY B.G. CHECKED BY PROJECT 3442 APPROVED BY M.H. MATERIAL SEE B/M #959-0111 | DATE 2-28-83 DATE 5-20-83 TREATMENT OR FINISH | BROADCAST ELECTRONICS INC. TITLE WIRING DIAGRAM CONTACTOR PANEL DWG. NO. FW 959-0111 SCALE NA SHEET 1 OF 1 |
| | REV. 1 | FM 5A | SHEET 1 OF 1 | |

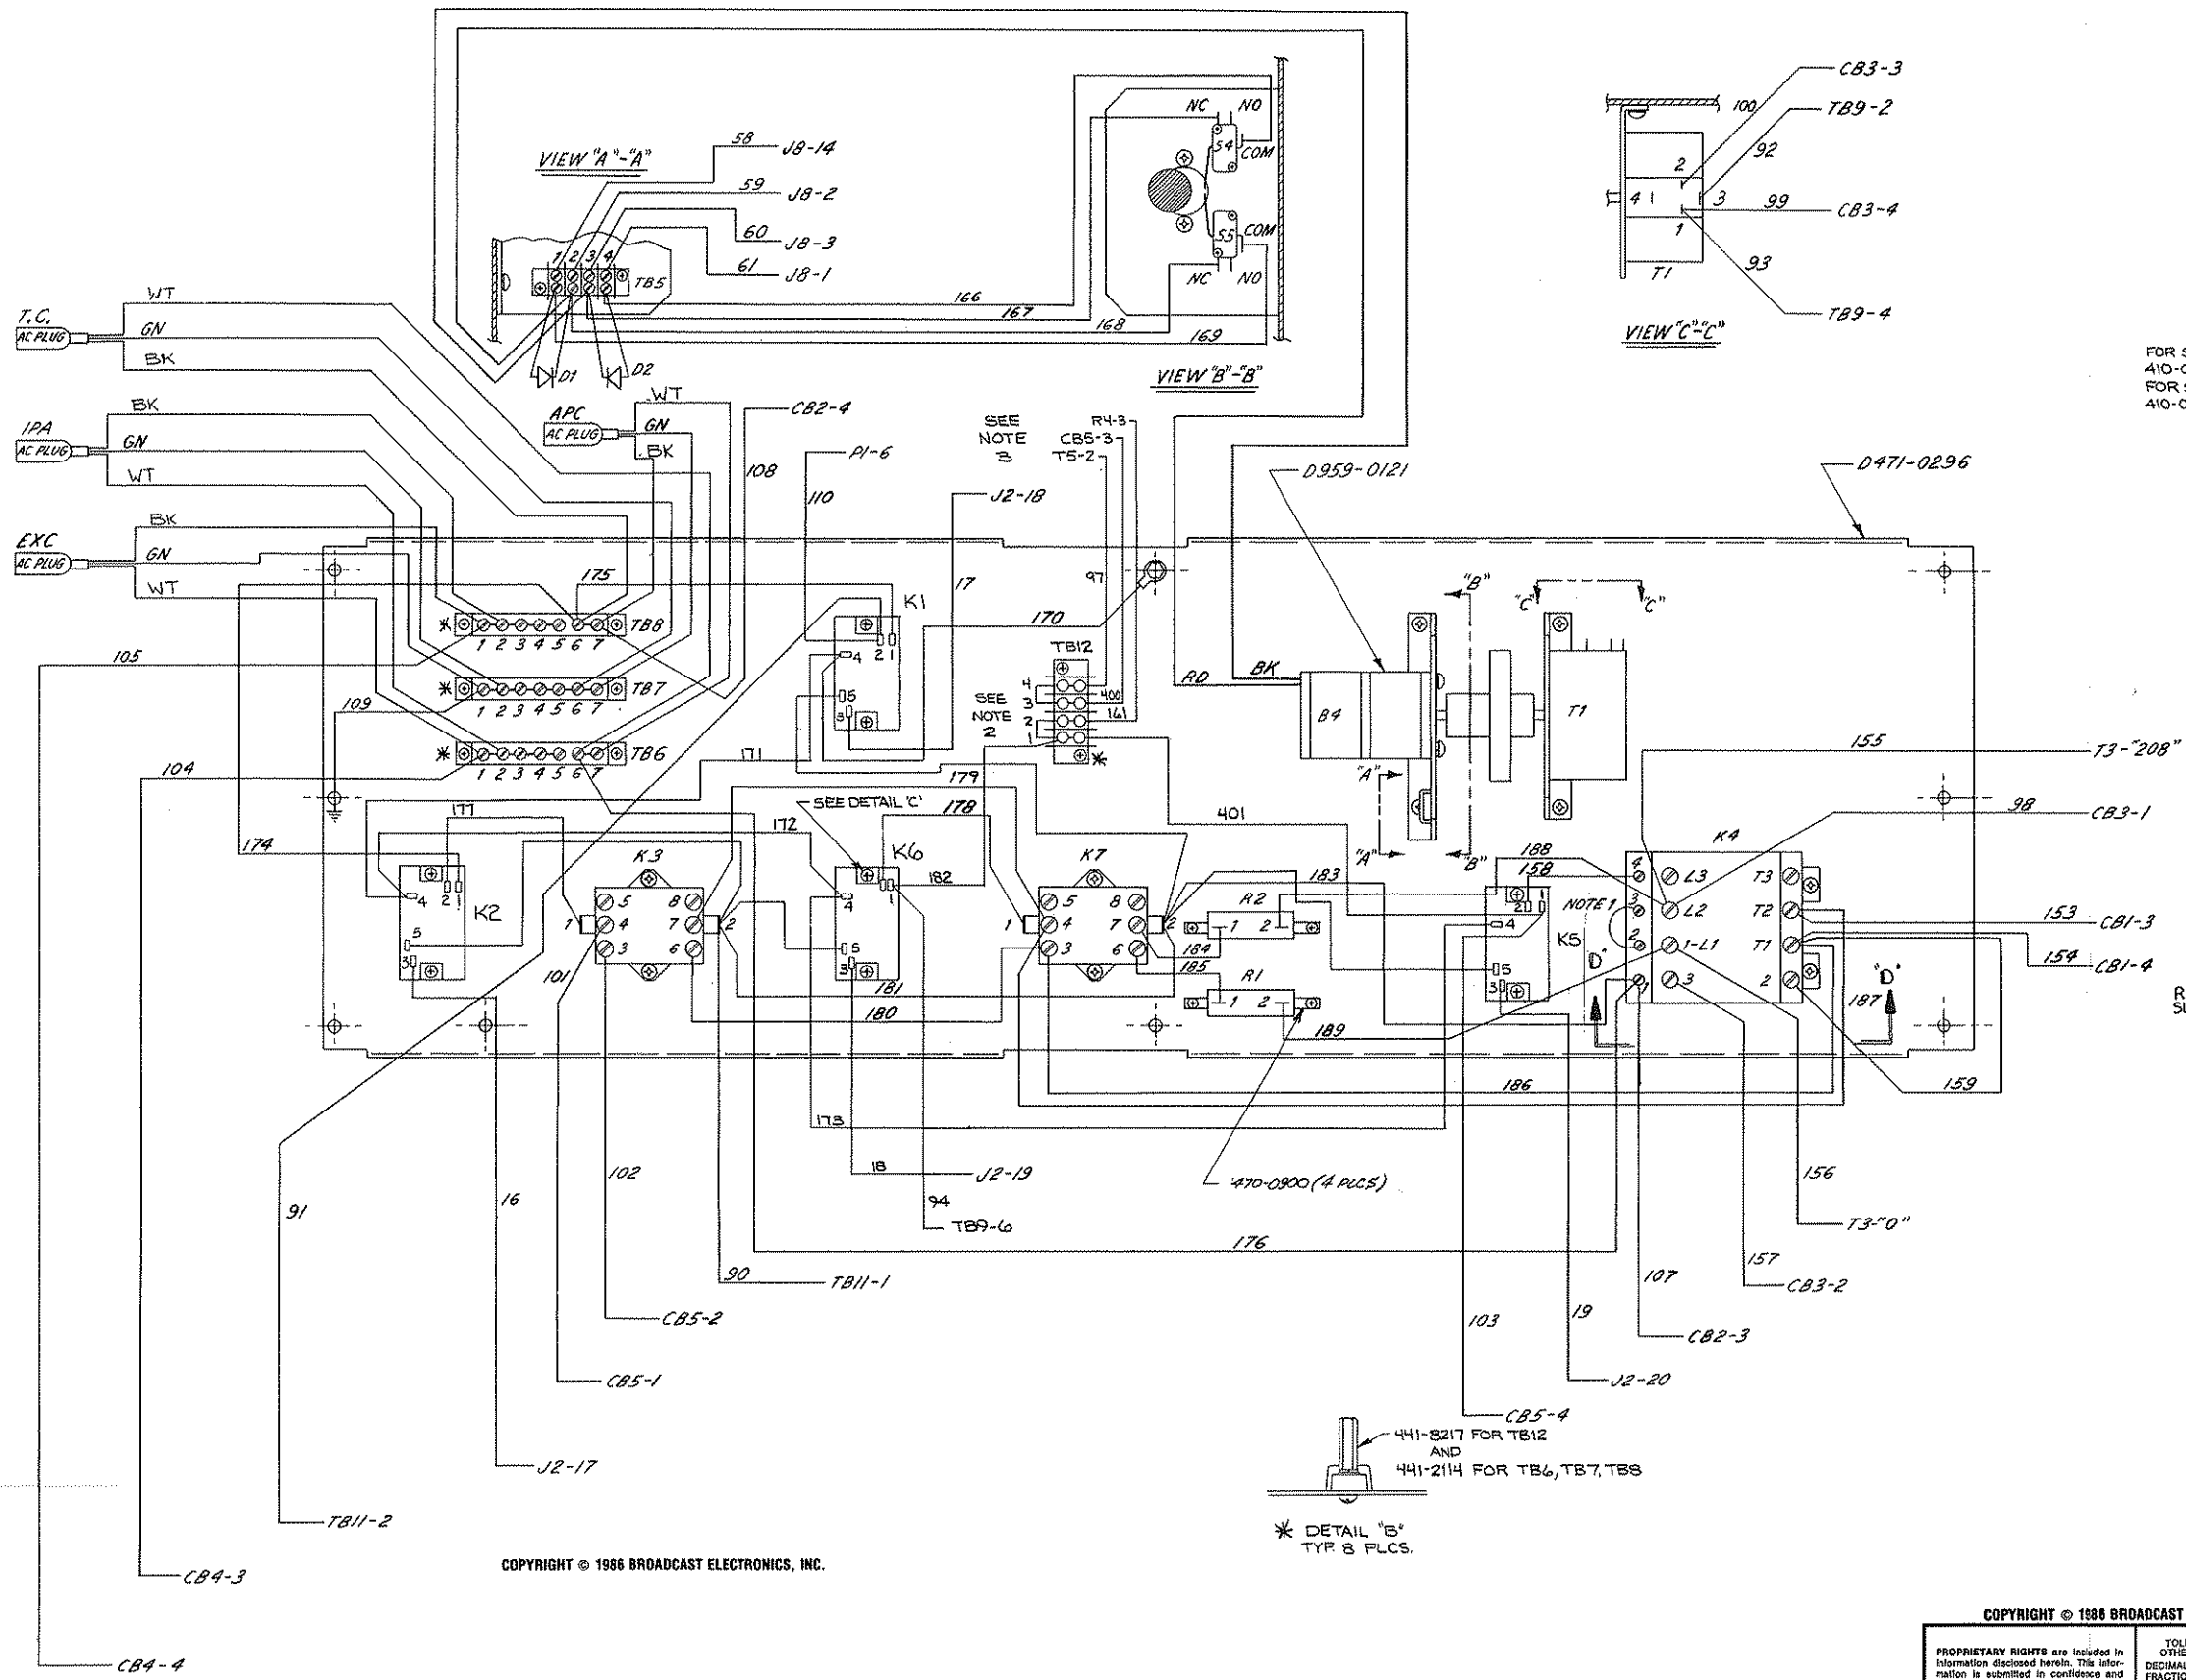

FOR SSR (K1+K5) USE
410-0056,
FOR SSR (K2+K6) USE
410-0051.

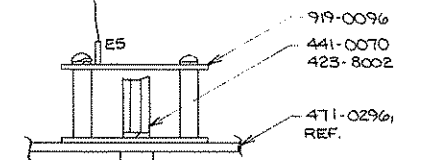


DETAIL 'C'
TYP. B PLCS
(K1, K2, K5, K6)

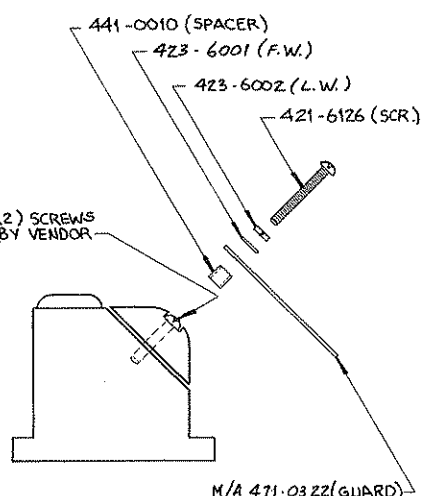

VIEW 'D-D'
(K4 - P/N 341-0023)


- NOTES:
1. JUMPERED FOR 220 VAC
 2. JUMPER STRAPS FROM TB12-1 TO 2 AND TB12-3 TO 4 REMOVED WHEN OPTIONS 909-0097 OR 909-0097-300 ARE INCLUDED. CONNECT OPTION WIRING TO TB12 AND GROUND STRAP.
 3. WIRE #97 GOES TO T5-1 WHEN OPTIONS 909-0097 OR 909-0097-001 ARE INCLUDED.
 4. HEATSINK COMPOUND B-E P/N 700-0016 TO BE APPLIED TO K1, K2, K5, & K6

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

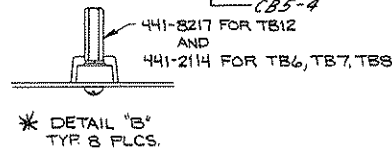

* DETAIL 'B'
TYP. B PLCS.

| | | | | | | | |
|---|--|--|--|--|--|---|--|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transmitted to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | | TOLERANCE UNLESS OTHERWISE SPECIFIED: DECIMAL 2 PL ±.01 SPL ±.005 FRACTIONAL ±1/64 ANGULAR ±1° SHARP EDGES TO BEND RADII FILLET RADII | | DRAWN BY: <i>W. GARD</i> DATE: 2-22-83 CHECKED BY: DATE: PROJECT: <i>959-0118</i> DATE: 5-19-83 APPROVED BY: <i>W. GARD</i> DATE: 5-20-83 | | BROADCAST ELECTRONICS INC. TITLE: WIRING DIAGRAM CONTACTOR PANEL DWG. NO.: 959-0118 TYPE: FW SCALE: FM 3.5 A | |
| MATERIAL: <i>SEE B/M #959-0118</i> | | TREATMENT OR FINISH: | | SHEET 1 OF 1 | | | |

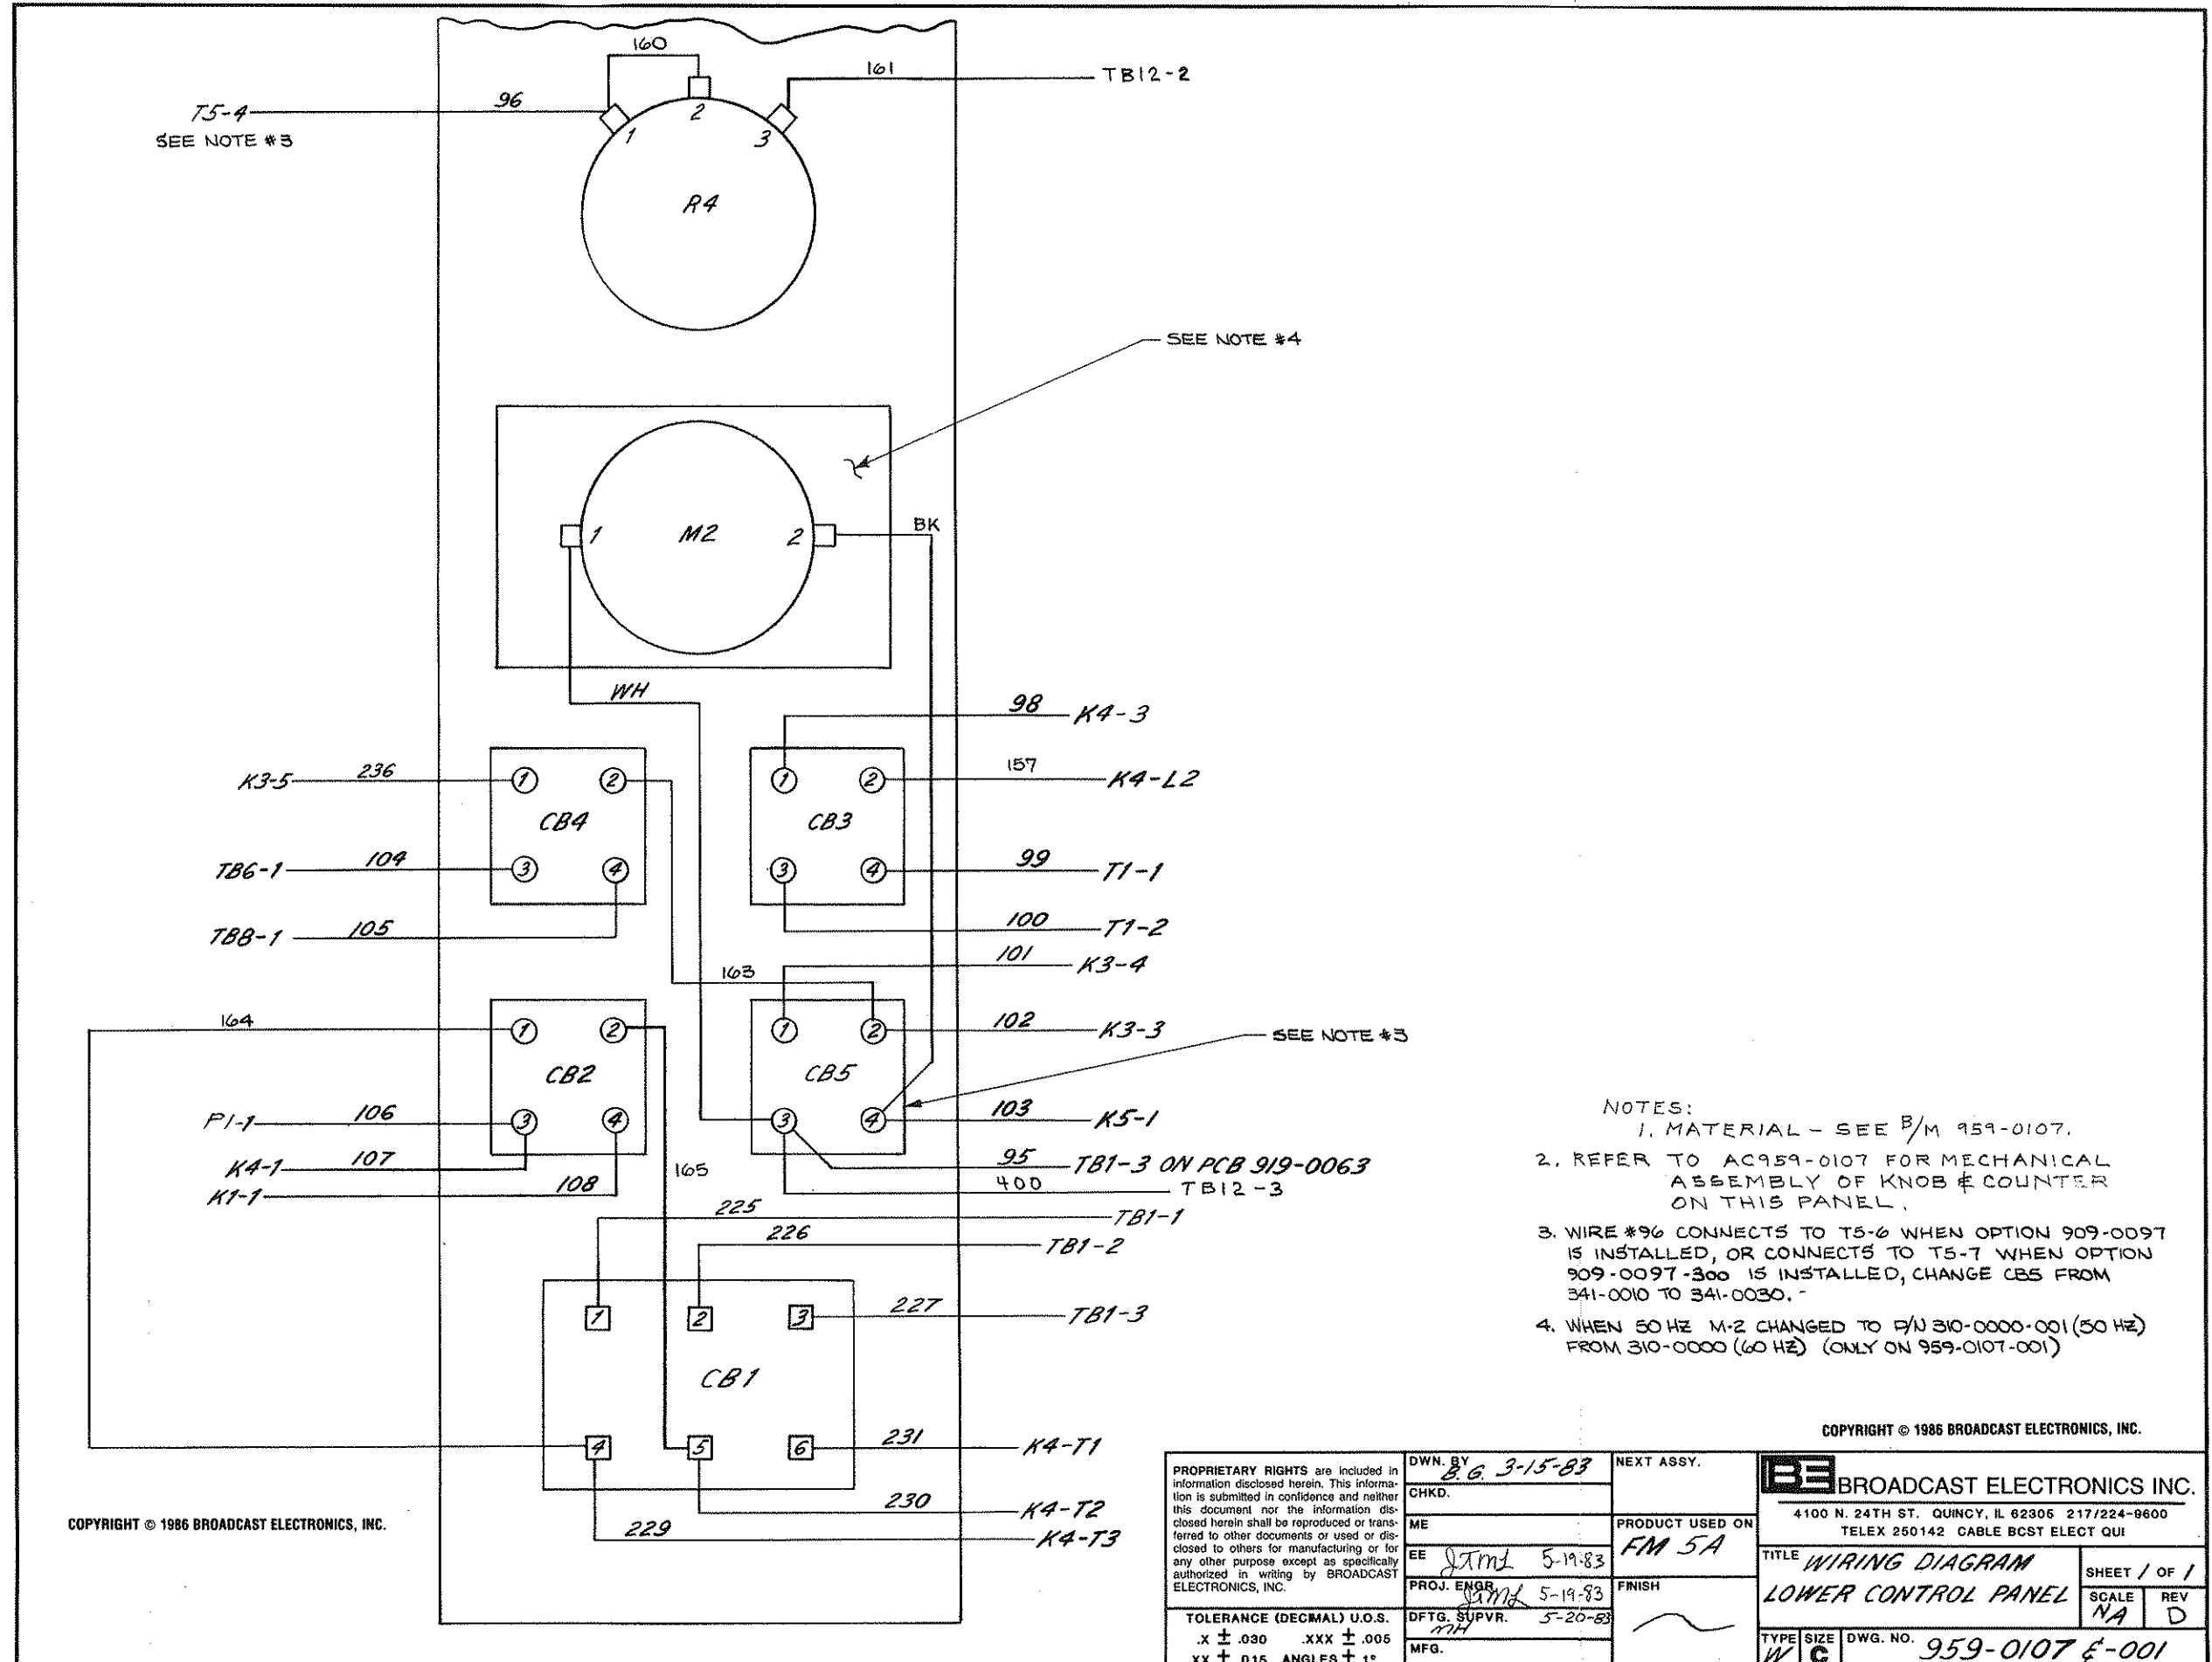

T5-4
SEE NOTE #3

SEE NOTE #4


SEE NOTE #3

- NOTES:
1. MATERIAL - SEE B/M 959-0107.
 2. REFER TO AC959-0107 FOR MECHANICAL ASSEMBLY OF KNOB & COUNTER ON THIS PANEL.
 3. WIRE #96 CONNECTS TO T5-6 WHEN OPTION 909-0097 IS INSTALLED, OR CONNECTS TO T5-7 WHEN OPTION 909-0097-300 IS INSTALLED, CHANGE CBS FROM 341-0010 TO 341-0030.
 4. WHEN 50 HZ M-2 CHANGED TO P/N 310-0000-001 (50 HZ) FROM 310-0000 (60 HZ) (ONLY ON 959-0107-001)

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

| | | | | |
|---|---|---------------------------------------|---|------------------------------------|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | DWN. BY <i>B.G. 3-15-83</i> | NEXT ASSY. | BE BROADCAST ELECTRONICS INC. 4100 N. 24TH ST. QUINCY, IL 62306 217/224-9600 TELEX 250142 CABLE BCST ELECT QUI | |
| | CHKD. | PRODUCT USED ON FM 5A | | TITLE WIRING DIAGRAM |
| | ME | PROJ. ENGR <i>J.M.D. 5-19-83</i> | FINISH | SHEET 1 OF 1 SCALE NA |
| | EE <i>J.M.D. 5-19-83</i> | DFTG. SUPVR. <i>J.M.D. 5-20-83</i> | MFG. | REV D |
| | TOLERANCE (DECIMAL) U.O.S. .X ± .030 .XXX ± .005 .XX ± .015 ANGLES ± 1° | DWG. NO. 959-0107 E-001 | | |

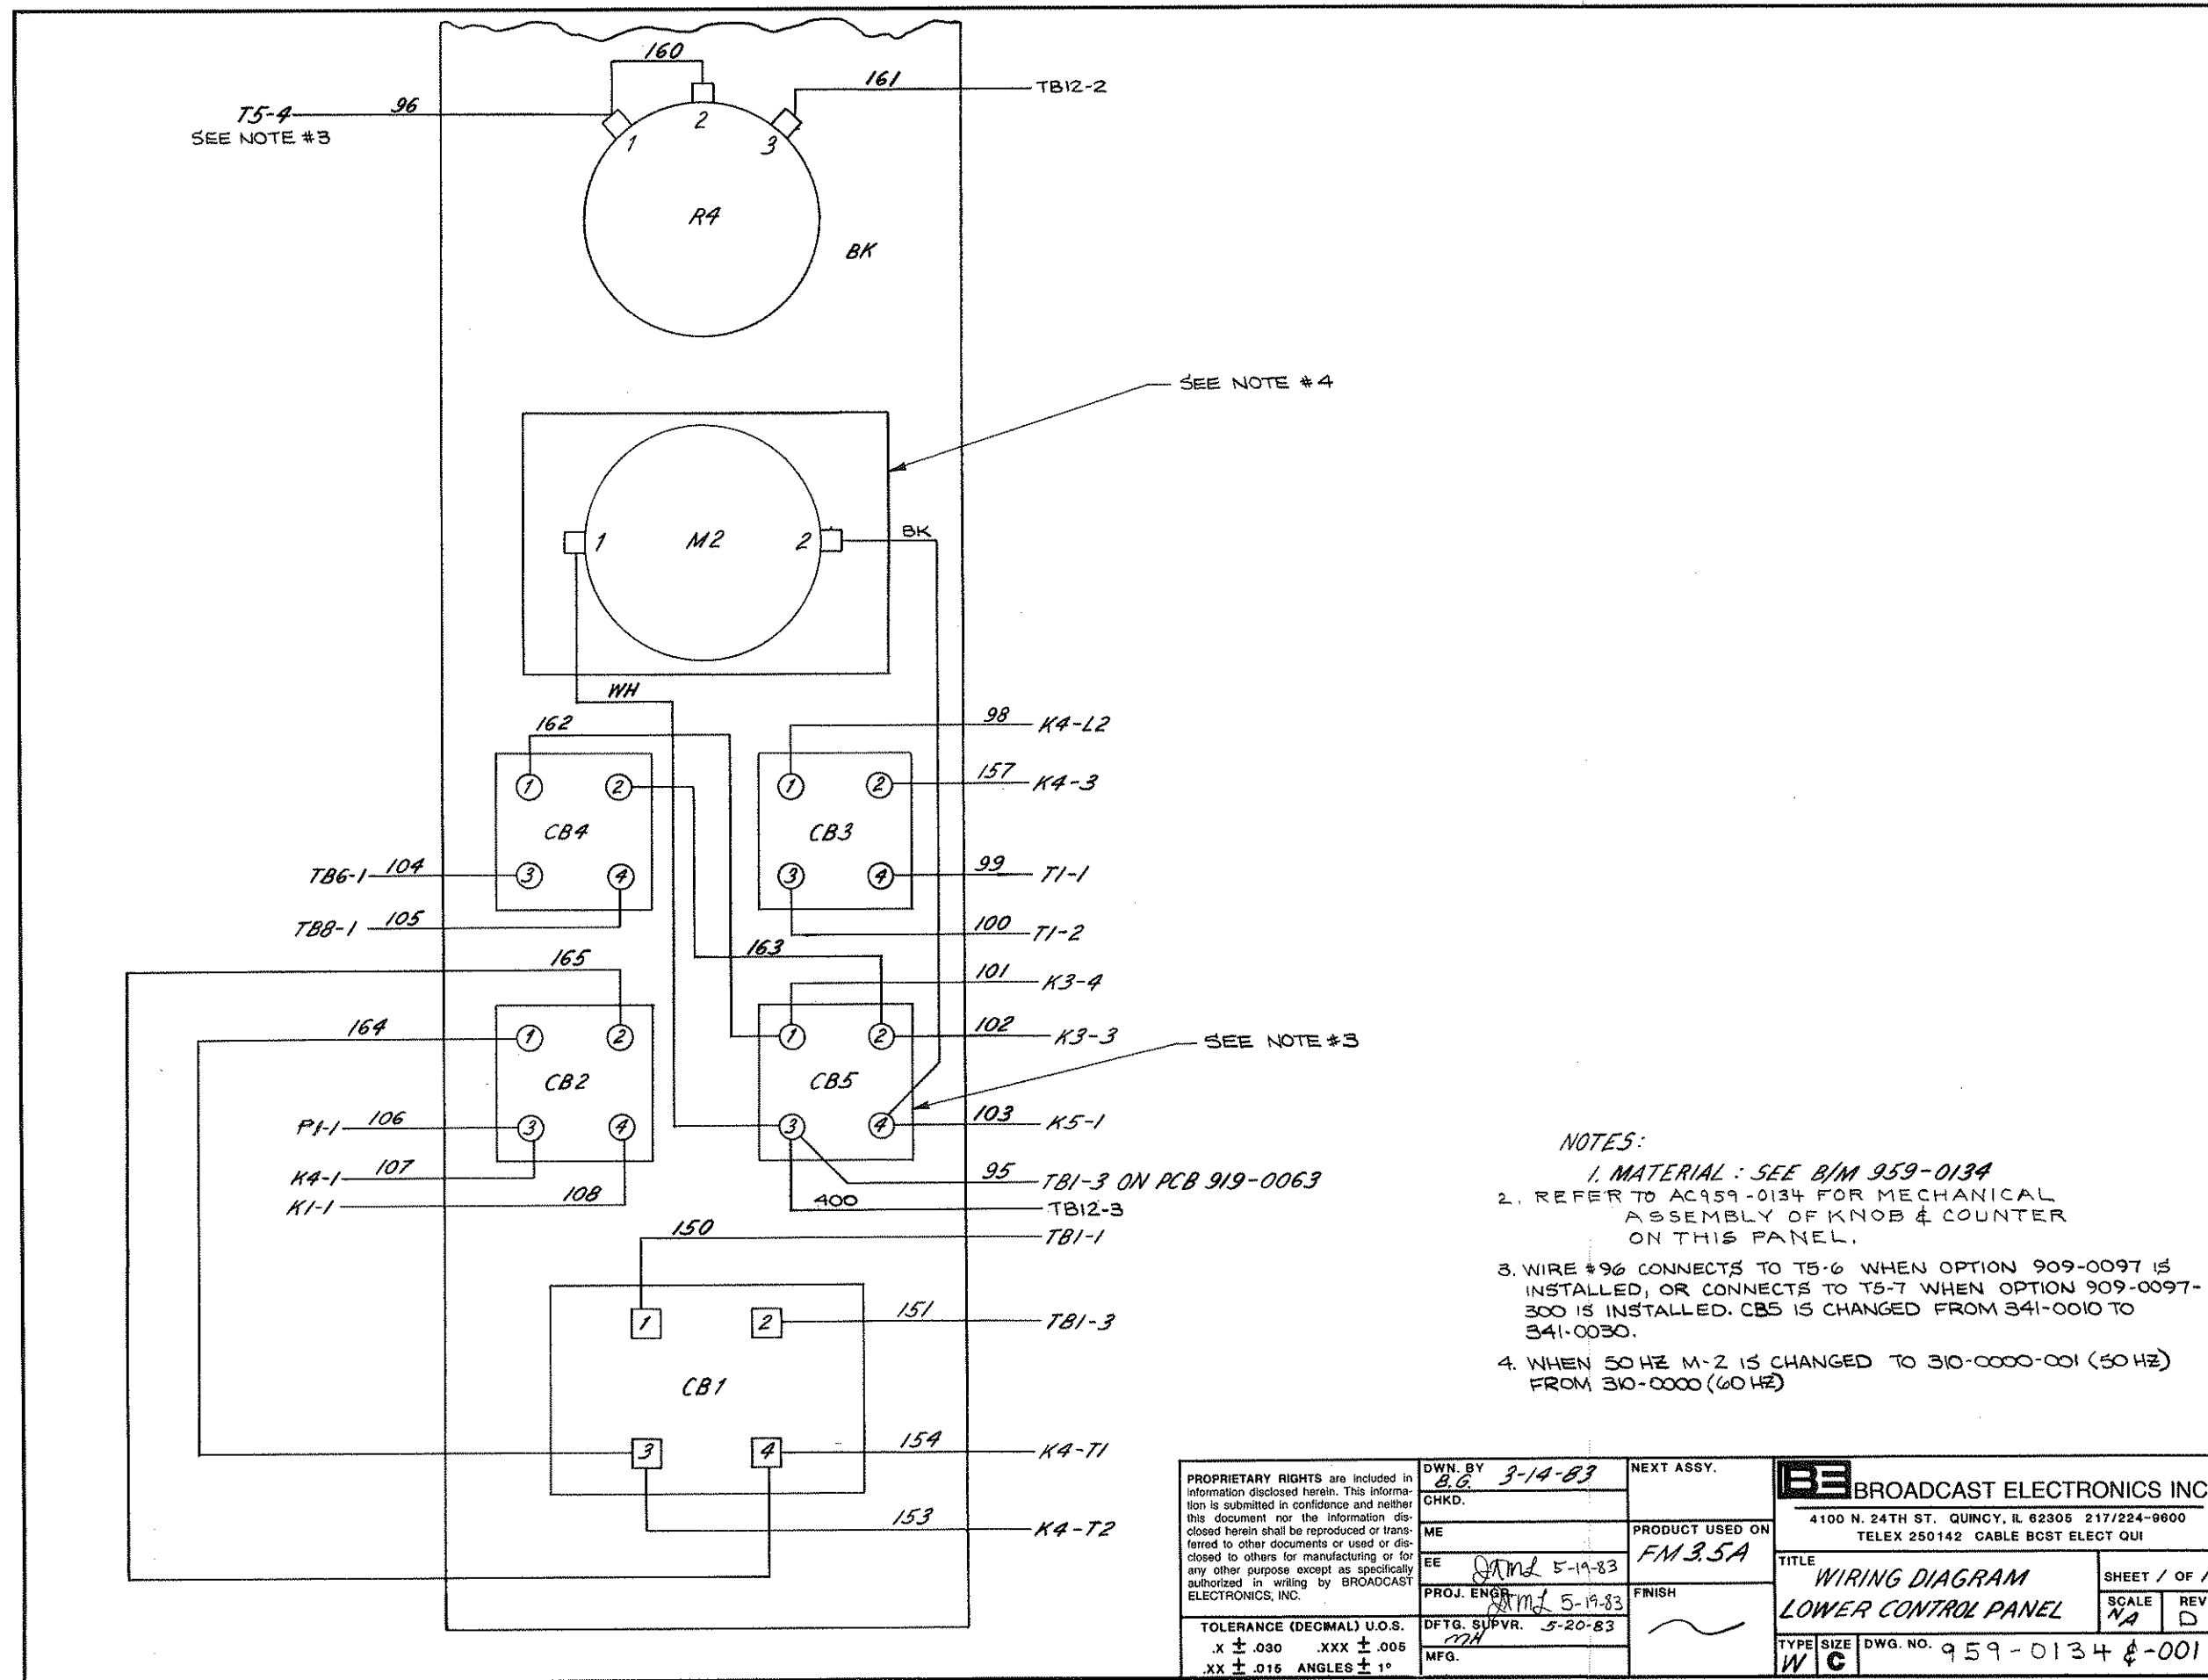



T5-4
SEE NOTE #3

SEE NOTE #4

SEE NOTE #3

- NOTES:**
1. MATERIAL: SEE B/M 959-0134
 2. REFER TO AC959-0134 FOR MECHANICAL ASSEMBLY OF KNOB & COUNTER ON THIS PANEL.
 3. WIRE #96 CONNECTS TO T5-6 WHEN OPTION 909-0097 IS INSTALLED, OR CONNECTS TO T5-7 WHEN OPTION 909-0097-300 IS INSTALLED. CB5 IS CHANGED FROM 341-0010 TO 341-0030.
 4. WHEN 50 HZ M-2 IS CHANGED TO 310-0000-001 (50 HZ) FROM 310-0000 (60 HZ)

| | | | | |
|--|--------------------------------|------------------------------------|--|---|
| <small>PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC.</small> | DWN. BY <i>B.G. 3-14-83</i> | NEXT ASSY. | BROADCAST ELECTRONICS INC. 4100 N. 24TH ST. QUINCY, IL 62305 217/224-9600 TELEX 250142 CABLE BCST ELECT QUI | |
| | CHKD. | PRODUCT USED ON <i>FM 3.5A</i> | | TITLE WIRING DIAGRAM |
| | ME | PROJ. ENGR <i>JAM 5-19-83</i> | FINISH | SHEET / OF / SCALE REV <i>NA D</i> |
| | EE <i>JAM 5-19-83</i> | DFTG. SUPVR. <i>JAM 5-20-83</i> | MFG. | TYPE SIZE DWG. NO. W C 959-0134 <i>4</i> -001 |
| <small>TOLERANCE (DECIMAL) U.O.S. .X ± .030 .XXX ± .005 .XX ± .015 ANGLES ± 1°</small> | | | | |


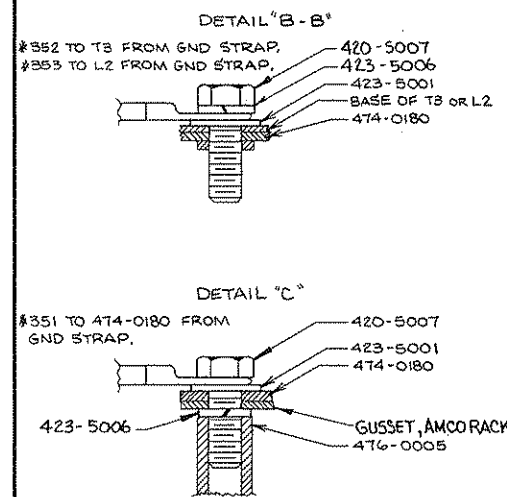
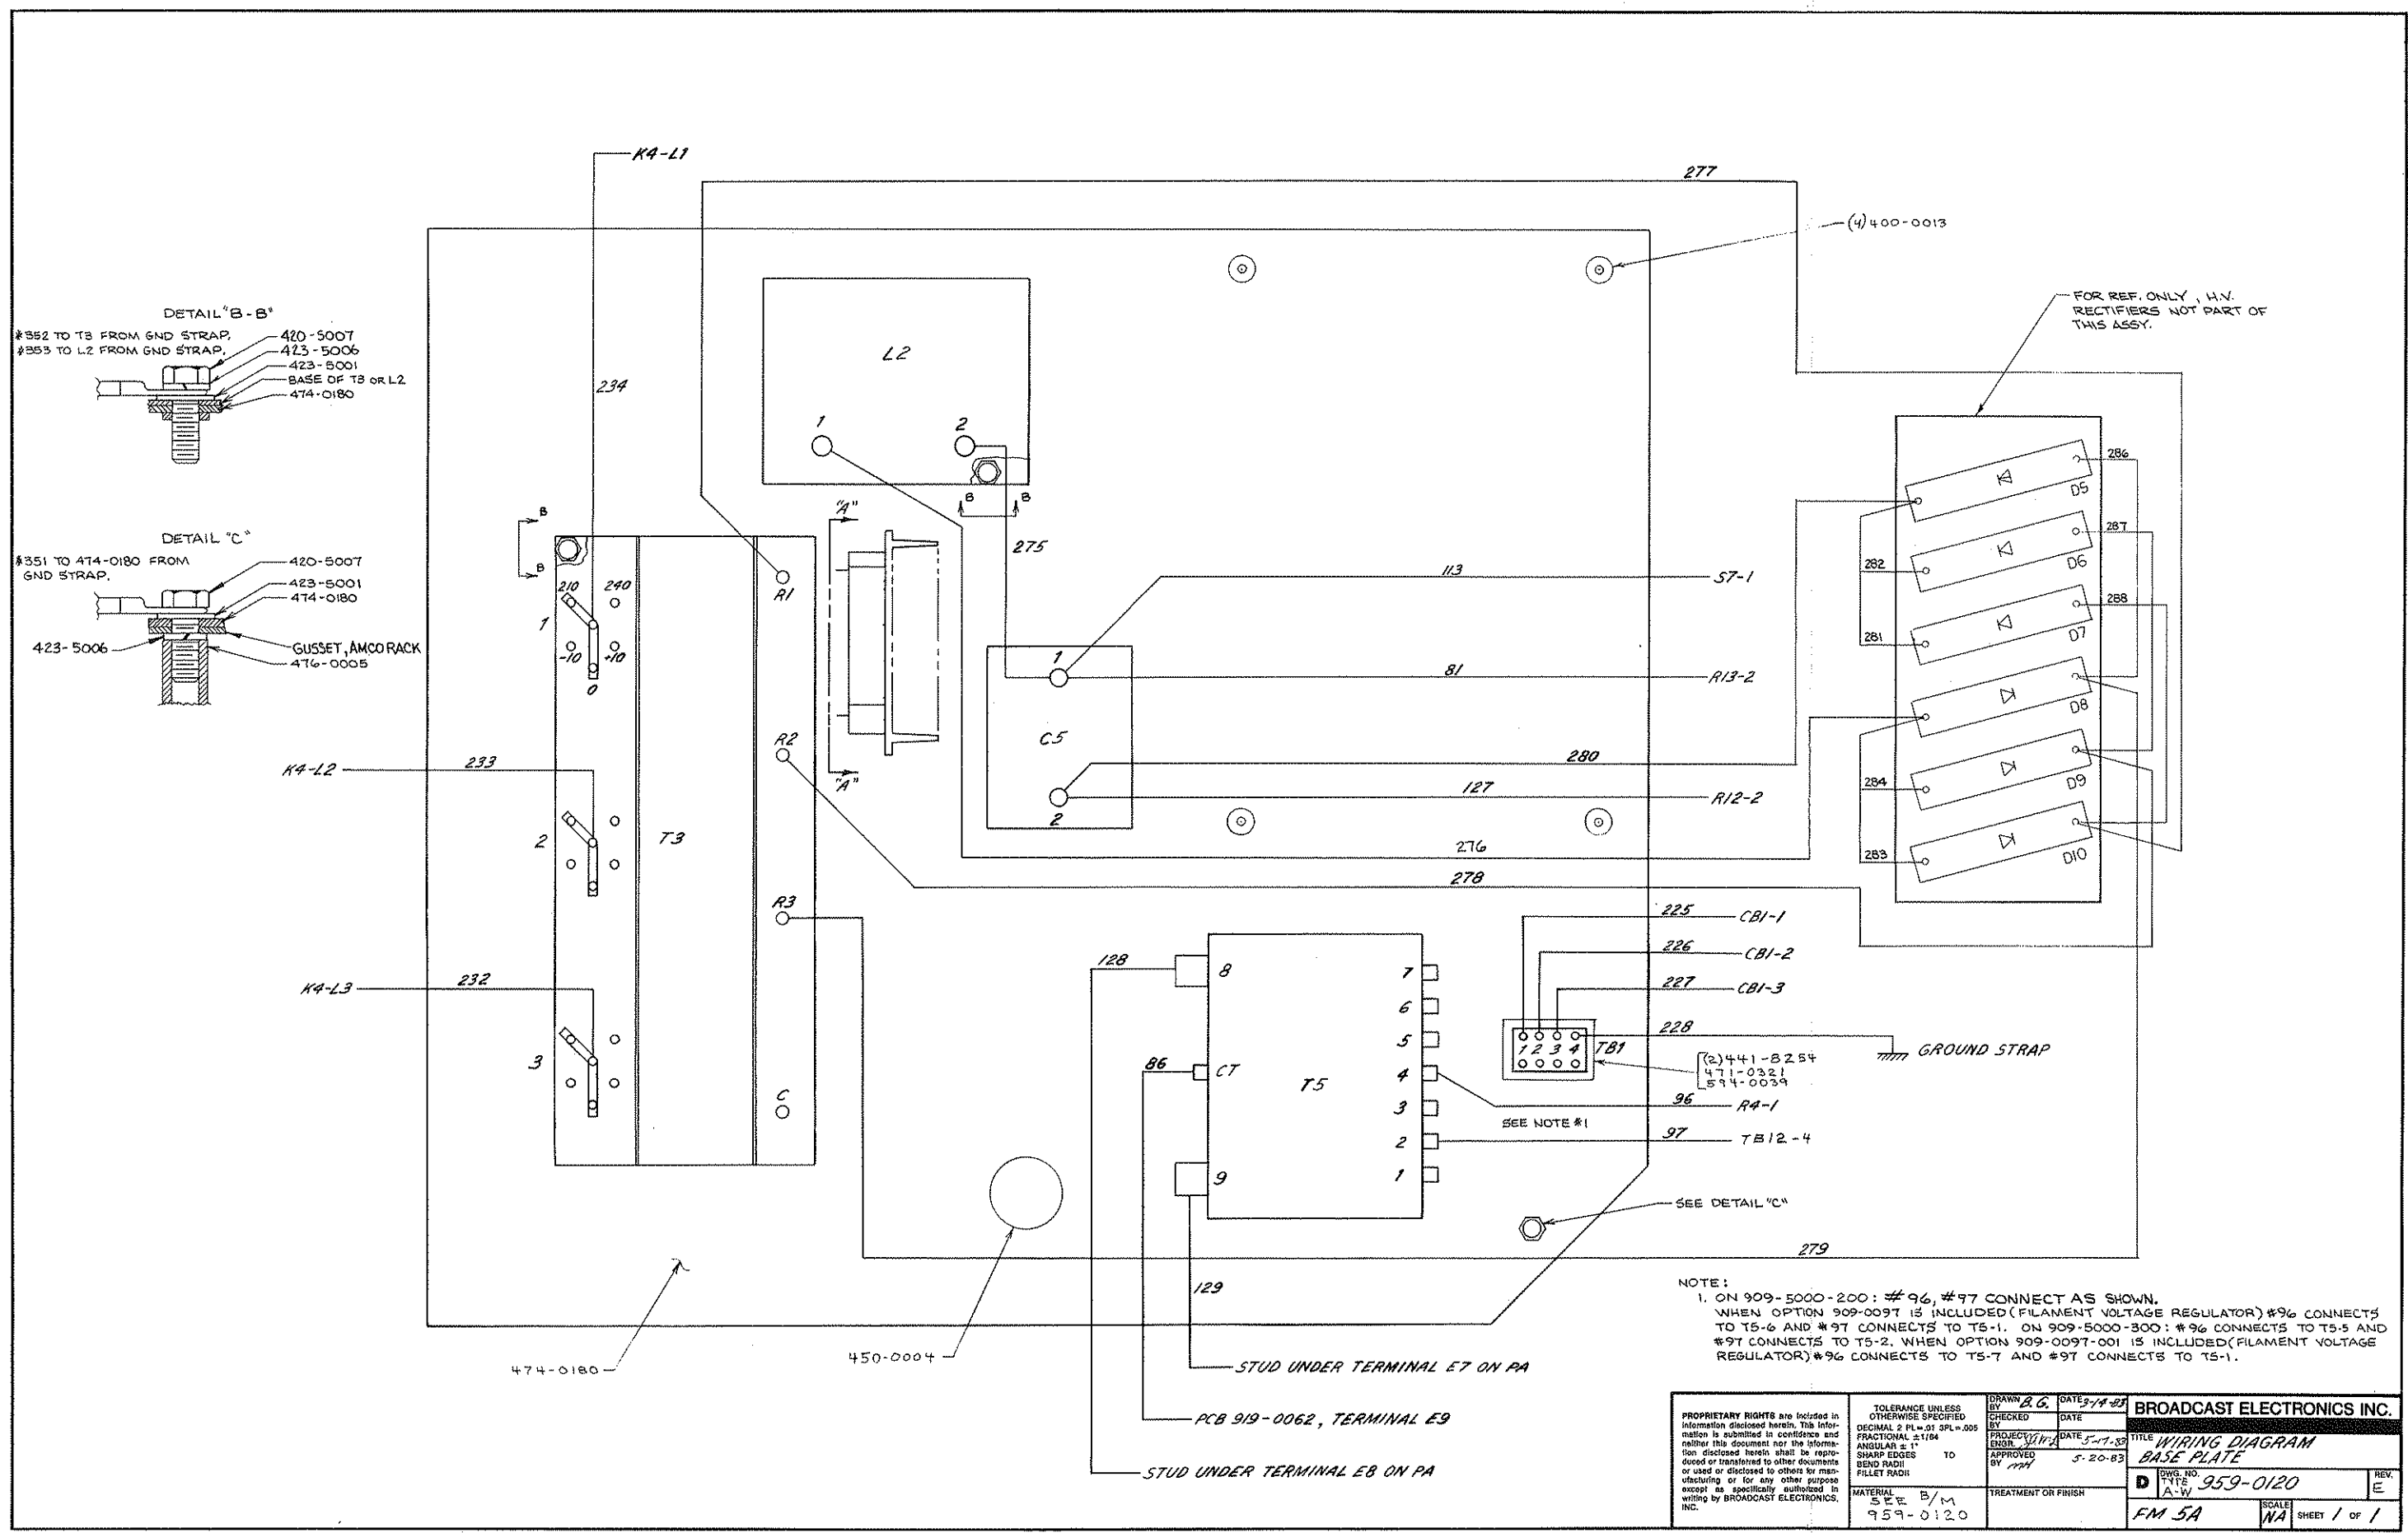


FOR REF. ONLY, H.V. RECTIFIERS NOT PART OF THIS ASSY.

NOTE:


1. ON 909-5000-200: #96, #97 CONNECT AS SHOWN. WHEN OPTION 909-0097 IS INCLUDED (FILAMENT VOLTAGE REGULATOR) #96 CONNECTS TO T5-6 AND #97 CONNECTS TO T5-1. ON 909-5000-300: #96 CONNECTS TO T5-5 AND #97 CONNECTS TO T5-2. WHEN OPTION 909-0097-001 IS INCLUDED (FILAMENT VOLTAGE REGULATOR) #96 CONNECTS TO T5-7 AND #97 CONNECTS TO T5-1.

| | | | | |
|---|--|---|---|---------------|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | TOLERANCE UNLESS OTHERWISE SPECIFIED DECIMAL 2 PLACES FRACTIONAL ±1/64 ANGULAR ±1° SHARP EDGES BEND RADII FILLET RADII | DRAWN B.G. DATE 9-14-83 CHECKED _____ DATE _____ PROJECTED Y.W. DATE 5-17-83 APPROVED BY MM DATE 5-20-83 | BROADCAST ELECTRONICS, INC. TITLE WIRING DIAGRAM BASE PLATE DWS. NO. 959-0120 TYPE A-W | |
| | MATERIAL SEE B/M 959-0120 | TREATMENT OR FINISH | SCALE NA | REV. E |
| | SHEET 1 OF 1 | | | |
| | | | | |

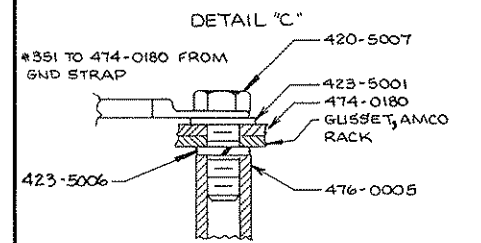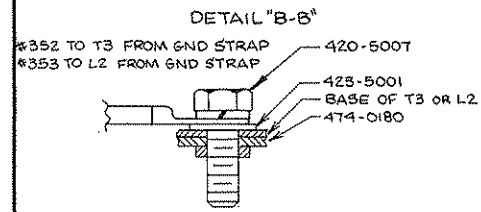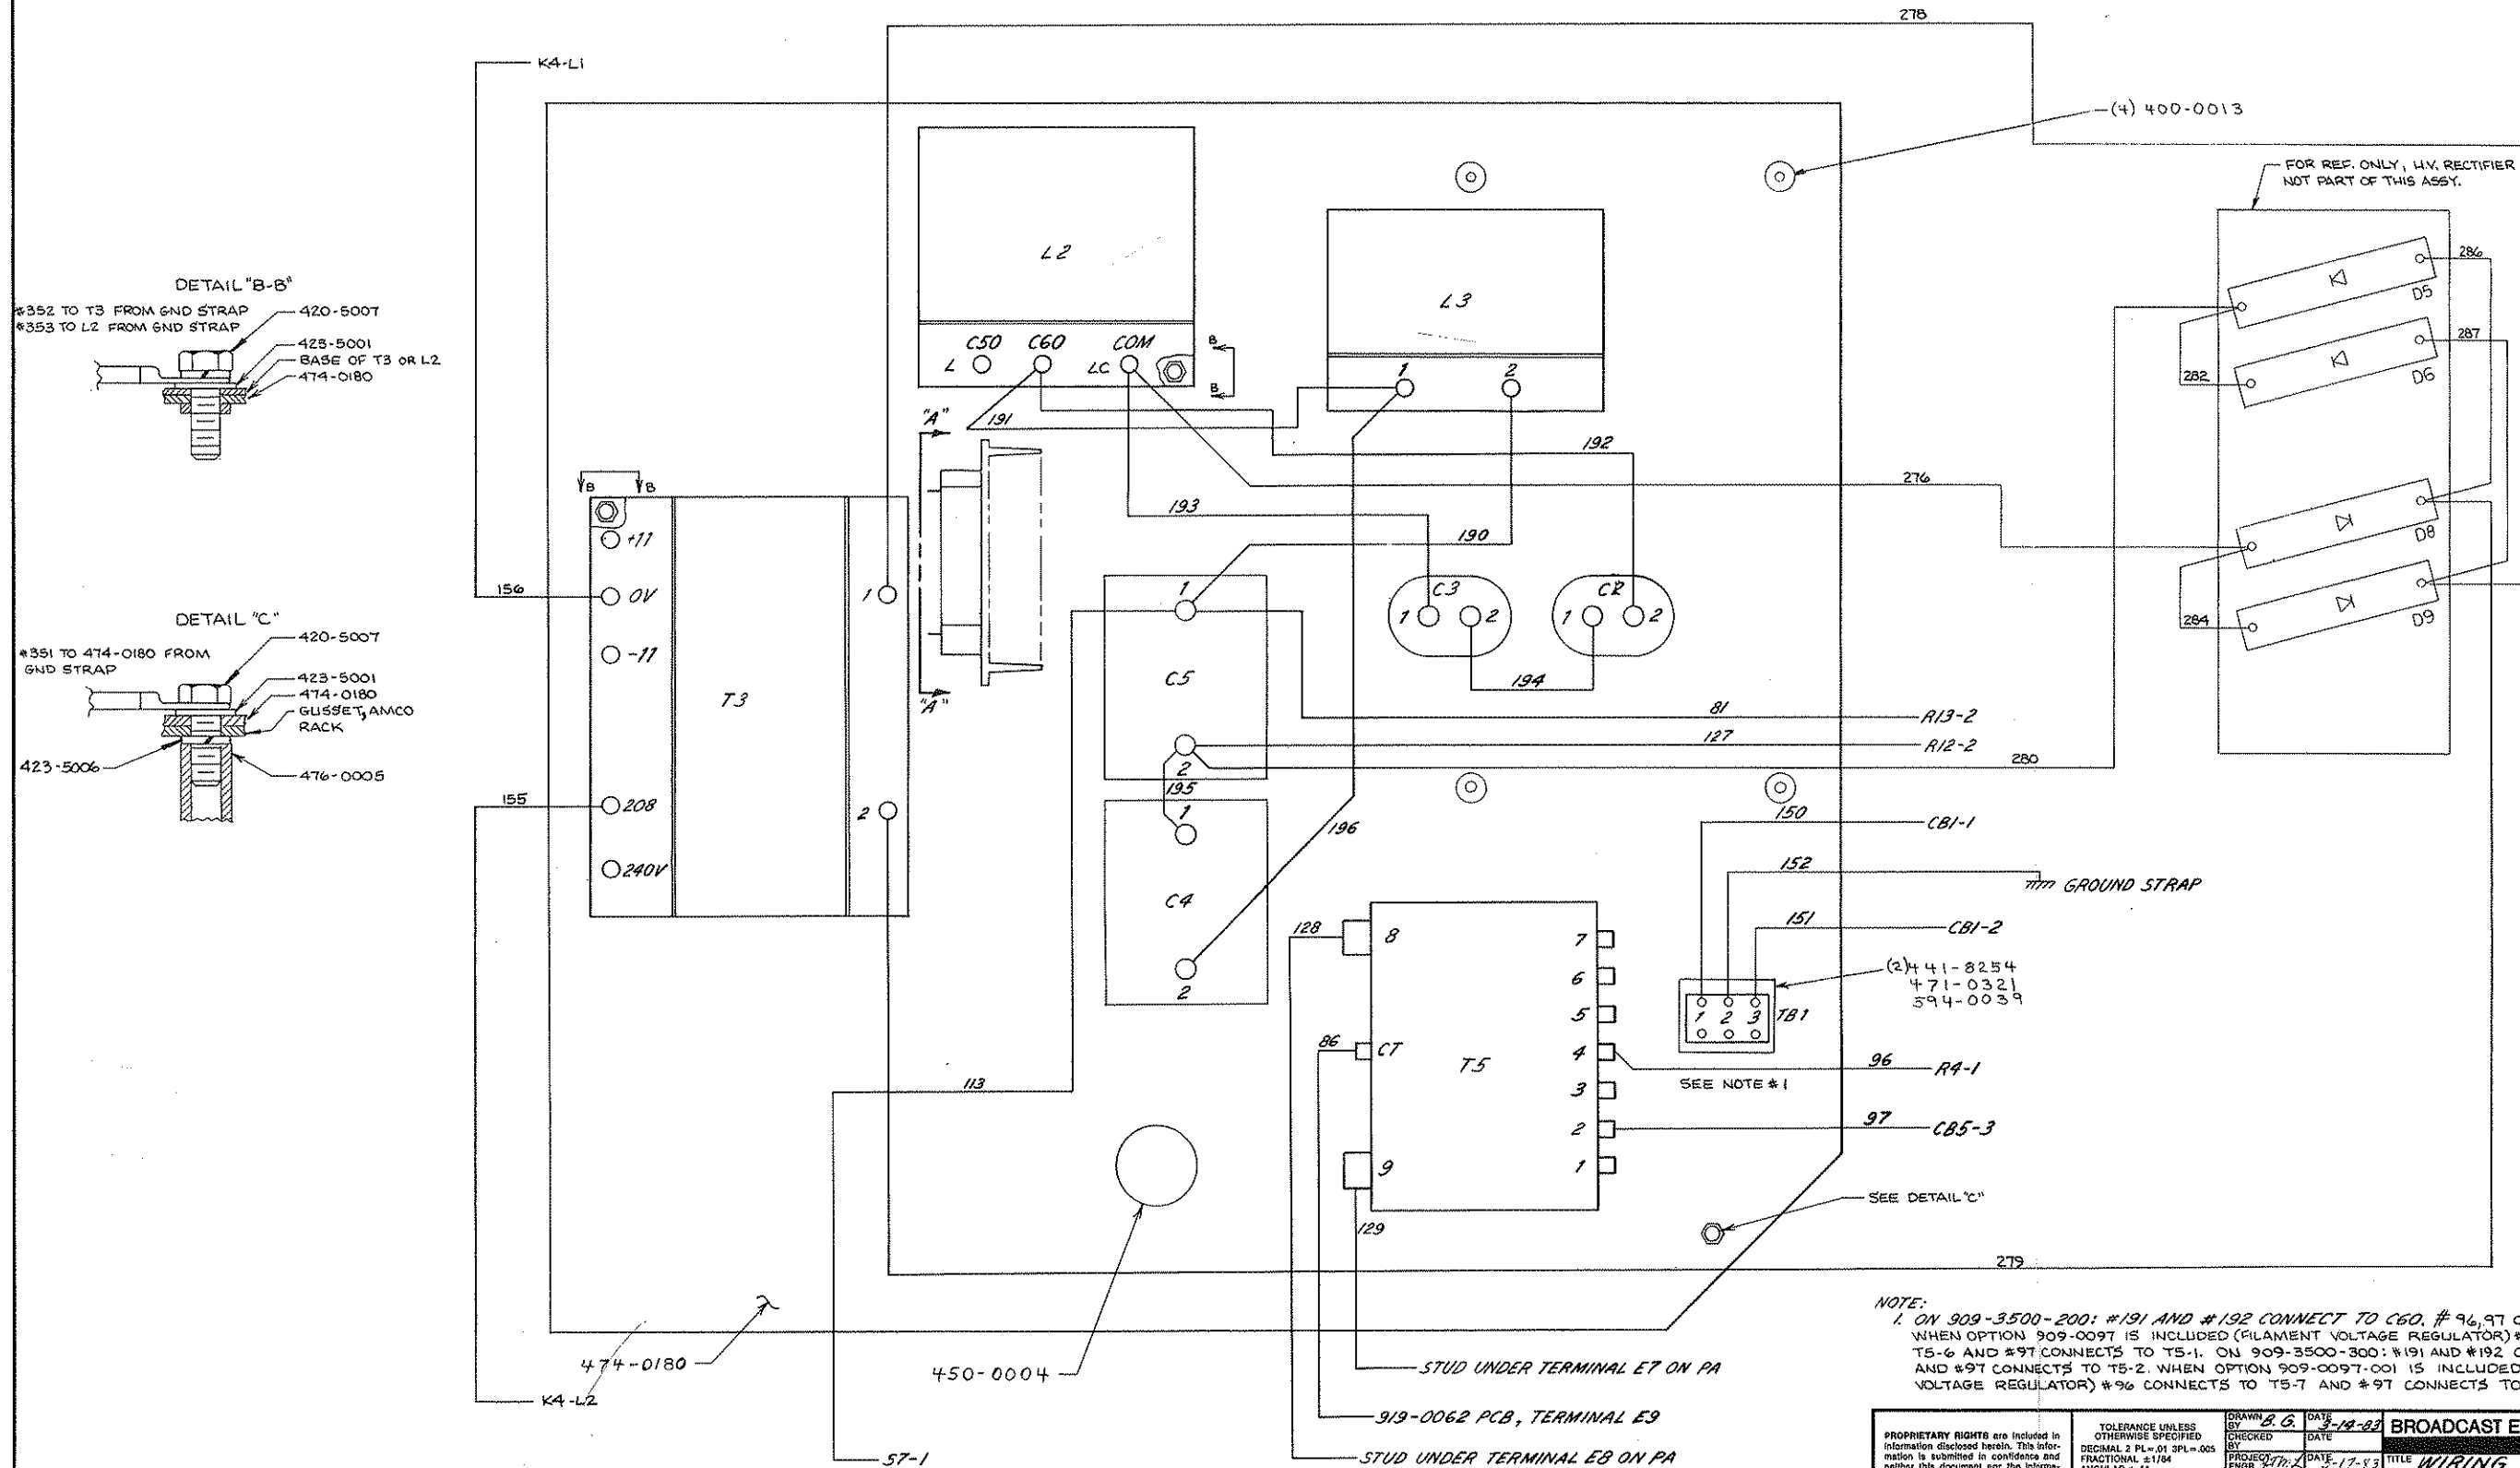

NOTE:
1. ON 909-3500-200: #191 AND #192 CONNECT TO C60. #96, 97 CONNECT AS SHOWN. WHEN OPTION 909-0097 IS INCLUDED (FILAMENT VOLTAGE REGULATOR) #96 CONNECTS TO T5-6 AND #97 CONNECTS TO T5-1. ON 909-3500-300: #191 AND #192 CONNECT TO C50 AND #97 CONNECTS TO T5-2. WHEN OPTION 909-0097-001 IS INCLUDED (FILAMENT VOLTAGE REGULATOR) #96 CONNECTS TO T5-7 AND #97 CONNECTS TO T5-1.


| | | | | |
|---|--|---|--|---|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | TOLERANCE UNLESS OTHERWISE SPECIFIED DECIMAL 2 PL = .01 3PL = .005 FRACTIONAL $\pm 1/64$ ANGULAR $\pm 1^\circ$ SHARP EDGES TO BE INDICATED SEND RADI FILLET RADI | DRAWN BY B.G. CHECKED BY PROJECT ENGR. JTH:Z APPROVED BY JTH | DATE 3-14-83 DATE 3-17-83 DATE 5-20-83 | BROADCAST ELECTRONICS INC. TITLE WIRING DIAGRAM BASE PLATE Dwg. No. 959-0119 TYPE A-W SCALE NA SHEET 1 OF 1 |
| | | MATERIAL SEE B/M #959-0119 TREATMENT OR FINISH | REV. G | |

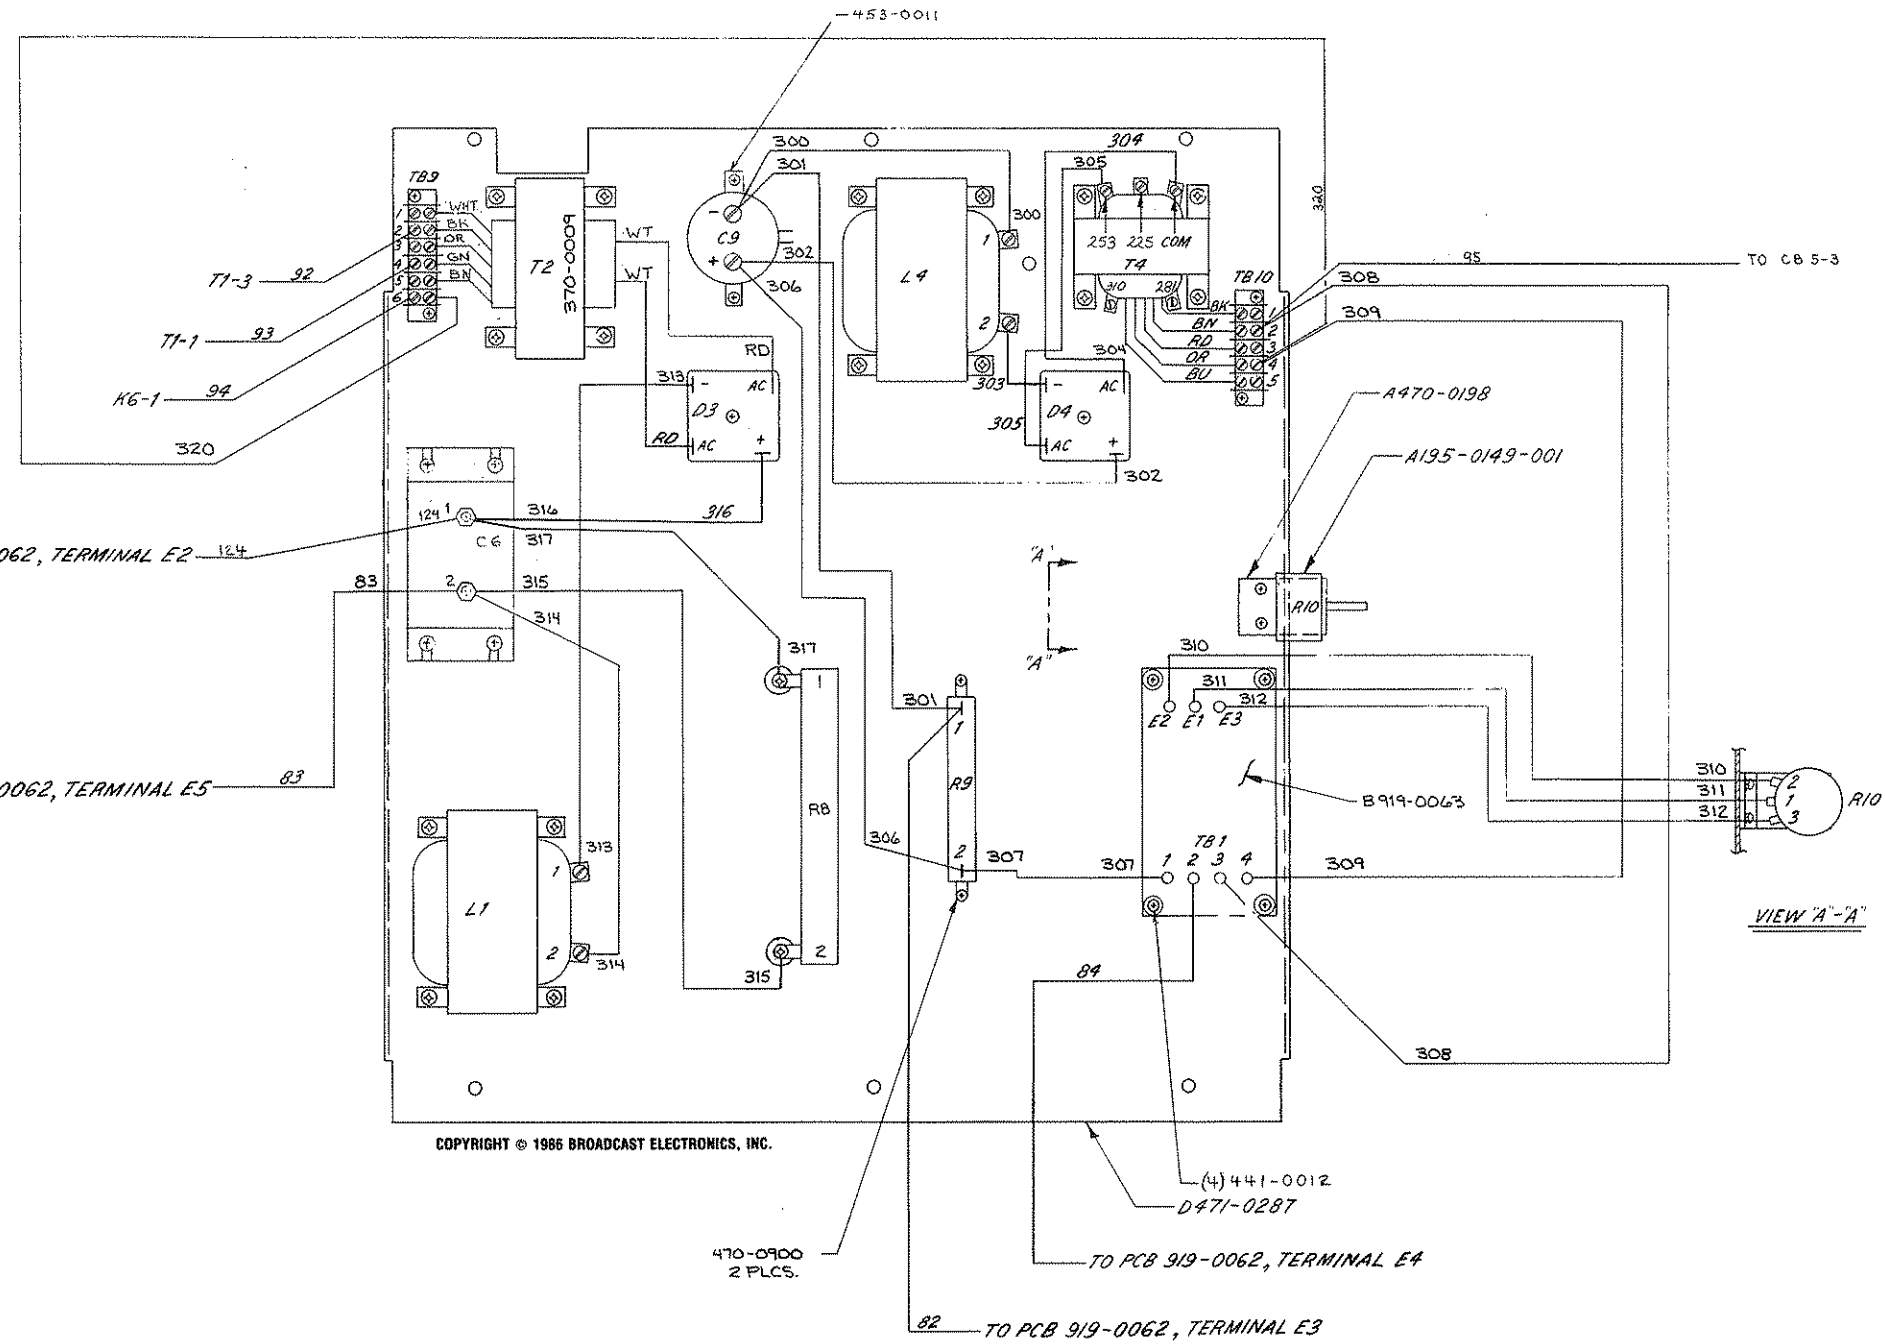

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

| | | | | | | |
|--|---|---|--|---|-----------------------------|--|
| <small>PROPRIETARY RIGHTS</small> are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | <small>TOLERANCE UNLESS OTHERWISE SPECIFIED</small> DECIMAL 2 PL = .01 3 PL = .005 FRACTIONAL ± 1/64 ANGULAR ± 1° SHARP EDGES TO BEND RADIUS FILLET RADIUS | <small>DRAWN BY</small> B.G. <small>CHECKED BY</small> <small>PROJECT ENGR.</small> Y.H. <small>APPROVED BY</small> M.H. | <small>DATE</small> 9-22-83 <small>DATE</small> <small>DATE</small> 7-26-83 <small>DATE</small> 7-27-83 | BROADCAST ELECTRONICS, INC. WIRING DIAGRAM SCREEN & BIAS SUPPLY PANEL | <small>REV. H</small> | |
| | <small>MATERIAL</small> SEE B/M # 959-0109 | <small>TREATMENT OR FINISH</small> | <small>DWG. NO.</small> 959-0109 <small>TYPE</small> W | <small>SCALE</small> FM 3.5A/5A NA | <small>SHEET 1 OF 1</small> | |
| | | | | | | |
| | | | | | | |

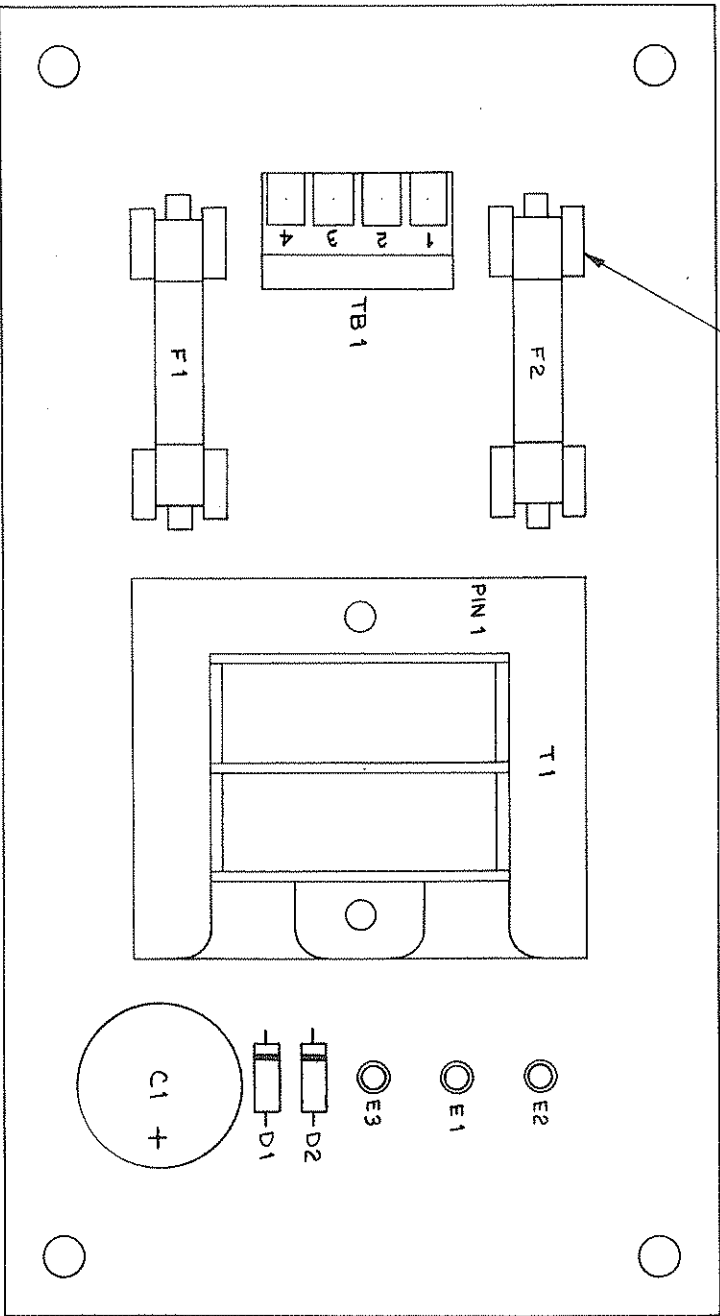

PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as approved in writing by BROADCAST ELECTRONICS, INC.

TOLERANCE UNLESS OTHERWISE SPECIFIED
 DECIMAL 2 PL ± .01 3PL ± .005
 FRACTIONAL ± 1/64
 ANGULAR ± 1°
 SHARP EDGES
 BEND RADIUS
 FILLET RADIUS

| | |
|-----------------|--------|
| DRAWN BY | DATE |
| BYM LAYDEN | 2-4-83 |
| CHECKED | DATE |
| PROJECT | DATE |
| ENGR. <i>MW</i> | 8-3-83 |
| APPROVED BY | |
| <i>MW</i> | |

BROADCAST ELECTRONICS INC.

TITLE: PCB ASSEMBLY
 HUM NULL

DWG. NO.: 919-0063


REV. A

FM3.5A/5A

SCALE: 2/1

SHEET 1 OF 1

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.
 SEE B/M #919-0063
 SEE SCHEMATIC # B919-0063

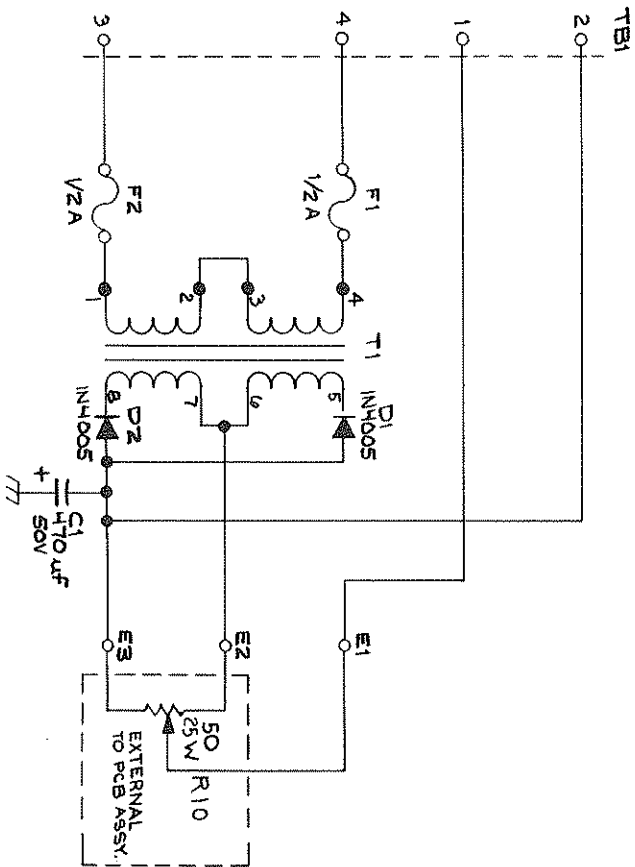

PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or specifically authorized in writing by BROADCAST ELECTRONICS, INC.

TOLERANCE UNLESS OTHERWISE SPECIFIED
 DECIMAL 2 PL ± 0.1 3 PL ± 0.05
 FRACTIONAL ± 1/64
 ANGULAR ± 1°
 SHARP EDGES
 TO
 FILLET RADI
 MATERIAL

| | | | |
|---------------------|-----|------|---------|
| DRAWN BY | JAH | DATE | 2-2-83 |
| CHECKED BY | | DATE | |
| PROJECT | FM | DATE | 7/10/83 |
| ENGR | | DATE | 8-3-83 |
| APPROVED BY | MH | | |
| TREATMENT OR FINISH | | | |

SEE PCB ASSY # B919-0003
 COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.


BROADCAST ELECTRONICS INC.

TITLE SCHEMATIC, HUM NULL PCB

DESIGN NO. 919-0003

SCALE 1 OF 1


REV. A

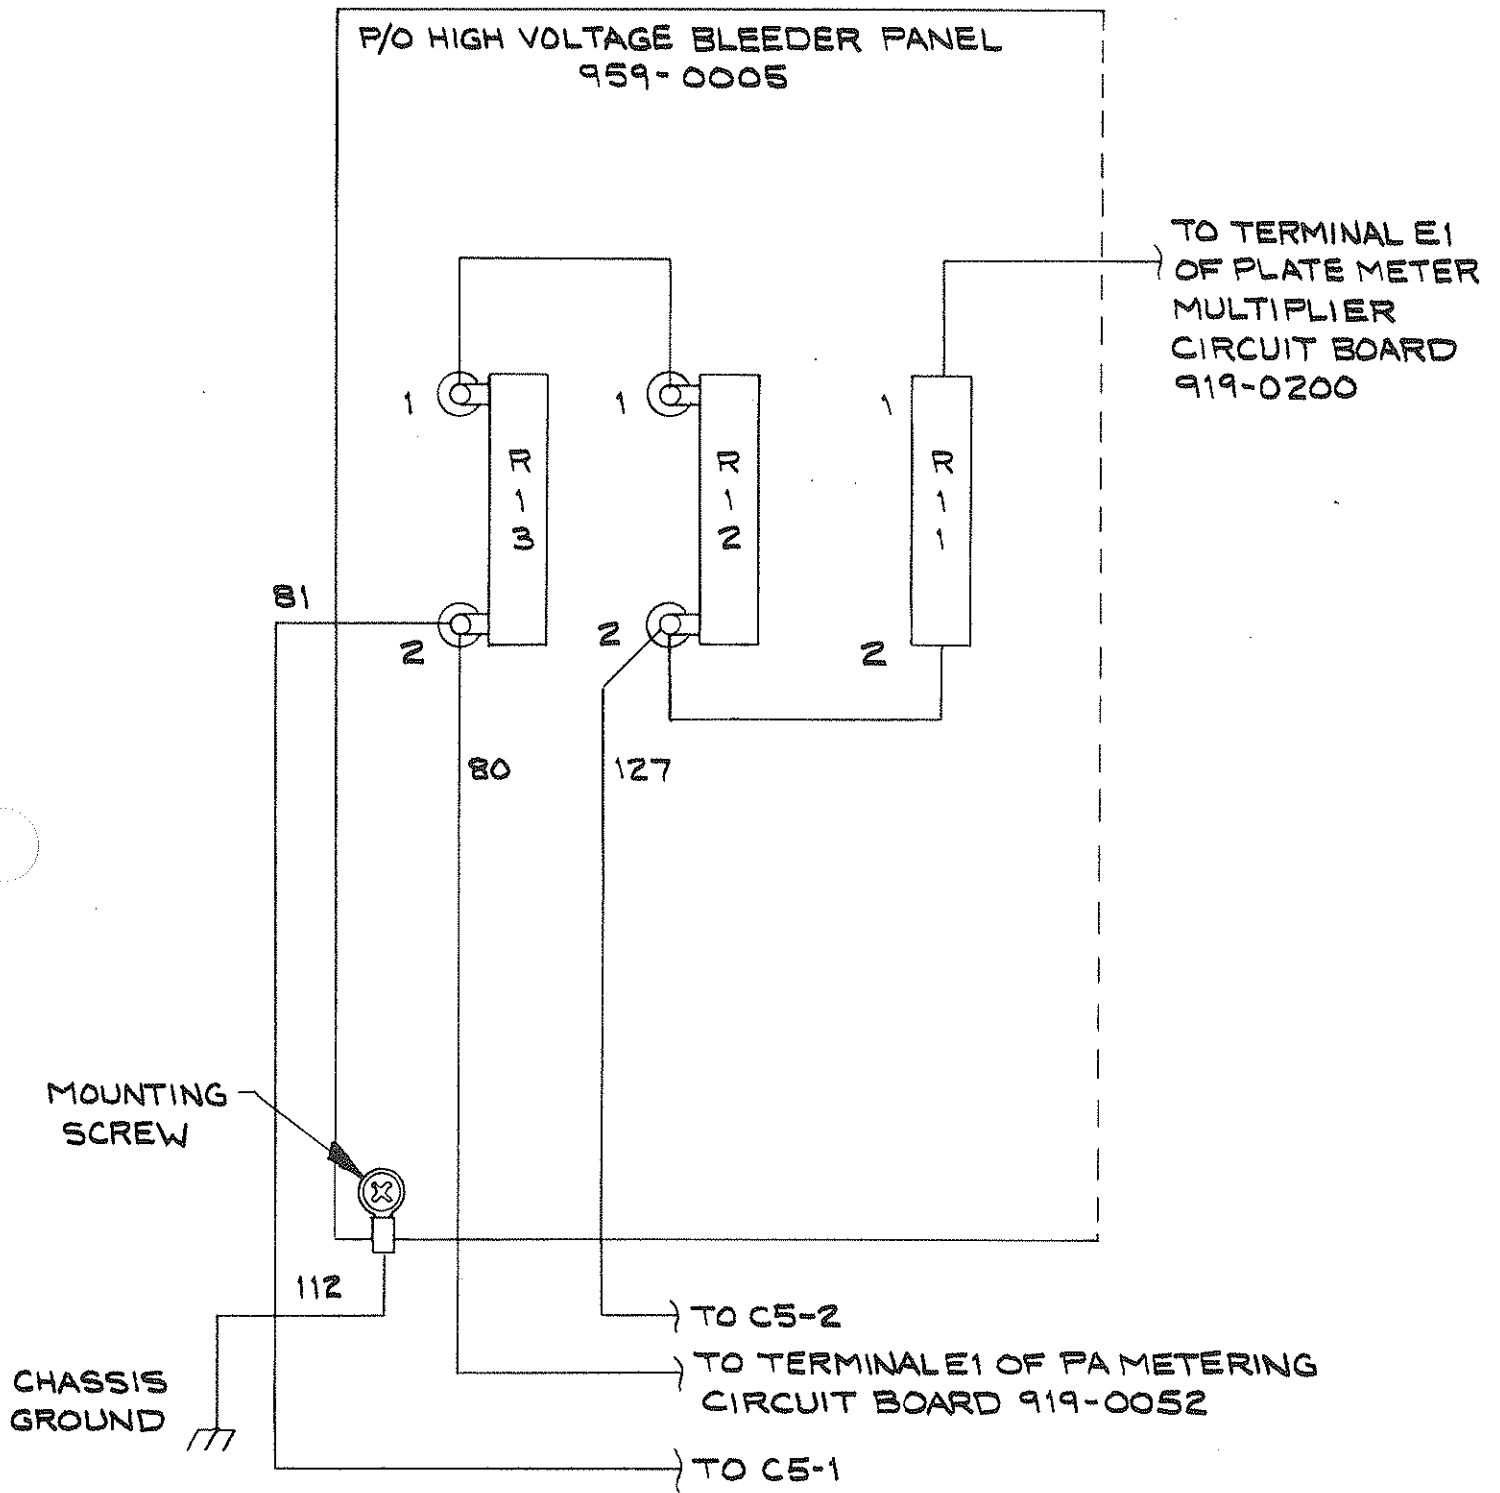


597-0032-26
COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

FIGURE 7-12. HIGH VOLTAGE BLEEDER PANEL WIRING

SEE SCHEMATIC # B919-0200

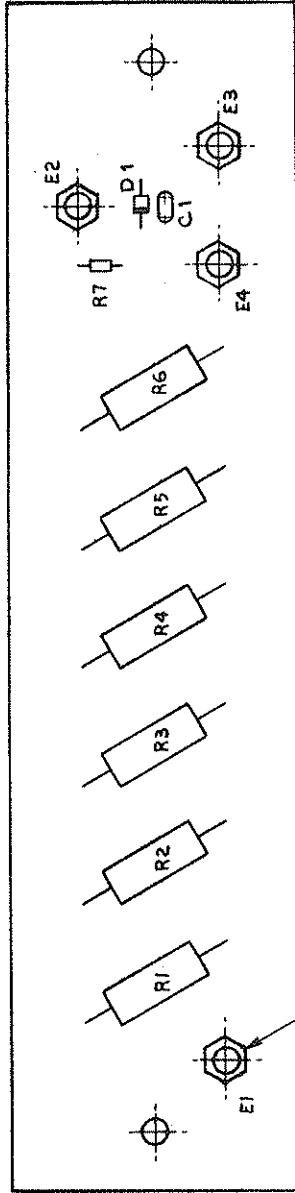



SEE DETAIL "A"
4 PLCS.

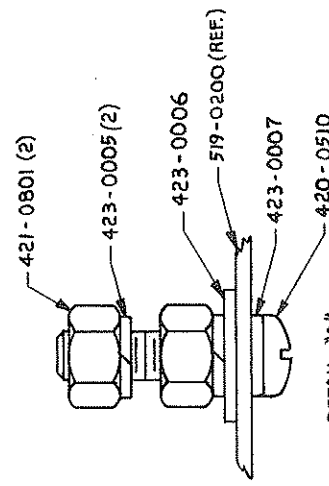


DETAIL "A"
SCALE 2:1
4 PLCS.

| | | | | |
|--|--|--|--|-----------------------------------|
| <p>PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC.</p> | | <p>TOLERANCE UNLESS OTHERWISE SPECIFIED DECIMAL 2 PLACES FRACTIONS 1/64 ANGULAR ± 1° SHARP EDGES BEND RADIUS FILLET RADIUS</p> | <p>DATE 1-27-83 DATE DATE 5-18-83 DATE 5-20-83</p> | <p>BROADCAST ELECTRONICS INC.</p> |
| <p>DRAWN BY CHECKED BY PROJECT ENGR. APPROVED BY</p> | <p>DATE 1-27-83 DATE DATE 5-18-83 DATE 5-20-83</p> | <p>TITLE PCB ASSEMBLY METER MULTIPLIER</p> | <p>DWG. NO. 919-0200</p> | <p>REV. A</p> |
| <p>TREATMENT OR FINISH</p> | | <p>SCALE 1/1</p> | <p>FM 3.5/5A</p> | <p>SHEET 1 OF 1</p> |
| <p>MATERIAL SEE B/M # 919-0200</p> | | | | |

DETAIL 'B'

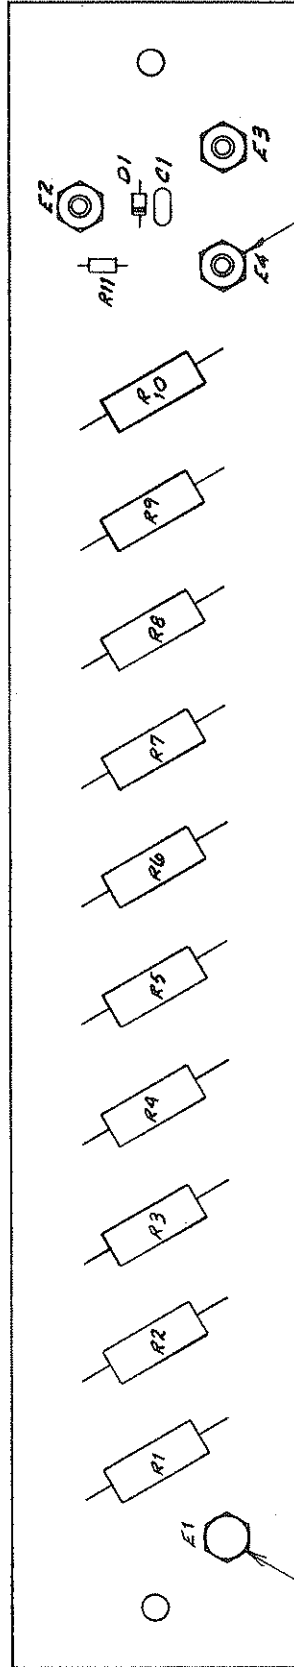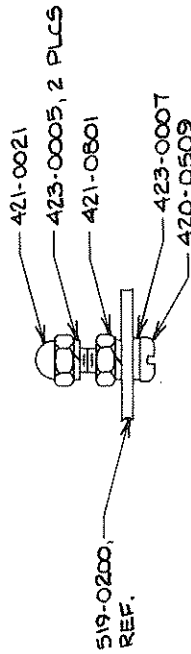


SEE DETAIL 'B'

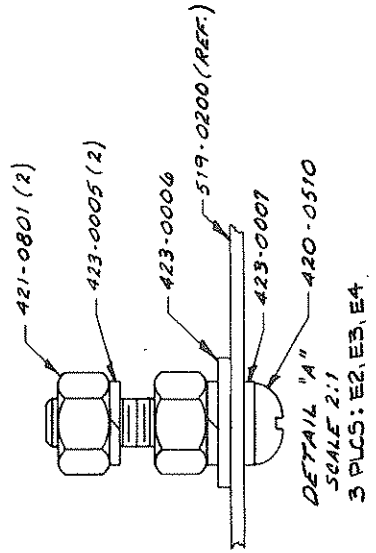

SEE SCHEMATIC #B919-0079


| | | | | | |
|---|--|---|---|--|--|
| <p>PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence, and no part of this document shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC.</p> | | <p>TOLERANCE UNLESS OTHERWISE SPECIFIED DECIMAL 2 PL ± .01 3 PL ± .005 FRACTIONAL ± 1/64 ANGULAR ± 1° SHARP EDGES FILLET RADIUS FILLET RADIUS</p> | <p>DRAWN BY: <i>MIRAZEL</i> CHECKED BY: <i>[Signature]</i> DESIGNED BY: <i>[Signature]</i> ENGR. APPROVED BY: <i>[Signature]</i></p> | <p>DATE: 1-20-84 DATE: 7-23-84 DATE:</p> | <p>BROADCAST ELECTRONICS INC. TITLE: PCB ASSEMBLY METER MULTIPLIER</p> |
| <p>MATERIAL: SEE BMA 919-0079</p> | | <p>TREATMENT OR FINISH:</p> | <p>REV. B</p> | <p>REV. B</p> | <p>SCALE: 1/1</p> |
| <p>519-0200 REF.</p> | | <p>519-0079</p> | <p>519-0079</p> | <p>519-0079</p> | <p>SHEET 1 OF 1</p> |

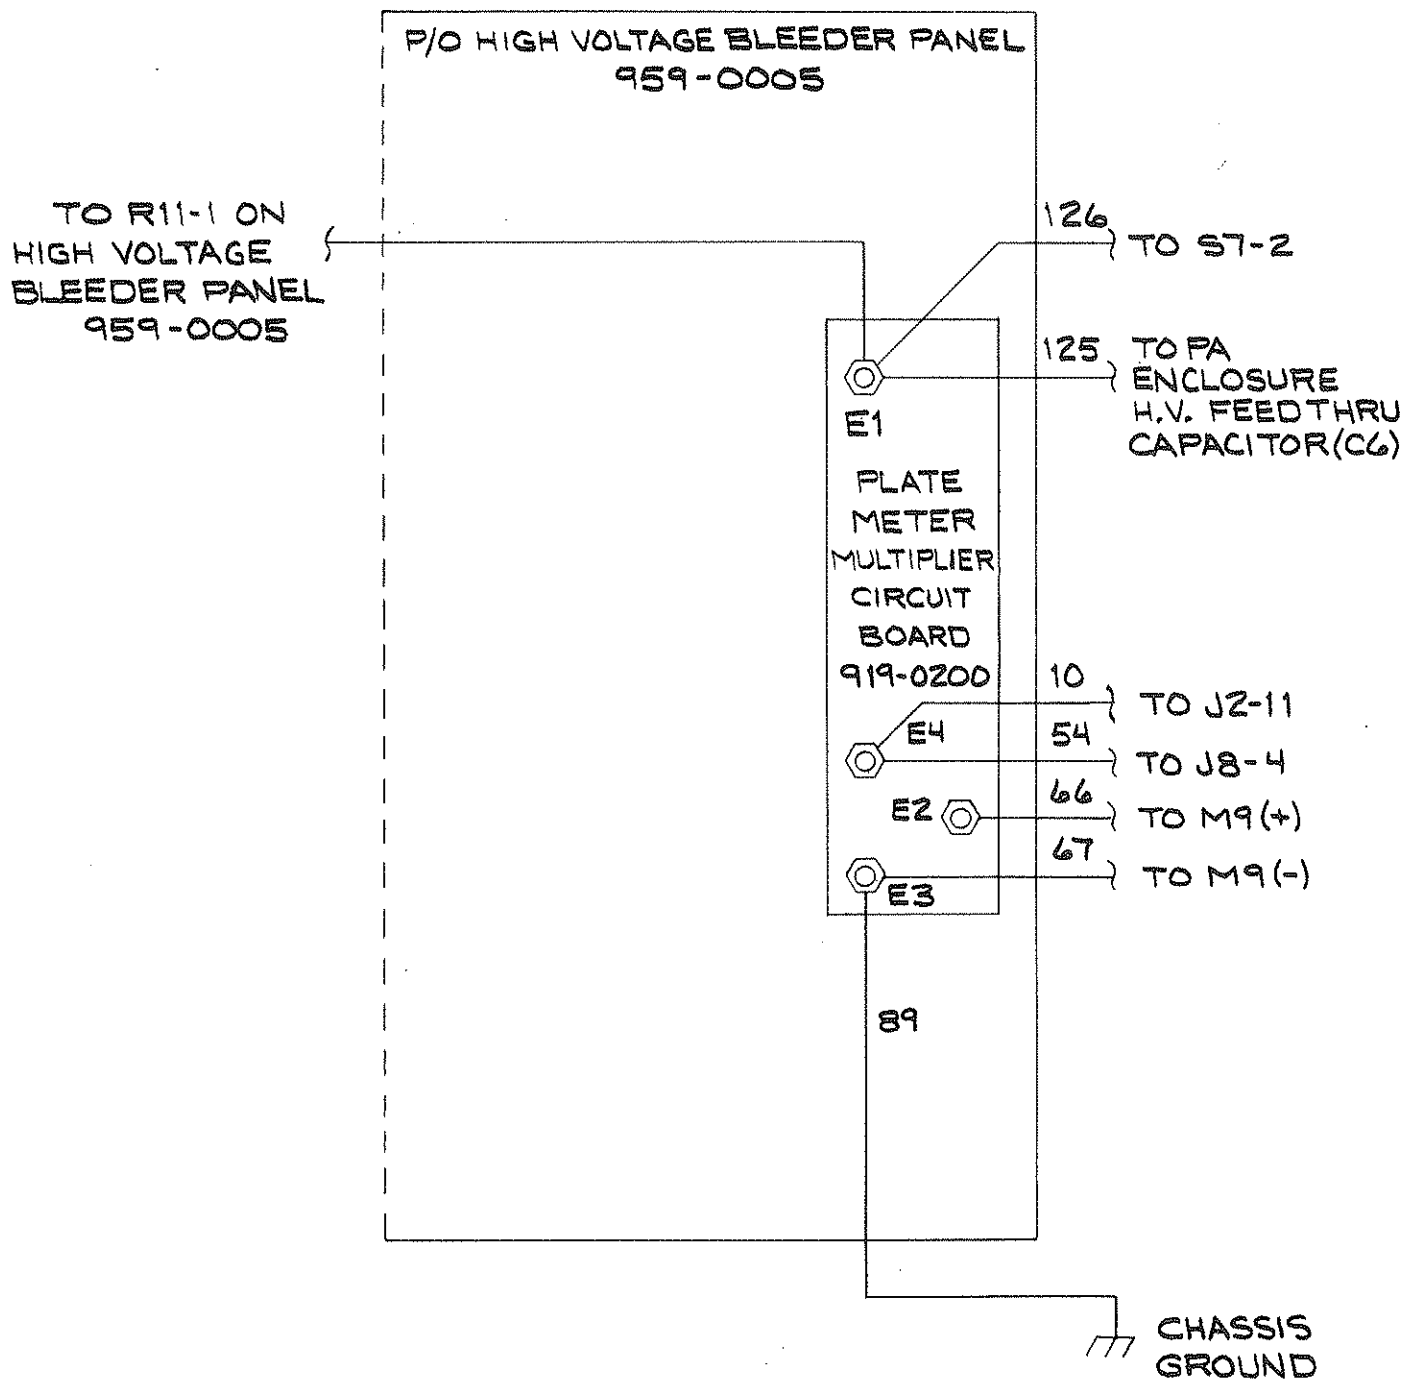

597-0032-27

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.


FIGURE 7-17. PLATE METER MULTIPLIER CIRCUIT BOARD WIRING.

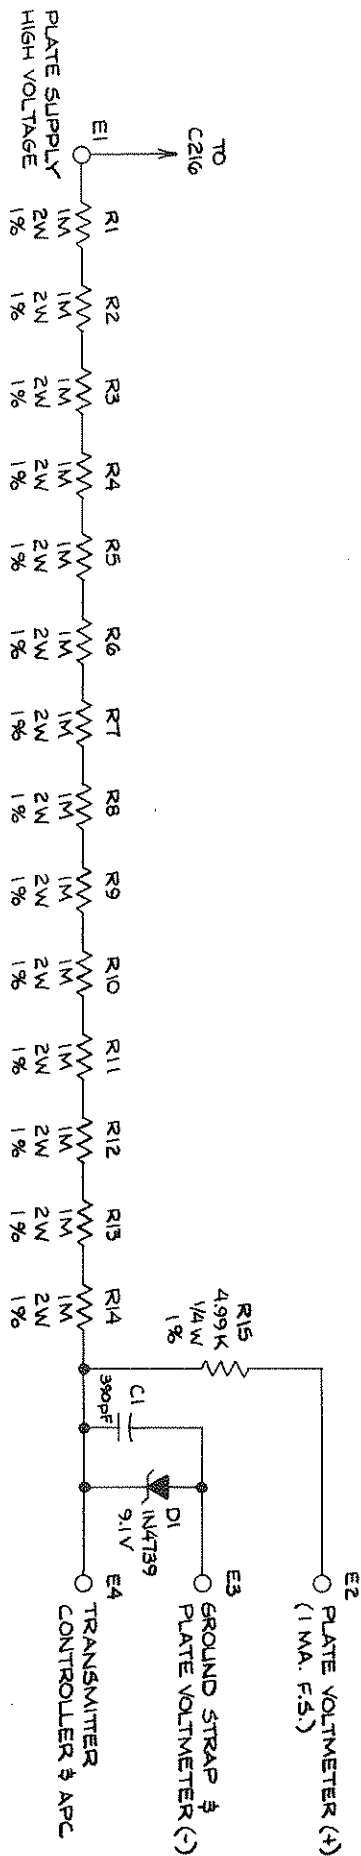

- NOTES:
- 1) ALL RESISTORS IN OHMS
 - 2) LAST COMPONENTS USED: C1, D1, E4, R15
 - 3) SEE ASSY: * AB 919-0097


COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

| | | | | | |
|---|--|---|--|---|--|
| PROPRIETARY RIGHTS are included in this document. No part of this document is to be reproduced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without the prior written permission of BROADCAST ELECTRONICS, INC. | | DWN. BY WSE 2-4-86 | | MATERIAL | |
| CHND 77H 4-9-86 | | ME <i>[Signature]</i> | | FINISH | |
| PROJ. ENGR. <i>[Signature]</i> | | MFG. 6-9-86 | | NEXT ASSY. | |
| TOLERANCE (DECIMAL) U.O.S. .x ± .030 .xxx ± .005 .xx ± .015 ANGLES ± 1 | | TITLE SCHEMATIC, METER MULTIPLIER | | TYPE SIZE DWG. NO. S 919-0097 | |
| MODEL FM35A | | SCALE ~ | | SHEET 1 OF 1 | |
| BROADCAST ELECTRONICS, INC. 4100 N. 24TH ST., P.O. BOX 3906, GURNEE, IL 62305 217/224-8500 TELEEX 250142 CABLE BROADCAST | | REV A | | | |

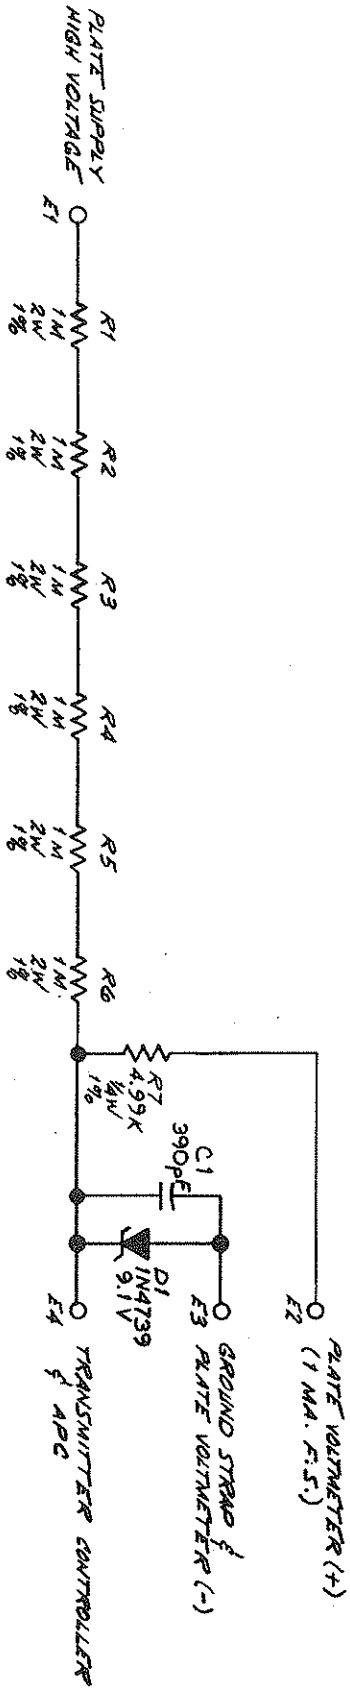

- NOTES:
1. ALL RESISTORS IN OHMS.
 2. LAST COMPONENTS USED: C1, E4, R7, D1.
 3. SEE ASSEMBLY # C919-0200
SEE BOM # 919-0200

| | |
|---|--|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | |
| TOLERANCE UNLESS OTHERWISE SPECIFIED DECIMAL 2 PL. 91 98±.005 FRACTIONAL ±1/64 ANGULAR ±1° SHARP EDGES FILED RADII | SYSTEM BY <u>W. K. F. J. E. Z.</u> DATE <u>2-2-83</u> CHECKED BY _____ DATE _____ PROJECTED BY <u>W. K. F. J. E. Z.</u> DATE <u>5-18-83</u> ENGR. APPROVED BY <u>MM</u> DATE <u>5-20-83</u> |
| MATERIAL _____ TREATMENT OR FINISH _____ | TITLE BROADCAST ELECTRONICS INC. SCHEMATIC - PLATE METER MULTIPLIER PCB DWG. NO. 919-0200 FM 9.5/5A SCALE _____ SHEET 1 OF 1 REV. A |

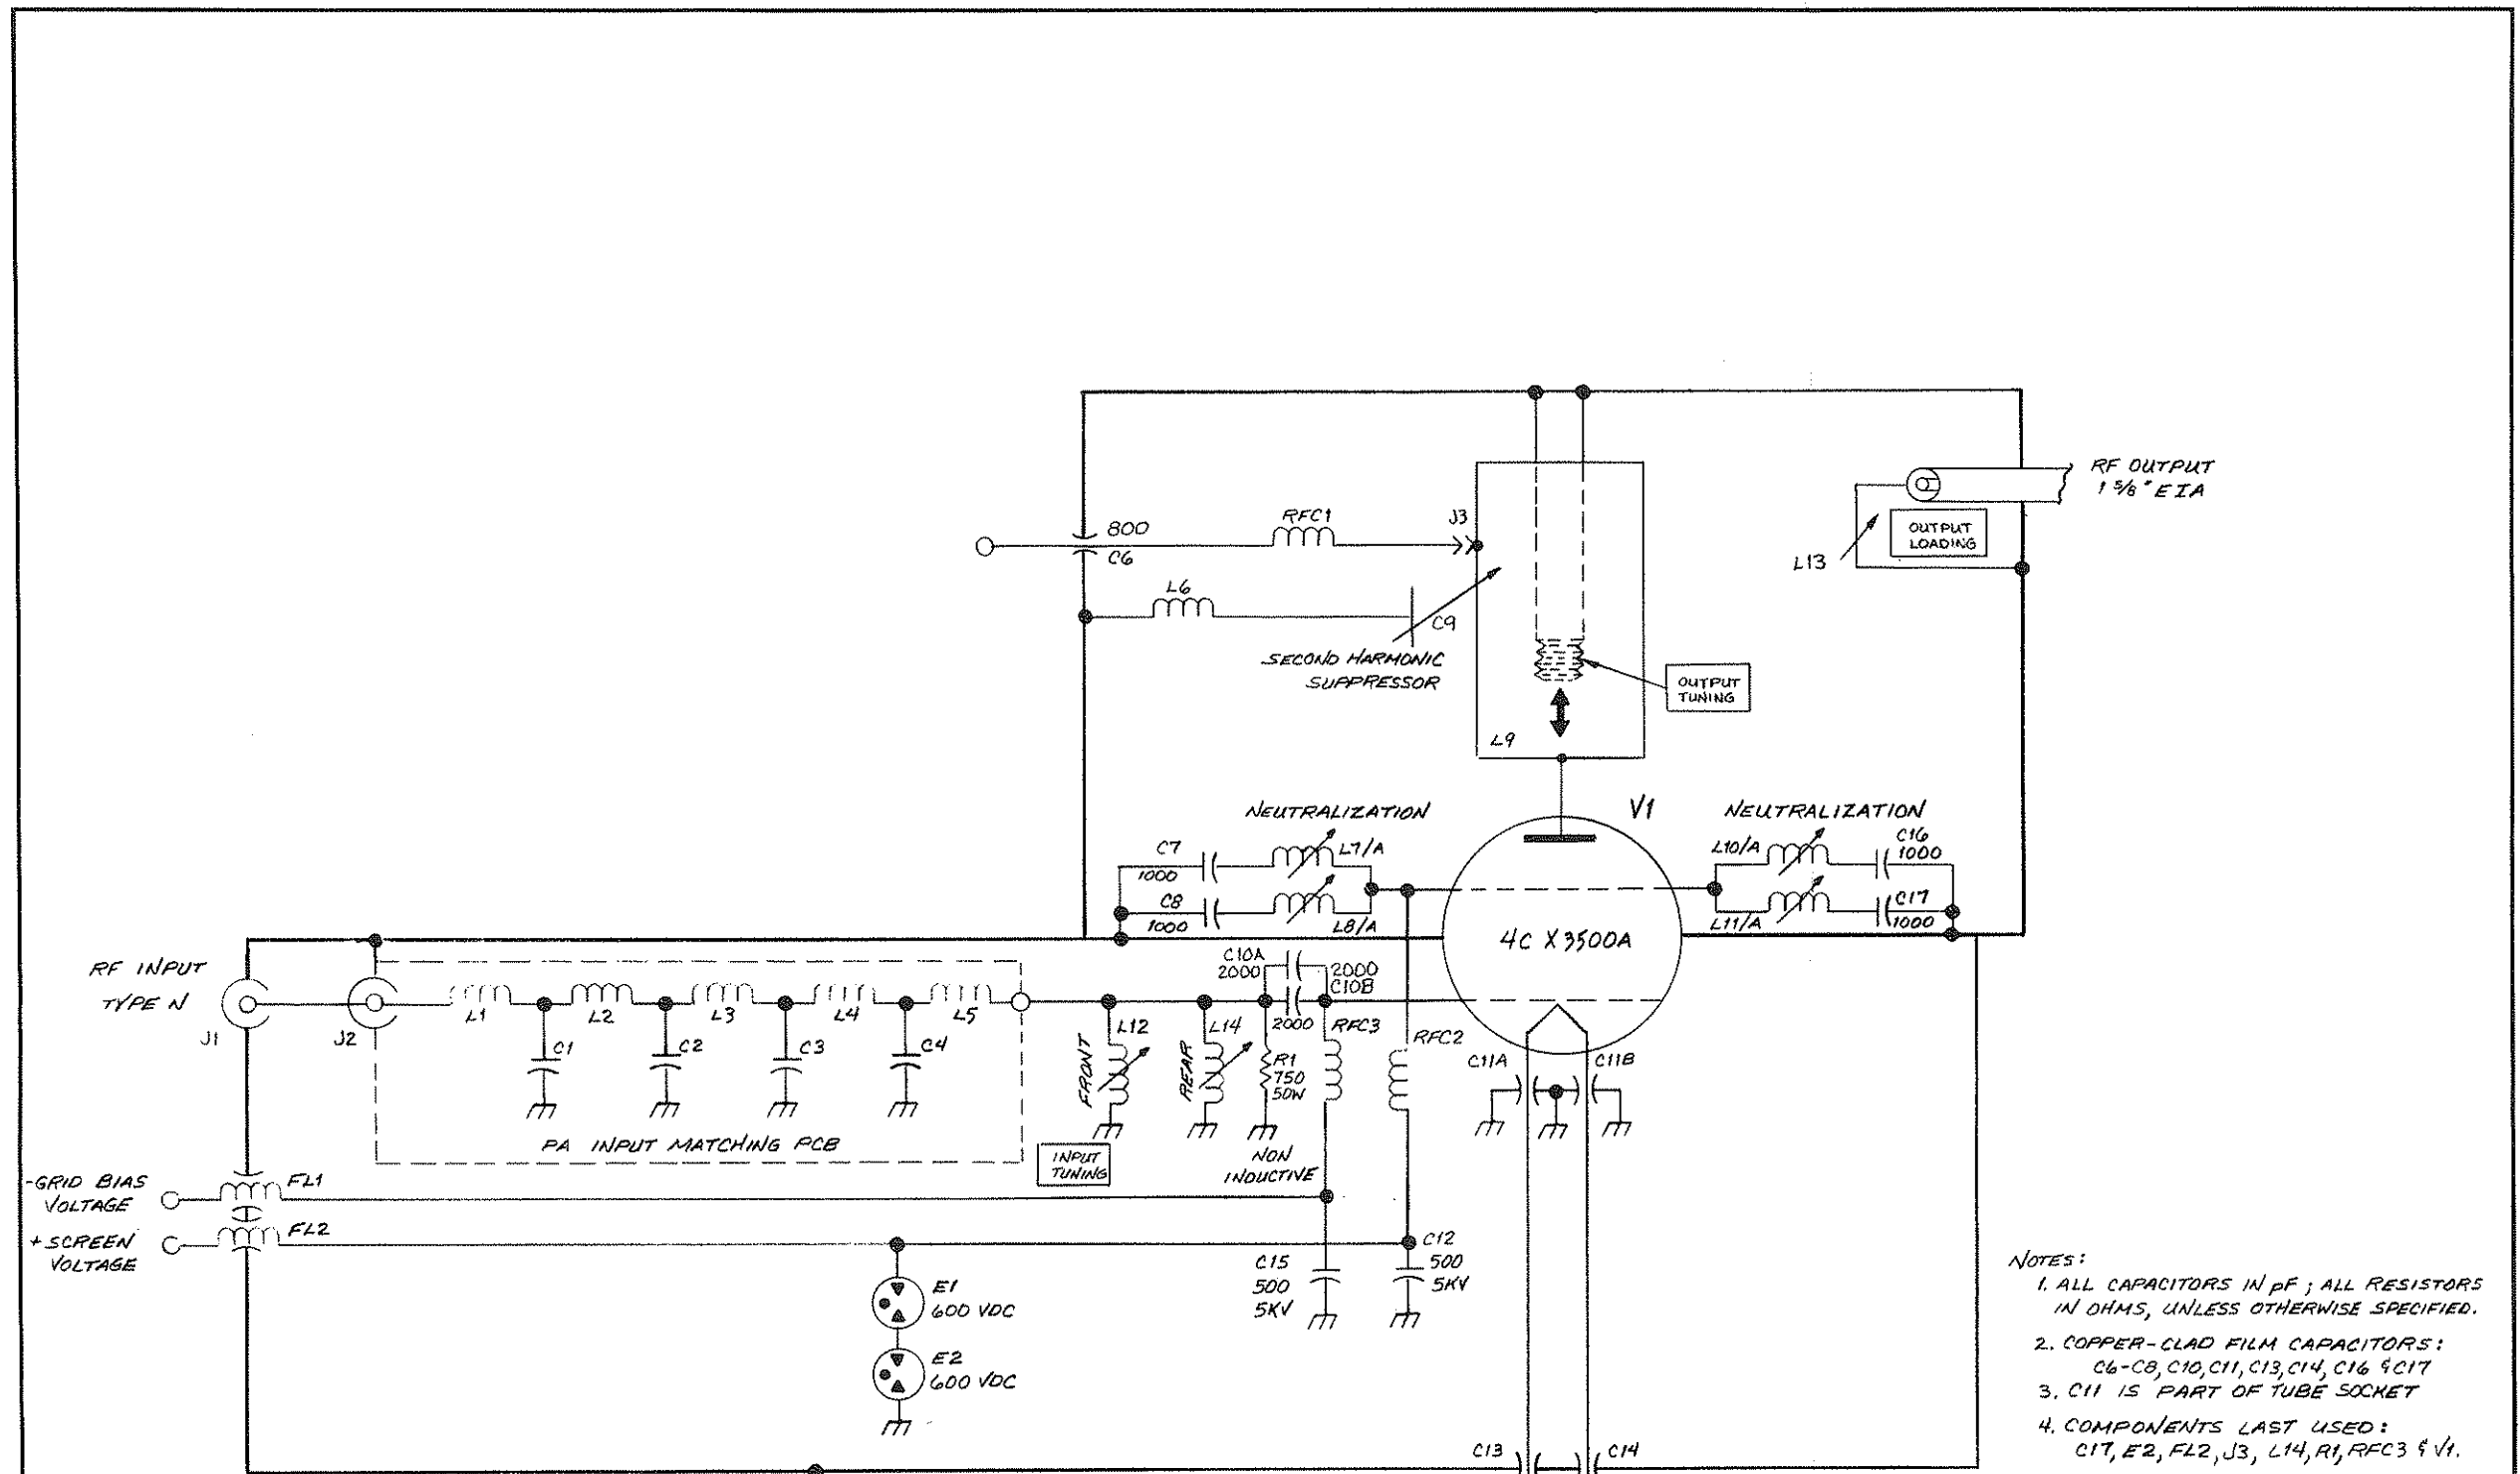


COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

- NOTES:
1. ALL CAPACITORS IN pF; ALL RESISTORS IN OHMS, UNLESS OTHERWISE SPECIFIED.
 2. COPPER-CLAD FILM CAPACITORS: C6-C8, C10, C11, C13, C14, C16 & C17
 3. C11 IS PART OF TUBE SOCKET
 4. COMPONENTS LAST USED: C17, E2, FL2, J3, L14, R1, RFC3 & V1.

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

| | | | |
|---|---------------------------------|--|--|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | DWN. BY MJDRF 9-14-85 | MATERIAL | BROADCAST ELECTRONICS INC. 4100 N. 24TH ST., P.O. BOX 3606 QUINCY, IL 62305 217/224-9600 TELEX 250142 CABLE BROADCAST |
| | CHKD <i>JMR</i> 7-20-83 | FINISH | |
| TOLERANCE (DECIMAL) U.O.S. .x ± .030 .xxx ± .005 .xx ± .015 ANGLES ± 1° | ME <i>JMR</i> 7-20-83 | TITLE SCHEMATIC PA RF ENCLOSURE | TYPE S |
| MFG. | NEXT ASSY. | DWG. NO. 959-0106 | REV C |
| | | MODEL FM 3.5A/5A | SCALE N75 |
| | | | SHEET 1 OF 1 |


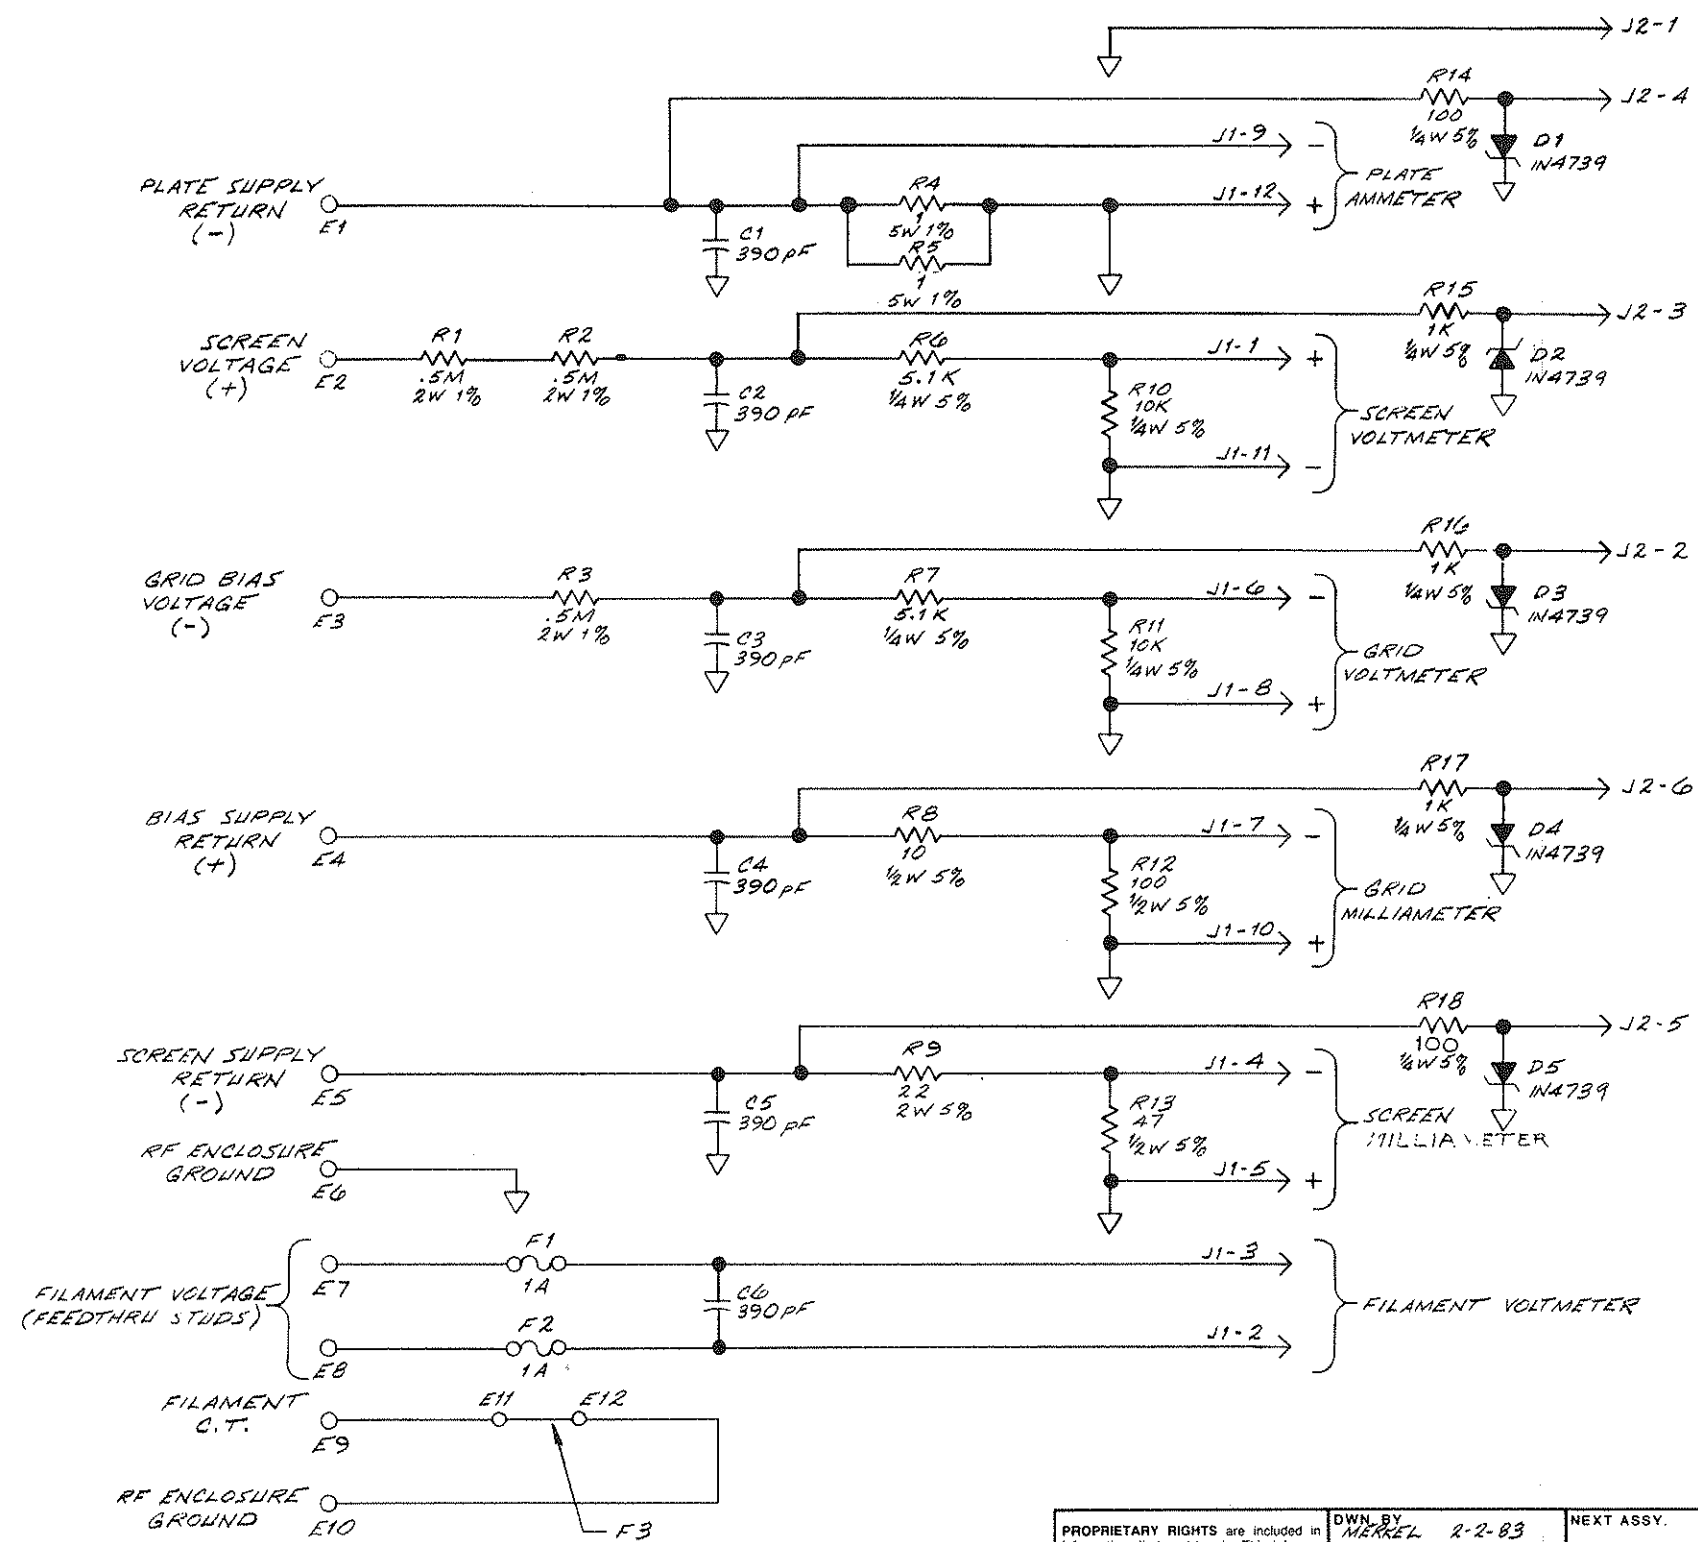


- NOTES:
1. ALL RESISTORS IN OHMS.
 2. LAST COMPONENTS USED: C6, E12, F2, J2, R18, D5.
 3. SEE ASSEMBLY #C919-0062 SEE BIM # 919-0062
 4. J2 TO TRANSMITTER CONTROLLER J2.
 5. J1 TO METER PANEL.
 6. J2-1, J2-5 ALSO TO APC.

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

F3 FUSIBLE LINK
630-2806
(2" LONG)

| | | | |
|---|-------------------------------------|--|---|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | DWN. BY MERREL 2-2-83 | NEXT ASSY. 919-0062 | BE BROADCAST ELECTRONICS INC. 4100 N. 24TH ST. QUINCY, IL 62305 217/224-9600 TELEX 260142 CABLE BCST ELECT QUI |
| | CHKD. | PRODUCT USED ON FM3.5/5A | |
| | ME EE PROJ. ENGR. JMK 6-17-83 | FINISH | |
| | DFTG. SUPVR. MFG. | TITLE SCHEMATIC - RA. METERING PCB | |
| TOLERANCE (DECIMAL) U.S. .X ± .030 .XXX ± .005 .XX ± .015 ANGLES ± 1° | SHEET 1 OF 1 SCALE REV C | TYPE SIZE DWG. NO. 5 C 919-0062 | |

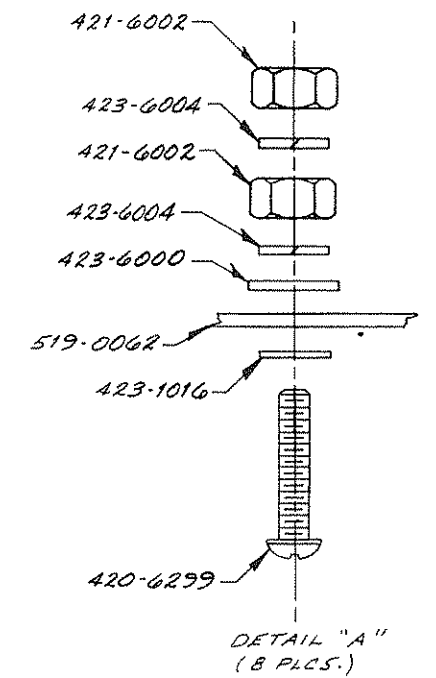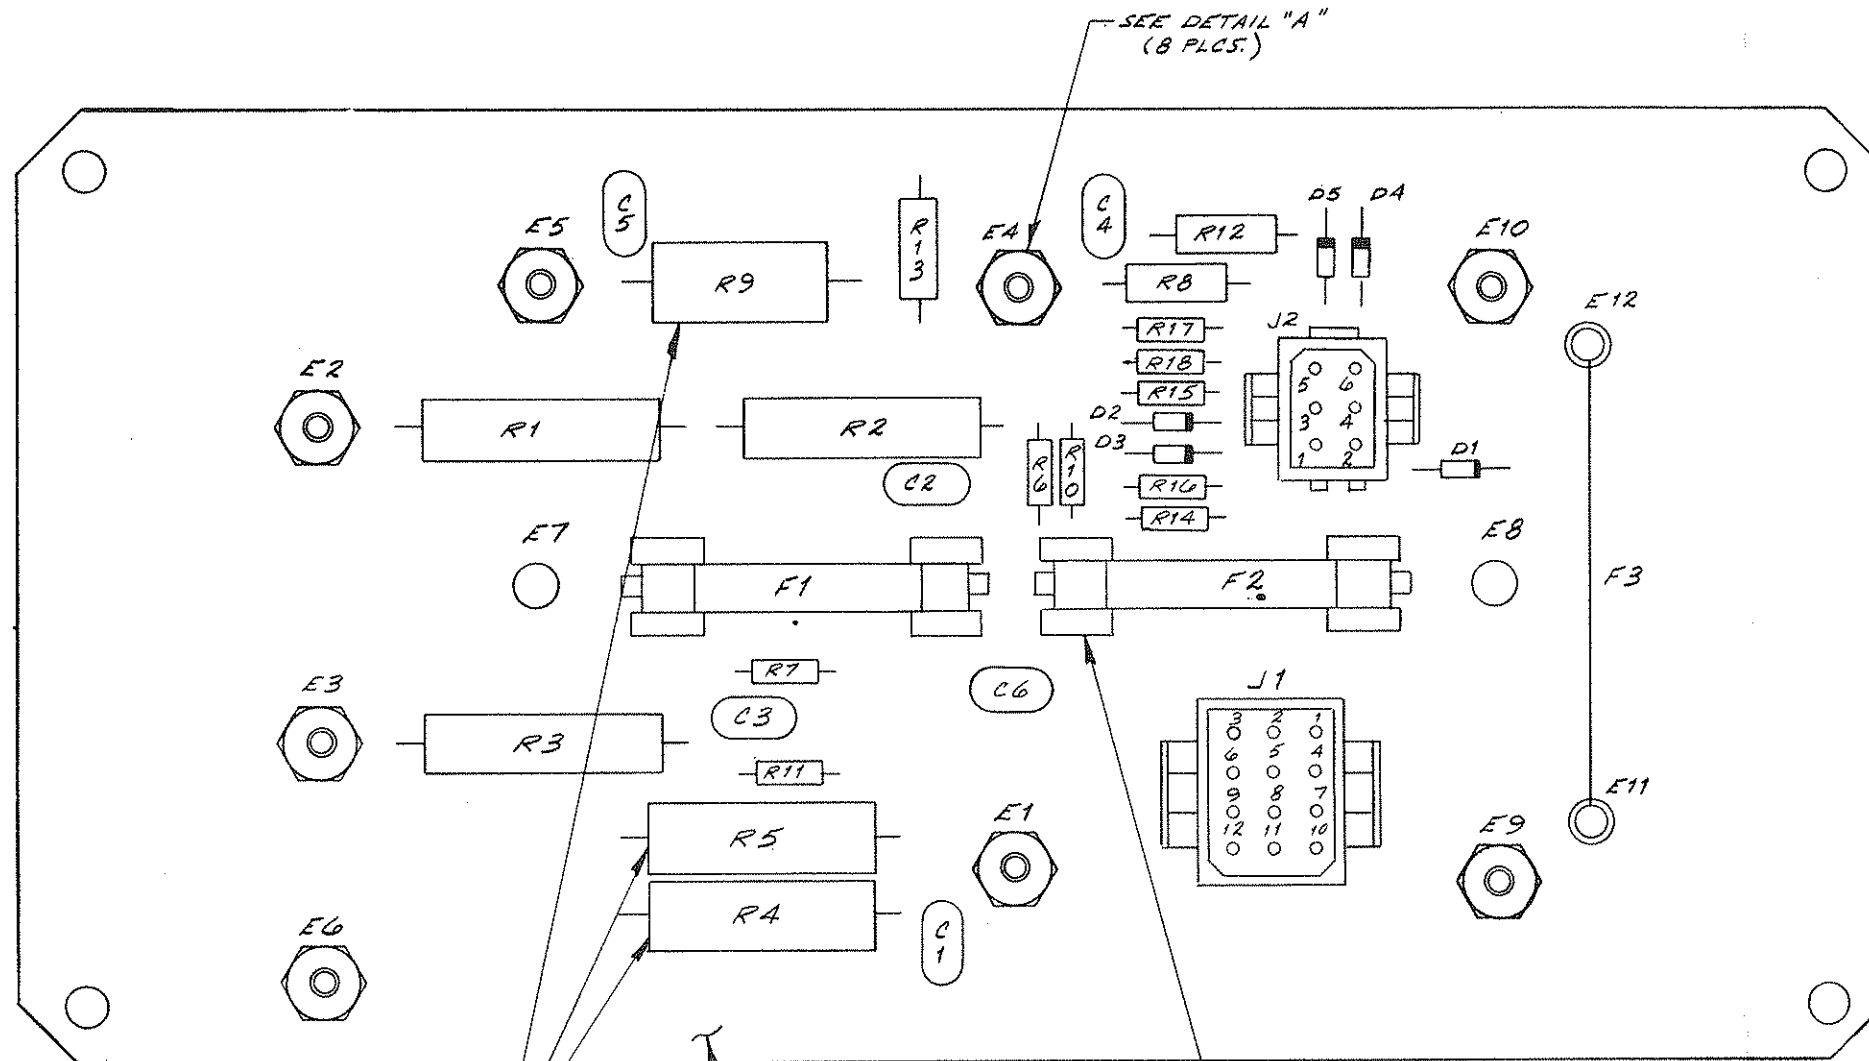


COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

SEE SCHEMATIC # C919-0062
SEE B/M #919-0062

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

| | | | | | |
|---|------------------------------------|------------------------------|---|--|--|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | DWN. BY MERKEL 2-7-83 | NEXT ASSY. | B3 BROADCAST ELECTRONICS INC. 4100 N. 24TH ST. QUINCY, IL 62305 217/224-9600 TELEX 250142 CABLE BCST ELECT QUI | TITLE PCB ASSEMBLY - P.A. METERING BD. | SHEET 1 OF 1 SCALE 2/1 REV D |
| | CHKD. | PRODUCT USED ON FM 3.5/5A | | | |
| | ME | PROJ. ENGR. S. J. ... | FINISH | | |
| | EE | DFTG. SUPVR. 5-20-83 MFG. | | | |
| TOLERANCE (DECIMAL) U.S. .X ± .030 .XXX ± .005 .XX ± .015 ANGLES ± 1° | TYPE SIZE DWG. NO. A C 919-0062 | | | | |

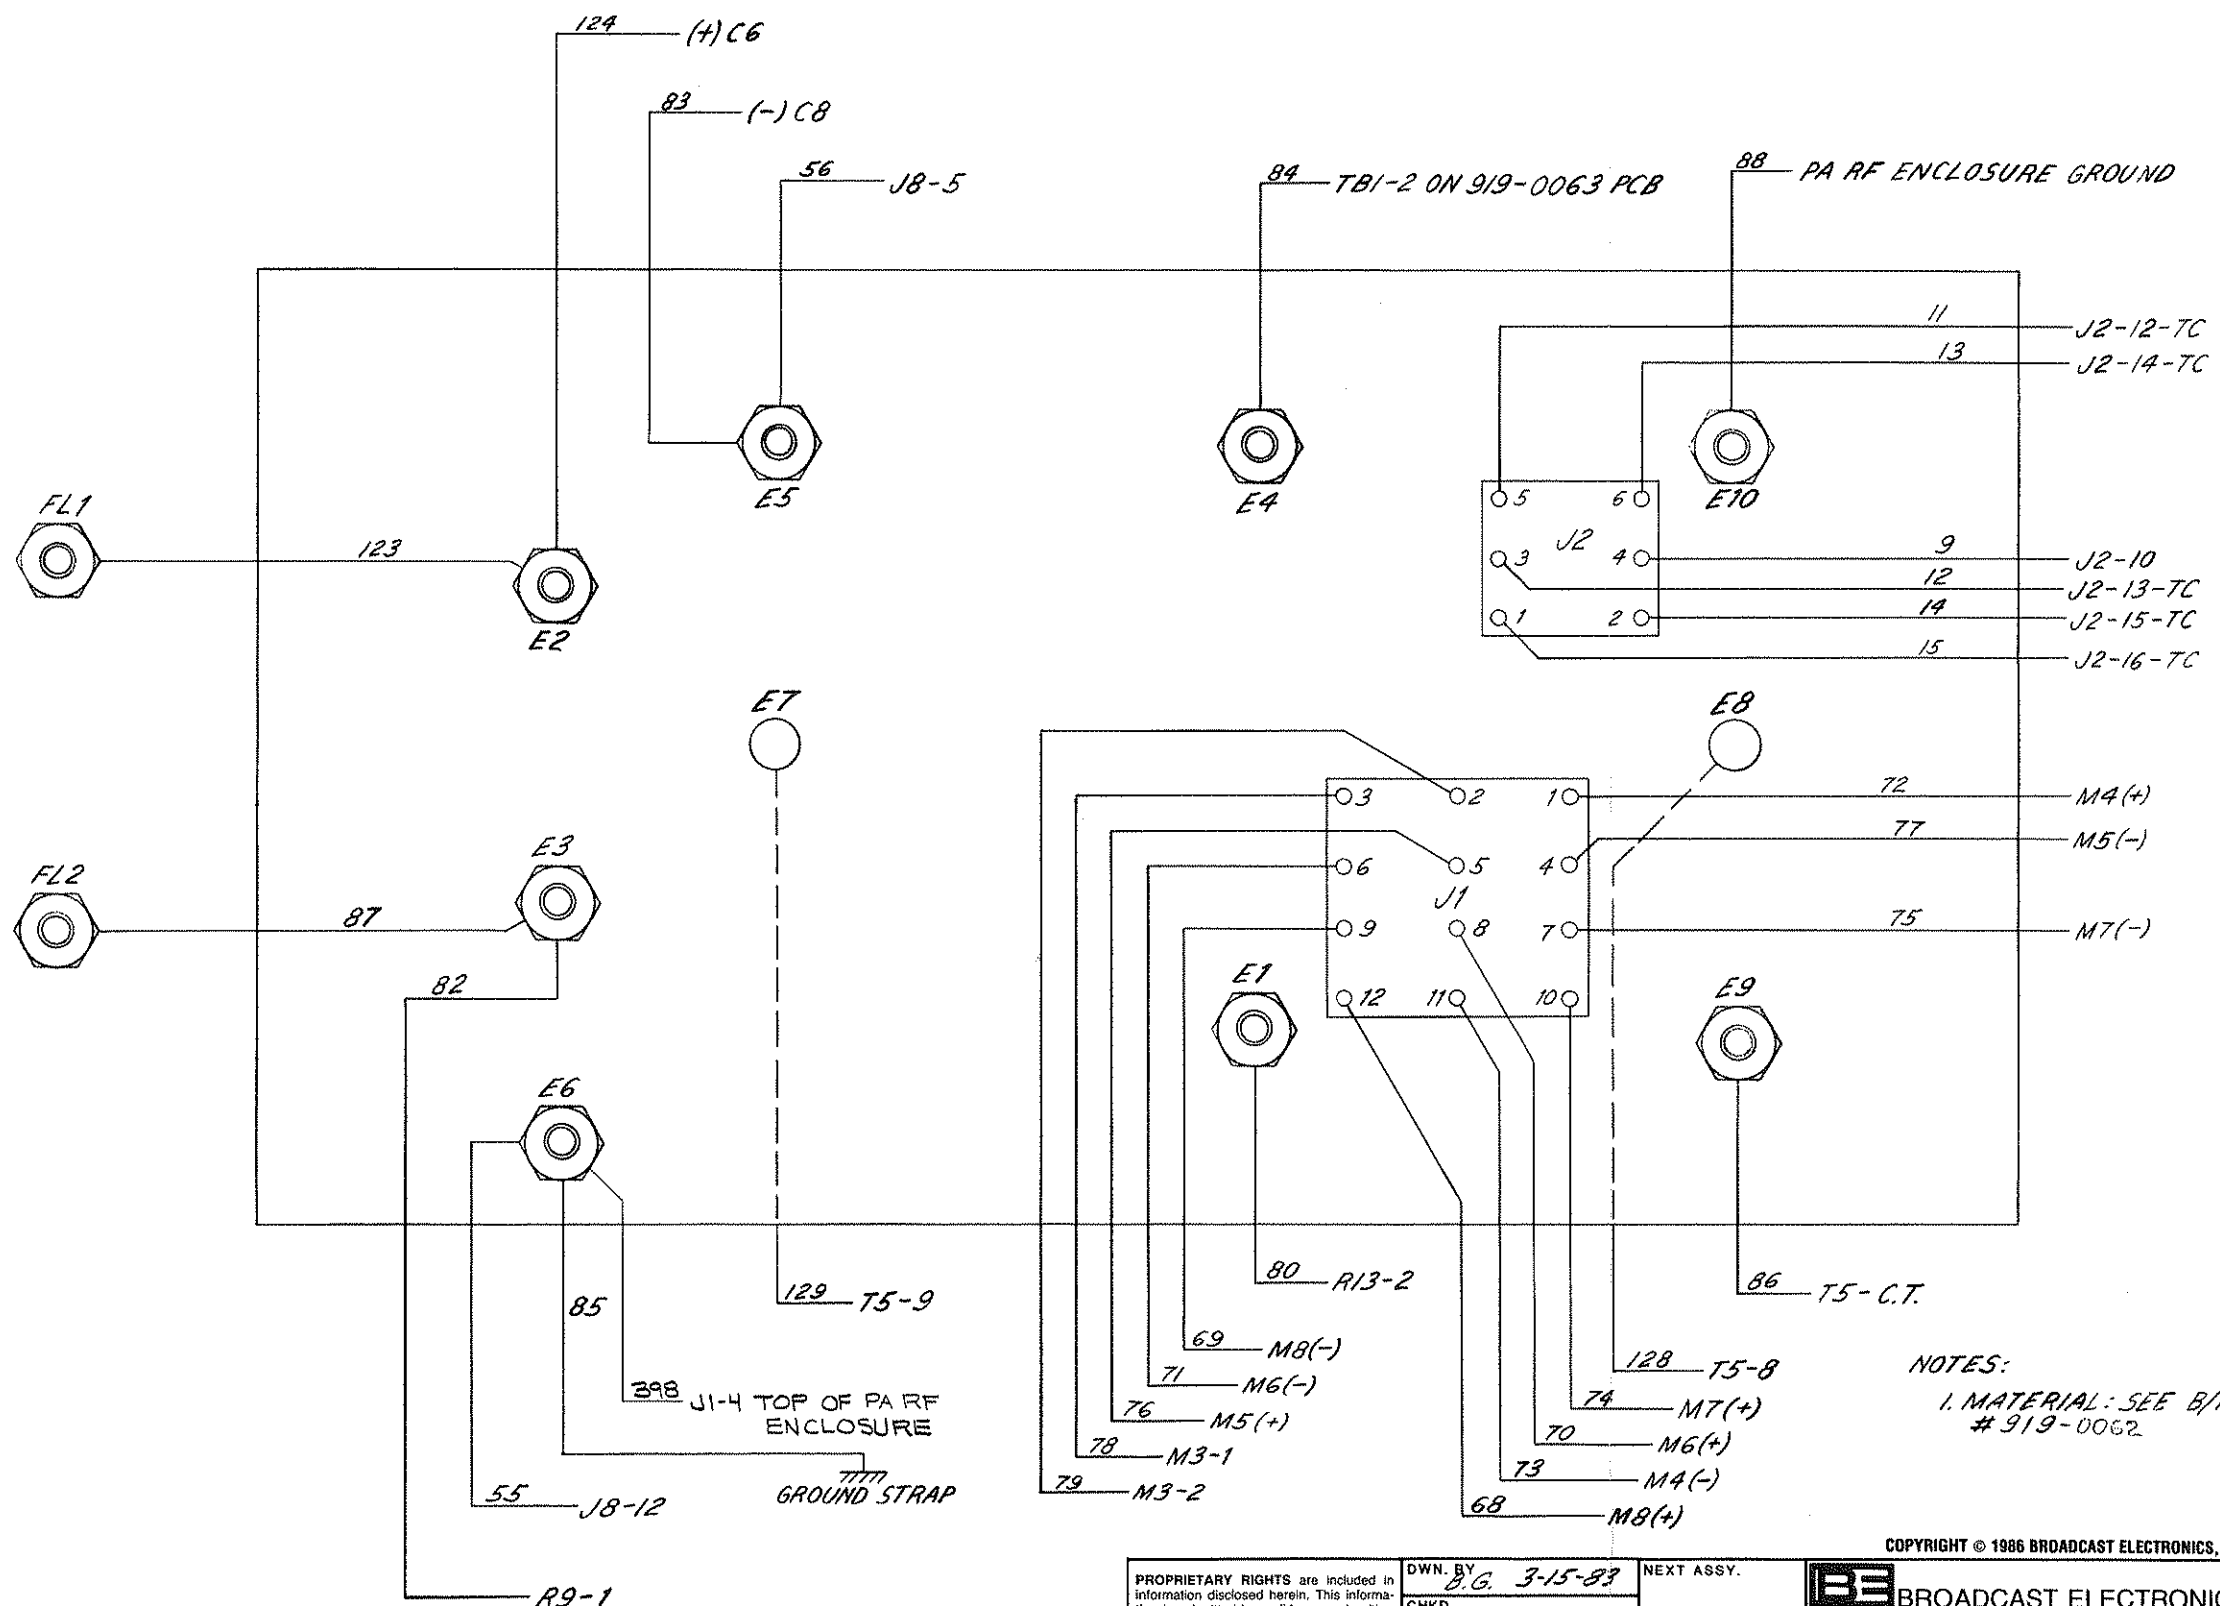


NOTES:
1. MATERIAL: SEE B/M # 919-0062.

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

| | | | | | | | |
|---|--------------------------------------|--|-------------------------|---|--|------------------------------------|-----------------|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | | DWN. BY <i>B.G. 3-15-83</i> | NEXT ASSY. | BE BROADCAST ELECTRONICS INC. 4100 N. 24TH ST. QUINCY, IL 62305 217/224-9600 TELEX 250142 CABLE BCST ELECT QUI | TITLE WIRING DIAGRAM P.A. METERING PCB | SHEET 1 OF 1 SCALE <i>NA</i> | REV <i>C</i> |
| ME <i>[Signature]</i> 6/23/83 EE <i>[Signature]</i> 6-27-83 PROJ. ENGR <i>[Signature]</i> 6-27-83 | PRODUCT USED ON FM 3.5A/5A | FINISH <i>[Signature]</i> | TYPE SIZE W C | | | | |
| TOLERANCE (DECIMAL) U.O.S. .x ± .030 .xxx ± .005 .xx ± .015 ANGLES ± 1° | | DFTG. SUPVR. <i>[Signature]</i> 6-24-83 | MFG. | | | | |

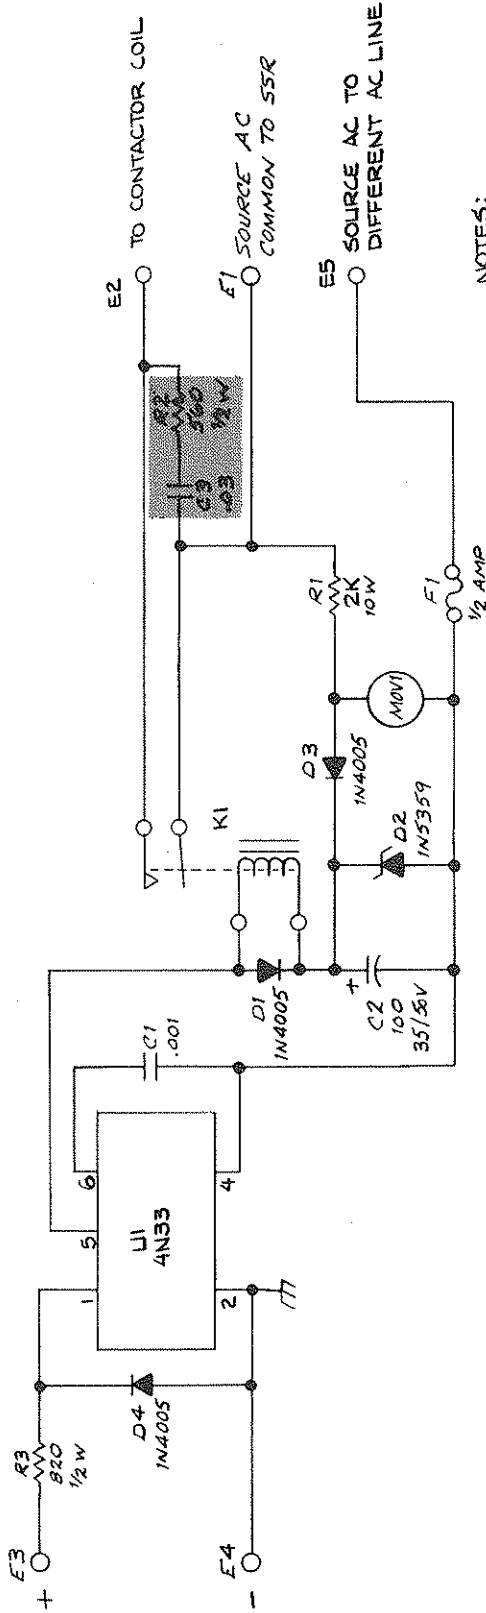


REQUIRES 4000 Ω FOR 3 Ø TRANSFORMERS

NOTES:

- 1) ALL RESISTORS IN OHMS, 1/4 W, 5 %, ALL CAPACITORS IN MICROFARADS, U.O.S.
- 2) COMPONENTS LAST USED: R3, C3, D4 S1, U1, F1, MOV1
- 3) SEE ASSY AC: 919-0096
- 4) SHADED COMPONENTS NOT USED ON 919-0096-001

COPYRIGHT © 1985 BROADCAST ELECTRONICS, INC.

| | | | |
|--|--|---|--|
| | | BROADCAST ELECTRONICS, INC. 4100 N. 24TH ST., P.O. BOX 3686 QUINCY, IL 62205 217/224-9690 TELEX 250142 CABLE BROADCAST | |
| TITLE SCHEMATIC, S.S.R. SUBSTITUTE CONTACTOR INTERFACE | | TYPE SIZE DWG. NO. 919-0096, 919-0096-001 REV G | |
| MODEL XTMR3 SCALE ~ SHEET 1 OF 1 | | MATERIAL FINISH NEXT ASSY. | |
| DOWN BY MISE 1-16-86 CHKD | | DATE 7/14/86 PROJ. ENGR. J. J. [Signature] 7-14-86 MFG. | |
| PROPRIETARY RIGHTS are included in this document. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed in any other manner without the authorized in writing by BROADCAST ELECTRONICS, INC. | | TOLERANCE (DECIMAL) U.O.S. .x ± .030 .xxx ± .005 .xx ± .015 ANGLES ± 1° | |

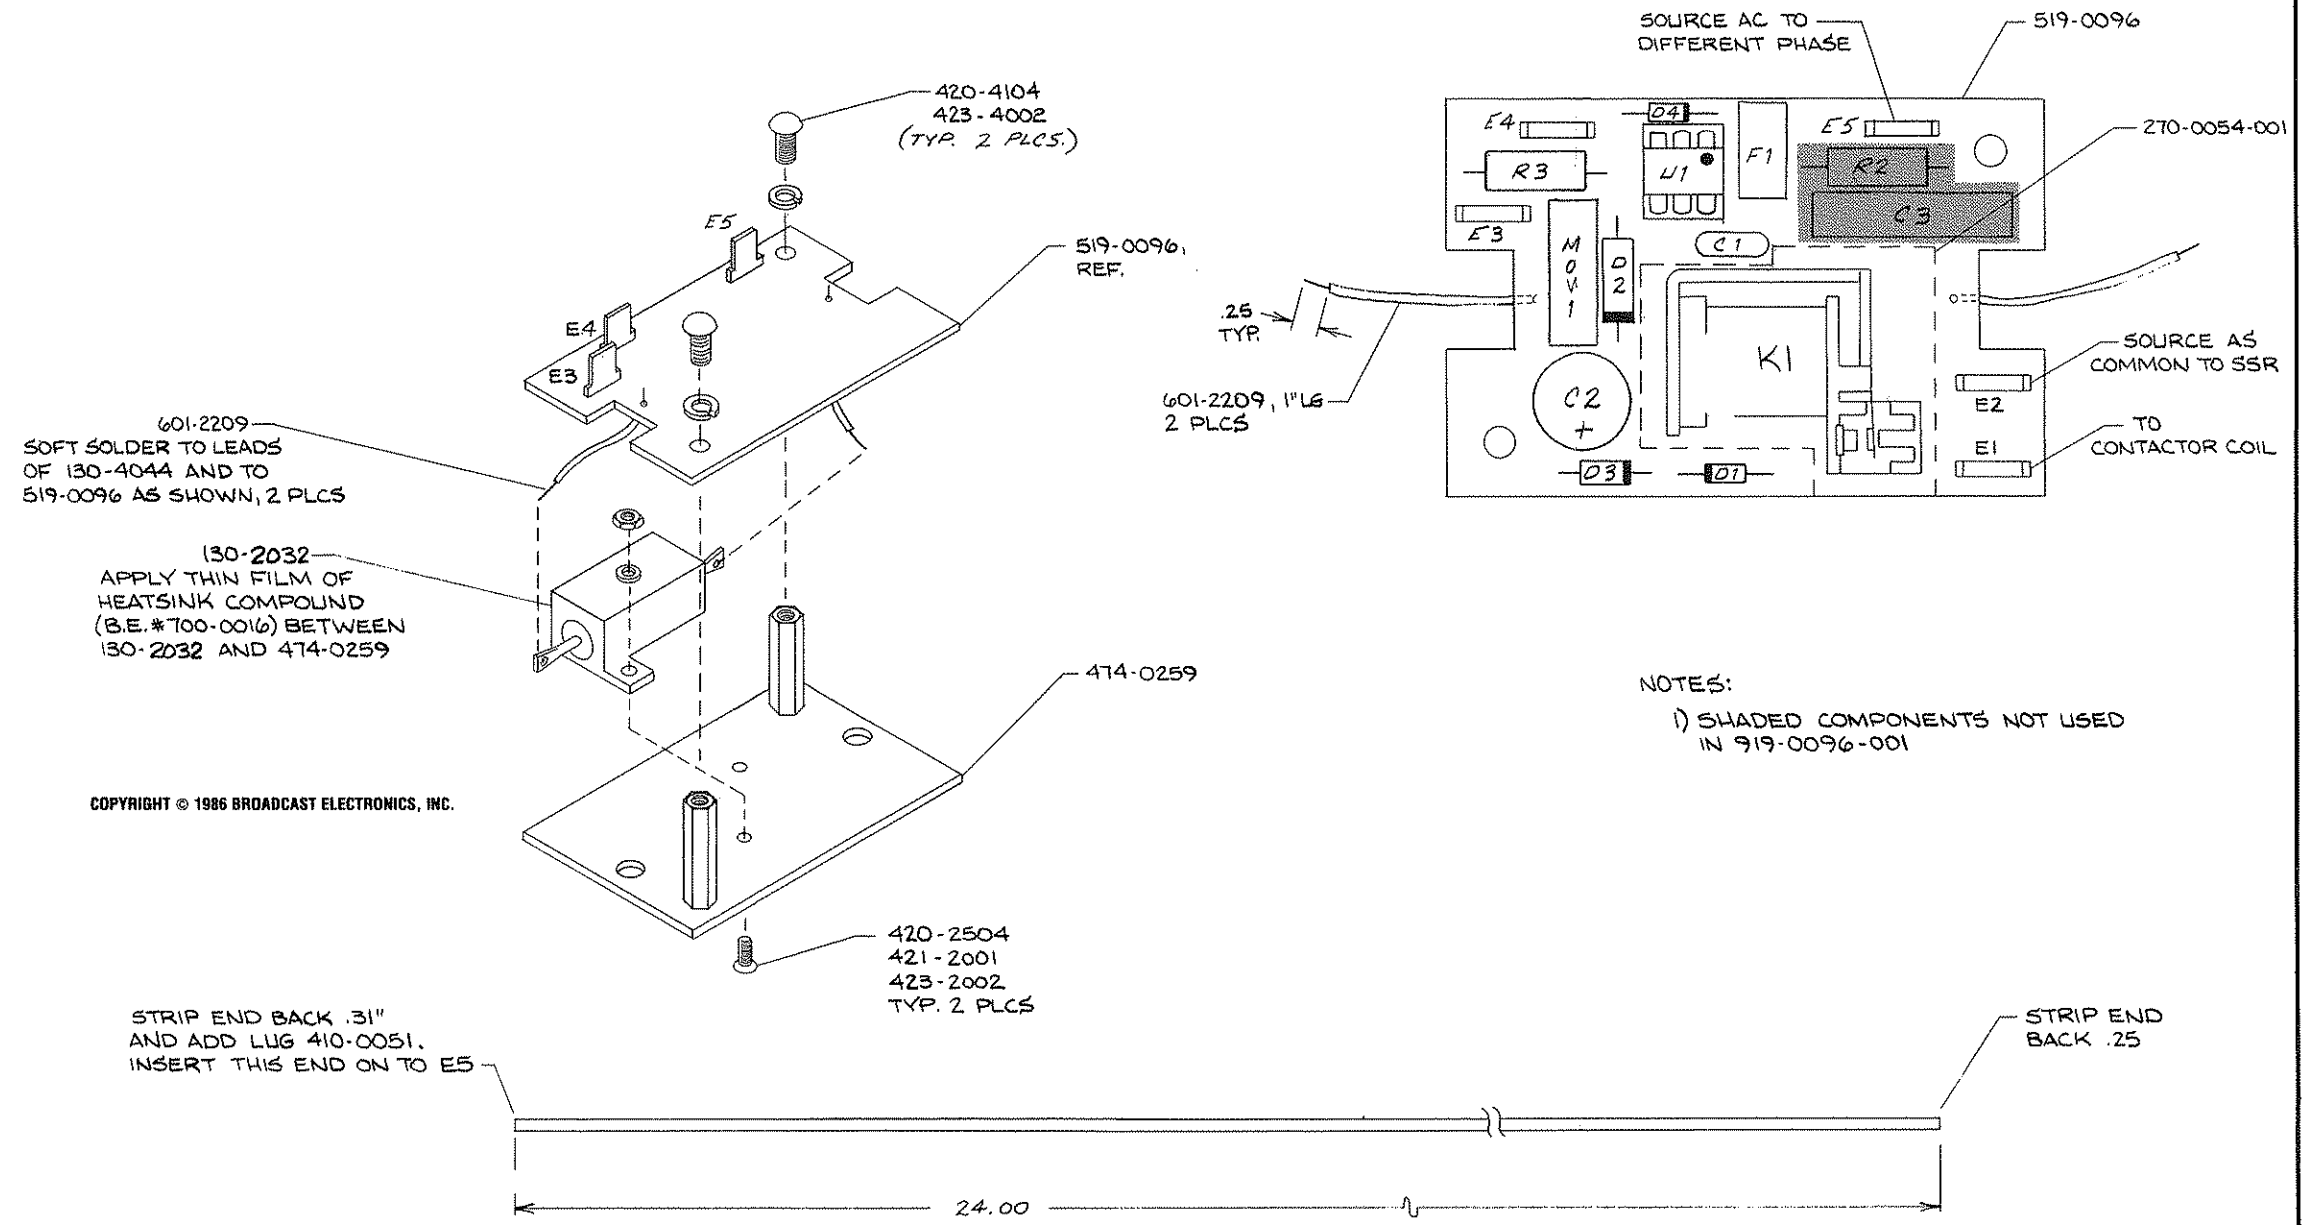

601-2209
SOFT SOLDER TO LEADS
OF 130-4044 AND TO
519-0096 AS SHOWN, 2 PLCS

130-2032
APPLY THIN FILM OF
HEATSINK COMPOUND
(B.E.#100-0016) BETWEEN
130-2032 AND 474-0259

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

STRIP END BACK .31"
AND ADD LUG 410-0051.
INSERT THIS END ON TO E5


420-2504
421-2001
423-2002
TYP. 2 PLCS

NOTES:
1) SHADED COMPONENTS NOT USED
IN 919-0096-001

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

| | | | |
|---|------------------------|---------------------------------|--|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | DWN. BY MSE 7-11-86 | MATERIAL SEE B/M 919-0096 | BROADCAST ELECTRONICS, INC. 4100 N. 24TH ST., P.O. BOX 3606 QUINCY, IL 62305 217/224-9600 TELEX 250142 CABLE BROADCAST |
| | CHKD | FINISH | |
| TOLERANCE (DECIMAL) U.O.S. .x ± .030 .xxx ± .005 .xx ± .015 ANGLES ± 1° | PROJ. ENGR. MFG. | NEXT ASSY. | TITLE ASM, SOLID STATE RELAY REPLACEMENT + PCB |
| | | | TYPE A SIZE C DWG. NO. 919-0096/919-0096-001 REV G |
| | | | MODEL XMTRS SCALE ~ SHEET 1 OF 1 |

CONTACTOR PANEL
 959-0118 OR
 959-0111




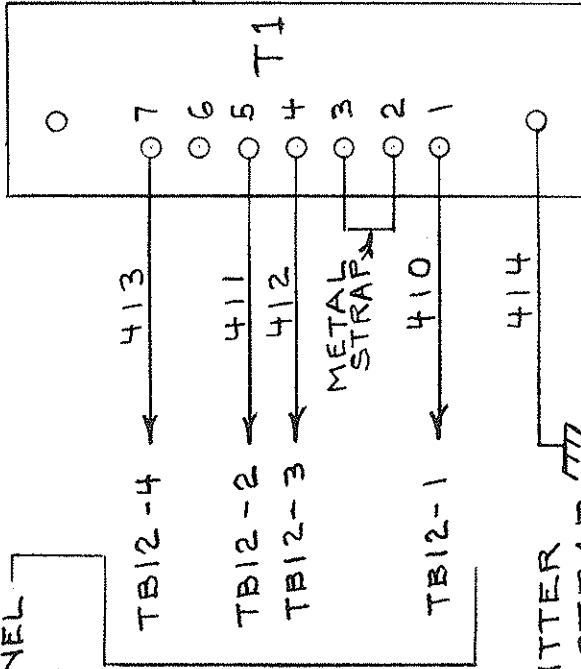


TRANSMITTER
 GROUND STRAP

NOTE:
 USE 370-0015-001 FOR 50HZ
 (909-0097-300)

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

| | | | |
|---|-----------------------------------|---|---|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | DWN. BY <i>GRT</i> 3/21/84 | MATERIAL SEE B/M 909-0097 | BROADCAST ELECTRONICS INC. 4100 N. 24TH ST. QUINCY, IL 62305 217/224-9600 TELEX 250142 CABLE BCST ELECT QUI |
| | CHKD | FINISH | TITLE FILAMENT VOLTAGE REGULATOR - (OPTION) |
| ME | PROJ. ENGR. <i>J.M.L.</i> 5/25/84 | TYPE W SIZE A DWG. NO. 909-0097 & 300 | REV B |
| MFG. | NEXT ASSY. | MODEL FMB35A/5A SCALE N T S | SHEET 1 OF 1 |
| TOLERANCE (DECIMAL) U.O.S. .x ± .030 .xxx ± .005 .xx ± .015 ANGLES ± 1° | | | |

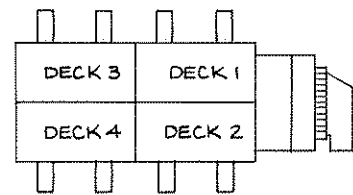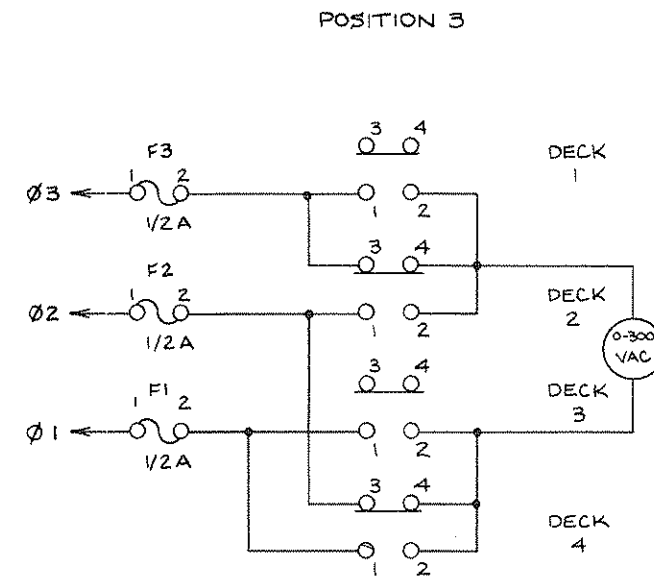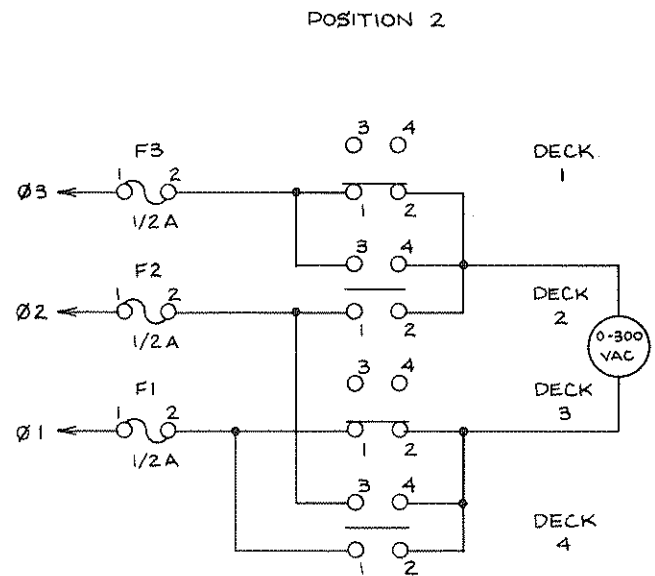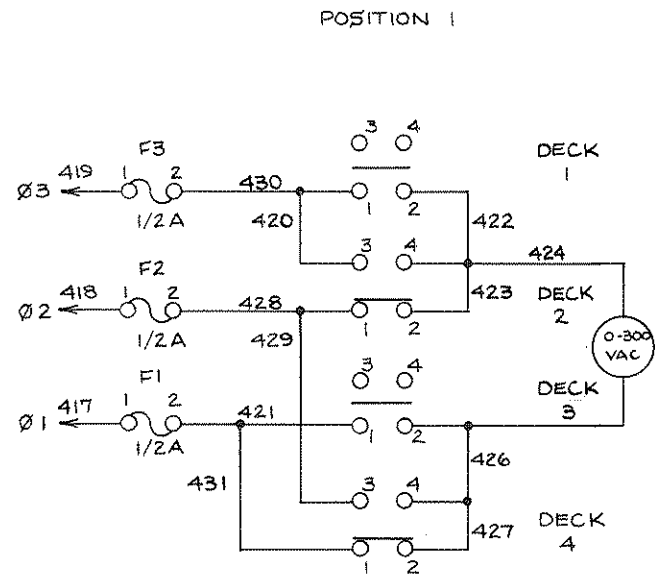

SIDE VIEW OF SWITCH
SHOWING LOCATION OF
DECKS.

| POSITION | METERING |
|----------|----------|
| 1 | Ø1 - Ø2 |
| 2 | Ø1 - Ø3 |
| 3 | Ø2 - Ø3 |

| | | | |
|---|------------------------|------------------------------------|--|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | DWN. BY MSE 4-4-84 | NEXT ASSY. | BROADCAST ELECTRONICS INC. 4100 N. 24TH ST. QUINCY, IL 62305 217/224-9600 TELEX 250142 CABLE BCST ELECT QUI |
| | CHKD. <i>MH</i> 4-5-84 | PRODUCT USED ON FM5A/ FM30A | |
| | ME | FINISH | SHEET 1 OF 1 |
| | EE | DFTG. SUPVR. | SCALE REV |
| PROJ. ENGR. | MFG. | TYPE SIZE DWG. NO. S C 909-0098 | |
| TOLERANCE (DECIMAL) U.O.S. .X ± .030 .XXX ± .005 .XX ± .015 ANGLES ± 1° | | | |

APPENDIX A
MANUFACTURERS DATA

A-1. INTRODUCTION.


A-2. This appendix provides the following technical data relative to the operation and maintenance of the FM-5A FM transmitter. Information contained in this appendix is provided in the following order.

- A. Service Bulletin, Furnas Contactor, Size 25 Amp.
- B. Service Bulletin, Furnas Contactor, Size 1 3/4.
- C. Technical Data Sheet, Eimac 4CX3500A Tetrode.
- D. Application Note, Eimac, Extending Transmitter Tube Life.
- E. Technical Data Sheet, Thompson-CSF SD1460 VHF NPN Power Transistor.
- F. Optional Filament Voltage Regulator Service Manual.

REPLACEMENT PARTS

MAGNETIC CONTACTORS

| | |
|--------------------------|--------------------|
| File No. | 41-GNB |
| Cat. No. or Class Series | 41NB |
| Size | 25 Amp |
| Date | APRIL, 1982 |

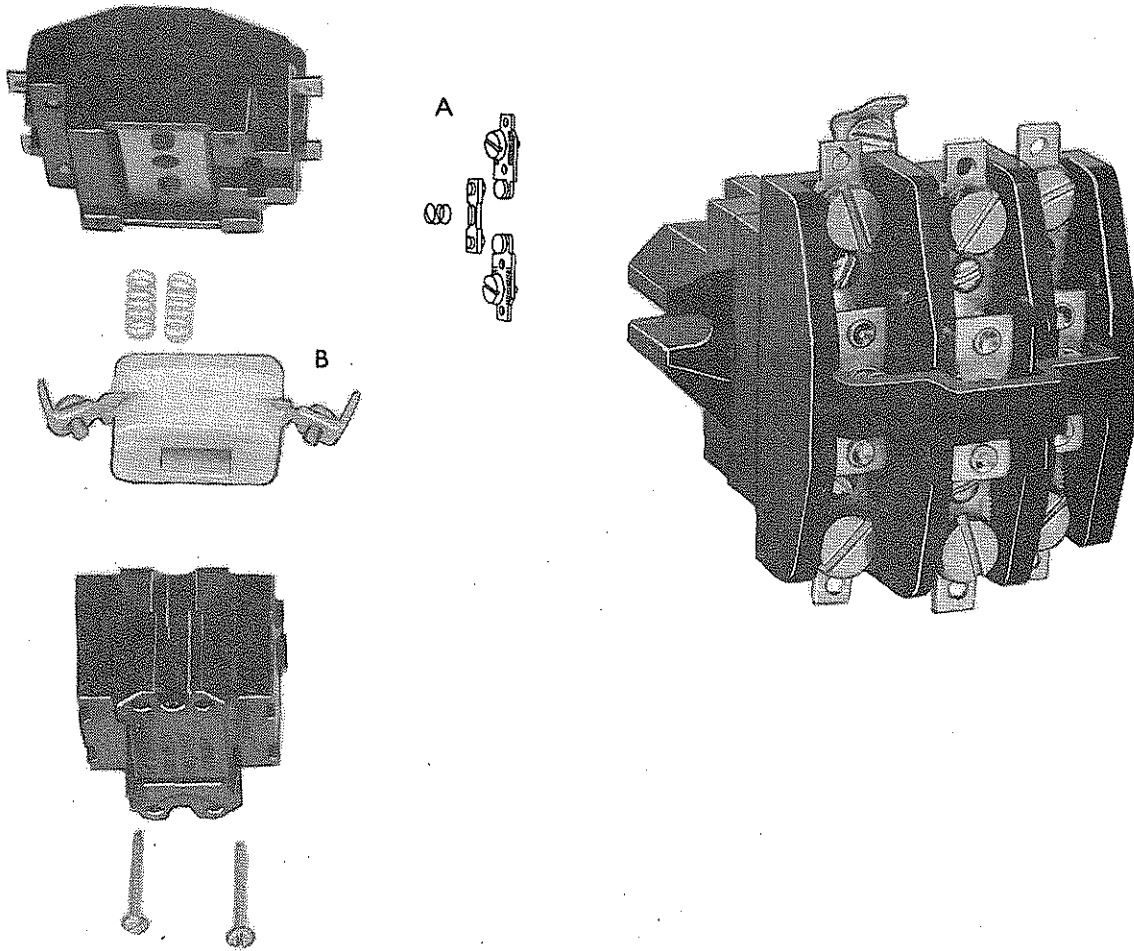


| Item | Part Name | Part No. |
|------|--------------------------------------|--|
| A | Contacts & Spring, One complete pole | 75NB41 |
| B | Coil 60 Hz. | 24 Volts 75D54760J 120 Volts 75D54760F 208-240 Volts 75D54760G 440-480 Volts 75D54760H 575-600 Volts 75D54760E |

NOTE: When ordering replacement parts, give catalog number of control and part name and number.

14-GCF
 October, 1982
 Supersedes Issue of
 June, 1982

Starter & Contactors
 00, 0, 1, 1P, & 1 3/4

Class 14 & 40
 14BF, 14CF, 14DF, 14EF,
 40BF, 40CF, 40DF, 40EF

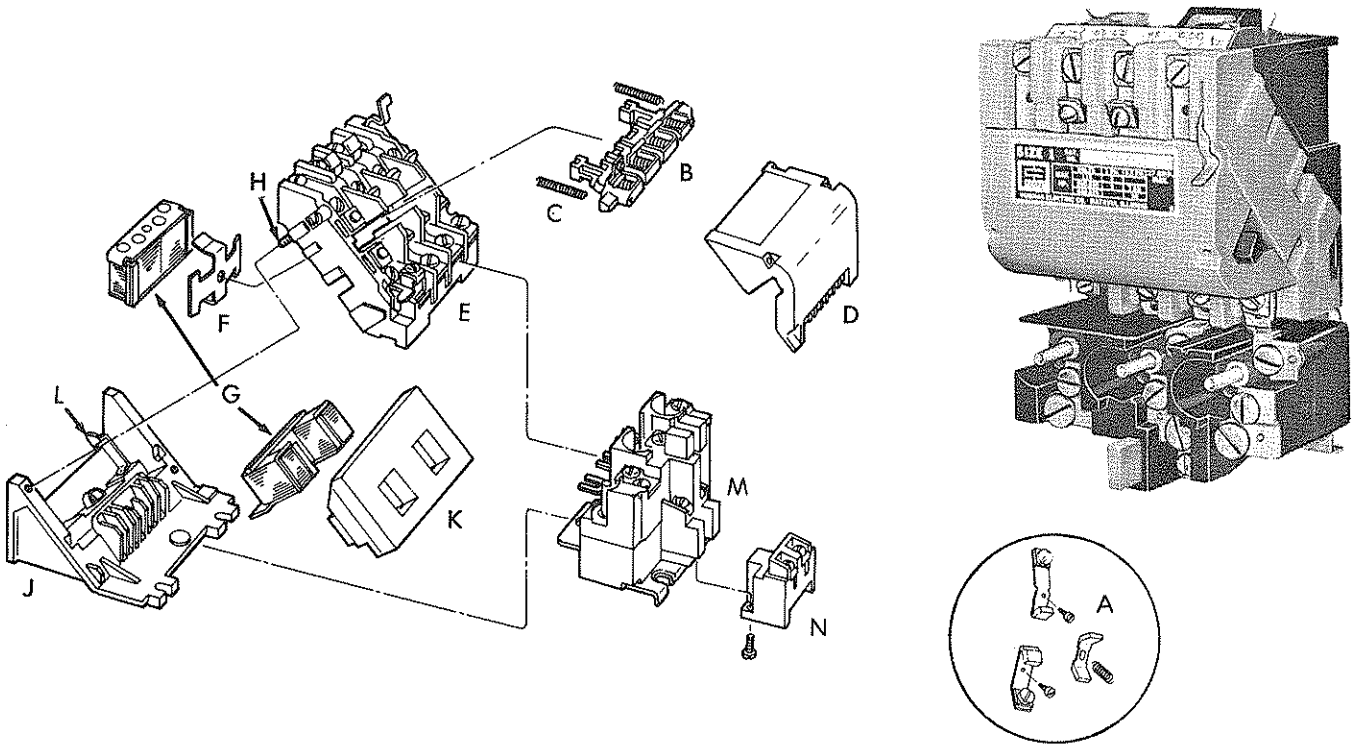

| ITEM | PART NAME | | PART NUMBER | | | | | |
|------|--|--------------------|----------------------|-----------|------------|-----------------|-----------|-----------|
| | | | Size 00 | Size 0 | Size 1 | Size 1P & 1 3/4 | | |
| A | Contacts & Spring, One Pole | Power Pole | 75BF14 | 75CF14 | 75DF14 | 75EF14 | | |
| | | Interlock Pole | 75AF14 | 75AF14 | 75AF14 | 75AF14 | | |
| B | Cross Arm (less contacts) | | D28478001 | D28478001 | D28478001 | D28478001 | | |
| C | Cross Arm Springs | | D24826001 | D24826001 | D24826001 | D24826001 | | |
| D | Contact Board Cover | | D73062001 | D73062001 | D73062001 | D73062001 | | |
| E | Contact Board (less contacts) | | D73116022 | D73116022 | D73116022 | D73116022 | | |
| F | Armature Spring Clip | | D24817001 | D24817001 | D24817001 | D24817001 | | |
| G | Magnet and Armature | | D25551001 | D25551001 | D255551001 | D25551001 | | |
| H | Contact Board Screw | | D24827001 | D24827001 | D24827001 | D24827001 | | |
| J | Base | | D74400001 | D74400001 | D74400001 | D74400001 | | |
| K | Coil 60 Hz. 110-120/220-240 V 50 Hz. | 110 V | 75D73070A | 75D73070A | 75D73070A | 75D73070A | | |
| | | 220-240/440-480 V | 75D73070C | 75D73070C | 75D73070C | 75D73070C | | |
| | | 550-600 V | 75D73070E | 75D73070E | 75D73070E | 75D73070E | | |
| L | Coil Spring Clip | | D24815001 | D24815001 | D24815001 | D24815001 | | |
| M | Overload Relays | Bimetal | Melting Alloy (std.) | 1 Pole | 48DC11AA2 | 48DC11AA2 | 48DC11AA2 | 48EC11AA2 |
| | | | | 3 Pole | 48DC31AA2 | 48DC31AA2 | 48DC31AA2 | 48EC31AA2 |
| | | | | 1 Pole | 48DC17AA2 | 48DC17AA2 | 48DC17AA2 | 48EC17AA2 |
| | | Amb. Comp. Bimetal | 3 Pole | 48DC37AA2 | 48DC37AA2 | 48DC37AA2 | 48EC37AA2 | |
| | | | 1 Pole | 48DC18AA2 | 48DC18AA2 | 48DC18AA2 | 48EC18AA2 | |
| | | | 3 Pole | 48DC38AA2 | 48DC38AA2 | 48DC38AA2 | 48EC38AA2 | |
| N | Melting Alloy Overload Kit NO Contacts | | 48ACNO | 48ACNO | 48ACNO | 48ACNO | | |

NOTE: When ordering replacement parts, give catalog number of control and part name and number.




TECHNICAL DATA

4CX3500A
VHF
RADIAL BEAM
POWER TETRODE

The EIMAC 4CX3500A is a compact ceramic/metal radial-beam power tetrode intended for use in VHF power amplifier applications. It features a type of internal mechanical structure which results in high rf operating efficiency. Low rf losses in this structure permit operation at full ratings to 220 MHz.

The 4CX3500A has a gain of over +18 dB in FM broadcast service, and is also recommended for rf linear power amplifier service and for VHF-TV linear amplifier service. The anode is rated for 3500 watts of dissipation with forced-air cooling.

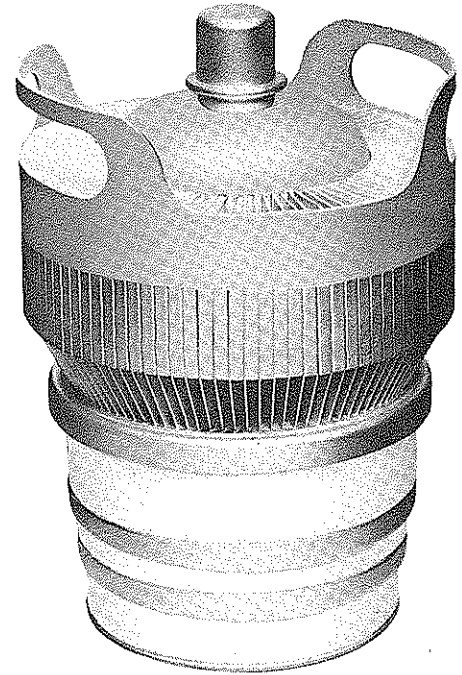

GENERAL CHARACTERISTICS¹

ELECTRICAL

Filament: Thoriated Tungsten Mesh

Voltage 5.0 ± 0.25 V

Current, at 5.0 volts 90 A

Amplification Factor, average

Grid to Screen 4.5

Direct Interelectrode Capacitances (cathode grounded)²

C_{in} 111 pF

C_{out} 12 pF

C_{gp} 0.5 pF

Direct Interelectrode Capacitances (grids grounded)²

C_{in} 58.5 pF

C_{out} 10 pF

C_{pk} 0.4 pF

Frequency of Maximum Ratings (CW) 220 MHz

1. Characteristics and operating values are based on performance tests. These figures may change without notice as the result of additional data or product refinement. Varian EIMAC should be consulted before using this information for final equipment design.

2. Capacitance values are for a cold tube as measured in a special shielded fixture in accordance with Electronic Industries Association Standard RS-191.

MECHANICAL

Maximum Overall Dimensions:

Length 7.25 in; 18.42 cm

Diameter 4.94 in; 12.55 cm



4CX3500A

| | |
|---|---------------------------------------|
| Net Weight (approximate) | 5.5 Lbs; 2.5 kg |
| Operating Position | Axis Vertical, Base Up or Down |
| Cooling | Forced Air |
| Maximum Operating Temperature, Ceramic/Metal Seals & Anode Core | 250 Deg.C |
| Base | Special, Coaxial |
| Recommended Air-System Socket | HF: EIMAC SK-340 VHF: EIMAC SK-350 |
| Recommended Air Chimney | EIMAC SK-346 |

RADIO FREQUENCY POWER AMPLIFIER

TYPICAL OPERATION (frequencies to 30 MHz)

| | | | | | |
|---|-------------|---|------|------|------|
| Class C Telegraphy or FM (Key-Down Conditions) | | Plate Voltage | 5.0 | 5.0 | kVdc |
| | | Screen Voltage | 500 | 500 | Vdc |
| | | Grid Voltage | -200 | -250 | Vdc |
| ABSOLUTE MAXIMUM RATINGS | | Plate Current | 1.32 | 0.80 | Adc |
| DC PLATE VOLTAGE | 5500 VOLTS | Screen Current ¹ | 75 | 43 | mAdc |
| DC SCREEN VOLTAGE | 1500 VOLTS | Grid Current ¹ | 59 | 21 | mAdc |
| DC GRID VOLTAGE | -500 VOLTS | Peak rf Grid Voltage ¹ | 335 | 290 | v |
| DC PLATE CURRENT | 2.0 AMPERES | Calculated Driving Power | 25 | 7 | W |
| PLATE DISSIPATION | 3500 WATTS | Plate Dissipation ¹ | 1320 | 640 | W |
| SCREEN DISSIPATION | 165 WATTS | Plate Output Power ¹ | 5280 | 3360 | W |
| GRID DISSIPATION | 50 WATTS | Load Impedance | 1700 | 2700 | Ohms |

¹ Approximate value

RADIO FREQUENCY POWER AMPLIFIER, FM BROADCAST SERVICE

ABSOLUTE MAXIMUM RATINGS:

MEASURED DATA AT 100.5 MHz

| | | | | | |
|--------------------|------------------|---|------|------|------|
| FILAMENT VOLTAGE | 5.0 ± 0.25 VOLTS | Plate Voltage | 4000 | 4300 | Vdc |
| DC PLATE VOLTAGE | 5500 VOLTS | Plate Current | 1.5 | 1.9 | Adc |
| DC SCREEN VOLTAGE | 1500 VOLTS | Screen Grid Voltage | 500 | 700 | Vdc |
| DC GRID VOLTAGE | -500 VOLTS | Screen Current ¹ | 140 | 123 | mAdc |
| DC PLATE CURRENT | 2.0 AMPERES | Grid Bias Voltage | -300 | -400 | Vdc |
| PLATE DISSIPATION | 3500 WATTS | Grid Current ¹ | 84 | 63 | mAdc |
| SCREEN DISSIPATION | 165 WATTS | Useful Power Out ^{1,2} | 3838 | 5531 | W |
| GRID DISSIPATION | 50 WATTS | Efficiency ¹ | 64 | 68 | % |
| | | Driving Power ¹ | 56 | 66 | W |
| | | Power Gain ¹ | 18.4 | 19.2 | dB |

¹ Will vary from tube to tube

² Delivered to the load



TYPICAL OPERATION values are obtained by measurement or by calculation from published characteristic curves. To obtain the specified plate current at the specified bias, screen, and plate voltages, adjustment of the rf grid voltage is assumed. If this procedure is followed, there will be little variation in output power when the tube is replaced, even though there may be some variation in grid and screen currents. The grid and screen currents which occur when the desired plate current is obtained are incidental and vary from tube to tube. These current variations cause no performance degradation providing the circuit maintains the correct voltage in the presence of the current variations. If grid bias is obtained principally by means of a grid resistor, the resistor must be adjusted to produce the required bias voltage when the correct rf grid voltage is applied.

APPLICATION

MECHANICAL

MOUNTING - The 4CX3500A must be mounted with its axis vertical, base up or down at the convenience of the circuit designer.

AIR-SYSTEM SOCKET & CHIMNEY - The EIMAC sockets type SK-340 and SK-350 are designed especially for the concentric base terminals of the 4CX3500A. The SK-340 is intended for use at HF, while the SK-350 is recommended for VHF applications. Use of the recommended air flow rates through either socket will provide effective forced-air cooling of the tube. Air forced into the bottom of the socket passes over the tube terminals and through the SK-346 chimney and into the anode cooling fins.

COOLING - At full rated anode dissipation, at sea level and with cooling air at 50 Deg.C maximum, for frequencies below 110 MHz, and with the tube mounted in either an SK-340 or SK-350 socket with an SK-346 in place, a minimum of 241 CFM of air must be passed through the socket and the tube anode cooling fins. Air flow should be in the base-to-anode direction. The pressure drop across the tube/ socket/chimney combination with this air flow rate will be approximately 1.87 inches of water.

The blower selected in a given application must be capable of supplying the desired air flow at a back pressure equal to that shown, plus any drop encountered in ducts and filters.

Air flow must be applied before or simultaneously with the application of power, including the tube filament, and may be removed simultaneously with filament voltage. An air interlock system should be incorporated in the design to automatically

remove all voltages from the tube in case of even a partial failure of the tube cooling air.

It is considered good engineering practice to supply more than the minimum required cooling air, to allow for variables such as dirty air filters, rf seal heating, and the fact that the anode cooling fins may not be clean if the tube has been in service for some time.

ELECTRICAL

FILAMENT OPERATION - At rated (nominal) filament voltage the peak emission capability of the tube is many times that needed for communication service. A reduction in filament voltage will lower the filament temperature, which will substantially increase life expectancy. The correct value of filament voltage should be determined for the particular application. It is recommended the tube be operated at full nominal voltage for an initial stabilization period of 100 to 200 hours before any action is taken to operate at reduced voltage. The voltage should gradually be reduced until there is a slight degradation in performance (such as power output or distortion). The filament voltage should then be increased one tenth of a volt above the value where performance degradation was noted for operation. The operating point should be rechecked after 24 hours. Filament voltage should be closely regulated when voltage is to be reduced below nominal in this manner, to avoid any adverse influence by normal line voltage variations.

Filament voltage should be measured at the tube base or socket, using an accurate rms-responding meter. Periodically the procedure outlined above for reduction of voltage should be repeated, with voltage reset as required, to assure best life.



GRID OPERATION - The maximum control grid dissipation is 50 watts, determined approximately by the product of the dc grid current and the peak positive grid voltage.

SCREEN OPERATION - The maximum screen grid dissipation is 165 watts. With no ac applied to the screen grid, dissipation is simply the product of dc screen voltage and the dc screen current. With screen modulation, dissipation is dependent on rms screen voltage and rms screen current. Plate voltage, plate loading, or bias voltage must never be removed while filament and screen voltages are present, since screen dissipation ratings will be exceeded. A protective spark-gap device should be connected between the screen grid and the cathode to guard against excessive voltage.

SCREEN CURRENT - The screen current may reverse under certain conditions and produce negative indications on the screen current meter. This is a normal characteristic of most tetrodes. The screen power supply should be designed with this characteristic in mind, so that the correct operating voltage will be maintained on the screen under all conditions. A current path from the screen to cathode must be provided by a bleeder resistor or a shunt regulator connected between screen and cathode and arranged to pass approximately 10% of the average screen current per connected tube. A series regulated power supply can be used only when an adequate bleeder resistor is provided.

FAULT PROTECTION - In addition to the normal plate over-current interlock, screen current interlock, and air-flow interlock, the tube must be protected from internal damage caused by an internal plate arc which may occur at high plate voltage. A protective resistance should always be connected in series with each tube anode, to absorb power supply stored energy if an internal arc should occur. EIMAC's Application Bulletin #17 titled **FAULT PROTECTION** contains considerable detail, and is available on request.

ABSOLUTE MAXIMUM RATINGS - The values shown for each type of service are based on the "absolute system" and are not to be exceeded under any service conditions. These ratings are limiting values outside which the serviceability of the tube may be impaired. In order not to exceed absolute ratings the equipment designer has the responsibility of determining an average design value for each rating below the absolute value of that rating by a safety factor so that the

absolute values will never be exceeded under any usual conditions of supply voltage variation in the equipment itself. It does not necessarily follow that combinations of absolute maximum ratings can be attained simultaneously.

HIGH VOLTAGE - Normal operating voltages used with this tube are deadly, and the equipment must be designed properly and operating precautions must be followed. Design all equipment so that no one can come in contact with high voltages. All equipment must include safety enclosures for high-voltage circuits and terminals, with interlock switches to open primary circuits of the power supply and to discharge high-voltage capacitors whenever access doors are opened. Interlock switches must not be bypassed or "cheated" to allow operation with access doors open. Always remember that **HIGH VOLTAGE CAN KILL**.

RADIO-FREQUENCY RADIATION - Avoid exposure to strong rf fields even at relatively low frequency. Absorption of rf energy by human tissue is dependent on frequency. Under 300 MHz most of the energy will pass completely through the human body with little attenuation or heating effect. Public health agencies are concerned with the hazard, however, even at these frequencies, and it is worth noting that some commercial dielectric heating units actually operate at frequencies as low as the 13 MHz and 27 MHz bands.

INTERELECTRODE CAPACITANCE - The actual internal interelectrode capacitance of a tube is influenced by many variables in most applications, such as stray capacitance to the chassis, capacitance added by the socket used, stray capacitance between tube terminals, and wiring effects. To control the actual capacitance values within the tube, as the key component involved, the industry and Military Services use a standard test procedure as described in Electronic Industries Association Standard RS-191. This requires the use of specially constructed test fixtures which effectively shield all external tube leads from each other and eliminates any capacitance reading to "ground". The test is performed on a cold tube. Other factors being equal, controlling internal tube capacitance in this way normally assures good interchangeability of tubes over a period of time, even when the tube may be made by different manufacturers. The capacitance values shown in the manufacturer's technical data, or test specifications, normally are taken in accordance with Standard RS-191.



The equipment designer is therefore cautioned to make allowance for the actual capacitance values which will exist in any normal application. Measurements should be taken with the socket and mounting which represent approximate final layout if capacitance values are highly significant in the design.

SPECIAL APPLICATIONS - When it is desired to operate this tube under conditions widely different from those listed here, write to Varian EIMAC; attn: Applications Engineering; 301 Industrial Way; San Carlos, CA 94070 U.S.A.

OPERATING HAZARDS

PROPER USE AND SAFE OPERATING PRACTICES WITH RESPECT TO POWER TUBES ARE THE RESPONSIBILITY OF EQUIPMENT MANUFACTURERS AND USERS OF SUCH TUBES. ALL PERSONS WHO WORK WITH OR ARE EXPOSED TO POWER TUBES OR EQUIPMENT WHICH UTILIZES SUCH TUBES MUST TAKE PRECAUTIONS TO PROTECT THEMSELVES AGAINST POSSIBLE SERIOUS BODILY INJURY. DO NOT BE CARELESS AROUND SUCH PRODUCTS.

The operation of this tube may involve the following hazards, any one of which, in the absence of safe operating practices and precautions, could result in serious harm to personnel:

- a. HIGH VOLTAGE - Normal operating voltages can be deadly. and can cause serious bodily and eye injuries. CARDIAC PACEMAKERS MAY BE EFFECTED.
- b. RF RADIATION - Exposure to strong rf fields should be avoided, even at relatively low frequencies. The dangers of rf radiation are more severe at UHF and microwave frequencies
- c. HOT SURFACES - Surfaces of air-cooled radiators and other parts of tubes can reach temperatures of several hundred Degrees C and cause serious burns if touched for several minutes after all power is removed.


Please review the detailed operating hazards sheet enclosed with each tube, or request a copy from: Varian EIMAC, Power Grid Tube Division, 301 Industrial Way, San Carlos CA 94070.



4CX3500A

EIMAC 4CX3500A
TYPICAL
CONSTANT CURRENT
CHARACTERISTICS
SCREEN VOLTAGE = 500 VOLTS

— Plate Current (Amperes)
- - - Screen Current (Amperes)
- · - Grid Current (Amperes)

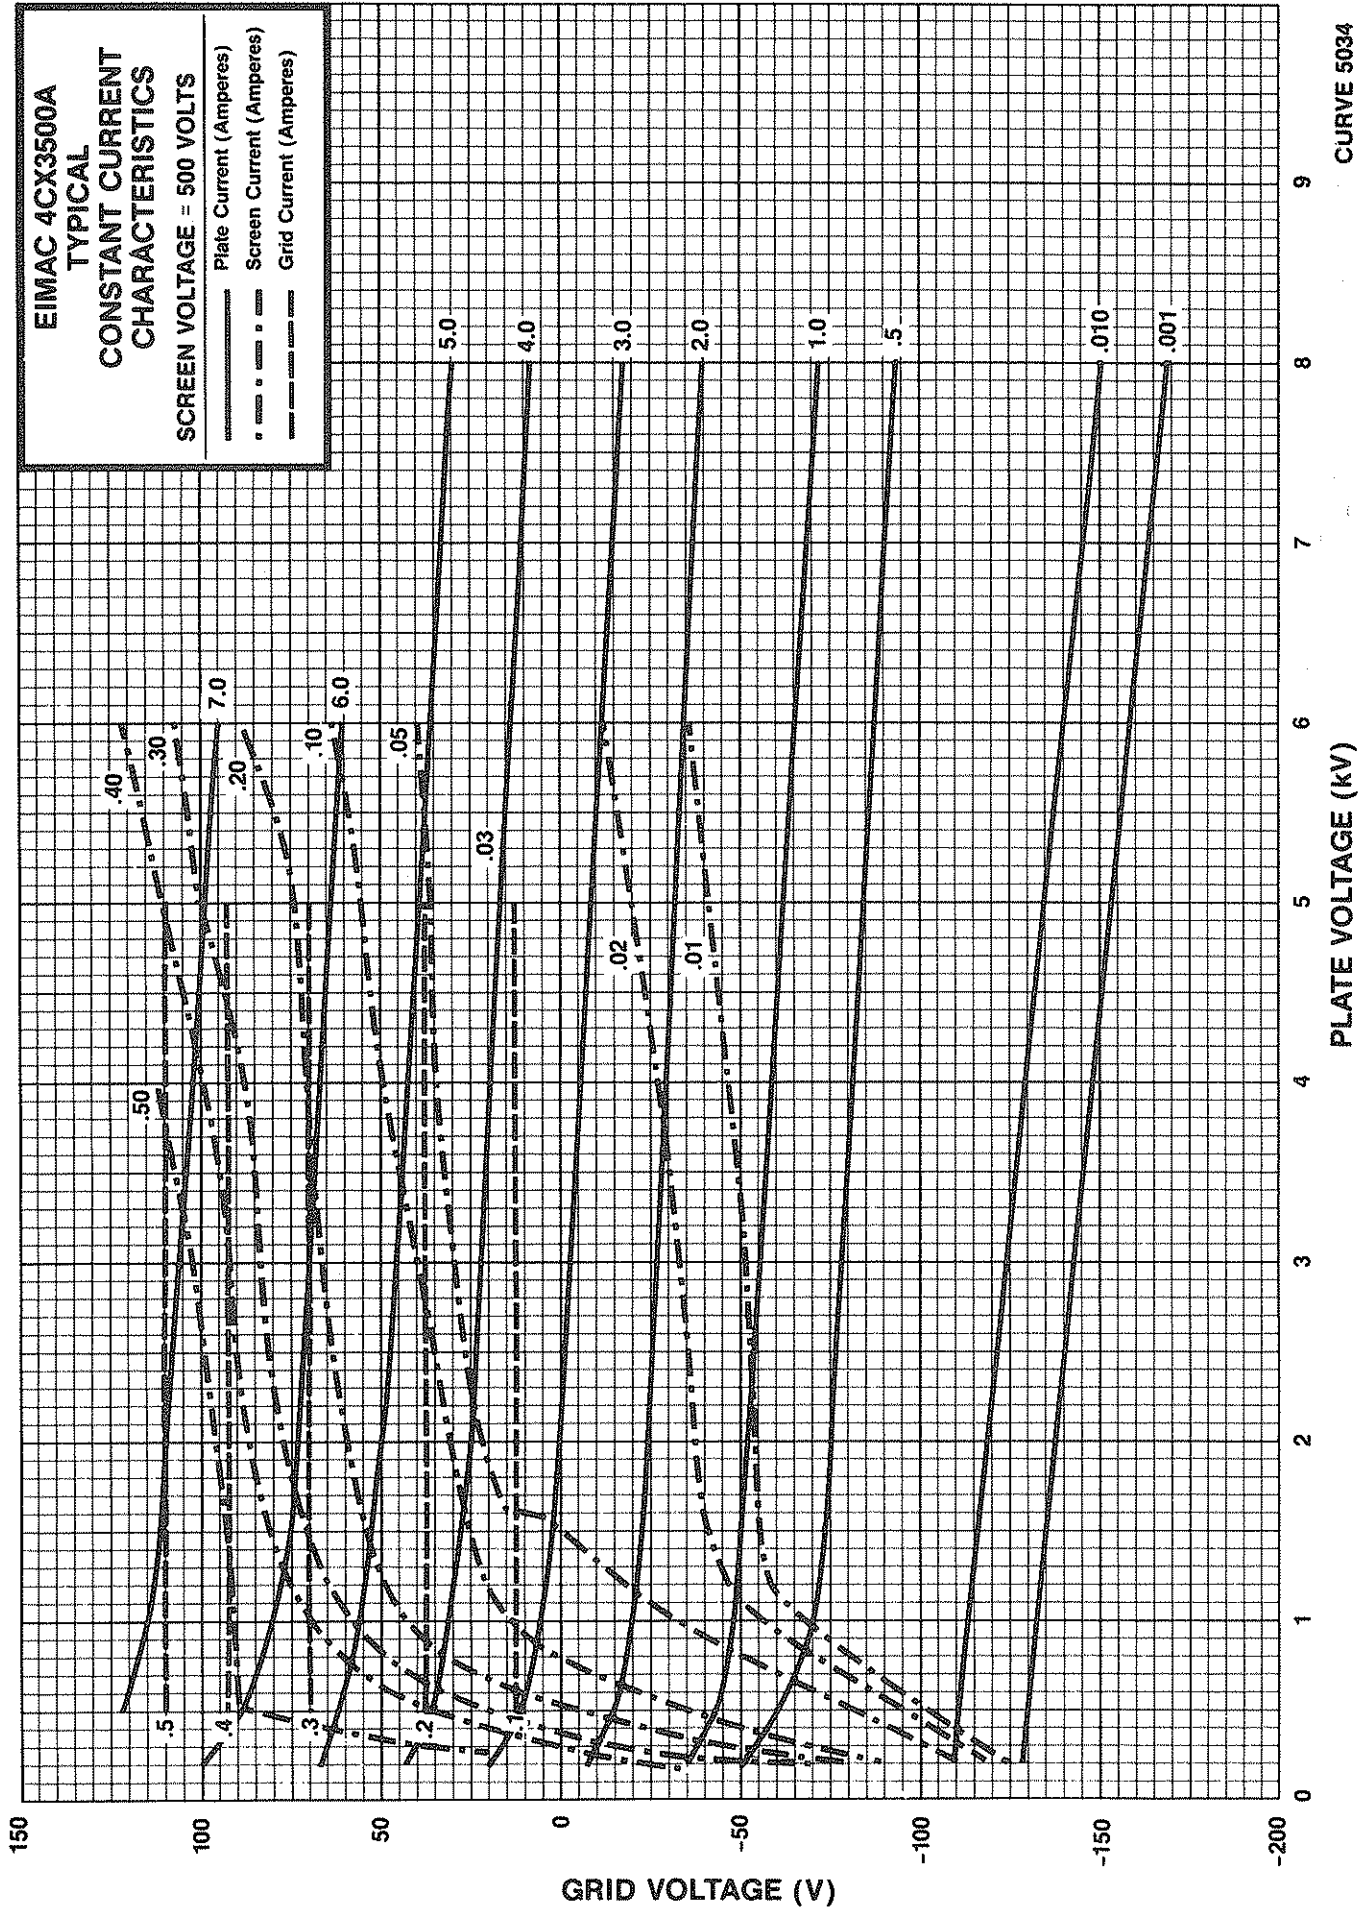

CURVE 5034

Extending Transmitter Tube Life

Of great importance to long tube life is the temperature of the elements and the ceramic-to-metal seals. Element temperature can be held within proper limits by observing the maximum dissipation ratings listed in the data sheet. Seal temperature should be limited to 200°C at the lower anode seal under worst-case conditions. As element temperature rises beyond 200°C, the release of contaminants locked in the materials used in tube manufacturing increases rapidly. These contaminants cause a rapid depletion of the di-tungsten carbide layer of the filament.

When a new power tube is installed in a transmitter, it must be operated at rated nominal filament voltage for the first 200 hours. This procedure is very important for two reasons. First, operation at normal temperature allows the getter to be more effective during the early period of tube life when contaminants are more prevalent. This break-in period conditions the tube for operation at lower filament voltage to obtain longer filament life. Secondly, during the first 200 hours of operation filament emission increases. It is necessary for the life extension program to start at the peak emission point.

A chart recorder or other device should be used to monitor variations in primary line voltage for several days of transmitter operation. The history of line voltage variations during on-air time must be reviewed prior to derating filament voltage. Plan to establish the derated voltage during the time period of historically low line voltage, as this is the worst-case condition. If line variation is greater than $\pm 3\%$, filament voltage must be regulated.

Record output power (FM) or distortion level (AM) with the tube operating at rated nominal filament voltage. Next, reduce filament voltage in increments of 0.1 V and record power or distortion levels at each increment. Allow one minute between each increment for the filament emission to stabilize.

When a noticeable change occurs in output power or the distortion level changes, the derating procedure must stop. Obviously, operation at this point is unwise since there is no margin for a drop in line voltage. It is safer to raise the voltage 0.2 V above the critical voltage at which changes are observed to occur. If this new filament voltage setting is more than 5% below the nominal rated level, filament voltage must be raised to the 95% level. Operation below this point is unpredictable and life expectancy is uncertain. Finally, recheck power output or distortion to see if they are acceptable at the chosen filament voltage level. Recheck again after 24 hours to determine if emission is stable and that the desired performance is maintained. If performance is not repeatable, the derating procedure must be repeated.

Continuing the program

The filament voltage should be held at the properly derated level as long as minimum power or maximum distortion requirements are met. Filament voltage can

be raised to reestablish minimum requirements as necessary. This procedure will yield results similar to those shown in the illustration, to achieve as much as 10% to 15% additional life extension. When it becomes necessary to increase filament voltage, it is a good time to order a new tube. Filament voltage can be increased as long as the increase results in maintaining minimum level requirements.

When an increase fails to result in meeting a level requirement, filament emission must be considered inadequate and the tube should be replaced. Don't discard it or sell it for scrap! Put it on the shelf and save it. It will serve as a good emergency spare and may come in very handy some day. Also, in AM transmitters, a low-emission RF amplifier tube can be shifted to modulator use where the peak filament emission requirement is not as severe.

Start planning for longer tube life now! Review the following steps you can take:

- Investigate the manufacturer's ratings on the power tubes in your present equipment, or the transmitter you plan to buy.
- Check that your transmitter has sufficient headroom. Is there a margin of safety in tube operation?
- Look for important instrumentation in the next transmitter you buy. Are all tube elements monitored for voltage and current in the transmitter?
- Whether your transmitter is new or old, start a filament life extension program.

Remember that each time you replace a power tube, the recommended derating procedure must be rerun. Voltage levels required with one tube do not apply to a replacement tube.

When purchasing a tube, insist on a new tube that carries the full, original manufacturer's warranty. Only tubes manufactured by the company of origin have to perform to published data. This is the important reason that transmitter manufacturers buy new, warranted tubes from the original manufacturer. BM/E



Thanks to William Barkley, William Orr, William Sain, and Bob Tornoe, all of Varian EIMAC, for their help and suggestions in preparing this paper.

Bibliography

1. Ayer, R.B., "Use of Thoriated-Tungsten Filaments in High Power Transmitting Tubes," *Proceedings of the I.R.E.*, page 591, May, 1952.
2. Kohl, Walter H., *Materials and Techniques for Electron Tubes*, Reinhold Publishing Corp., N.Y., 1960.
3. Horsting, C.W., "Carbide Structures in Carburized Thoriated-Tungsten Filaments," *Journal of Applied Physics*, Volume 18, Jan., 1947.
4. Langmuir, I., "The Electron Emission from Thoriated Tungsten Filaments," *Physical Review*, 1923, Page 357.
5. Walker, H.S., "High Power Transmitting Valves With Thoriated Filaments for Use in Broadcasting," The Institution of Electrical Engineers, Paper No. 3200E, March, 1960.



| DIM | INCHES | | | MILLIMETERS | | |
|-----|--------|-------|-----|-------------|--------|-----|
| | MIN | MAX | REF | MIN | MAX | REF |
| A | 4.812 | 4.938 | | 122.22 | 125.43 | |
| B | .855 | .895 | | 21.72 | 22.73 | |
| C | .600 | .760 | | 15.24 | 19.30 | |
| D | 1.896 | 1.936 | | 48.16 | 49.17 | |
| E | 3.133 | 3.173 | | 79.58 | 80.59 | |
| F | 3.792 | 3.832 | | 96.32 | 97.33 | |
| G | 3.980 | 4.020 | | 101.09 | 102.11 | |
| H | .188 | | | 4.78 | | |
| J | .188 | | | 4.78 | | |
| K | .188 | | | 4.78 | | |
| M | 3.474 | 3.848 | | 88.11 | 98.28 | |
| N | 1.369 | 1.733 | | 33.30 | 42.46 | |
| P | 8.831 | 7.181 | | 189.81 | 176.83 | |
| S | 2.359 | 2.733 | | 57.80 | 68.96 | |
| T | .375 | | | 9.53 | | |

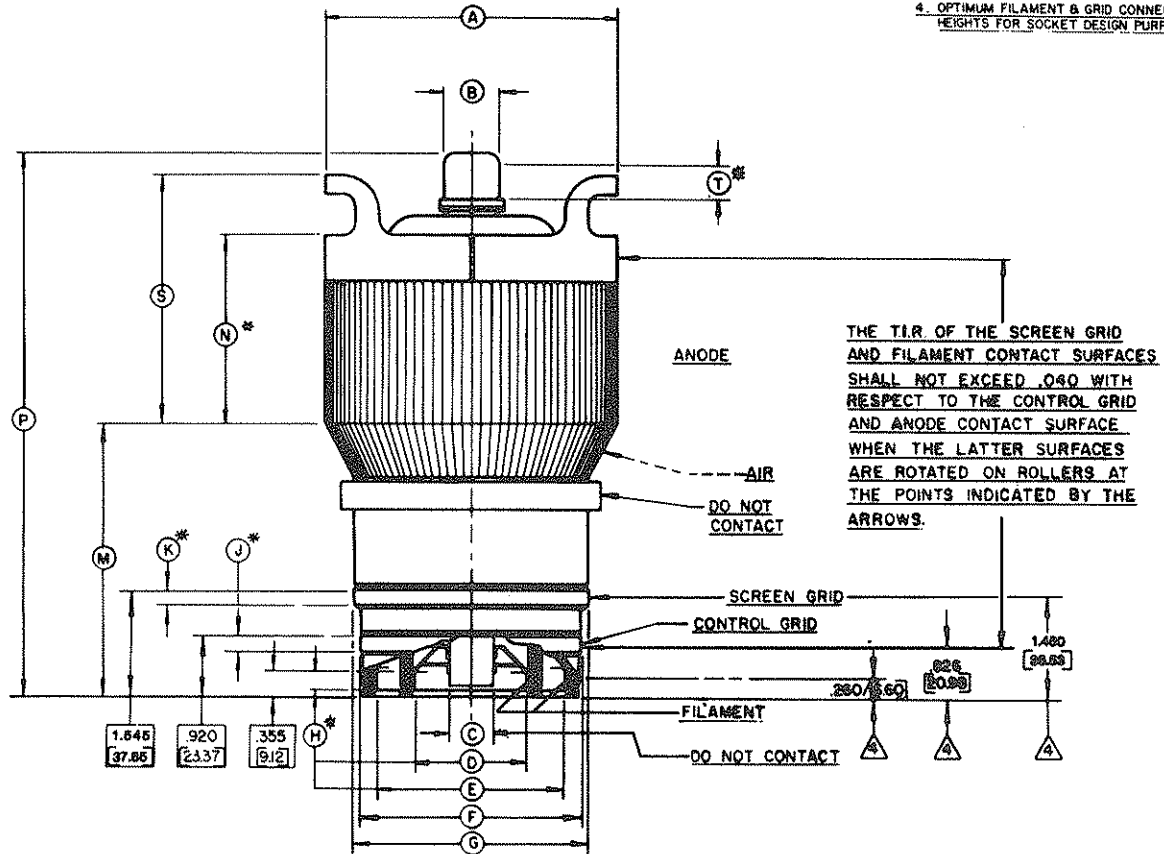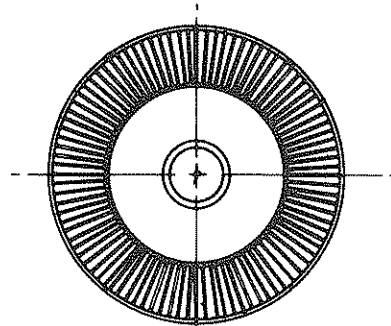

NOTES:

1. REF DIMENSIONS ARE FOR INFO ONLY & ARE NOT REQUIRED FOR INSPECTION PURPOSES.
2. DIMENSIONS IN [] ARE MILLIMETERS.
3. (*) CONTACT SURFACE.
4. OPTIMUM FILAMENT & GRID CONNECTOR HEIGHTS FOR SOCKET DESIGN PURPOSES.

| | |
|--|----------|
| Eimat division of Varian San Carlos, California | |
| CODE IDENT No. | 06980 |
| PART No | 4CX3500A |
| OUTLINE | |
| ELECTRON TUBE | |
| No 4CX3500A - 60 | |

EXTENDING TRANSMITTER TUBE LIFE

By Robert Artigo


A carefully followed program of filament voltage management can substantially increase the life expectancy of transmitter power grid tubes. With today's rising operating costs, such a program makes good financial sense.

IN RECENT YEARS station managers have seen a substantial increase in replacement costs for power grid tubes. The blame can be placed on higher manufacturing costs due to inflation, volatile precious metal prices, and an uncertain supply of some exotic metals. The current outlook for the future holds little promise for a reversal in this trend toward higher prices.

One way to offset higher operating costs is to prolong tube life. For years station engineers have used various tricks to get longer operating life, with greater and lesser degrees of success. Success can be maximized, however, by understanding the various

Robert Artigo is senior application engineer for Varian Eimac, San Carlos, CA.

EIMAC Application Bulletin AB-18
Reprinted with permission from
Broadcast Management/Engineering
March, 1982

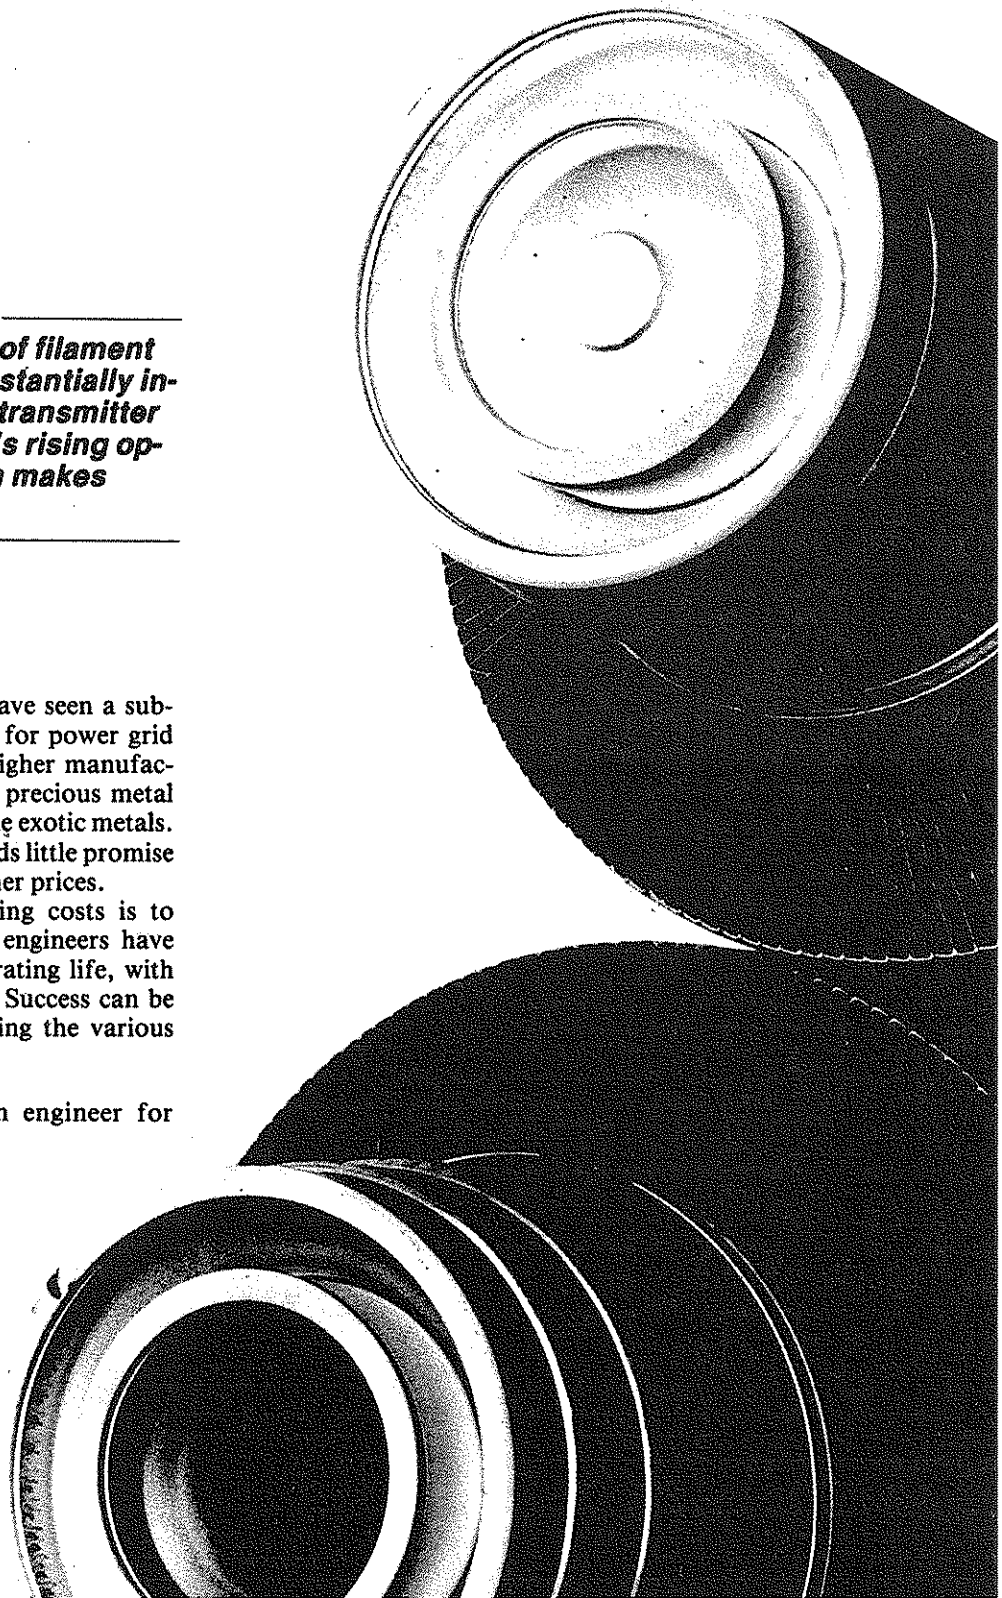

Extending Transmitter Tube Life

factors that affect tube life and implementing a program of filament voltage management.

A number of factors can aid maximum tube life in your transmitter. For example, are the maximum ratings given on the tube manufacturer's data sheet being exceeded? Data sheets are available upon request from most companies. Most tube manufacturers have an application engineering department to assist in evaluating tube performance for a given application. Make use of these services!

Headroom

Is the final power tube of the transmitter capable of delivering power in excess of the desired operating level? Or is the demand for performance so great that minimum output power levels can only be met at rated nominal filament voltage?

Figure 1 can be used as a basic guide to determine if a given transmitter and tube combination has a good probability of giving extended life service. Extended life service is defined as useful operating life beyond that normally achieved by operating at rated nominal filament voltage. The amperes/watt ratio is obtained by dividing average plate current by the product of filament voltage and filament current. If the amperes/watt ratio falls in the "good" to "excellent" range, excess emission is sufficient to permit filament voltage derating. At a lower filament voltage, the filament temperature is lowered, thus extending life. A typical FM transmitter on the market today may have an amperes/watt filament ratio of 0.002 to 0.003. This equipment would be considered an excellent choice to achieve extended tube life. On the other hand, if the amperes/watt ratio falls in the "poor" range, it is unlikely that filament derating is possible due to limited

emission. Note that this guideline should be used for thoriated tungsten emitters only, and does not apply to oxide cathode-type tubes.

Instrumentation

Are all tube elements metered in the transmitter? Elements should be metered for both voltage and current, and meters should be redlined to define operation within safe limits. More modern transmitters may incorporate a microprocessor-controlled circuit to monitor all pertinent parameters.


In addition, the following controls are necessary if an effective filament voltage management program is to be undertaken: power output metering for an FM transmitter or a distortion level meter for AM equipment; accurate filament voltage metering (an iron-vane instrument is preferred over the more common average responding RMS calibrated type; the filament voltage measurement must be made at the tube socket terminals); filament voltage control, capable of being adjusted to 0.1 V secondary voltage change; and a filament current meter—desirable but optional.

A means must be provided to hold filament voltage constant. If the filament voltage is permitted to vary in accordance with primary line voltage fluctuation, the effect on tube life can be devastating. An acceptable solution is the use of a ferroresonant transformer or line regulator. This accessory is offered by some transmitter manufacturers as an option and should be seriously considered if a tube life extension program is planned.

Transmitter housekeeping

Once the transmitter has been placed in operation, tube life is in the hands of the chief engineer. The first action to prolong tube life falls into the category of routine maintenance. Most transmitter manufac-

Fig. 1. Probability of extended life service can be determined from this graph. Divide the average p.a. plate current in amperes by the product of filament voltage and current. The resulting amperes/watt ratio (Y-axis) is projected horizontally to the appropriate curve. The vertical projection to the X-axis indicate the life extension probability.

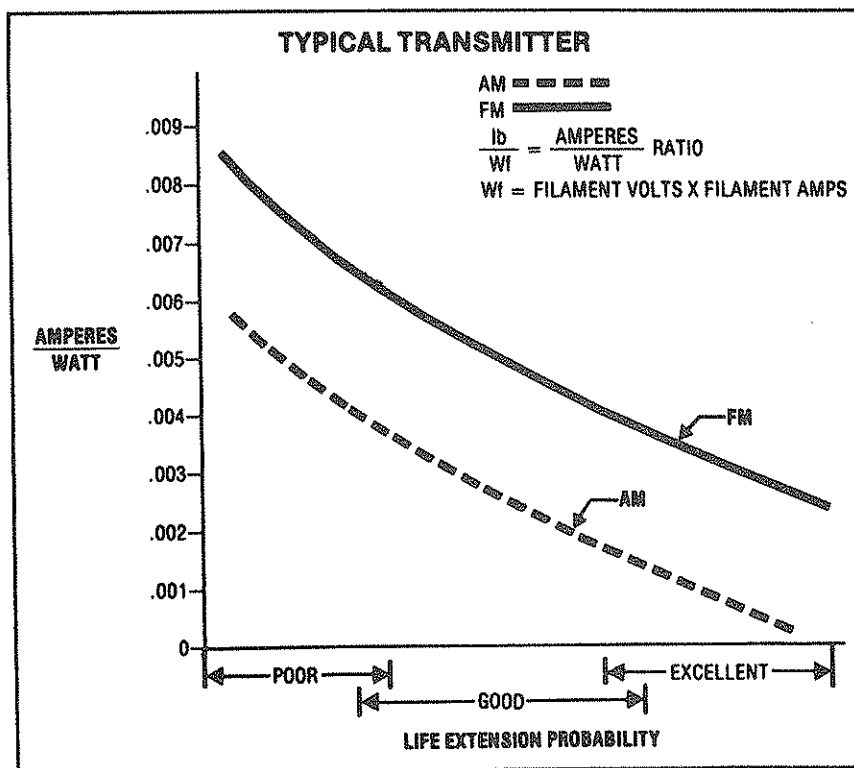

Extending Transmitter Tube Life

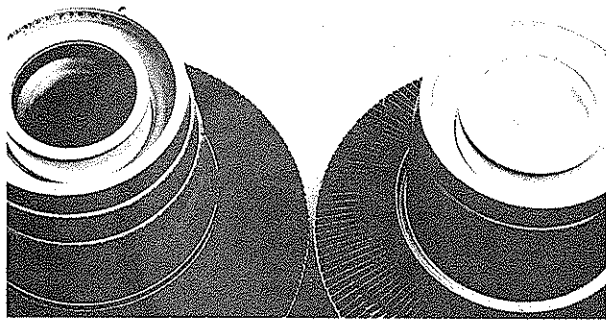


Figure 2

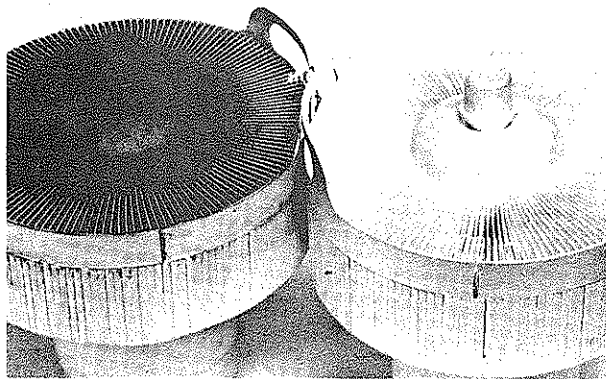


Figure 3

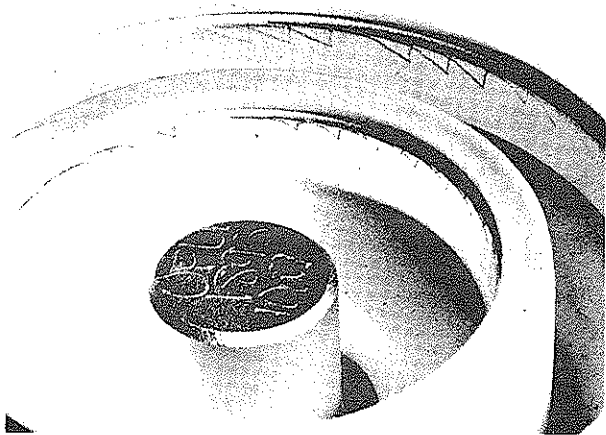


Figure 4

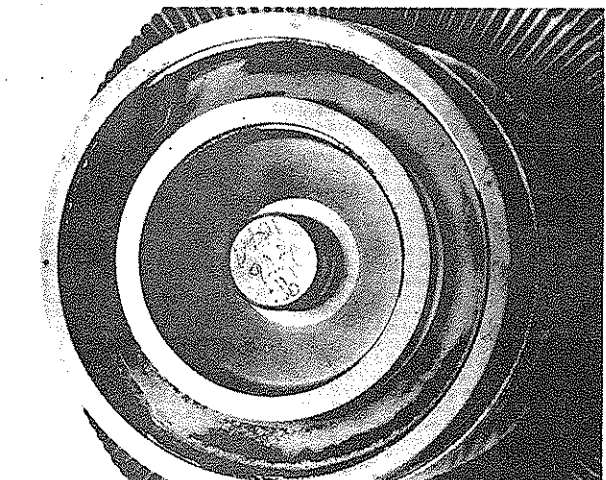


Figure 5

turers have a routine maintenance schedule established in the equipment manual. This procedure must be followed carefully if operating costs are to be held to a minimum. During routine maintenance it is very important to look for tube and socket discoloration, either of which can indicate overheating.

Look for discoloration around the top of the cooler near the anode core and at the bottom of the tube stem where the filament contacts are made. Review Figures 2 and 3 for examples of a tube operating with inadequate cooling. It is possible for discoloration to appear in the areas mentioned if the transmitter has to operate in a dirty environment. If this is the case, the tube should be removed and cleaned with a mild detergent. After cleaning, the tube should be rinsed thoroughly to remove any detergent residue and blown dry with compressed air. If the discoloration remains, this is an indication that the tube has operated at too high a temperature. Check inlet and outlet air ducting and filters for possible air restriction. It may also be necessary to verify that the air blower is large enough to do the job in the present environment and that it is operating at rated capacity.

With the tube removed, the socket should be blown or wiped clean and carefully inspected. Any discoloration in the socket finger stock caused by overheating could contribute to early tube failure. A finger stock that loses its temper through prolonged operation at high temperature will no longer make contact to the tube elements (Figure 4). A well-maintained socket will score the tube contacts when the tube is inserted. If all fingers are not making contact, more current will flow through fewer contacting fingers, causing additional overheating and possible burnout (Figure 5).

Filament voltage management

The useful operating life of a thoriated tungsten emitter can vary widely with filament voltage. Figure 6 describes the relative life expectancy with various filament voltage levels. Obviously, a well-managed filament voltage program will result in longer life expectancy. Improper management, on the other hand, can be very costly.

For a better understanding of this sensitive aging mechanism, the filament itself must be understood. Most filaments in high-power, gridded tubes are a mixture of tungsten and thoria with a chemical com-

Fig. 2. Improper cooling means short tube life (left). Discoloration of metal around inner filament stem and anode fins indicates poor cooling or improper operation of tube. Properly cooled and operated tube (right) shows no discoloration after many hours of use. In both cases, good socketting is indicated by scoring on circular connector rings.

Fig. 3. Dirty and discolored cooler of amplifier tube at left indicates combination of discoloration due to heating and lack of cleaning. Tube has operated too hot and dust has collected in anode louvres.

Fig. 4. Minute scoring in base contact rings indicates that socket finger stock has made good, low-resistance contact to tube elements. Well-maintained socket will score the tube contacts when tube is inserted. If all fingers do not make contact, more current will flow through fewer contact fingers, causing additional overheating and burning, as shown in Fig. 5.

Fig. 5. High resistance socket contacts has caused severe burning of contact area in the base. Overheated base caused early demise of tube.

Extending Transmitter Tube Life

position of $W + ThO_2$. A filament made of this wire is not a suitable electron emitter for extended life applications until it is processed. Once the filament is formed into the desired shape and mounted, it is heated to approximately $2100^\circ C$ in the presence of a hydrocarbon. The resulting thermochemical reaction forms di-tungsten carbide on the filament's surface. Life is proportional to the degree of carburization. If the filament is overcarburized, however, it will be brittle and easily broken during handling and transporting. Therefore, only approximately 25% of the cross-sectional area of the wire is converted to di-tungsten carbide. Di-tungsten carbide has a higher resistance than tungsten; thus, the reaction can be carefully monitored by observing the reduction in filament current as the carburizing process proceeds.

As the tube is used the filament slowly decarburizes. At some point in life, all of the di-tungsten carbide layer is depleted and the reduction of thoria to free


thorium stops. The filament is now decarburized and is no longer an effective electron emitter.

The key to extending the life of a thoriated tungsten filament emitter is to control operating temperature. Emitter temperature is a function of the total RMS power applied to the filament. Thus, filament voltage control is temperature control. Temperature varies directly with voltage. As the emitter temperature rises the de-carburizing process is accelerated and tube life shortened. Figure 6 shows that useful tube life can vary significantly with only a 5% change in filament voltage. *If the filament voltage cannot be regulated to within $\pm 3\%$, the filament should always be operated at the rated nominal voltage.* The danger of operating on the "cold" temperature side is that the emitter may be "poisoned." A cold filament acts as a getter; that is, it attracts contaminants. When a contaminant becomes attached to the surface of the emitter, that area is rendered inactive and loss of emission results. Operation of the filament at slightly below rated nominal voltage, however, can extend tube life if done properly.

FILAMENT VOLTAGE MANAGEMENT (Figure 6)

Filament voltage management allows extended tube life when accompanied by a continuing housekeeping program. When filament voltage is too high (dashes), power tube loses emission rapidly and normal operating life is not achieved. When filament is operated at rated voltage (black curve) normal tube life is achieved in a majority of cases. With a filament voltage management program (bullets), extended tube life may be achieved. When the minimum required output power level is finally reached (right-hand portion of curve), the filament voltage may be raised to rated value, or above, to achieve additional useful operating life. If filament is run "cool" (stars), extremely short life will result. Note that filament voltage management program does not take effect until about 200 hours of operating time have passed.

If voltage management program is not undertaken, tube should be run at rated filament voltage.

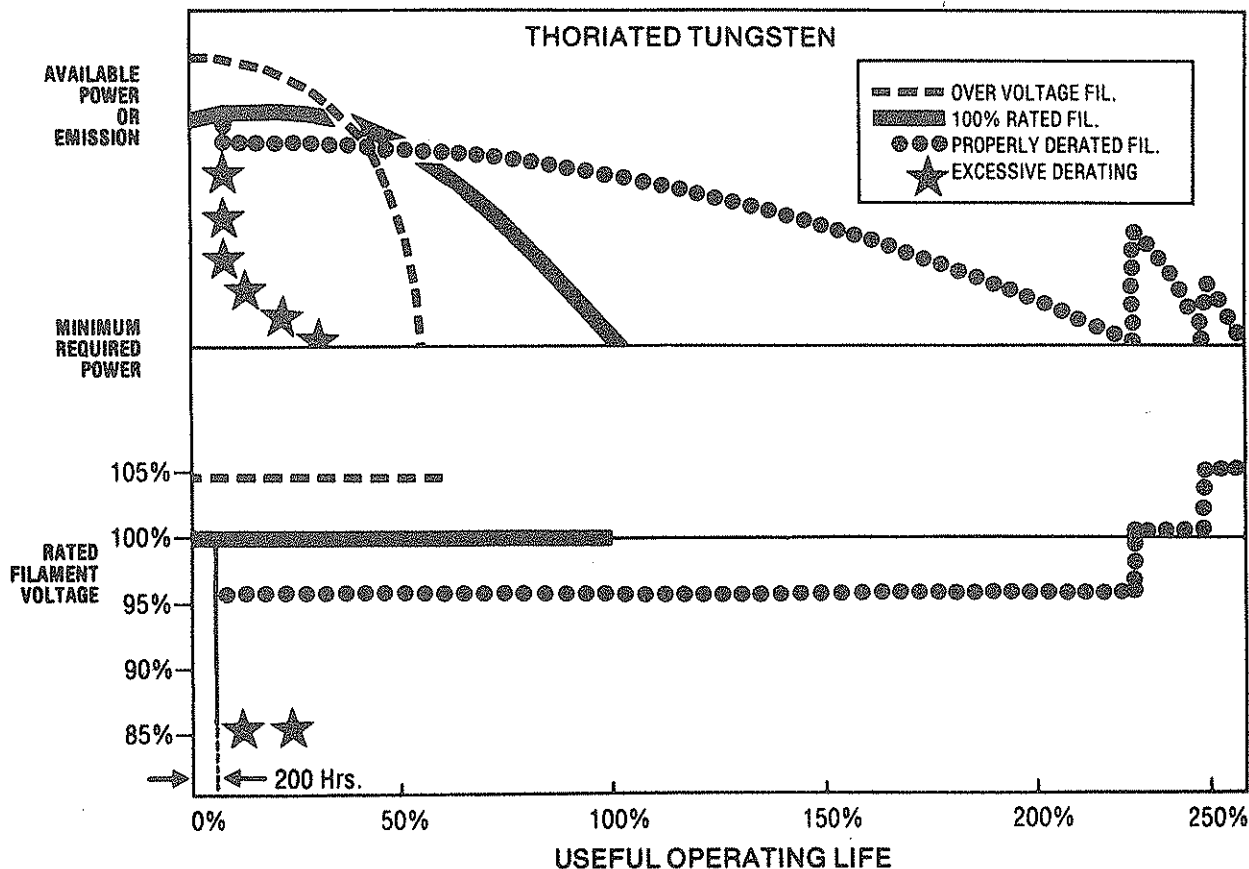

FEATURES

- Gold metallizations
 - Glass passivated structure
 - Hermetical ceramic package
 - Emitter ballast resistors
 - Auto-aligned structure
- } → high reliability
→ severe impedance mismatch
→ high characteristics reproducibility

APPLICATIONS

Telecommunications up to 108 MHz frequency band.

PARTICULARITES

- Métallisations "Or"
 - Structure passivée
 - Boîtier céramique hermétique
 - Résistances ballast d'émetteur
 - Structure auto-alignée
- } → haute fiabilité
→ bonne tenue au ROS
→ bonne reproductibilité des caractéristiques

APPLICATIONS

Telecommunications dans la bande de fréquences jusqu'à 108 MHz

$f = 108 \text{ MHz}$

$P_{OUT} = 160 \text{ W}$

$G_P = 9 \text{ dB}$

$\eta_c = 75 \%$

$V_{CC} = 28 \text{ V}$



Case : CB-290 (.500 4L FL)
Boîtier

| ABSOLUTE RATINGS (LIMITING VALUES) VALEURS LIMITEES ABSOLUES D'UTILISATION | Symbols | Values | Units |
|--|--------------------|------------|----------|
| Emitter-base (d.c.) voltage <i>Tension continue émetteur-base</i> @ $I_E = 20 \text{ mA}$ | VEBO | 4 | V |
| Collector-base (d.c.) voltage <i>Tension continue collecteur-base</i> @ $I_C = 100 \text{ mA}$ | VCBO | 65 | V |
| Collector-emitter (d.c.) voltage <i>Tension continue collecteur-émetteur</i> @ $I_C = 100 \text{ mA}, R_{BE} = 10 \Omega$ | VCES | 60 | V |
| Collector (d.c.) current <i>Courant continu de collecteur</i> | I_C | 16 | A |
| Storage and junction temperature range <i>Températures extrêmes de stockage et de jonction</i> | T_{stg} T_j | -65 → +200 | °C °C |

| | | | |
|---|---------------|------|------|
| Thermal resistance (junction-case) <i>Résistance thermique (jonction-boîtier)</i> @ $P_D = 100 \text{ W}, T_a = 25^\circ \text{C}$ | $R_{th(j-c)}$ | 0,75 | °C/W |
|---|---------------|------|------|


STATIC CHARACTERISTICS at $t_{amb} = 25^{\circ}\text{C}$
CARACTERISTIQUES STATIQUES à $t_{amb} = 25^{\circ}\text{C}$

| Symbols | Values | | | Units | Test conditions |
|---------------|--------|------|------|-------|---|
| | min. | typ. | max. | | |
| $V_{(BR)EBO}$ | 4 | | | V | $I_E = 20 \text{ mA}$ |
| $V_{(BR)CBO}$ | 65 | | | V | $I_C = 100 \text{ mA}$ |
| $V_{(BR)CES}$ | 60 | | | V | $I_C = 100 \text{ mA}$ |
| I_{CBO} | | | | mA | $V_{CB} = \text{V}$ |
| HFE | 20 | | 150 | | $I_C = 1 \text{ A}$ $V_{CE} = 5 \text{ V}$ |
| C22b | | | 150 | pF | $V_{CB} = 28 \text{ V}$ $f = 1 \text{ MHz}$ |


DYNAMIC CHARACTERISTICS at $t_{amb} = 25^{\circ}\text{C}$
CARACTERISTIQUES DYNAMIQUES à $t_{amb} = 25^{\circ}\text{C}$

| Symbols | Values | | | Units | Test conditions |
|-----------|--------|------|------|-------|---|
| | min. | typ. | max. | | |
| P_{OUT} | | 160 | | W | $f = 108 \text{ MHz}$ $V_{CB} = 28 \text{ V}$ $P_{IN} = 20 \text{ W}$ |
| GP | | 9 | | dB | |
| η_c | 70 | 75 | | % | |

CASE DESCRIPTION
DESCRIPTION DU BOITIER

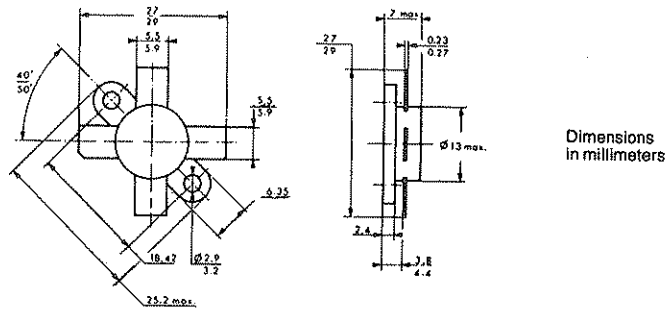




CB-290
 (.500 4LFL)

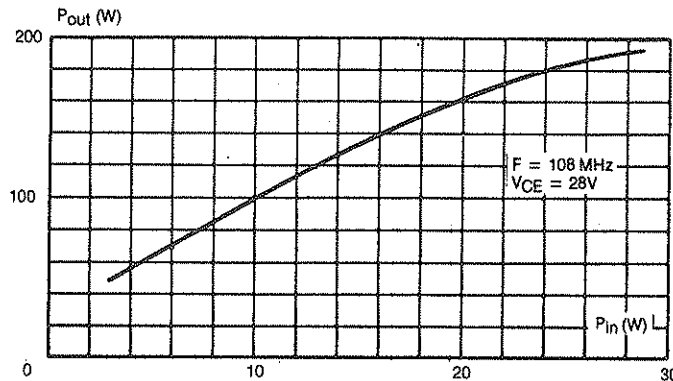

Output power versus input power (typical values)

Micron *Power Conditioners*

Installation, operation and service

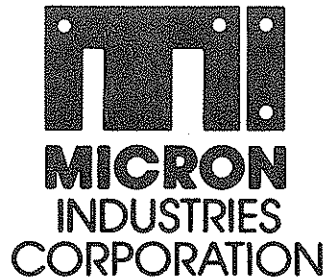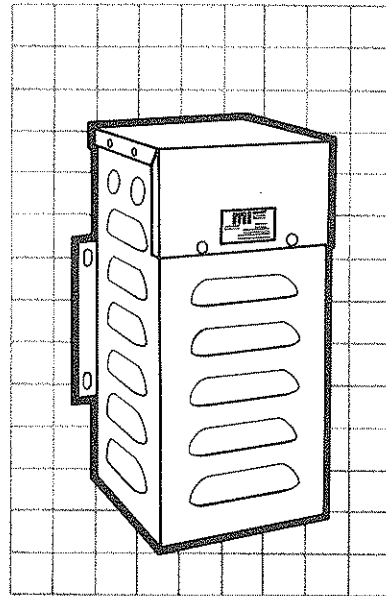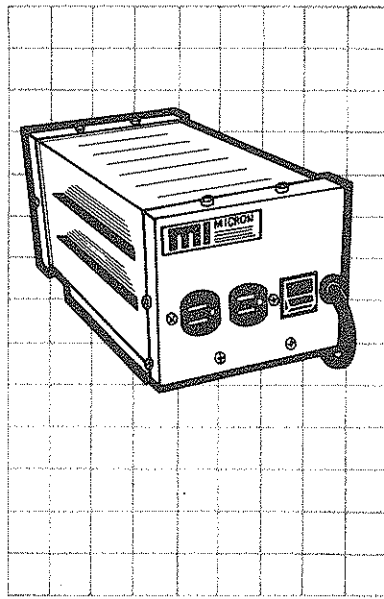

1830 N. 32nd Ave.
Stone Park, IL 60165
Telephone: (312) 345-0788 Telex: 27-0248

MICRON INDUSTRIES CORPORATION
INSTALLATION, OPERATING AND SERVICE INSTRUCTIONS
FOR POWER CONDITIONERS
UL LISTED, CONTROL NUMBER 39L6

DESCRIPTION

Micron Power Conditioners perform four essential functions: 1) attenuate electrical noise contained in the input voltage source, 2) suppress transients, 3) maintain the output voltage to the load constant although the input voltage may fluctuate over a range of +10% to -20% of nominal, and 4) protect against overloads. This is defined as complete power line conditioning as it includes each of the four functions essential to protection of electronic equipment.

Micron Power Conditioners are of ferro-resonant magnetic design which provides excellent electrical isolation between line and load. They are designed to provide noise attenuation of 120 dB for common mode and 60 dB for transverse mode.

The power conditioner is for indoor use only and are intended for wall or floor mounting. A qualified electrician is required for installation.

MOUNTING

Power conditioners can be installed on either wall or floor where the unit weight and size will permit. The units are cooled by natural draft air circulation. Poorly ventilated spaces should be avoided and minimum spacing between two or more power conditioners should be four inches.

If the power conditioner is wall mounted, the wiring compartment should be mounted up. When mounting the power conditioner to a wall, the following minimum size steel bolts must be used in all mounting holes provided.

| VA Size of Unit | Minimum Steel Bolt Size |
|-----------------|--------------------------|
| 750 and 1000 | 1/4 Inch Diameter Bolts |
| 2000 | 5/16 Inch Diameter Bolts |

Micron Power Conditioners are fully enclosed. Personnel are safe from accidental burns since the core is not exposed; personnel guards are not required.

FUSING

Micron Power Conditioners are designed with built-in current limitation which may allow the unit to operate under a direct short circuit load without damage. Fusing of the load is not necessary, however, the source side of the power conditioner may be fused. The fuse rating should be 1 1/2 times the rated operating current, except when connected to a rectified load. Then the fuse should be rated at five times nameplate current because of the high inrush current.

CONNECTIONS

Units should be hard wired to a branch circuit in accordance with local and national electrical codes. Power conditioners having output voltages rated 120/240 can operate at full nameplate rating of 120 volts, or 240 volts, or 120/240 volts, three-wire connection. For these power conditioners a load equal to the name plate VA rating of the power conditioner may be connected across 5 and 6 (or 6 and 7 for 120 volts), but the maximum load which can be connected across 5 and 6 and 6 and 7 must not each exceed 1/2 the VA rating of the power conditioner. The sum of all three-wire connected loads at the 120/240 volt rating must not exceed the nameplate VA rating.

PARALLEL WIRING

Micron Power Conditioners may be connected in parallel to increase load capacity to a level equal to the sum of the VA ratings of individual power conditioners. The individual units must be of the same type, VA capacity, voltage rating, and frequency.

THREE-PHASE OPERATION

Three single-phase power conditioners may be banked and used for three-phase applications. The primaries of the power conditioners must be delta connected to the three-phase source. The secondaries must be WYE connected to the load. Three-phase loads should not be connected phase-to-phase: A to B, B to C, C to A.

Single-phase loads can be connected to the three-phase source. The loads can be balanced (equal load VA to each phase) or totally unbalanced. The load of each phase can not exceed one-third of the total VA of the power conditioners. The loads must be connected phase-to-neutral: A to N, B to N or C to N.

It is highly suggested that the neutral of the power conditioners secondaries and the neutral of the load be connected to a reliable ground. Figure 1 is a typical three-phase wiring diagram.

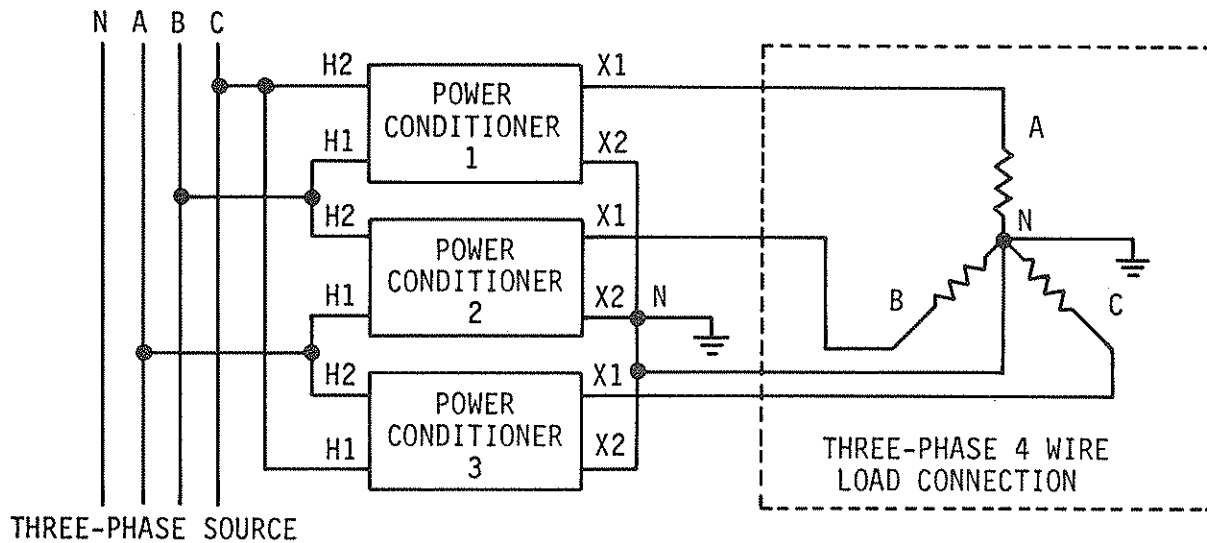


FIGURE 1. THREE-PHASE WIRING DIAGRAM

DERATING FOR WIDER INPUT VOLTAGE RANGE

Where conditions necessitate a greater low voltage input range than the rated range, a power conditioner can be oversized to achieve a lower input voltage range, while maintaining the rated output voltage. Table 1 sets forth the oversizing factor which will achieve a given lower input voltage, expressed as a percent below the nominal voltage rating of the unit.

TABLE 3. OVERSIZING FACTOR FOR LOWER INPUT VOLTAGE RANGE

| INPUT VOLTAGE RANGE BELOW NOMINAL | OVERSIZE FACTOR |
|-----------------------------------|-----------------|
| -20% | 1.00 |
| -30% | 1.02 |
| -40% | 1.40 |
| -50% | 2.00 |
| -60% | 3.10 |

Formula: (1) $\text{Input Voltage Range Below Nominal} = (\text{Lowest Input} \div \text{Nominal Voltage}) \times -100$

(2) Round answer of (1) to next largest percent shown in Table 1 and refer to corresponding Oversize Factor

(3) Required Nameplate VA = Oversize Factor X VA of load to be served.

SPECIFICATIONS AND DIMENSIONAL DATA

Power conditioner specifications and dimensional data are shown in Table 2. These specifications should be read in conjunction with dimension drawings (Figure 2), standard wiring connections (Table 3), and the wiring diagram (Figure 3).

TABLE 2. POWER CONDITIONERS, SINGLE PHASE, 60 Hz

| VA | INPUT | OUTPUT | DIMENSIONS (Inches) | | | | | | MOUNTING SLOTS | APPROX. SHIP Wt. (Lbs) |
|------|--------------------|---------|---------------------|-------|------|-------|------|-------|----------------|------------------------|
| | | | A | B | C | D | E | F | | |
| 750 | 95-130/ 190-260 | 120/240 | 16.25 | 8.75 | 5.63 | 8.13 | 6.00 | 9.00 | 0.38 X 0.75 | 32 |
| 1000 | 95-130/ 190-260 | 120/240 | 16.25 | 8.75 | 5.63 | 8.13 | 6.00 | 9.00 | 0.38 X 0.75 | 40 |
| 2000 | 95-130/ 190-260 | 120/240 | 20.13 | 10.75 | 5.13 | 11.25 | 6.31 | 12.25 | 0.44 X 0.88 | 60 |

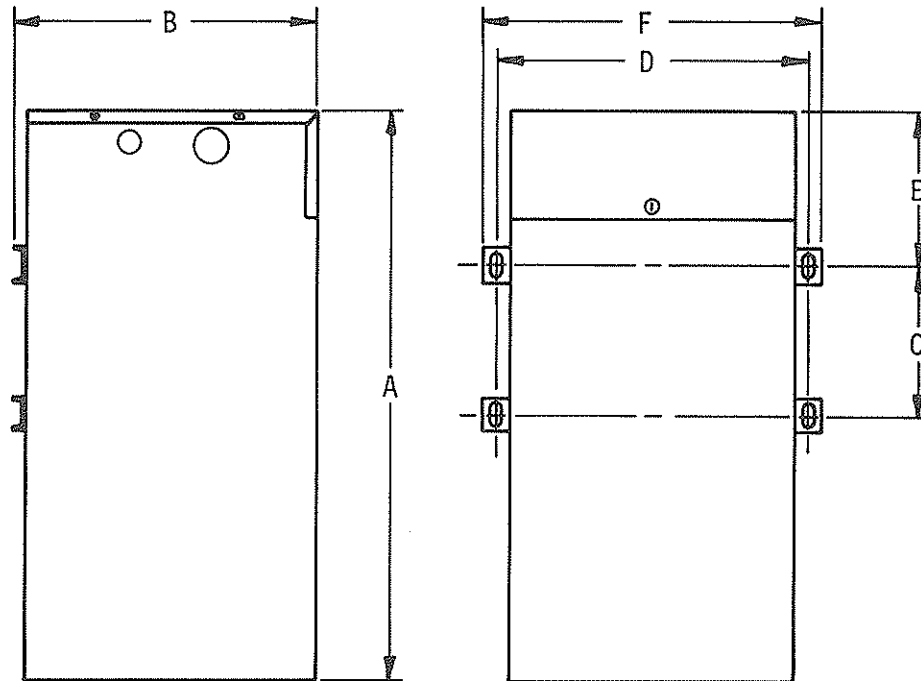


FIGURE 2. POWER CONDITIONER DIMENSIONAL DRAWINGS

TABLE 3. POWER CONDITIONERS STANDARD WIRING CONNECTIONS

| INPUT CONNECTIONS | | | OUTPUT CONNECTIONS | | |
|-------------------|------------------------|----------------------|--------------------|------------------|-------------------|
| VOLTAGE (VAC) | POWER LINE CONNECTIONS | INTERNAL CONNECTIONS | VOLTAGE (VAC) | LOAD CONNECTIONS | CAPACITY |
| 95-130 | 1 & 4 | 1 to 2 & 3 to 4 | 120 | 5&6 or 6&7 | Rated VA |
| | | | 240 | 5 & 7 | Rated VA |
| 190-260 | 1 & 4 | 2 to 3 | 120 | 5 & 8 | 1/2 Rated VA each |
| | | | 120 | 5 & 6 | VA each |
| | | | 120 | 5 & 6 | 1/2 Rated VA each |
| | | | 240 | 5 & 7 | VA each |

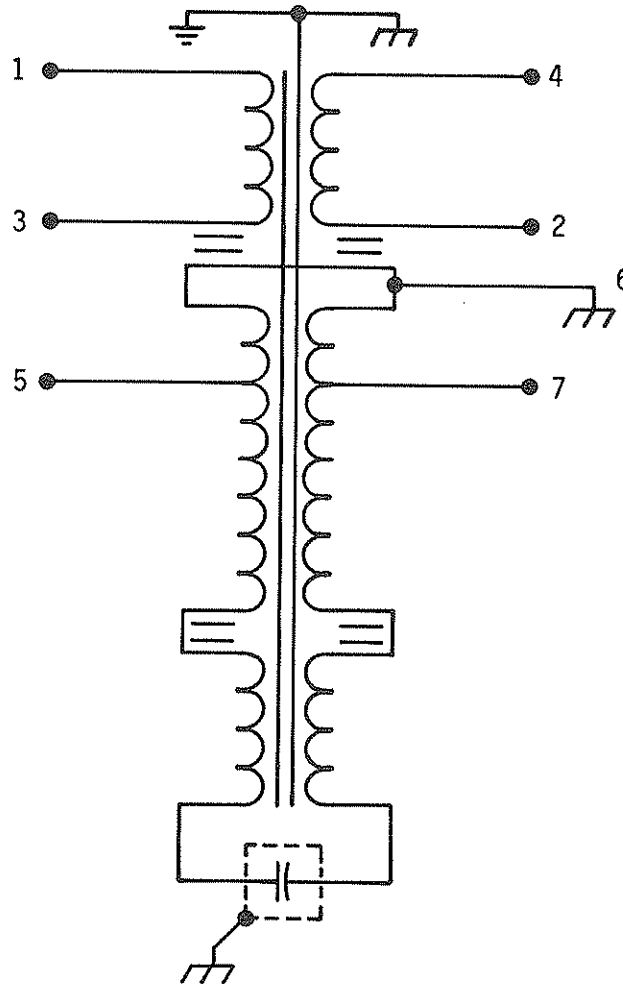


FIGURE 3. WIRING DIAGRAM

AUDIBLE NOISE

Micron Power Conditioners are designed and manufactured to minimize the level of noise. In normal operating environments the noise should not be noticeable. If desired, sound absorption materials may be externally used, provided ventilation to the unit is not impeded. It is suggested whenever possible large units for computer room applications be installed outside the room near the distribution panel.

OPERATING TEMPERATURES

Micron Power Conditioners are designed to operate in ambient temperatures found in typical plant, laboratory, retail, office, and home environments. In operation the temperature of the unit will rise whether or not the power conditioner is delivering to a load. The temperature rise can vary between 45°C to 100°C, depending upon type and rating of the power conditioner. The maximum temperature rise will always be within safe operating conditions for the temperature class of the insulation system used.

MOTOR LOADS

Because of the built-in current-limiting capability of the power conditioner, the nameplate load rating of the power conditioner must be nearly equal to the maximum power drawn during locked-rotor condition of the motor.

EFFECT OF FREQUENCY

Changes in frequency of the input voltage will change the level of output voltage to the load. Each 1.0% change in the frequency of the input voltage will result in approximately 1.8% change in output voltage in the same direction as the frequency change.

CURRENT LIMITATION

Each Micron Power Conditioner is rated to accommodate loads to a given value. If the load is increased beyond the rating of the power conditioner, a point is reached when the output voltage will collapse to near zero. For the power conditioner to regain its normal output voltage, the overload or short-circuit must be removed from the power conditioner. Under short-circuit conditions, the load is current-limited to approximately 150% of the rated full-load value at nominal input voltage. The power conditioner may remain in excessive load or short-circuit conditions without damage to the load or power conditioner. Fusing is not required.

RESPONSE TIME

Micron Power Conditioners provide near instantaneous response to line and load changes. Transient changes in supply voltage will normally return to its original level within 1 1/2 cycles. Fluctuation of the output voltage will remain within a few percent of its original level.

INPUT CHARACTERISTICS

The power conditioner transformer is energized whether it is serving or not serving a load. Input power factor will always be leading, and will average 90% to 100% at full load, around 75% at half load, and 25% at no load.

MAINTENANCE AND TROUBLESHOOTING

MAINTENANCE

Micron Power Conditioners have no moving parts, thus no regular maintenance is required.

REPLACEMENT CAPACITORS

Capacitors used in all power conditioners are of the highest commercial grade available. However, a limited number of capacitors may fail. During the warranty period, new capacitors will be provided without charge.

Replacement capacitors can be ordered through a Micron distributor or sales representative. When ordering replacement capacitors, provide the model number of the power conditioner and the capacitor part number.

TROUBLESHOOTING

Micron Power Conditioners are designed and manufactured to provide years of service. However, if poor performance is suspected, the following procedures may be used to check the power conditioner.

WARNING

BECAUSE OF POSSIBLE EXPOSURE TO HIGH VOLTAGES INSIDE THE POWER CONDITIONER, TROUBLESHOOTING PROCEDURES MUST BE CARRIED OUT ONLY BY A QUALIFIED ELECTRICIAN.

WARNING

1. NO OUTPUT VOLTAGE.
 - A. Assure the input(s) and output(s) are properly connected.
 - B. Check power supply and input switch.
 - C. If fused, check fuse and fuse rating. (If the fuse rating is correct and it opens repeatedly, a capacitor or magnetic component may be shorted or grounded.)
2. NOMINAL OUTPUT VOLTAGE TOO LOW.
 - A. The load may have a lagging power factor.
 - B. Unit may be slightly over loaded.

3. NOMINAL OUTPUT VOLTAGE TOO HIGH.
 - A. The load may have a leading power factor.
 - B. If the load is substantially less than full rating of the unit, the voltage will be slightly high.
4. DOES NOT REGULATE TO SPECIFICATIONS.
 - A. The unit may be slightly over loaded.
 - B. With varying loads, a certain degree of load regulation may be mixed with the line voltage regulating action.
 - C. Actual input voltage range may be outside the rated input range of the unit. This appears as more prevalent on the low side.
5. OUTPUT VOLTAGE EXTREMELY LOW (20 TO 60 VOLTS).
 - A. One or more capacitors in the power conditioner may be defective.
 - B. Unknown overloads of significant size occurring intermittently, such as, solenoid inrush currents and motor starting currents.

Warranty

**MICRON Power Conditioners
are warranted against defects in
workmanship or material for a period of
two years from date of sale.**

TABLE OF CONTENTS

| <u>PARAGRAPH</u> | | <u>PAGE NO.</u> |
|------------------|-----------------------------------|-----------------|
| SECTION I | THEORY OF OPERATION | |
| 1-1 | Introduction | 1-1 |
| 1-3 | General Description | 1-1 |
| 1-6 | Power Supply | 1-1 |
| 1-9 | Interconnect/Filter Circuit Board | 1-1 |
| 1-11 | Control Circuit Board | 1-3 |
| 1-14 | Temperature Sensor | 1-3 |
| 1-15 | RF Amplifier | 1-3 |
| 1-18 | Detailed Description | 1-4 |
| 1-19 | Power Supply | 1-4 |
| 1-20 | Primary Circuit | 1-4 |
| 1-22 | Secondary Circuit | 1-4 |
| 1-26 | Control Regulator | 1-7 |
| 1-34 | Current Foldback | 1-8 |
| 1-35 | Metering | 1-8 |
| 1-39 | Remote IPA Mute | 1-11 |
| 1-41 | Temperature Sensor | 1-11 |
| 1-45 | RF Amplifier | 1-11 |
| 1-48 | Power Amplifier | 1-12 |
| 1-52 | Directional Coupler | 1-12 |
| | | |
| SECTION II | MAINTENANCE | |
| 2-1 | Introduction | 2-1 |
| 2-3 | Safety Considerations | 2-1 |
| 2-5 | Maintenance | 2-1 |
| 2-7 | Adjustments | 2-1 |
| 2-9 | Output Voltage Adjust (R17) | 2-2 |
| 2-18 | FWD CAL (R18) | 2-2 |
| 2-31 | RFL CAL (R19) | 2-4 |
| 2-44 | TEMP CAL (R30) | 2-5 |
| 2-55 | CURRENT BAL (R72) | 2-6 |
| 2-65 | CURRENT CAL (R76) | 2-7 |
| 2-76 | Reflected Power Null (R7) | 2-9 |
| 2-90 | Troubleshooting | 2-10 |
| | | |
| SECTION III | DRAWINGS | |
| 3-1 | Introduction | 3-1 |
| | | |
| SECTION IV | REPLACEMENT PARTS | |
| 4-1 | Introduction | 4-1 |

LIST OF ILLUSTRATIONS

| <u>FIGURE NO.</u> | <u>DESCRIPTION</u> | <u>PAGE NO.</u> |
|-------------------|-------------------------------|-----------------|
| 1-1 | IPA BLOCK DIAGRAM | 1-2 |
| 1-2 | IPA POWER DISTRIBUTION | 1-5 |
| 1-3 | IPA SIMPLIFIED SCHEMATIC | 1-9 |
| 2-1 | NO RF OUTPUT TROUBLESHOOTING | 2-12 |
| 2-2 | LOW RF OUTPUT TROUBLESHOOTING | 2-13 |

LIST OF TABLES

| <u>TABLE NO.</u> | <u>DESCRIPTION</u> | <u>PAGE NO.</u> |
|------------------|----------------------|-----------------|
| 4-1 | IPA PARTS LIST INDEX | 4-1 |

SECTION I
IPA THEORY OF OPERATION

1-1. INTRODUCTION.

1-2. The following text provides detailed theory of operation with supporting diagrams for the FM-5A FM transmitter IPA. For purposes of definition, the text is divided into functional circuits.

1-3. GENERAL DESCRIPTION.

1-4. The FM-5A IPA stage is a totally self-contained solid-state wideband FM amplifier providing a continuously variable 75 to 250 Watt output. Frequency coverage is 87.5 MHz to 108 MHz. The unit is mounted on slide rails for ease of maintenance.

1-5. The IPA stage consists of an RF amplifier circuit board and a control regulator circuit board mounted side-by-side on easily removed heatsinks. An interconnection filter circuit board, an unregulated dc power supply, and a status indicator circuit board are also mounted within the IPA stage (see Figure 1-1).

1-6. POWER SUPPLY.

1-7. The IPA power supply consists of a conventional full-wave bridge-rectified supply, a capacitor filter and bleeder, and a series regulator. The transformer primary has multiple taps which must be pre-set to minimize over-voltage and consequent over-dissipation of the regulator devices. This allows optimum efficiency to be obtained through the supply.


1-8. The power supply operates from an input of 194 to 275V ac at 2 Amperes and produces the following potentials:

- +40 Vdc, filtered @ 18 Amperes
- +40 Vdc, filtered)
- +28 Vdc, regulated) @ 0.5 Amperes
- +15 Vdc, regulated)

- 1.3 Vdc @ 10 mA Stabilized

1-9. INTERCONNECT/FILTER CIRCUIT BOARD.

1-10. The interconnection filter circuit board provides internal connections between circuit boards, provides RFI filtering for the IPA status outputs, and provides some interface for control inputs.

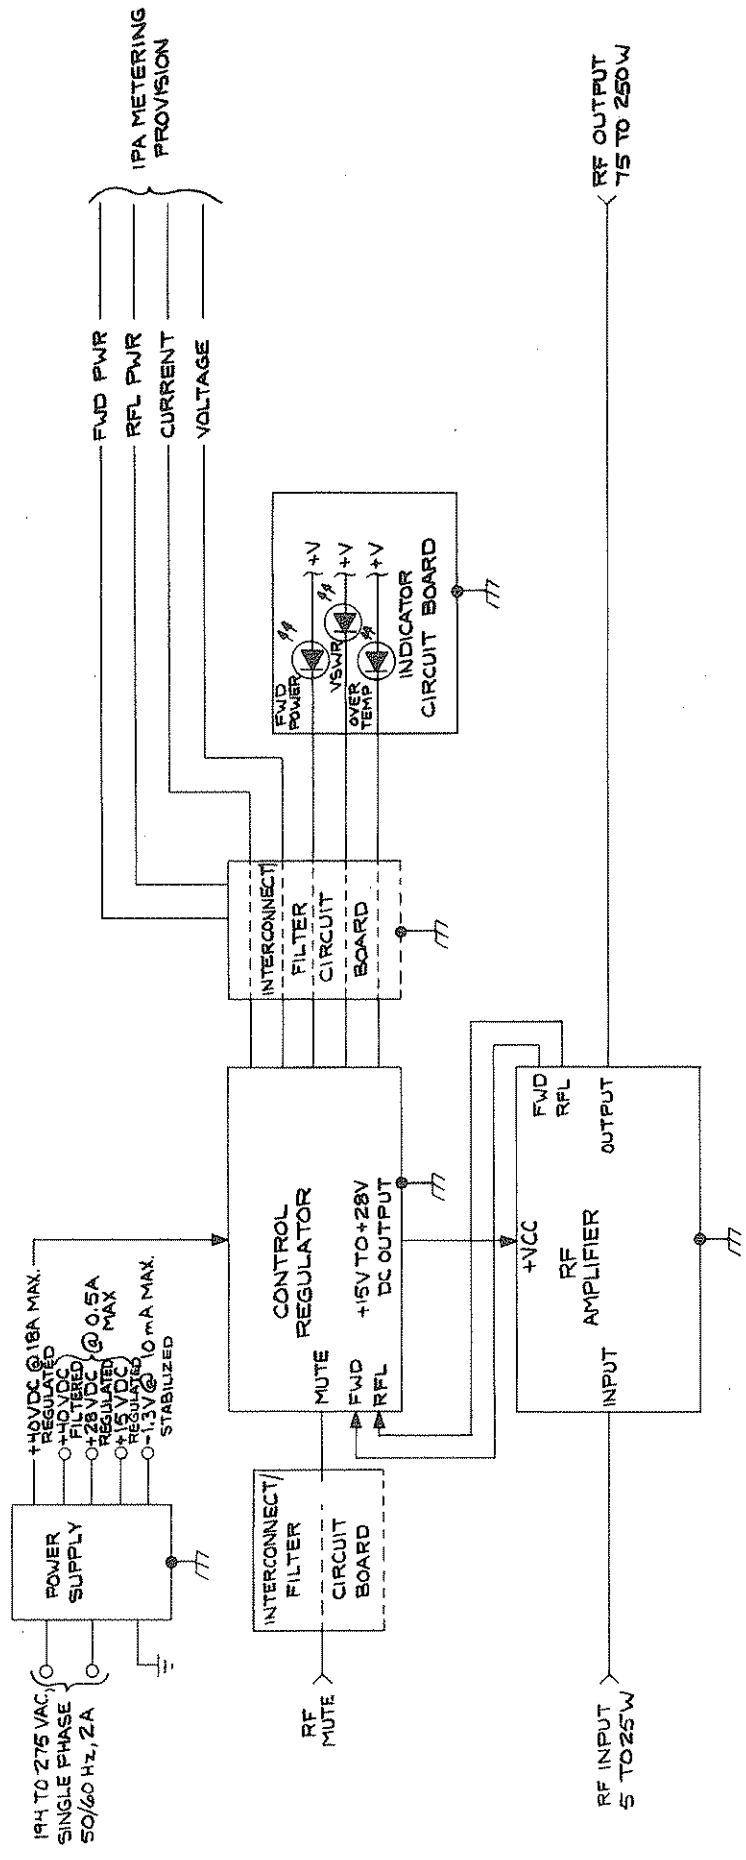

597-0032-24
 COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

FIGURE 1-1. IPA BLOCK DIAGRAM

1-11. CONTROL CIRCUIT BOARD.

1-12. The control circuit board regulates the operation of the RF amplifier within preset limits dependent upon several parameters such as reflected power and forward power or dc voltage, control regulator heatsink temperature, dc current, and an external mute input. The control circuit board also contains amplifiers for the forward and the reflected directional couplers, the over-temperature circuit, and the IPA metering circuitry.

1-13. The regulator and control circuitry is contained on a printed circuit board with the output pass transistors mounted on an attached heatsink. Multiple paralleled devices are used to enhance reliability. The regulator is capable of supplying 28 volts at 15 Amperes of direct current. Voltage foldback will occur when excessive current is drawn or a high reflected power sample is evident. This protects the RF power transistors against output mismatch-induced damage. The drive signal or ac power must be momentarily removed to restore normal voltage from the regulator after foldback has occurred. A yellow front-panel mounted VSWR indicator indicates excessive reflected power into the output of the IPA with possible voltage foldback occurring when illuminated.

1-14. TEMPERATURE SENSOR. A temperature sensor is bonded to the regulator heatsink. This protects the output pass transistors from over-dissipation in the event of a fault by latching off the regulator driver circuit upon excessive temperature. A red front-panel mounted OVER TEMP indicator indicates this condition when illuminated. Removal of power is required to reset the operation of the regulator after an over-temperature condition has occurred.

1-15. RF AMPLIFIER.

1-16. The RF circuitry consists of two bipolar RF power transistors conservatively operated as a push-pull class C amplifier. Wide-band transmission-line matching sections transform impedances on the printed circuit board while providing for balanced push-pull operation of the transistors. Stripline networks along with chip capacitors match the base and collector elements of both transistors to the transmission line sections. A stripline directional coupler provides forward and reflected power samples. The IPA exhibits a minimum power gain of 10 dB.

1-17. Normal IPA stage operation is signaled by illumination of the green front-panel FWD POWER indicator which signals 75 Watts of forward power. A high reflection is indicated by illumination of the yellow front-panel VSWR which signals 8 Watts of reflected power with possible foldback of the control regulator. Removal of the dc or RF input to the IPA stage is required to reset a foldback condition.

1-18. DETAILED DESCRIPTION.

1-19. POWER SUPPLY.


1-20. PRIMARY CIRCUIT. The IPA power supply operates from an input of 194 to 275 volts ac at a maximum of 2 Amperes (see Figure 1-2). AC power is input through RFI filter FL1 which provides 55 dB of attenuation to frequencies of 10 MHz and above. A special power transformer with a tapped dual primary allows operation from both 50 and 60 Hz as well as a wide range of ac input voltages without component changes. Compensation for different input voltages is accomplished by wiring changes to terminal strip TS1 and a power transformer secondary tap. If the supply is ever operated from a single-line input such as 120 volts ac, the fuse in the common side of the ac input must be jumpered out of the circuit for safety reasons. Refer to schematic diagram D959-0151 for input potentials and required wiring changes.

1-21. The cooling fan is connected across one primary of transformer T1 and runs continuously whenever ac power is applied. Fuses F1 and F2 provide overload protection for the primary circuit and metal-oxide varistor MOV1 provides suppression of voltage surges in excess of 250 volts.

1-22. SECONDARY CIRCUIT. The tapped secondary of T1 produces two ac voltages which are full-wave rectified into two dc supplies (39V and 35.5V average). C1 provides filtering, R1 acts as a bleeder, and fuse F3 provides overload protection for the secondary circuit. The +40 volt dc output is routed to the control regulator assembly where it is distributed and regulated into several different potentials.

1-23. Regulators. The 40 volt dc potential is fed directly to the pass transistor network mounted on the control regulator heat sink and to the regulators on the control regulator circuit board through fuse F1. The pass transistor network outputs a regulated potential to the RF amplifier to maintain a constant RF output in response to control parameters measured by the control regulator circuit board.

1-24. The 40 volt input to U1 is regulated into a +28 volt source. The +28 volt source is re-regulated by U2 into a +15 volt source. Regulators U1 and U2 are both three-terminal adjustable positive regulators containing internal thermal-overload protection and short-circuit current limiting features. Further protection for the regulators is provided by diodes D3 and D4, each which protects its respective regulator from a reverse polarity potential applied to the output and diodes D1 and D2, each which protects its respective regulator from a short circuit applied to the input.

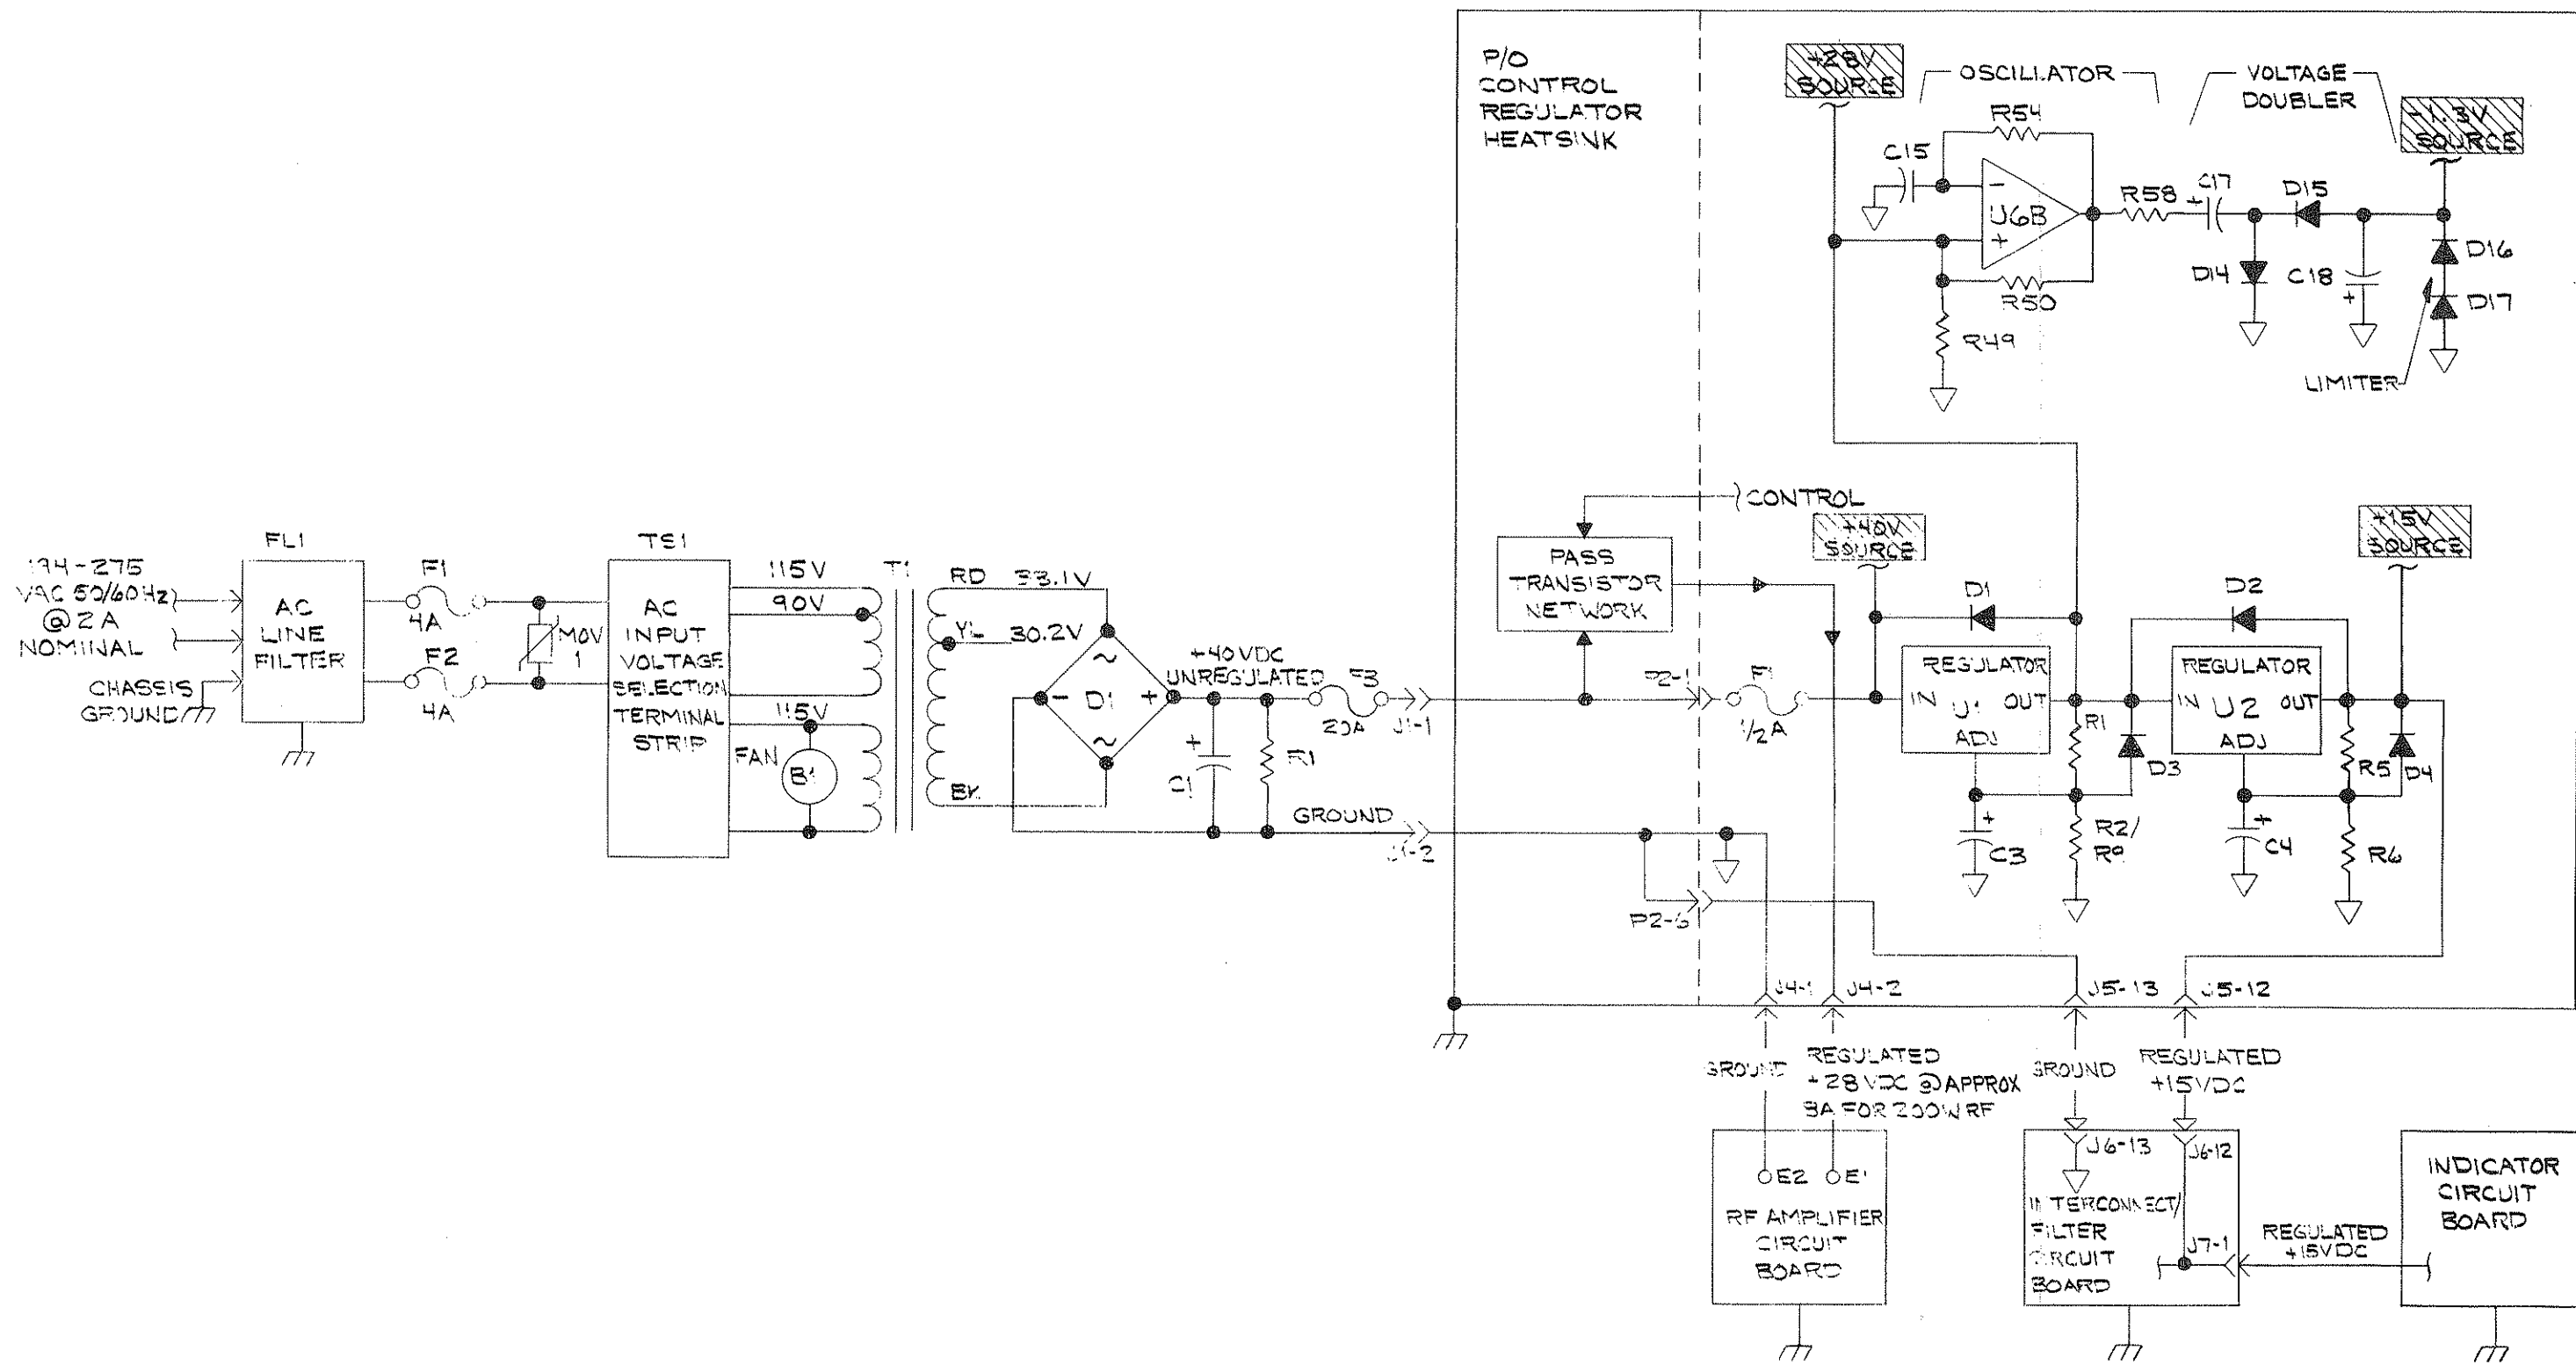

597-0032-21

FIGURE 1-2. IPA POWER DISTRIBUTION

1-25. Negative 1.3 Volt Supply. A negative 1.3 volt potential required for the metering circuit is developed from the output of U6B which is configured as an oscillator. The output of U6B is rectified by a voltage doubler consisting of C17, D14, and D15. The output of this supply is stabilized by diodes D16 and D17, each which provides a constant 0.65 volt drop to maintain the output at a constant -1.3 volts.

1-26. CONTROL REGULATOR.

1-27. The control regulator consists of a circuit board and a heat-sink assembly which forms part of a closed loop with the RF amplifier. Jumper-plug programming allows feedback selection of either dc voltage and VSWR or forward RF power and VSWR for feedback (see Figure 1-3).

1-28. The regulator output voltage is established by a precision voltage drop, a series string of resistors, and the output voltage adjust control (R17). For a regulator output voltage of 28 volts, R17 must be adjusted to 14.8 volts on the wiper.

1-29. Plug P17 allows selection of a dc voltage as a regulator reference or an optional digital-to-analog converter reference. Resistor R20 provides an input to error amplifier U5A if P17 is inadvertently left out. The potential from P17 is applied to the non-inverting input to error amplifier U5A. Error amplifier U5A compares this input to the regulator output which is applied through a voltage divider to the inverting input. If the regulator output goes down, the output of U5A will increase. If the regulator output increases, the output of U5A will decrease. This control voltage is routed through steering diode D9 and level-shift diode D10 to a constant-current source.

1-30. Q1 and Q2 form a constant-current source which produces a stable current independent of the 40 volt regulator supply. The constant current generator assures that the current through R47 remains constant and independent of the foldback, mute, or over temperature circuits connected in parallel to the mute line. Diode D13 prevents an excessive voltage applied to the mute line from exceeding a limit which might damage Q1.

1-31. Regulator drive is applied to the base of Q1 which in turn drives regulator pass transistors Q2, Q3, and Q4. The dc supply for the regulator drive and the pass transistors is routed directly from the power supply high-current 40 volt source. A current balancing network for the pass transistors is provided by the output resistor network. The output of the output resistor network is applied to the RF amplifier load.

1-32. Either forward and reflected power feedback or dc voltage and reflected power feedback may be selected with jumper P18. When P18 is set to dc, a dc sample of the output voltage will be applied to the inverting input of U5A through R31 and R34. Resistor R24 provides an input to error amplifier U5A if P17 is inadvertently left out. A reflected power control signal will be added through diode D6 when the reflection is great enough to exceed the 0.7 volt drop across D6, approximately 15 volts at R22.

1-33. When P18 is set to FWD PWR, a dc potential representative of the IPA forward power level will be applied to the inverting input of U5A. Reflected power control will be added through Diode D5 when the reflection is great enough to exceed the 0.7 volt drop across D5.


1-34. CURRENT FOLDBACK. The output resistor network and the fold-back resistor network work together to provide the current foldback action when the output current reaches 18 Amperes. If the regulator output is at the correct level, R51 will be essentially out of the circuit as there will be practically no current flow through the resistor. As the voltage across R59, R60, and R62 increases due to current increase, the voltage summed at the junction of R52 and R53 will increase with respect to the emitter of Q4. As Q4 is biased on, current will begin to flow through R51 which saturates Q4. This action grounds the mute line which removes the dc output. DC power must be interrupted to reset the foldback condition or removal of RF drive is required.

1-35. METERING. Current through the pass transistor output resistor network is used to generate the voltage used to meter output current. The transistor emitter connections are summed into the non-inverting input of U7A and the output side of the emitter resistor is connected to the inverting input of differential amplifier U7A. The current bal control (R72) adjusts the offset on U7A so that with zero current, the output is zero. The output of U7A is applied to U7B which acts as a meter driver. R76 allows adjustment of the stage calibration. The -1.3 volt supply is connected to the -Vcc connection of U7B so that a meter connected to U7B will properly register zero with no input. This below-ground reference is required with zero volt operation of the operational amplifier.

1-36. Forward Amplifier. The rectified output of the forward port of the directional coupler is applied to the forward meter amplifier of the control regulator circuit board. Non-inverting amplifier U3A has a high input impedance and high gain. The exact gain of the amplifier is adjusted by potentiometer R18. RF is filtered from the signal before entering the forward power meter amplifier by R7 and C5.

1-37. Reflected Amplifier. The reflected meter amplifier (U4A) works in a manner similar to the forward amplifier section except that the voltage gain of this amplifier is higher than the forward amplifier which compensates for the differences in the coupling factor of the directional coupler sampling lines. RF is filtered from the signal before entering the reflected amplifier by R8 and C6. U4A is calibrated by potentiometer R19.

1-38. The 15 volt full-scale output of U3A and U4A are routed through 3:1 dividers and voltage follower stages U3B and U4B to amplifiers U2A and U2B on the interconnect filter circuit board. The forward power signal is routed through comparator U1D and the reflected power output is routed through comparator U1E and applied to the front panel VSWR indicator. This indicator illuminates when over 8 Watts of power is reflected back into the IPA from the load. The FWD PWR indicator illuminates when the forward power is 75 Watts or greater.

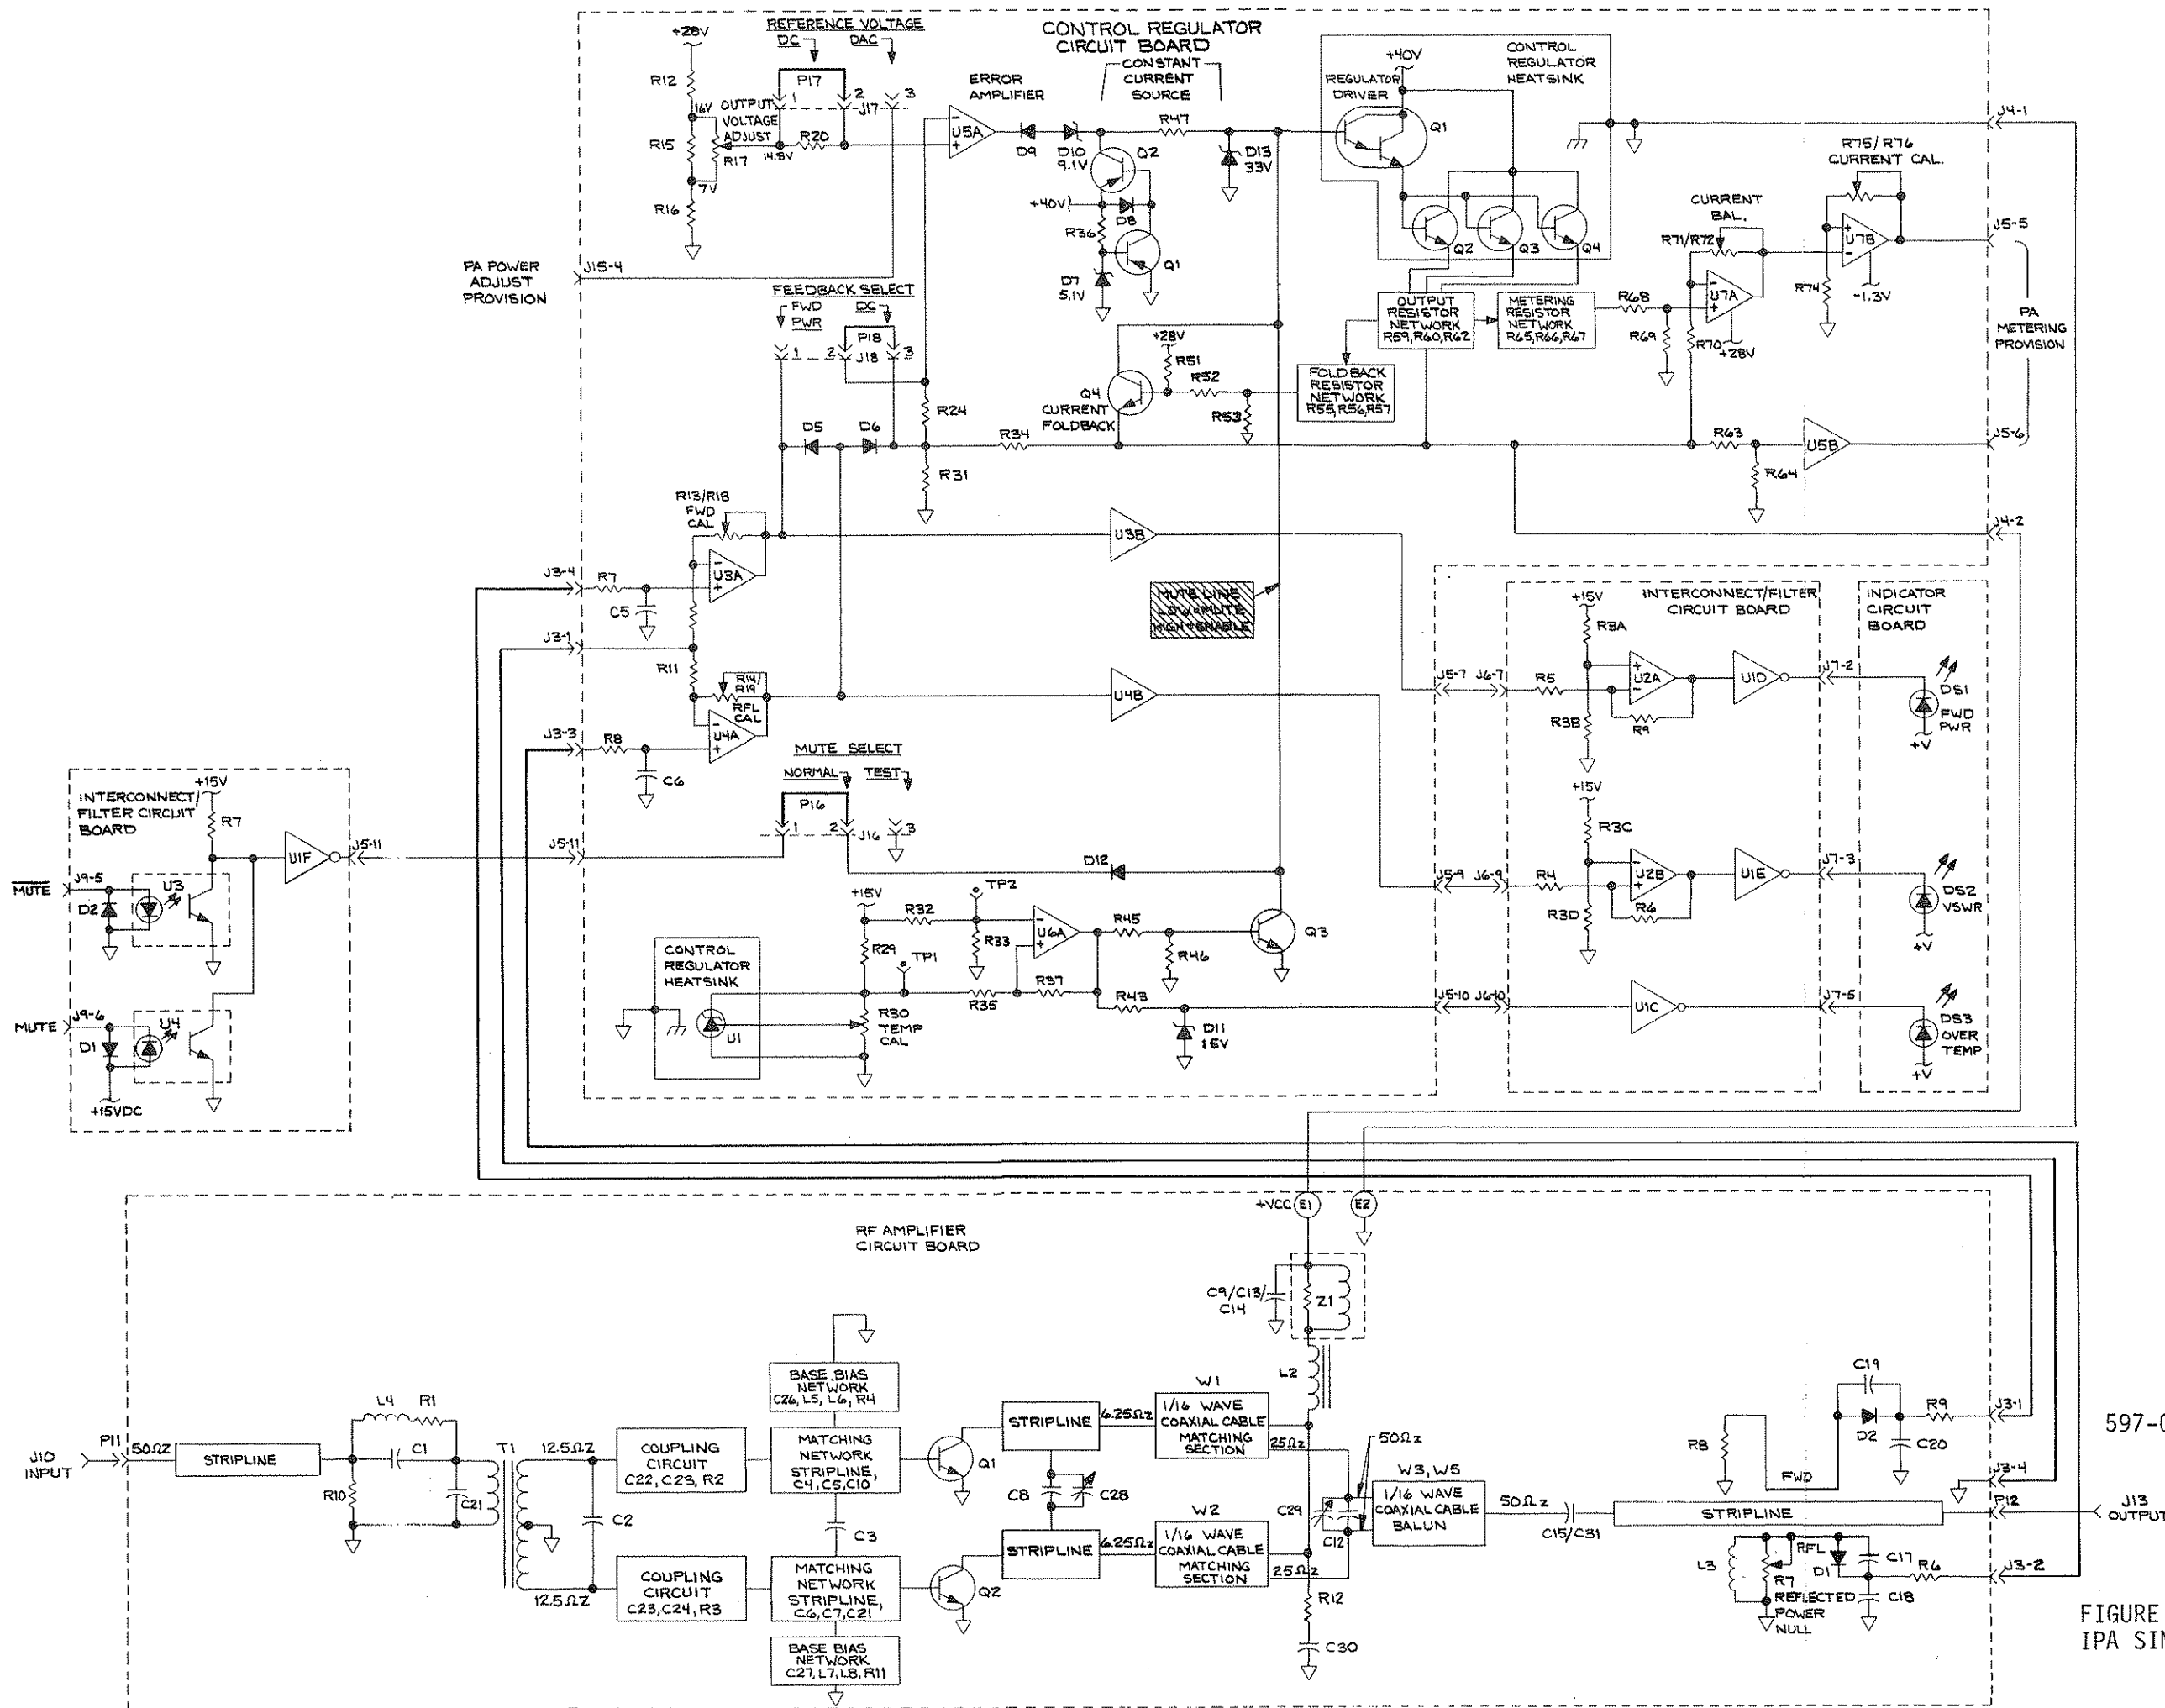

597-0032-22

FIGURE 1-3. IPA SIMPLIFIED SCHEMATIC

1-39. REMOTE IPA MUTE. Provisions exist which allow the IPA stage RF output to externally muted using either a positive voltage or ground connection for control.

1-40. The mute input is applied to J9-5 if a positive voltage is used for muting or J9-6 if a ground is used for muting. When an input is applied, the optical coupler (U3 or U4) will pull the input to inverter U1F LOW which inhibits the drive applied to regulator driver Q1 and mutes the IPA RF output. The mute select jumper (P16) must be in the normal position to allow external muting. Diode D12 steers the input to prevent external devices from loading the mute line. The mute input is disconnected in the FM-5A, as RF muting is controlled in the FM exciter.

1-41. TEMPERATURE SENSOR. An electronic temperature sensing circuit consisting of U1 and U6A senses the control regulator heatsink temperature. If an over-temperature condition occurs, dc output will automatically be removed to prevent damage to the RF output transistors. Under normal conditions, the OVER TEMP indicator (DS3) on the front panel will remain off. As a visual indication that an over-temperature condition exists, the OVER TEMP indicator will illuminate.

1-42. Temperature sensor U1 is mounted on and is thermally coupled to the control regulator heatsink. U1 functions much as if it were a zener diode with a calibrated positive temperature coefficient. The sensor is calibrated by the TEMP CAL control (R30) so that the voltage between test point TP1 at the non-inverting input to U6A and ground is set to +2.98 volts when the heatsink temperature is +25 degrees Celsius and +2.73 volts at 0 degrees Celsius. U6A operates as a voltage comparator with +3.61 volts at test point TP2. This corresponds to an 88 degree Celsius comparison threshold.

1-43. At normal heatsink temperatures, the voltage output of U6A will hold Q3 biased off. As the voltage from U1 increases with heat rise at the rate of 10 millivolts per degree Celsius, U6A will trigger at the point preset by R30 and bias Q3 into conduction. Q3 will inhibit the drive applied to the regulator driver (Q1) and inhibit RF output.

1-44. In this manner, IPA is allowed to operate until a predetermined temperature is reached, then the RF output will be inhibited. An over-temperature condition is signaled by illumination of the OVER TEMP indicator (DS3) through inverter U1C. Zener diode D11 limits the input to U1C to a safe operating level if U6A should internally short. The IPA will return to operation as the temperature cools down.

1-45. RF AMPLIFIER.

1-46. The RF amplifier is a broadband stripline matched amplifier covering the FM broadcast band with a nominal output power of 150 Watts (see Figure 1-3). By adjusting the RF drive input, the RF power is variable over a range of 75 to 250 Watts. Tuning of the single-stage push-pull amplifier is not required.

1-47. The dc power input and the directional coupler outputs are connected to the circuit board through the chassis with feed-through capacitors to prevent RF interference. All wiring connects to the IPA assembly through plugs to aid in maintenance.

1-48. POWER AMPLIFIER. Approximately five to 25 Watts of drive is input to the 50 Ohm primary of transformer T1 through a section of stripline. R10 acts as a swamping resistor to improve the input match and capacitor C1 tunes out the series reactance in the primary circuit of transformer T1. Capacitor C21 resonates the primary of T1 to improve the input match and the series combination of L4 and R1 effectively lowers the Q on the input circuit to allow a broadband match.

1-49. Transformer T1 provides a 4:1 step-down in impedance from 50 Ohms to two 12.5 Ohm sources, each source 180° out-of-phase. The output of T1 is capacitive coupled by a low-Q circuit to a matching network which further reduces the 12.5 Ohm impedance to approximately 1.5 Ohms to match the base impedance of Q1 and Q2. Base bias networks stabilize gain while C2 and C3 function as lumped matching elements in the impedance transformation. Capacitors C4/C5 and C6/C7 cancel out the inductive base reactance of Q1 and Q2.

1-50. Q1 and Q2 are NPN RF power transistors operated as a class C push-pull stage. The collector of each transistor feeds a stripline section which acts as a broadband impedance step-up transformer to convert the 0.5 Ohm collector impedance of each transistor to 6.25 Ohms. Capacitors C8 and C28 assist in the impedance transformation. Parallel connected inputs and series connected outputs of 25 Ohm coaxial cable raise the 6.25-6.25 Ohm push-pull outputs up to the 25-25 Ohm level. The series combination of R12 and C30 assure stable amplifier operation.

1-51. A coaxial cable balance-to-unbalance (balun) transformer converts the two 25 Ohm impedances to a single 50 Ohm unbalanced RF output. Capacitors C12 and C29 provide balanced transistor operation and paralleled capacitors C15/C31 block dc in the RF output line.

1-52. DIRECTIONAL COUPLER. The directional coupler provides two dc signals, each signal obtained by rectifying a portion of the RF output signal, coupled from a transmission line section etched into the circuit board. Due to the polarity of the two samples, one signal will be proportional to the forward traveling RF wave and the other signal will be proportional to the reflected traveling RF wave.

1-53. Forward Directional Coupler Port. The forward port of the directional coupler is broadbanded across the FM broadcast band. The voltage sample obtained is rectified by diode D2 and filtered by a PI-section filter. C19 improves the match due to the presence of D2. This output is routed to the control regulator for use in the control and metering circuits.

1-54. Reflected Directional Coupler Port. The reflected port of the directional coupler is broadbanded across the FM broadcast band. The voltage sample obtained is rectified by diode D1 and filtered by a PI-section filter. C17 improves the match due to the presence of D1. Inductor L3 in parallel with variable resistor R7 improves the linearity of the coupler across the band. R7 is adjusted to maximum directivity at the frequency of operation. This output is routed to the control regulator for use in the control and metering circuits.

SECTION II
IPA MAINTENANCE

2-1. INTRODUCTION.

2-2. This section provides maintenance information for the FM-5A FM transmitter IPA.

2-3. SAFETY CONSIDERATIONS.

2-4. The FM-5A transmitter contains high voltages and currents which, if regarded carelessly, could be fatal. The transmitter has many built-in safety features, however good judgement, care, and common sense are the best accident preventives. The maintenance information contained in this section should be performed only by trained and experienced maintenance personnel.

2-5. MAINTENANCE.

WARNING NEVER OPEN THE EQUIPMENT UNLESS ALL TRANSMITTER PRIMARY POWER IS DISCONNECTED.

WARNING BEFORE ATTEMPTING TRANSMITTER MAINTENANCE, ASSURE THE REMOTE DISABLE SWITCH/INDICATOR IS ILLUMINATED, THEN DISCONNECT POWER FROM THE TRANSMITTER.

WARNING IF A FAULT WILL NOT ALLOW THE REMOTE DISABLE SWITCH/INDICATOR TO ILLUMINATE, DISCONNECT POWER FROM THE TRANSMITTER, THEN UNPLUG P1 FROM J1 ON THE REAR OF THE TRANSMITTER CONTROLLER.

2-6. The FM-5A maintenance philosophy consists of preventative maintenance such as cleaning applied to the equipment of forestall future failures and second level maintenance consisting of procedures required to restore the equipment to operation after a fault.

2-7. ADJUSTMENTS.

WARNING NEVER OPEN THE EQUIPMENT UNLESS ALL TRANSMITTER PRIMARY POWER IS DISCONNECTED.

2-8. The following procedures present information required to adjust all controls in the IPA stage. These adjustments are factory preset and therefore will require readjustment only if components on the individual circuit boards have been replaced. Adjustments for the control regulator (R17, R18, R19, R72, and R76) are presented first, followed by an adjustment procedure for R7 on the RF amplifier circuit board. The adjustments may be accessed by extending the IPA chassis forward on its slide rails out of the rack and removing the top cover.

2-9. OUTPUT VOLTAGE ADJUST (R17). To adjust the output voltage control (R17) on the control regulator circuit board, proceed as follows.

2-10. Required Equipment. The following equipment is required to adjust the output voltage adjust control (R17).

- A. Flat blade screwdriver, 1/4 inch tip.
- B. Insulated adjustment tool, flat tip (BE P/N 407-0083).
- C. Digital voltmeter, Fluke 75 or equivalent 3 1/2 digit model.

2-11. Procedure. To adjust the control, proceed as follows:

WARNING ASSURE ALL PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

2-12. Disconnect primary power.

2-13. Connect the voltmeter between J4 pin 1 and chassis ground.

WARNING MAINTENANCE WITH POWER ENERGIZED IS ALWAYS CONSIDERED HAZARDOUS AND THEREFORE CAUTION SHOULD BE OBSERVED. DO NOT TOUCH ANY COMPONENTS WITHIN THE IPA WHEN POWER IS ENERGIZED.

WARNING USE AN INSULATED TOOL FOR ADJUSTMENT.

2-14. Operate the SCREEN and FILAMENT circuit breakers to OFF, operate the AC POWER, DRIVER, and BLOWER circuit breakers to ON, and depress the FILAMENT ON switch/indicator.

2-15. Using the insulated adjustment tool, adjust R17 to obtain a voltmeter indication of +28.0 volts dc.

WARNING ASSURE ALL PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

2-16. Disconnect primary ac power.

2-17. Remove the test equipment, then operate the SCREEN and FILAMENT circuit breakers to ON.

2-18. FWD CAL (R18). To adjust the fwd cal control (R18) on the control regulator circuit board, proceed as follows: This adjustment is required if transmitter diagnostic options indicate improperly, the FWD POWER indicator threshold is incorrect by more than 10 Watts, or if either the RF amplifier or control regulator assemblies are replaced.

2-19. Required Equipment. The following equipment is required to adjust the fwd cal control (R18).

- A. Flat blade screwdriver, 1/4 inch tip.
- B. Insulated adjustment tool, flat tip (BE P/N 407-0083).
- C. Digital voltmeter, Fluke 75 or equivalent 3 1/2 digit model.
- D. Test load and connecting cable (50 Ohm non-inductive, 300 Watt minimum).
- E. Calibrated in-line wattmeter and connecting cable (Bird 43 or equivalent with 250 Watt element).

2-20. Procedure. To adjust the control, proceed as follows:

WARNING

ASSURE ALL PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

2-21. Disconnect primary power.

2-22. Disconnect the transmitter PA input cable and connect the non-inductive test load to the IPA OUTPUT connector through the in-line wattmeter. Adjust the wattmeter to measure forward power.

2-23. Connect the voltmeter between pin 7 of U3 on the control regulator circuit board and chassis ground.

WARNING

MAINTENANCE WITH POWER ENERGIZED IS ALWAYS CONSIDERED HAZARDOUS AND THEREFORE CAUTION SHOULD BE OBSERVED. DO NOT TOUCH COMPONENTS WITHIN THE IPA WHEN POWER IS ENERGIZED.

WARNING

WARNING

USE AN INSULATED TOOL FOR ADJUSTMENT.

2-24. Operate the SCREEN and FILAMENT circuit breakers to OFF, operate the AC POWER, DRIVER, and BLOWER circuit breakers to ON, and depress the FILAMENT ON and HIGH VOLTAGE ON switch/indicators.

2-25. Depress the exciter FWD switch and record the exciter RF output power _____.

2-26. Using the exciter R.F. POWER OUTPUT ADJ control, obtain a Wattmeter indication of 250 Watts. At band edges, an indication of 225 Watts is satisfactory.

2-27. Using the insulated adjustment tool, adjust R18 to obtain a voltmeter indication of +5 volts dc.

2-28. Readjust the exciter RF output power to the level recorded in paragraph 2-25.

WARNING

ASSURE ALL PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

2-29. Disconnect primary ac power.

2-30. Remove the test equipment and reconnect the transmitter PA input cable. Then operate the FILAMENT and SCREEN circuit breakers to ON.

2-31. RFL CAL (R19). To adjust the rfl cal control (R19) on the control regulator circuit board, proceed as follows. This adjustment is required if the VSWR indicator threshold is incorrect, the VSWR foldback limits are too close, or if either the RF amplifier or the control regulator assemblies are replaced.

NOTE

R7 ON THE RF AMPLIFIER CIRCUIT BOARD MUST BE ADJUSTED BEFORE R19 IS ADJUSTED (SEE PARAGRAPH 2-76).

NOTE

2-32. Required Equipment. The following equipment is required to adjust the rfl cal control (R19).

- A. Flat blade screwdriver, 1/4 inch tip.
- B. Insulated adjustment tool, flat tip (BE P/N 407-0083).
- C. Calibrated in-line wattmeter and connecting cable. (Bird 43 with 50 Watt element or equivalent.)
- D. Digital voltmeter, Fluke 75 or equivalent 3 1/2 digit model.

2-33. Procedure. To adjust the control, proceed as follows:

WARNING

ASSURE ALL PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

2-34. Disconnect primary power.

2-35. Disconnect the transmitter PA input cable and connect the in-line wattmeter in series with the IPA OUTPUT connector. Adjust the wattmeter to measure reflected power with a 50 Watt scale.

2-36. Connect the voltmeter between pin 7 of U4 and chassis ground.

WARNING

MAINTENANCE WITH POWER ENERGIZED IS ALWAYS CONSIDERED HAZARDOUS AND THEREFORE CAUTION SHOULD BE OBSERVED. DO NOT TOUCH COMPONENTS WITHIN THE IPA WHEN POWER IS ENERGIZED.

WARNING

WARNING

USE AN INSULATED TOOL FOR ADJUSTMENT.

2-37. Operate the SCREEN and FILAMENT circuit breakers to OFF, operate the AC POWER, DRIVER, and BLOWER circuit breakers to ON, and depress the FILAMENT ON and HIGH VOLTAGE ON switch/indicators.

2-38. Record the transmitter INPUT TUNING cyclometer indication _____. Depress the exciter FWD meter switch and record the exciter RF output power _____.

2-39. Mistune the INPUT TUNING control as required to obtain a wattmeter indication of 20 Watts. If the forward power folds back, adjust R19 counterclockwise about 1/16 turn, lower the exciter drive power, and repeat this adjustment.

2-40. Using the insulated adjustment tool, adjust R19 to obtain a voltmeter indication of +5 volts dc. If required, monitor the collector voltage between J4 pin 1 of the control regulator circuit board and chassis ground to find the point where foldback begins.

2-41. Adjust the transmitter INPUT TUNING control and the exciter RF output power to the levels recorded in paragraph 2-38.

WARNING

ASSURE ALL PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

2-42. Disconnect primary ac power.

2-43. Remove the test equipment and reconnect the transmitter load. Then operate the SCREEN and FILAMENT circuit breakers to ON.

2-44. TEMP CAL (R30). To adjust the temp cal control (R30) on the control regulator circuit board, proceed as follows. This adjustment is required only if the temperature sensor (U1) is replaced.

2-45. Required Equipment. The following equipment is required to adjust the temp cal control (R30).

- A. Flat blade screwdriver, 1/4 inch tip.
- B. Insulated adjustment tool, flat tip (BE P/N 407-0083).
- C. Digital voltmeter, Fluke 75 or equivalent 3 1/2 digit model.
- D. Fluke 80T-150 temperature probe or equivalent Celcius indicating probe.

2-46. Procedure. To adjust the control, proceed as follows:

WARNING ASSURE ALL PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

2-47. Disconnect primary power.

2-48. Attach the temperature probe to the control regulator heat-sink assembly near U1.

2-49. Connect the probe to the voltmeter. Record the temperature indication, add +273, and divide by 100 ($\frac{^{\circ}\text{C} + 273}{100} = \text{VOLTAGE}$).

2-50. Connect the voltmeter between TP1 and chassis ground on the control regulator circuit board.

WARNING MAINTENANCE WITH POWER ENERGIZED IS ALWAYS CONSIDERED HAZARDOUS AND THEREFORE CAUTION SHOULD BE OBSERVED. DO NOT TOUCH ANY COMPONENTS WITHIN THE IPA WHEN POWER IS ENERGIZED.

WARNING USE AN INSULATED TOOL FOR ADJUSTMENT.

2-51. Operate the SCREEN and FILAMENT circuit breakers to OFF, operate the AC POWER, DRIVER, and BLOWER circuit breakers to ON, and depress the FILAMENT ON switch/indicator.

2-52. Using the insulated adjustment tool, adjust R30 to obtain an indication equal to the result obtained in paragraph 2-49.

EXAMPLE: $\frac{25^{\circ}\text{C} + 273}{100} = \frac{298}{100} = 2.98 \text{ volts}$

WARNING ASSURE ALL PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

2-53. Disconnect primary ac power.

2-54. Remove the test equipment, then operate the SCREEN and FILAMENT circuit breakers to ON.

2-55. CURRENT BAL (R72). To adjust the current bal control (R72) on the control regulator circuit board, proceed as follows. This adjustment is required only if the transmitter diagnostic options indicate a residual value when there is no RF output from the IPA.

2-56. Required Equipment. The following equipment is required to adjust the current cal control (R72).

- A. Flat blade screwdriver, 1/4 inch tip.
- B. Insulated adjustment tool, flat tip (BE P/N 407-0083).
- C. Digital voltmeter, Fluke 75 or equivalent 3 1/2 digit model.

2-57. Procedure. To adjust the control, proceed as follows:

WARNING ASSURE ALL PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

2-58. Disconnect primary power.

2-59. Connect the voltmeter between pin 7 of U7 and chassis ground.

WARNING MAINTENANCE WITH POWER ENERGIZED IS ALWAYS CONSIDERED HAZARDOUS AND THEREFORE CAUTION SHOULD BE OBSERVED. DO NOT TOUCH COMPONENTS WITHIN THE IPA WHEN POWER IS ENERGIZED.

WARNING USE AN INSULATED TOOL FOR ADJUSTMENT.

2-60. Operate the SCREEN and FILAMENT circuit breakers to OFF, operate the AC POWER, DRIVER, and BLOWER circuit breakers to ON, and depress the FILAMENT ON switch/indicator.

2-61. Using the insulated adjustment tool, adjust R72 to obtain a voltmeter indication of 0.00 volts dc.

WARNING ASSURE ALL PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

2-62. Disconnect primary ac power.

2-63. Remove the test equipment and operate the SCREEN and FILAMENT circuit breakers to ON.

2-64. The current cal control (R76) must now be adjusted. Refer to paragraph 2-65.

2-65. CURRENT CAL (R76). To adjust the current cal control (R76) on the control regulator circuit board, proceed as follows. This adjustment is required only if the transmitter diagnostic options indicate improper IPA current or if either the RF amplifier or control regulator circuit board is replaced.

NOTE

R72 ON THE CONTROL REGULATOR CIRCUIT BOARD MUST BE ADJUSTED BEFORE R76 IS ADJUSTED (SEE PARAGRAPH 2-55).

NOTE

2-66. Required Equipment. The following equipment is required to adjust the current cal control (R76).

- A. Flat blade screwdriver, 1/4 inch tip.
- B. Insulated adjustment tool, flat tip (BE P/N 407-0083).
- C. Digital voltmeter, Fluke 75 or equivalent 3 1/2 digit model.
- D. Resistor, 5 Ohm $\pm 5\%$, 160 Watt, Wire Wound (BE P/N 130-0005).

2-67. Procedure. To adjust the control, proceed as follows:

WARNING

ASSURE ALL PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

2-68. Disconnect primary power.

2-69. Unplug P4-1 and P4-2 from J4-1 and J4-2.

2-70. Temporarily connect the 5 Ohm, 160 Watt resistor from J4-1 to J4-2.

2-71. Connect the voltmeter between pin 7 of U7 and chassis ground.

WARNING

MAINTENANCE WITH POWER ENERGIZED IS ALWAYS CONSIDERED HAZARDOUS AND THEREFORE CAUTION SHOULD BE OBSERVED. DO NOT TOUCH COMPONENTS WITHIN THE IPA WHEN POWER IS ENERGIZED.

WARNING

WARNING

USE AN INSULATED TOOL FOR ADJUSTMENT.

2-72. Operate the SCREEN and FILAMENT circuit breakers to OFF, operate the AC POWER, DRIVER, and BLOWER circuit breakers to ON, and depress the FILAMENT ON switch/indicator.

2-73. Using the insulated adjustment tool, adjust R76 to obtain a voltmeter indication of +1.87 volts dc.

WARNING

ASSURE ALL PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

- 2-74. Disconnect primary ac power.
- 2-75. Remove the test equipment and reconnect P4-1 and P4-2 to J4-1 and J4-2, and operate the SCREEN and FILAMENT circuit breakers to ON.
- 2-76. REFLECTED POWER NULL (R7). This control is factory calibrated and sealed during final test. Adjustment in the field is not normally required unless repairs have been made to the IPA directional coupler circuitry, the RF amplifier circuit board has been replaced, or the transmitter operating frequency has been changed. If it is certain adjustment is necessary, proceed as follows.
- 2-77. Required Equipment. The following equipment is required to adjust the reflected power null control (R7).
- A. Flat blade screwdriver, 1/4 inch tip.
 - B. Insulated adjustment tool, flat tip (BE P/N 407-0083).
 - C. Digital voltmeter, Fluke 75 or equivalent 3 1/2 digit model.
 - D. Test load and connecting cable (50 Ohm non-inductive, 300 Watt minimum).
 - E. Calibrated in-line wattmeter and connecting cable (Bird 43 with 250 Watt element or equivalent).
- 2-78. Procedure. To adjust the control, proceed as follows:

WARNING

ASSURE ALL PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

- 2-79. Disconnect primary power.
- 2-80. Disconnect the transmitter PA input cable and connect the test load to the IPA OUTPUT connector through the wattmeter. Adjust the wattmeter to indicate forward power.

NOTE

IF A HOLE TO ACCESS R7 IS NOT PRESENT IN THE COVER OF THE RF AMPLIFIER MODULE, CONTACT THE BROADCAST ELECTRONICS CUSTOMER SERVICE DEPARTMENT BEFORE PROCEEDING.

NOTE

- 2-81. Carefully prop the RF amplifier module in the cooling air path with R7 accessible through the hole provided in the module cover.
- 2-82. Connect the voltmeter between pin 7 of U4B on the control regulator circuit board and chassis ground.

WARNING

MAINTENANCE WITH POWER ENERGIZED IS ALWAYS CONSIDERED HAZARDOUS AND THEREFORE CAUTION SHOULD BE OBSERVED. DO NOT TOUCH COMPONENTS WITHIN THE IPA WHEN POWER IS ENERGIZED. EVEN THOUGH LOW VOLTAGES ARE USED THROUGHOUT THE IPA, IT IS POSSIBLE TO RECEIVE PAINFUL RF BURNS FROM THE RF AMPLIFIER.

WARNING

WARNING

WARNING

WARNING

USE AN INSULATED TOOL FOR ADJUSTMENT.

2-83. Operate the SCREEN and FILAMENT circuit breakers to OFF, operate the AC POWER, DRIVER, and BLOWER circuit breakers to ON, and depress the FILAMENT ON and HIGH VOLTAGE ON switch/indicator.

2-84. Depress the exciter front-panel FWD switch and record the exciter RF power output _____.

2-85. Adjust the exciter R.F. POWER OUTPUT ADJ. control as required to obtain approximately 200 to 250 Watts of forward power from the IPA.

CAUTION

AN INSULATED TOOL MUST BE USED IN THE FOLLOWING STEP.

2-86. Using the insulated adjustment tool, adjust R7 to obtain a minimum voltmeter indication.

2-87. Readjust the exciter RF power output to the level recorded in paragraph 2-84.

WARNING

ASSURE ALL PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

2-88. Disconnect primary ac power.

2-89. Remove the test equipment, reconnect the transmitter load, and operate the SCREEN and FILAMENT circuit breakers to ON.

2-90. TROUBLESHOOTING.

WARNING

WARNING

WARNING

NEVER OPEN THE EQUIPMENT UNLESS ALL TRANSMITTER PRIMARY POWER IS DISCONNECTED. USE THE GROUNDING STICK PROVIDED TO ENSURE ALL COMPONENTS AND ALL SURROUNDING COMPONENTS ARE DISCHARGED BEFORE ATTEMPTING MAINTENANCE ON ANY AREA WITHIN THE TRANSMITTER.

2-91. Most troubleshooting consists of visual checks. Because of the voltages and high currents in the transmitter, it is considered hazardous to work with power energized. Therefore, the various transmitter indicators (meters, LEDs, fuses, and circuit breakers) should be used to isolate the malfunction to one specific area.

2-92. If difficulties are encountered and the IPA is suspected as faulty, the first step in troubleshooting should determine whether the exciter, the RF amplifier, the control regulator, the power supply, or the load is at fault. A high VSWR condition or an over-heating condition will cause the control regulator to limit RF output to prevent damage to the IPA stage. The observable symptom would be loss of RF power. However, as the control regulator and the RF amplifier are both components of a closed loop, either circuit could cause this symptom. Complete loss of RF output would indicate power supply problems.

2-93. As a first check, the RF input level to the IPA stage should be checked and adjusted as required. Next the IPA load (INPUT TUNING control) should be adjusted to the correct point. If neither the input level or the output circuit is at fault, subsequent troubleshooting should determine which circuit is at fault.

WARNING

BERYLLIUM OXIDE CERAMICS (BeO) -
AVOID BREATHING DUST OR FUMES.

WARNING

THE WHITE CASE MATERIAL OF THE IPA RF AMPLIFIER TRANSISTORS IS MADE OF BeO CERAMIC MATERIAL.

WARNING

DO NOT PERFORM ANY OPERATION ON ANY BeO CERAMIC WHICH MIGHT PRODUCE DUST OR FUMES, SUCH AS GRINDING, GRIT BLASTING, OR ACID CLEANING.

WARNING

BERYLLIUM OXIDE DUST OR FUMES ARE HIGHLY TOXIC AND BREATHING THEM CAN RESULT IN SERIOUS PERSONAL INJURY

WARNING

OR DEATH. BeO CERAMICS MUST BE DISPOSED OF ONLY IN A MANNER PERSCRIBED BY THE DEVICE MANUFACTURER.

WARNING


USE CARE IN REPLACING TRANSISTORS OF THIS TYPE.

WARNING

2-94. Characteristically, the type of RF transistors used in the IPA stage can fail partially, but still operate to some extent. If the RF power amplifier transistors are suspected as having inadequate gain, they must be replaced with new devices of the same identical type and manufacture as the original device. Figure 4-1 contains information relative to replacement of the RF transistors. The transistors should be replaced in pairs to maintain matched gain for optimum push-pull operation. Due to the difficulty of replacing Q1 and Q2 in the field, it is recommended to return the RF amplifier module to Broadcast Electronics, Inc. for repair as chip capacitors C4 through C7 may have to be removed with Q1 and Q2.

2-95. Once the trouble is isolated and power is totally deenergized, it is suggested that the exact problem be located with resistance checks using the schematic diagrams and theory of operation presented throughout the text. Figures 2-1 and 2-2 should be referenced as troubleshooting aids.

2-96. If a circuit is diagnosed as faulty, the circuit fault may be isolated and repaired locally or the entire device may be returned to Broadcast Electronics, Inc. for exchange, alignment, or replacement. The modular approach used in the construction of the IPA allows spare control regulator or RF amplifier modules to be substituted in the system with minimal down time.

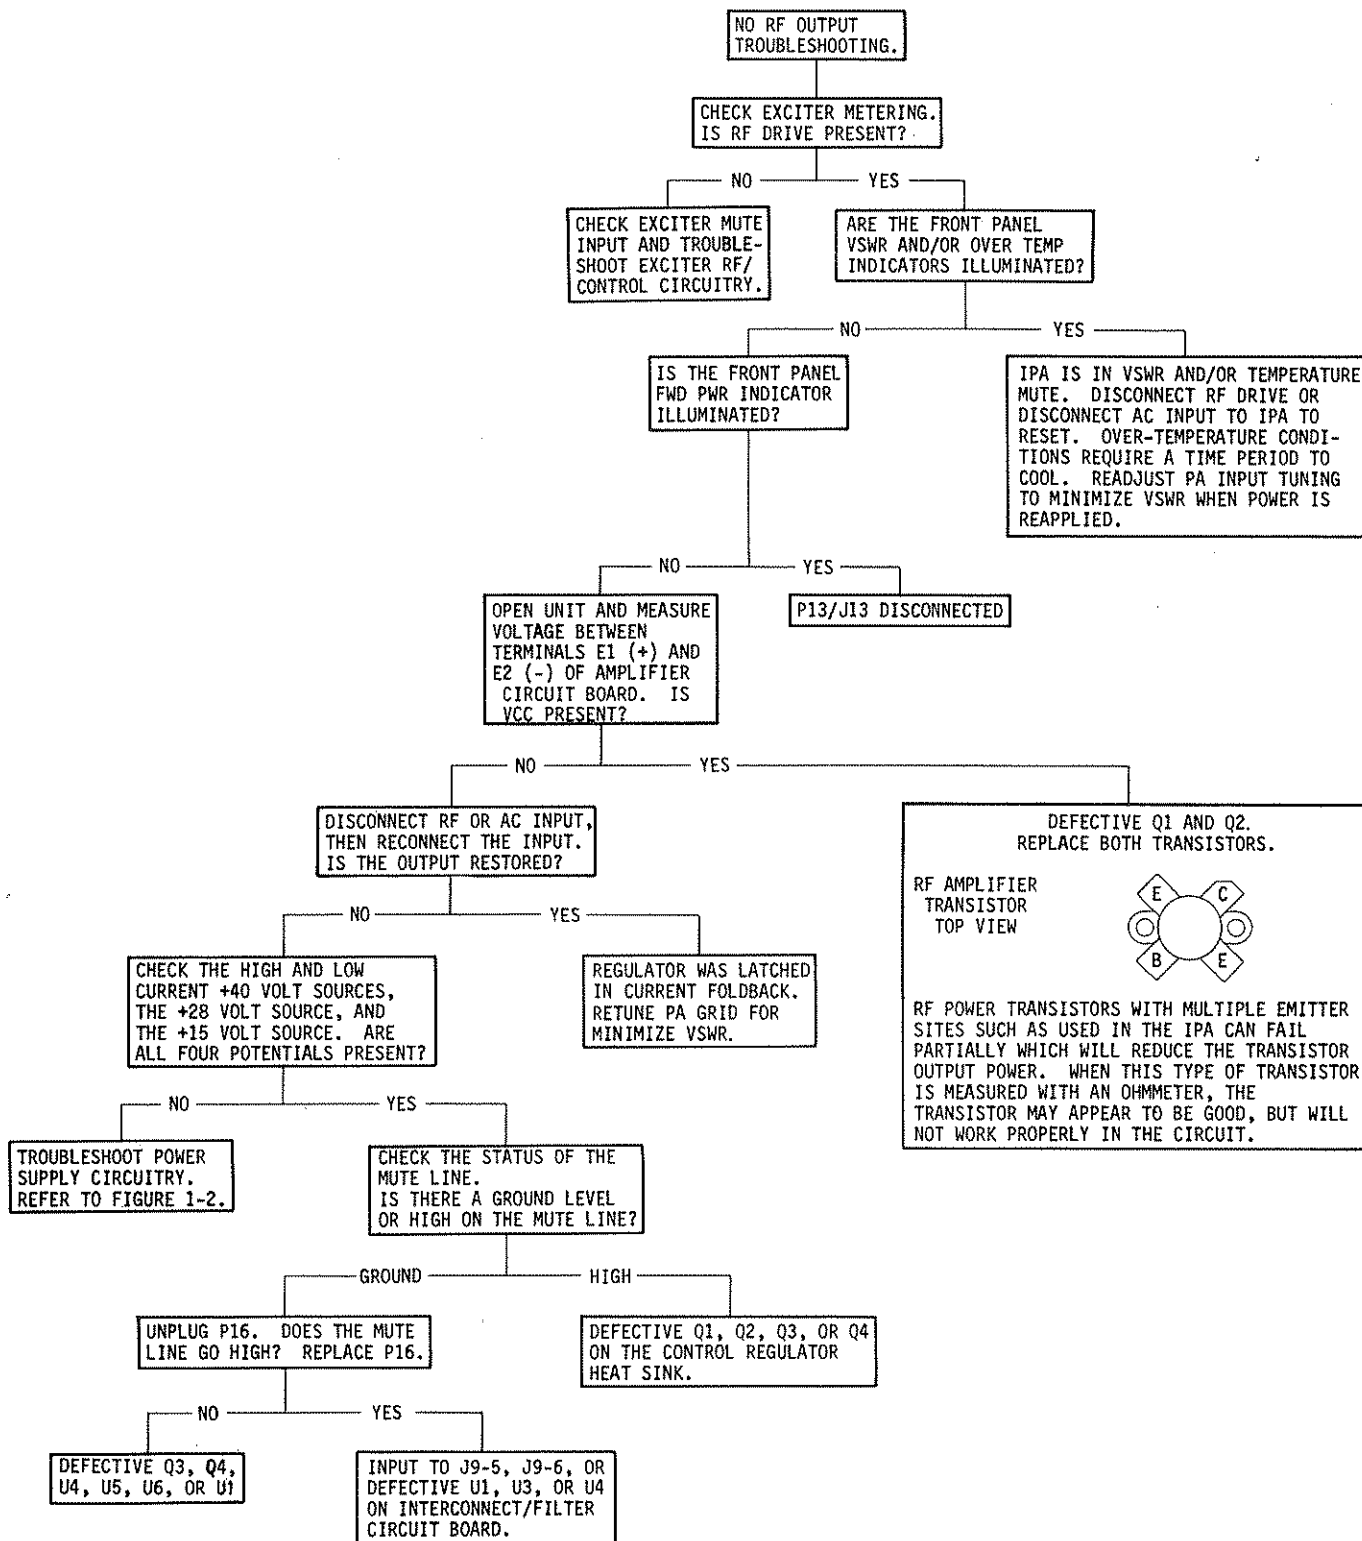


597-0032-23

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

FIGURE 2-1. NO RF OUTPUT TROUBLESHOOTING

WARNING: DISCONNECT POWER PRIOR TO SERVICING

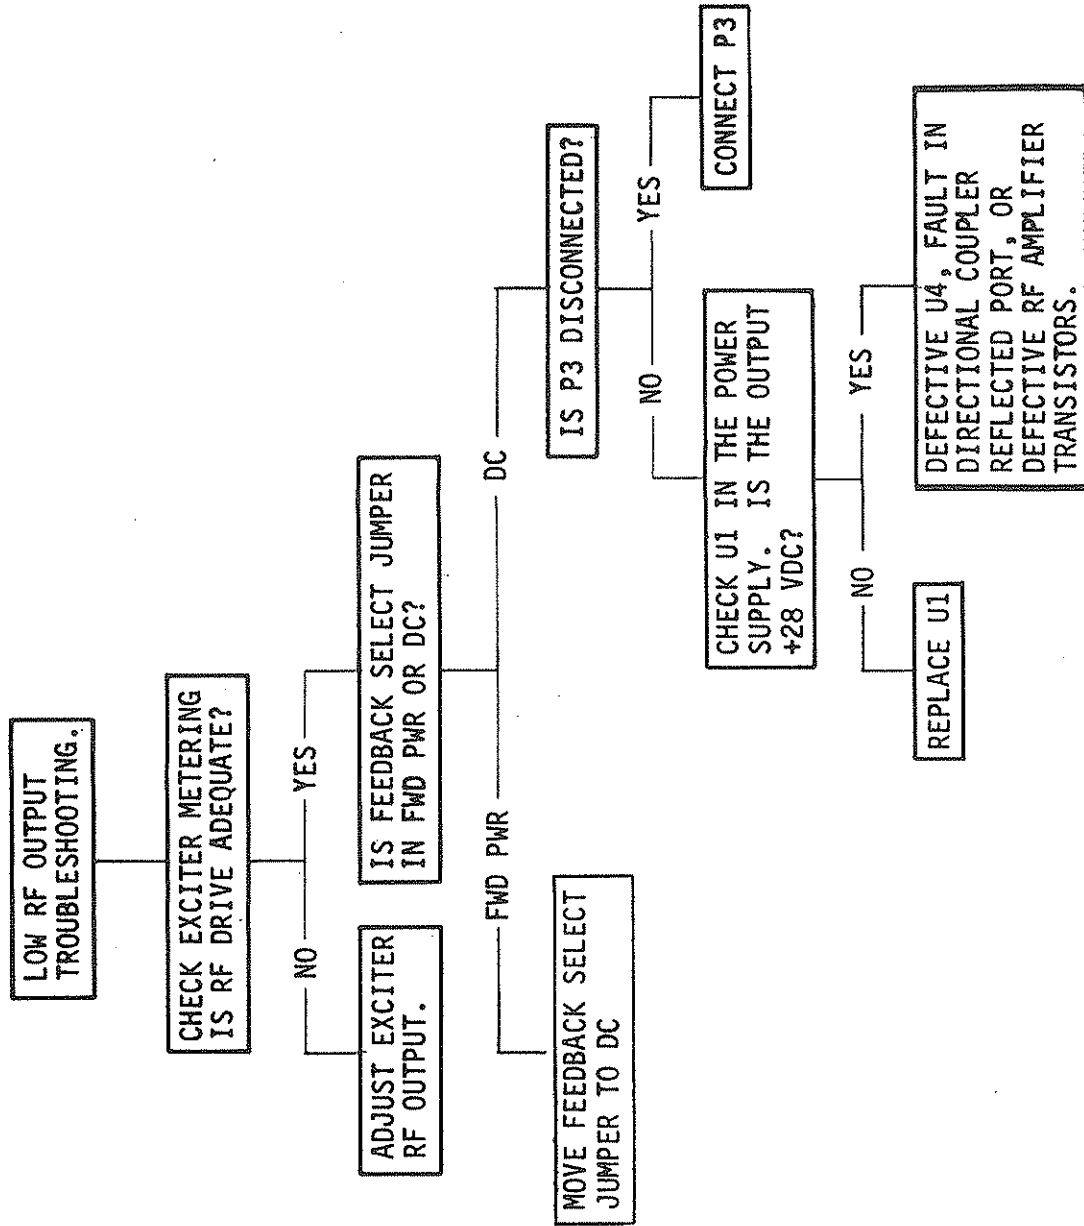

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.
597-0032-25

FIGURE 2-2. LOW RF OUTPUT TROUBLESHOOTING






WARNING: DISCONNECT POWER PRIOR TO SERVICING

SECTION III
IPA DRAWINGS

3-1. INTRODUCTION.

3-2. This section provides assembly drawings and schematic diagrams, as listed below for the FM-5A Transmitter IPA.

| <u>FIGURE</u> | <u>TITLE</u> | <u>NUMBER</u> |
|---------------|--|--------------------|
| 3-1 | SCHEMATIC, IPA OVERALL | SD959-0131 |
| 3-2 | ASSEMBLY, IPA OVERALL | 597-0032-16 |
| 3-3 | SCHEMATIC, INTERCONNECT/FILTER CIRCUIT BOARD | SD919-0042 |
| 3-4 | ASSEMBLY, INTERCONNECT/FILTER CIRCUIT BOARD | AC919-0042 |
| 3-5 | SCHEMATIC, CONTROL REGULATOR OVERALL | SD919-0045 |
| 3-6 | ASSEMBLY, CONTROL REGULATOR CIRCUIT BOARD | AD919-0045 |
| 3-7 | COMPONENT LOCATOR, CONTROL REGULATOR CIRCUIT BOARD | 597-0032-20 |
| 3-8 | SCHEMATIC, RF AMPLIFIER OVERALL | SC919-0065 |
| 3-9 | ASSEMBLY, RF AMPLIFIER OVERALL | AD959-0132 |
| 3-10 | ASSEMBLY, RESISTOR NETWORK | AA959-1000- 001 |

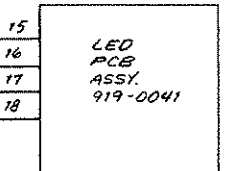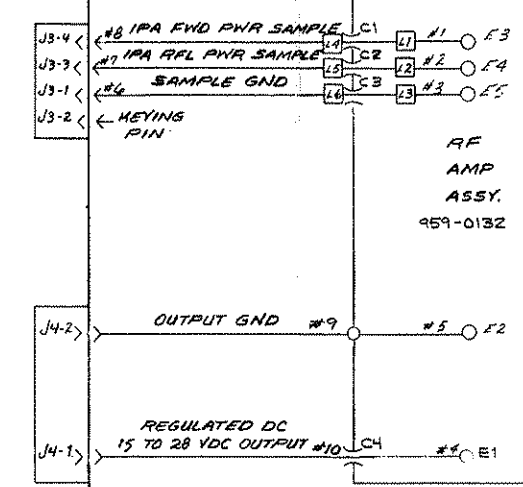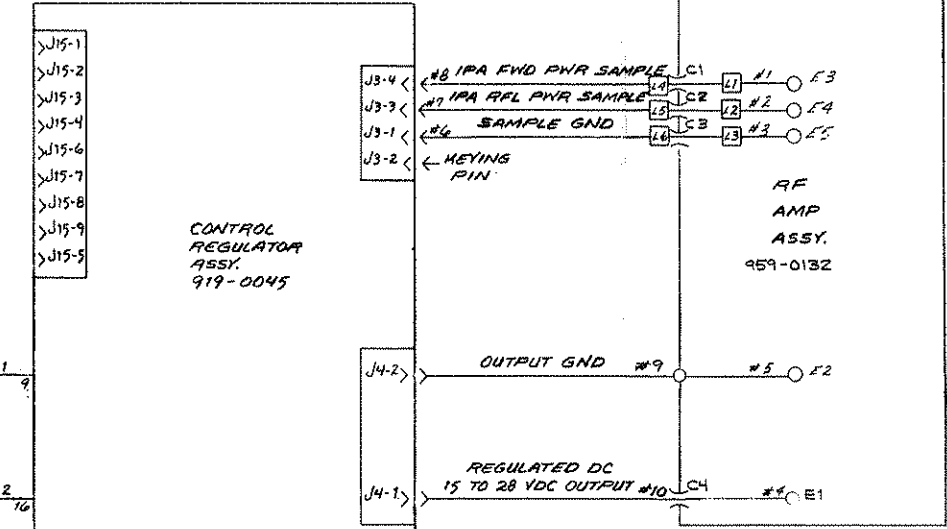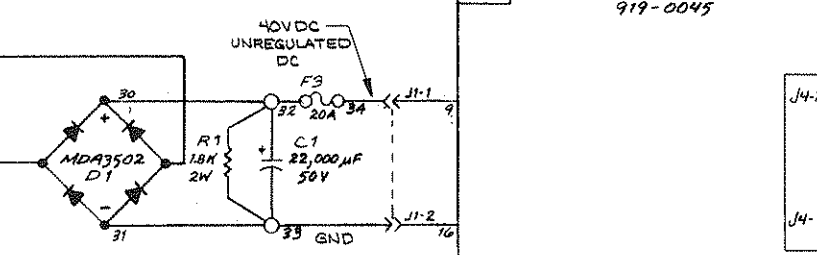
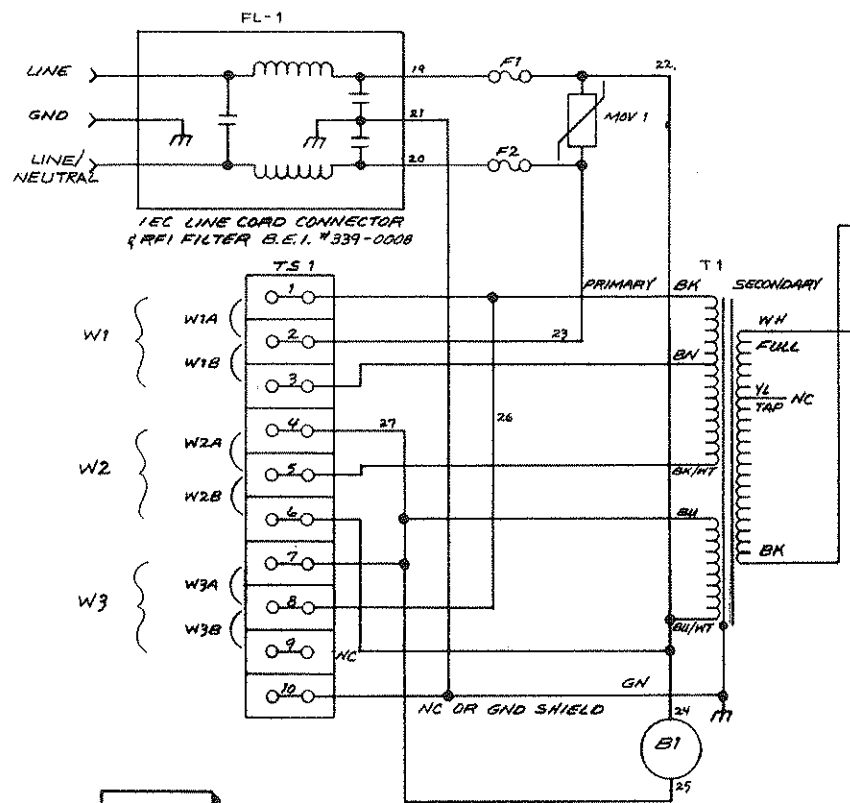


WARNING





FOR OPERATION FROM SINGLE LINE VOLTAGES OF 90VAC TO 137VAC, THE FUSE ON THE NEUTRAL WIRE MUST BE JUMPERED OUT OF CIRCUIT

| VOLTAGE IN | W1 | | W2 | | W3 | | SECONDARY | | SUD-BLO FUSES (B.E.I. #) |
|-------------|----|---|----|---|----|---|-----------|-----|--------------------------|
| | A | B | A | B | A | B | FULL | TAP | |
| 90 - 108 | | X | | X | X | | X | | 8A (330-0801) |
| 99 - 119 | | X | | X | X | | | X | 8A " |
| * 104 - 125 | X | | | X | X | | X | | 8A " |
| 114 - 137 | X | | | X | X | | | X | 8A " |
| 194 - 233 | | X | X | | | X | X | | 4A (330-0401) |
| 213 - 256 | | X | X | | | X | | X | 4A " |
| * 208 - 250 | X | | X | | | X | X | | 4A " |
| 229 - 275 | X | | X | | | X | | X | 4A " |

NOTE: 1. * DENOTES STANDARD SELECTION.

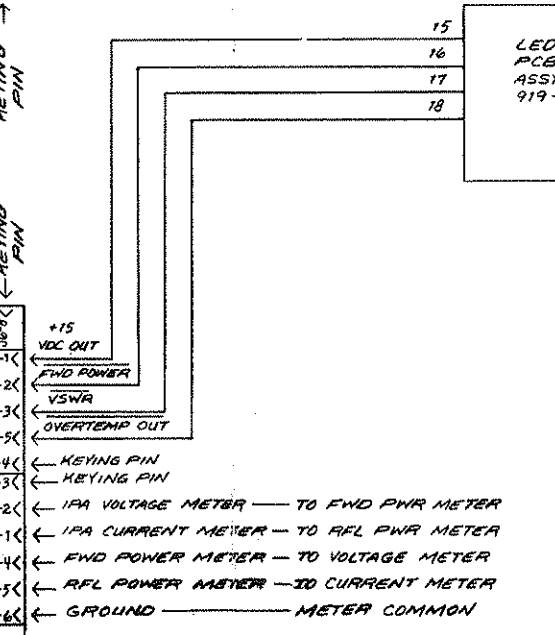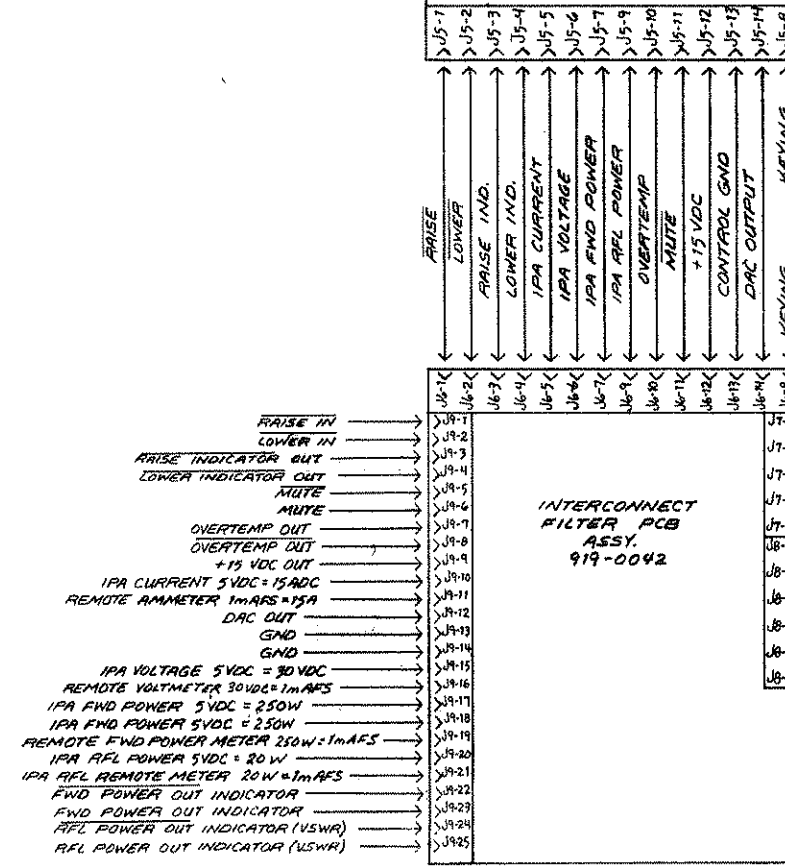


| | | | | |
|--|--|---|--|--|
| <p>PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC.</p> | <p>TOLERANCE UNLESS OTHERWISE SPECIFIED DECIMAL 2 PL = .01 SPL = .005 FRACTIONAL ± 1/164 ANGULAR ± 1° SHARP EDGES TO BEND RADIUS FILLET RADIUS</p> | <p>DRAWN BY: JAF CHECKED BY: JAF PROJECT: JAF ENGR: JAF</p> | <p>DATE: 3-29-82 DATE: 5/16/83</p> | <p>TITLE: BROADCAST ELECTRONICS INC. IPA OVERALL SCHEMATIC</p> |
| | <p>DWG. NO. 959-0131</p> | <p>REV. G</p> | <p>SCALE: N/A</p> | <p>SHEET 1 OF 1</p> |
| | <p>MATERIAL:</p> | <p>TREATMENT OR FINISH:</p> | <p>APPROVED BY: JAF</p> | <p>DATE: 5-13-83</p> |
| | <p>DATE: 5-13-83</p> | | | |

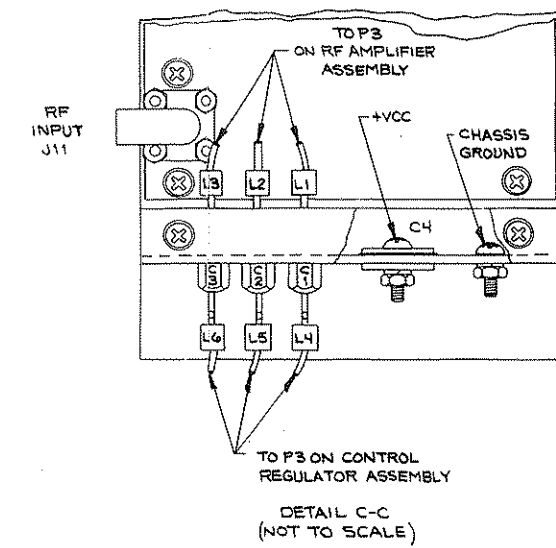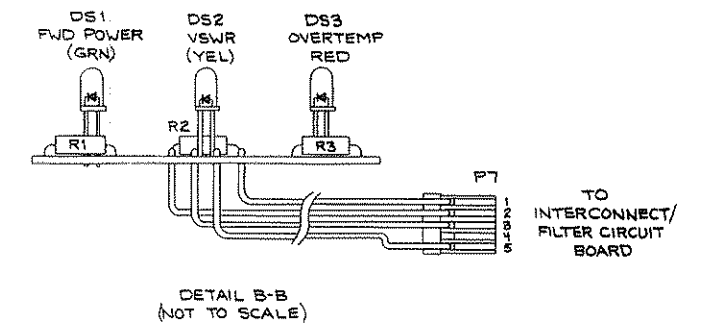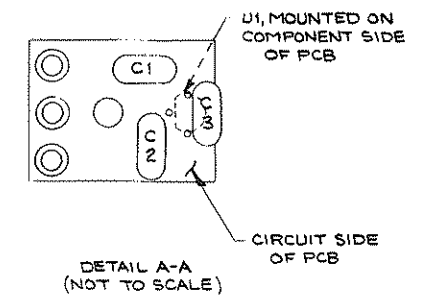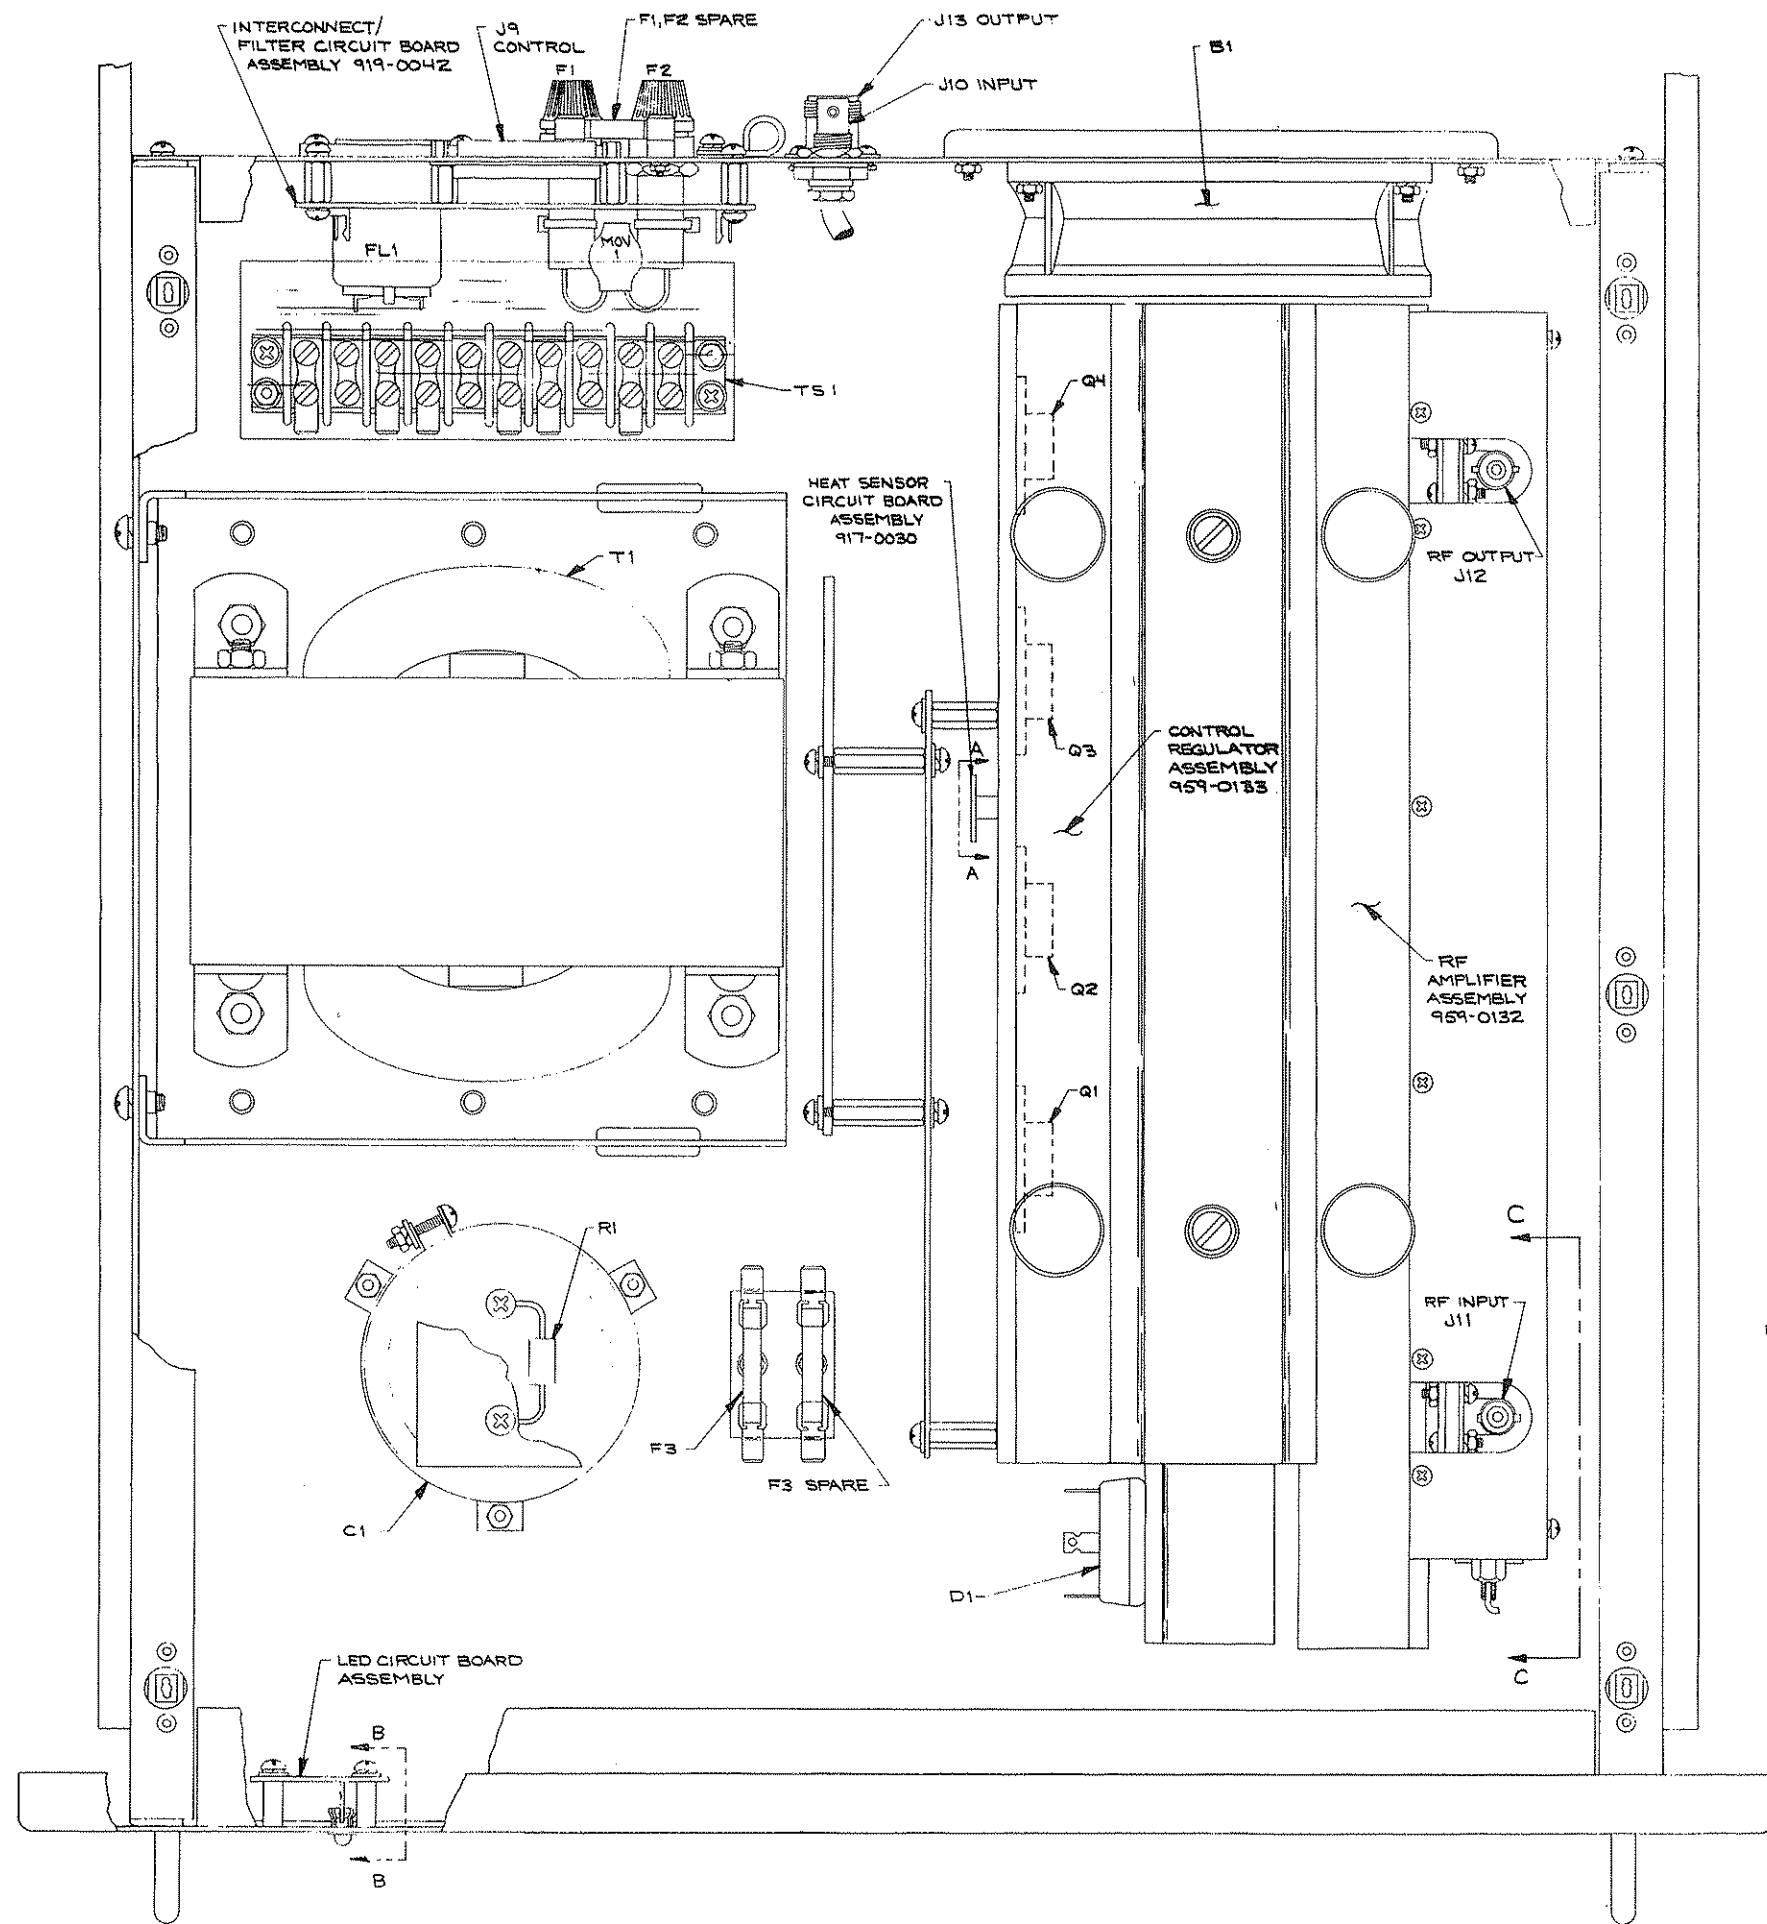

597-0032-16

FIGURE 3-2. INTERMEDIATE POWER AMPLIFIER ASSEMBLY

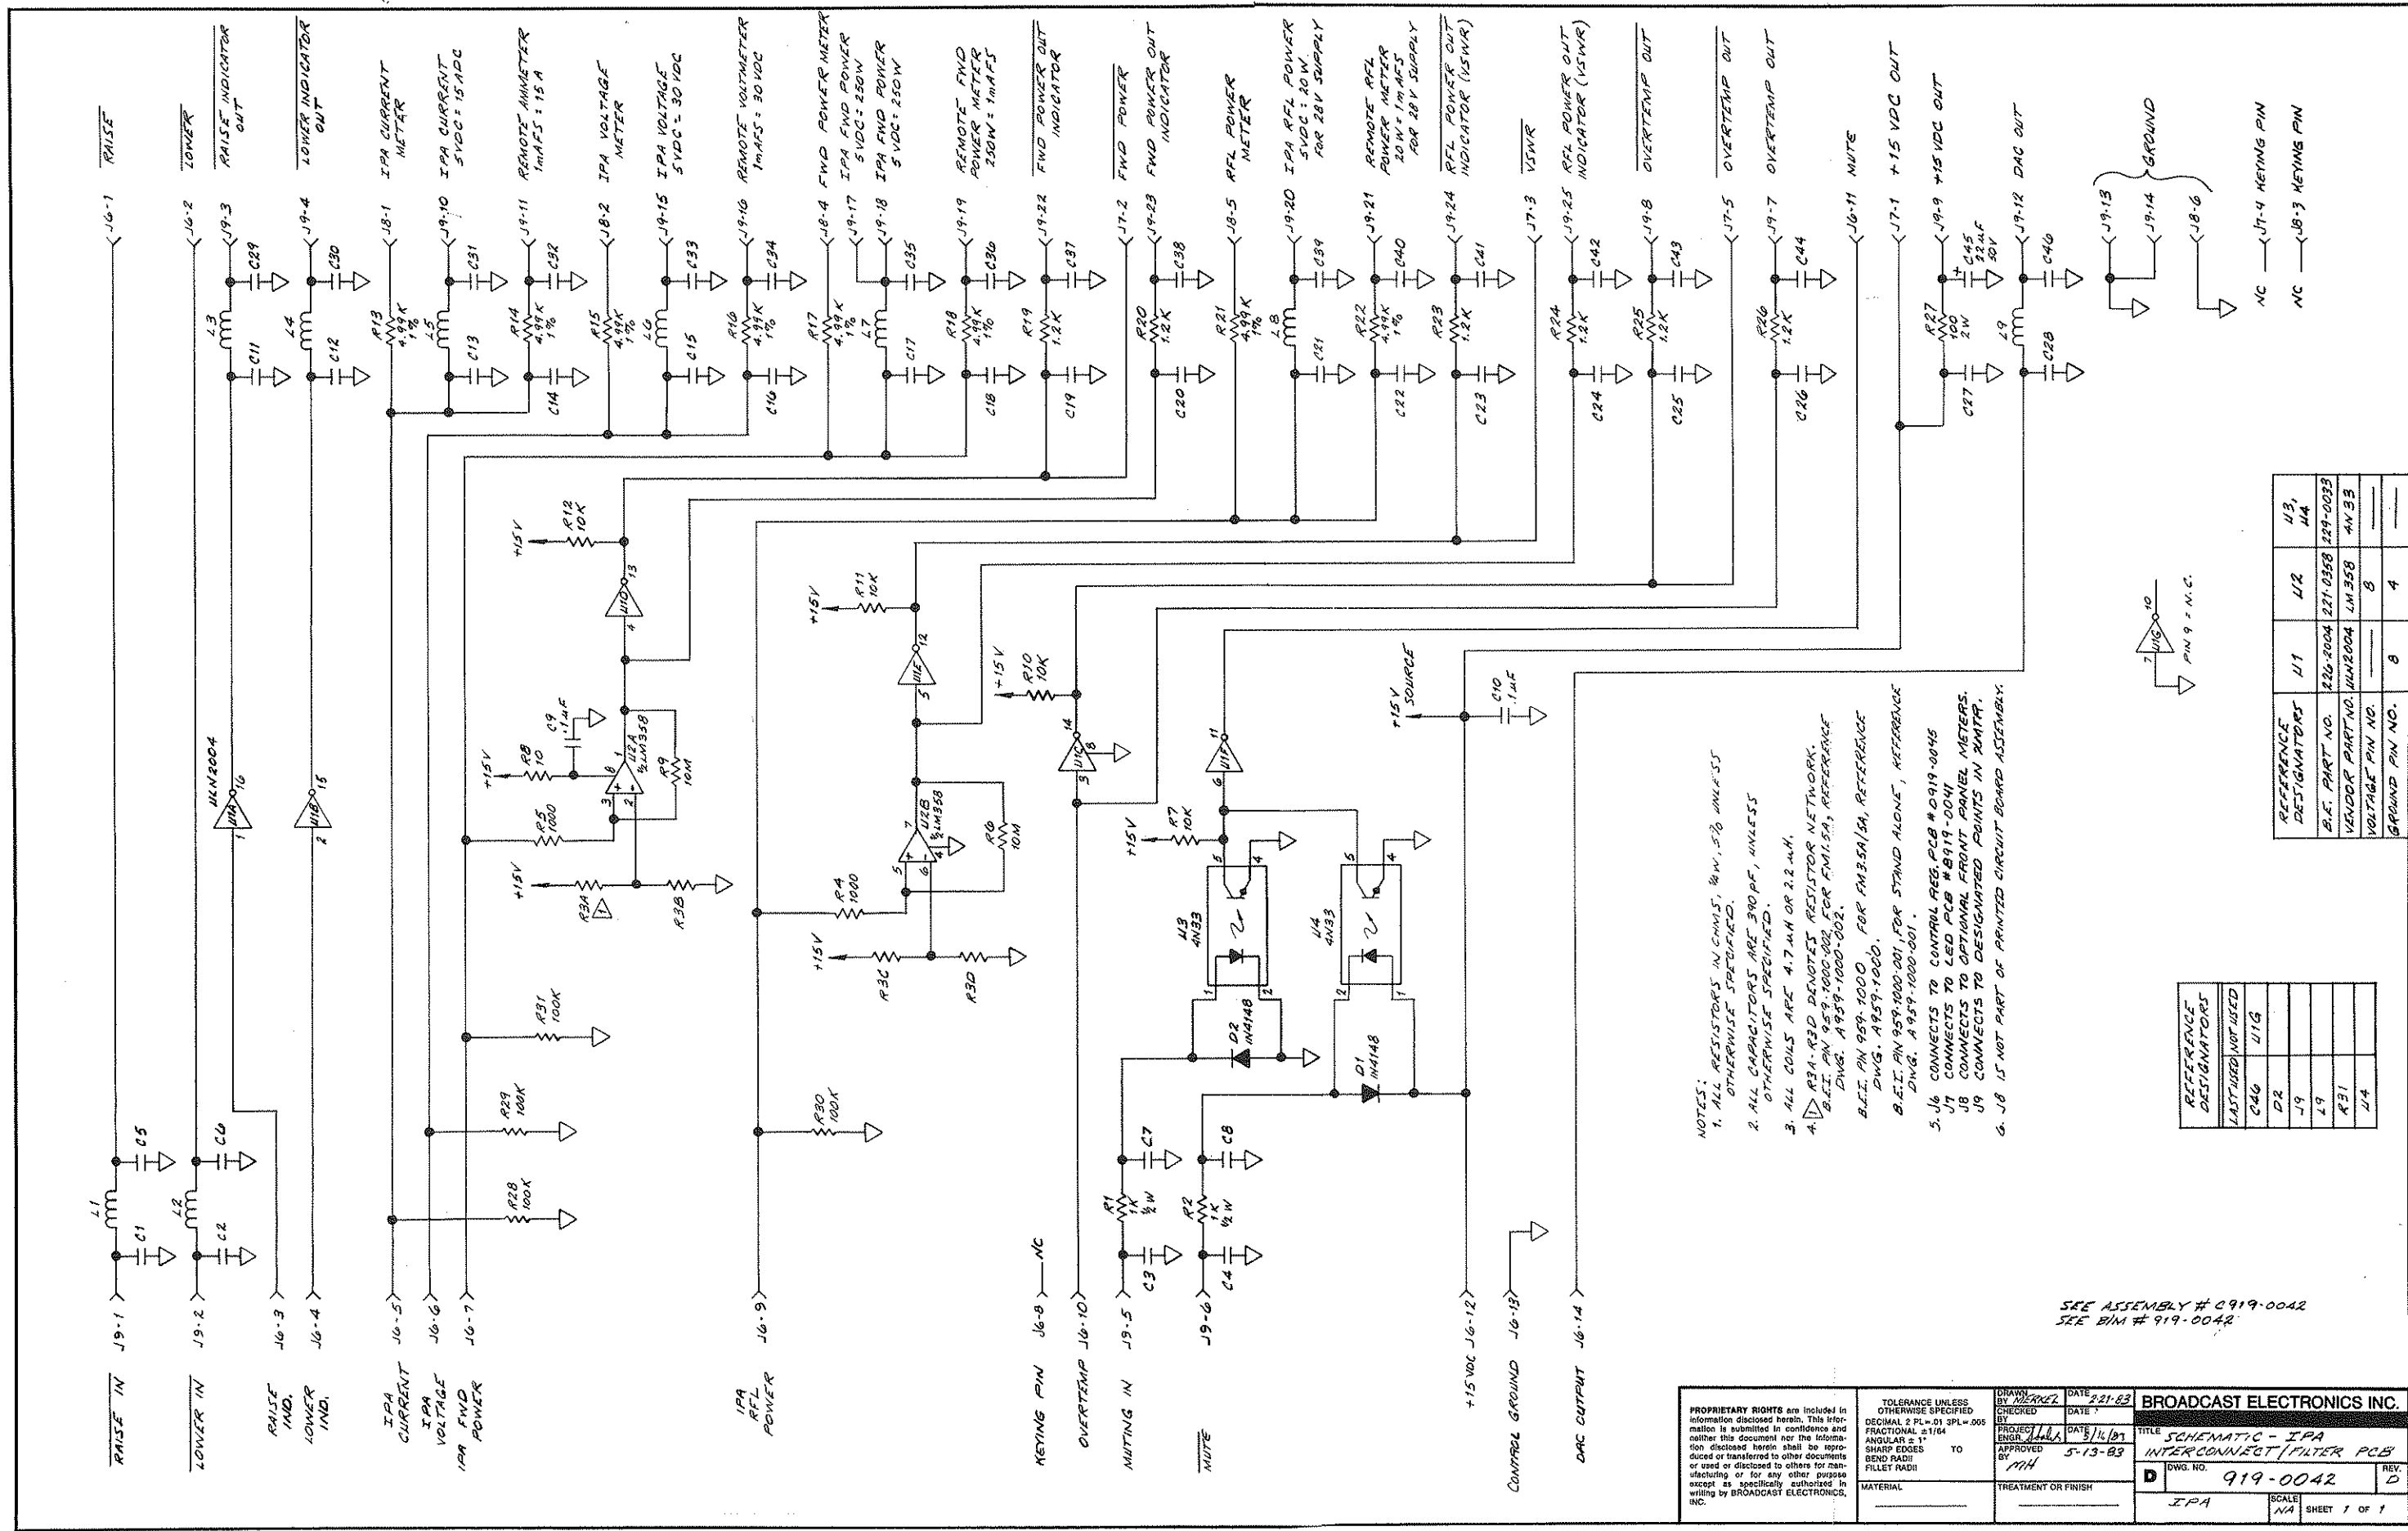




- NOTES:
1. ALL RESISTORS IN CHMS, 1/4W, 5% UNLESS OTHERWISE SPECIFIED.
 2. ALL CAPACITORS ARE 390 PF, UNLESS OTHERWISE SPECIFIED.
 3. ALL COILS ARE 4.7 mH OR 2.2 mH.
 4. R3A-R3D DENOTES RESISTOR NETWORK. B.E.I. PN 959-1000-002 FOR FM15A, REFERENCE DWG. 9959-1000-002. B.E.I. PN 959-1000 FOR FM35A/5A, REFERENCE DWG. 9959-1000. B.E.I. PN 959-1000-001 FOR STAND ALONE, REFERENCE DWG. 9959-1000-001.
 5. J6 CONNECTS TO CONTROL REG. PCB # 0919-0045
 6. J7 CONNECTS TO LED PCB # 8919-0041
 7. J8 CONNECTS TO OPTIONAL FRONT PANEL METERS.
 8. J9 CONNECTS TO DESIGNATED POINTS IN XMTFR.
 9. J8 IS NOT PART OF PRINTED CIRCUIT BOARD ASSEMBLY.

| REFERENCE DESIGNATORS | LAST USED | NOT USED |
|-----------------------|-----------|----------|
| C46 | U1G | |
| D2 | | |
| J7 | | |
| R1E | | |
| U4 | | |

| REFERENCE DESIGNATORS | U1 | U2 | U3 | U4 |
|-----------------------|----------|----------|----------|------|
| B.E.I. PART NO. | 226-2004 | 221-0358 | 229-0033 | 4N33 |
| VENDOR PART NO. | LM2004 | LM358 | LM358 | 4N33 |
| VOLTAGE PIN NO. | 8 | 8 | 8 | |
| GROUND PIN NO. | 8 | 4 | | |

SEE ASSEMBLY # 0919-0042
SEE BOM # 919-0042

| | | | | | | | |
|---|--|--|--|---|--|--|--|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | | TOLERANCE UNLESS OTHERWISE SPECIFIED DECIMAL 2 PL = .01 3 PL = .005 FRACTIONAL ± 1/64 ANGLES ± 1° SHARP EDGES TO BEND PADS FILED RADIUS | | DRAWN BY: <i>ME/CKZ</i> DATE: 2-21-83 CHECKED BY: DATE: PROJECT ENGR: <i>AM/A</i> DATE: 5/16/83 APPROVED BY: <i>MH</i> 5-13-83 | | BROADCAST ELECTRONICS INC. TITLE: SCHEMATIC - IPA INTERCONNECT/FILTER PCB DWG. NO.: 919-0042 REV. D SCALE: NA SHEET 1 OF 1 | |
|---|--|--|--|---|--|--|--|

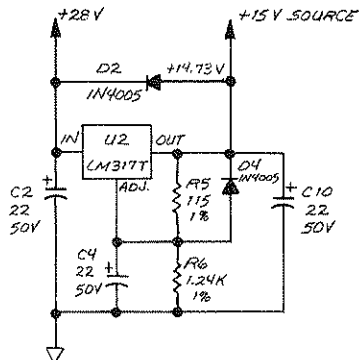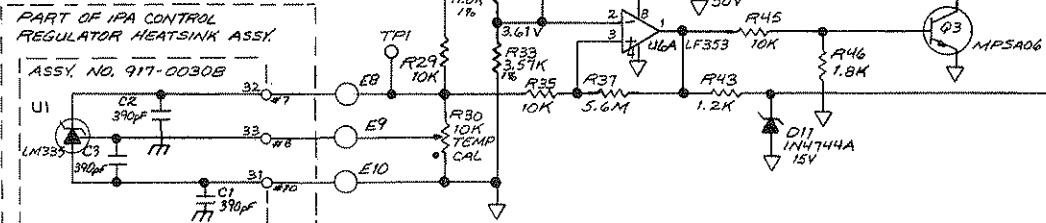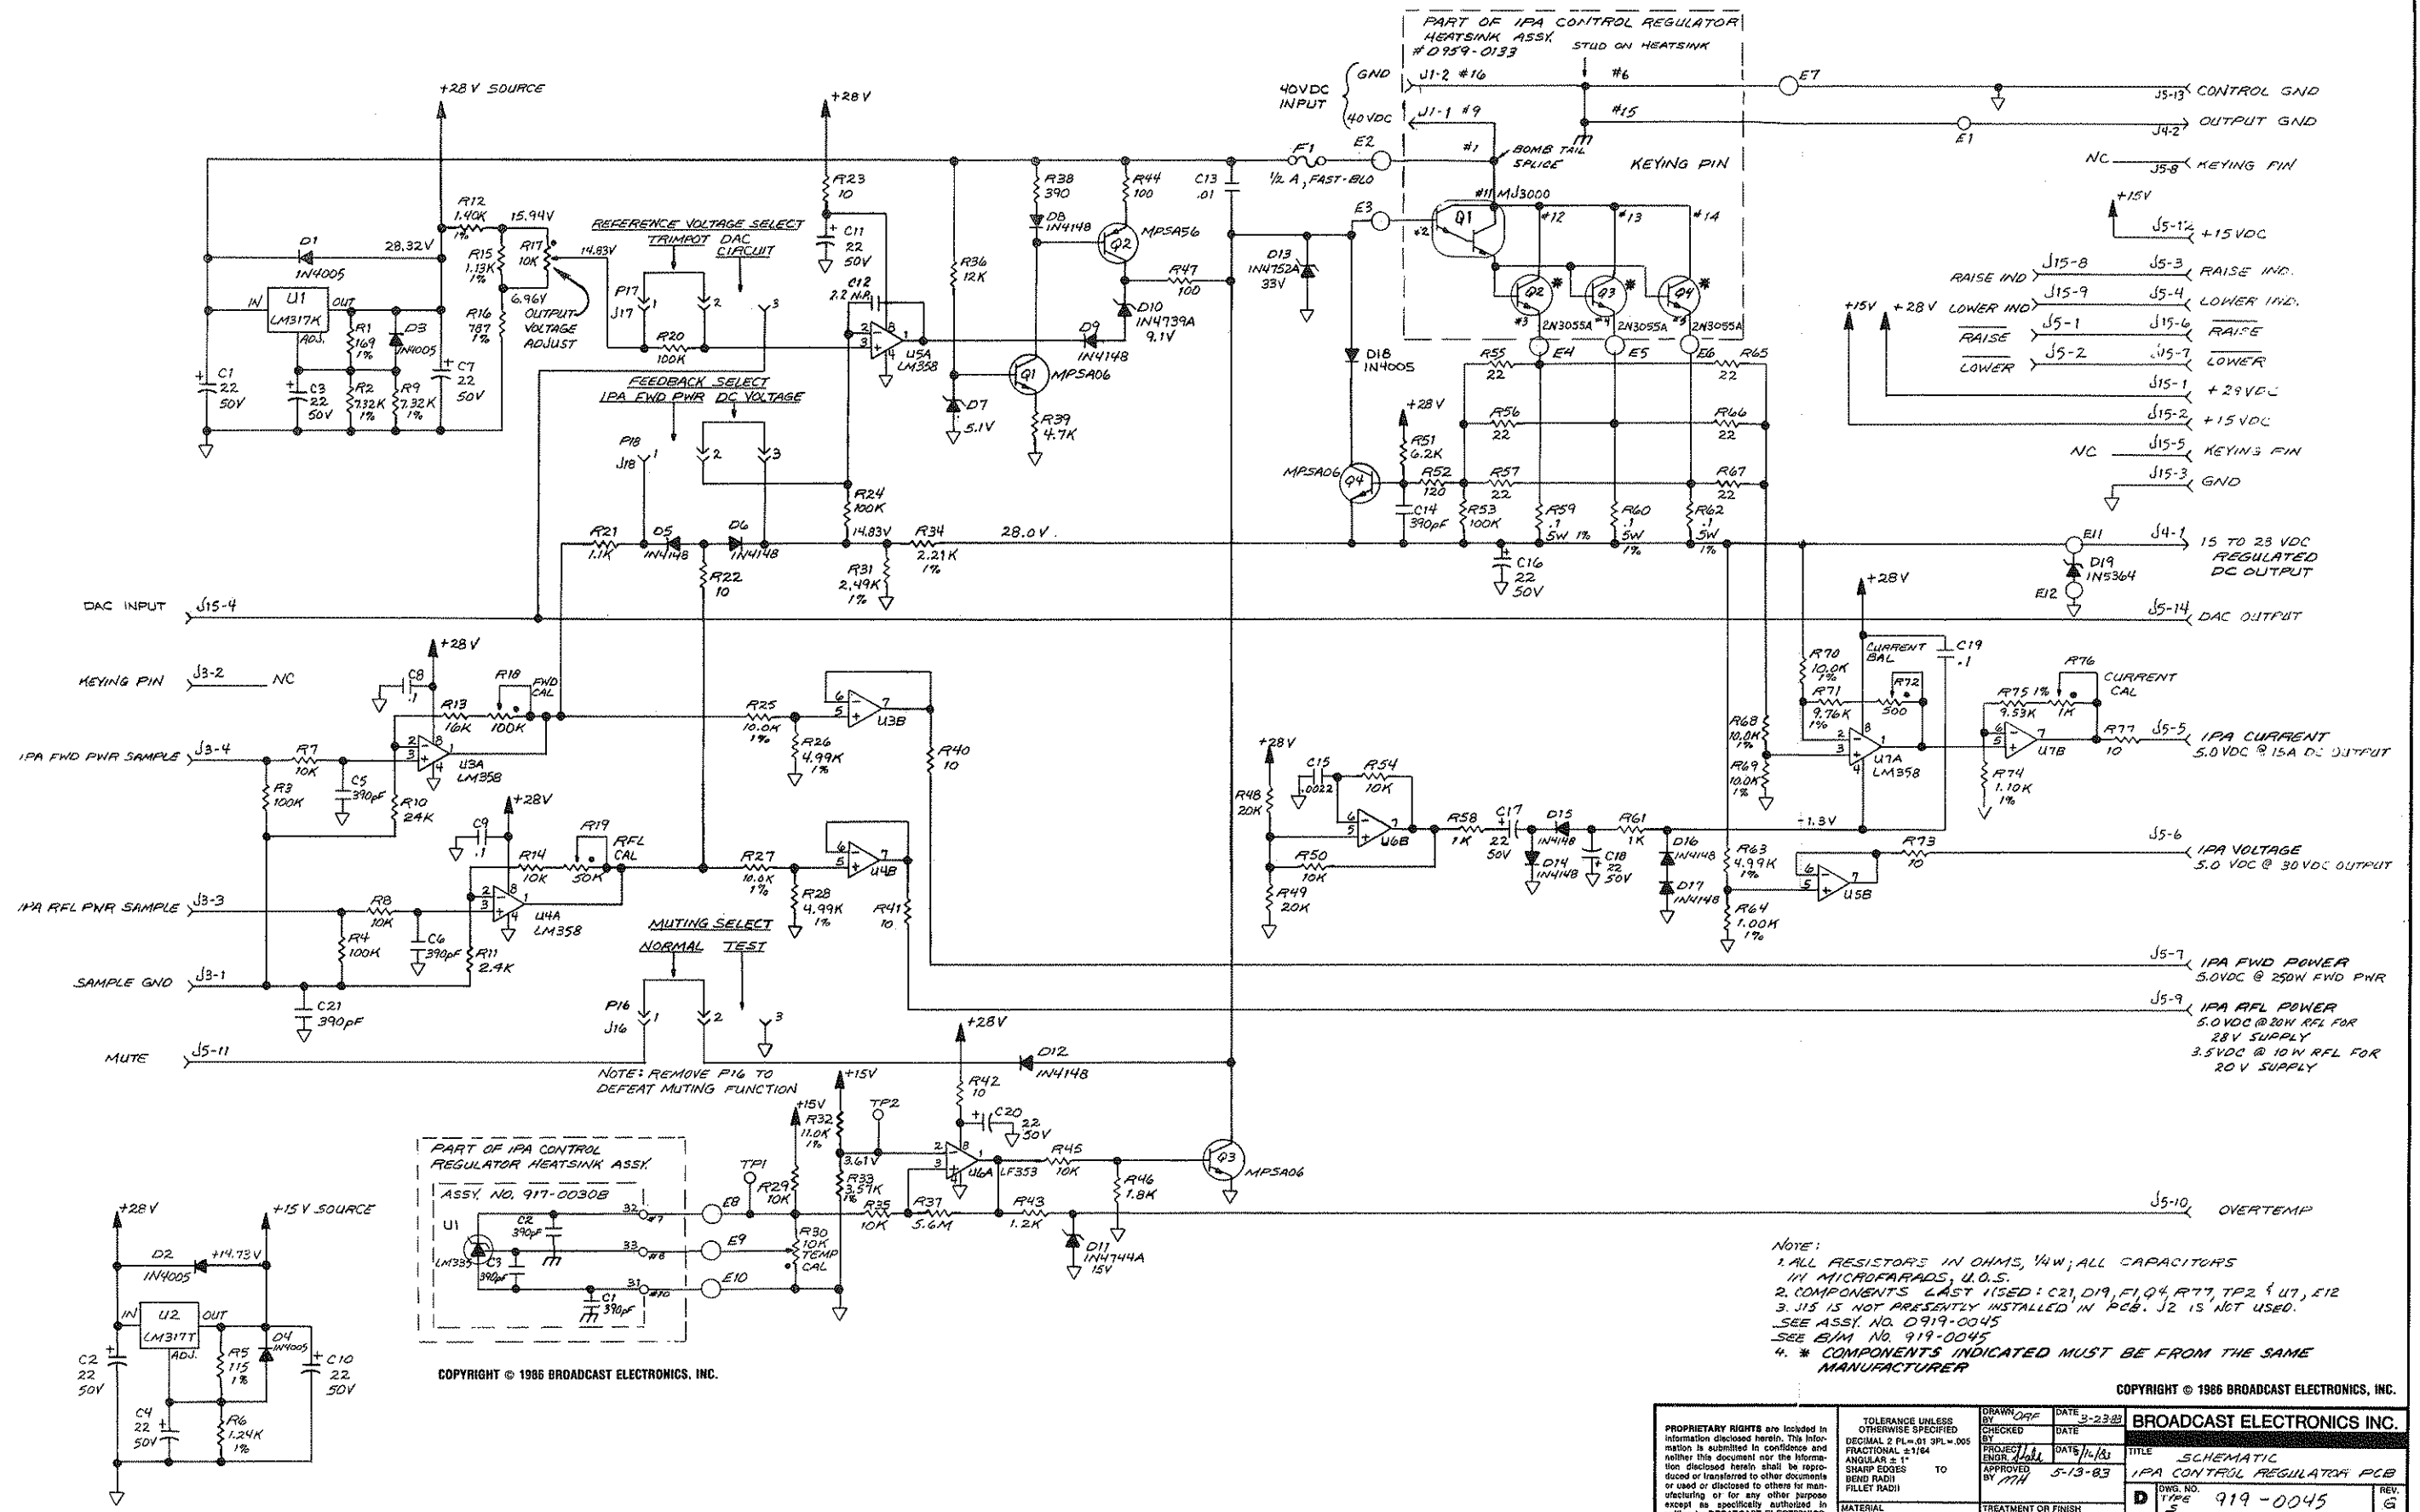


NOTE:
 1. ALL RESISTORS IN OHMS, 1/4W; ALL CAPACITORS IN MICROFARADS, U.O.S.
 2. COMPONENTS LAST LISTED: C21, D19, F1, Q4, R77, TP2 & U7, E12
 3. J15 IS NOT PRESENTLY INSTALLED IN PCB. J2 IS NOT USED.
 SEE ASSY. NO. 0919-0045
 SEE EJM. NO. 919-0045
 4. * COMPONENTS INDICATED MUST BE FROM THE SAME MANUFACTURER

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

| | | | | | | | |
|--|--|--|--|--|--|---|--|
| PROPRIETARY RIGHTS are included in information disclosed herein. The information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | | TOLERANCE UNLESS OTHERWISE SPECIFIED DECIMAL 2 PL=01 3PL=005 FRACTIONAL ±1/64 ANGULAR ±1° SHARP EDGES TO BEND RADIUS | | DRAWN BY: <i>QAF</i> DATE: <i>5-23-83</i> CHECKED BY: <i>QAF</i> DATE: <i>5-23-83</i> PROJECTED BY: <i>QAF</i> DATE: <i>5-13-83</i> APPROVED BY: <i>QAF</i> | | BROADCAST ELECTRONICS INC. TITLE: <i>SCHEMATIC</i> IPA CONTROL REGULATOR PCB DWS. NO. <i>919-0045</i> TYPE <i>S</i> SCALE <i>1/5</i> SHEET 1 OF 1 | |
|--|--|--|--|--|--|---|--|

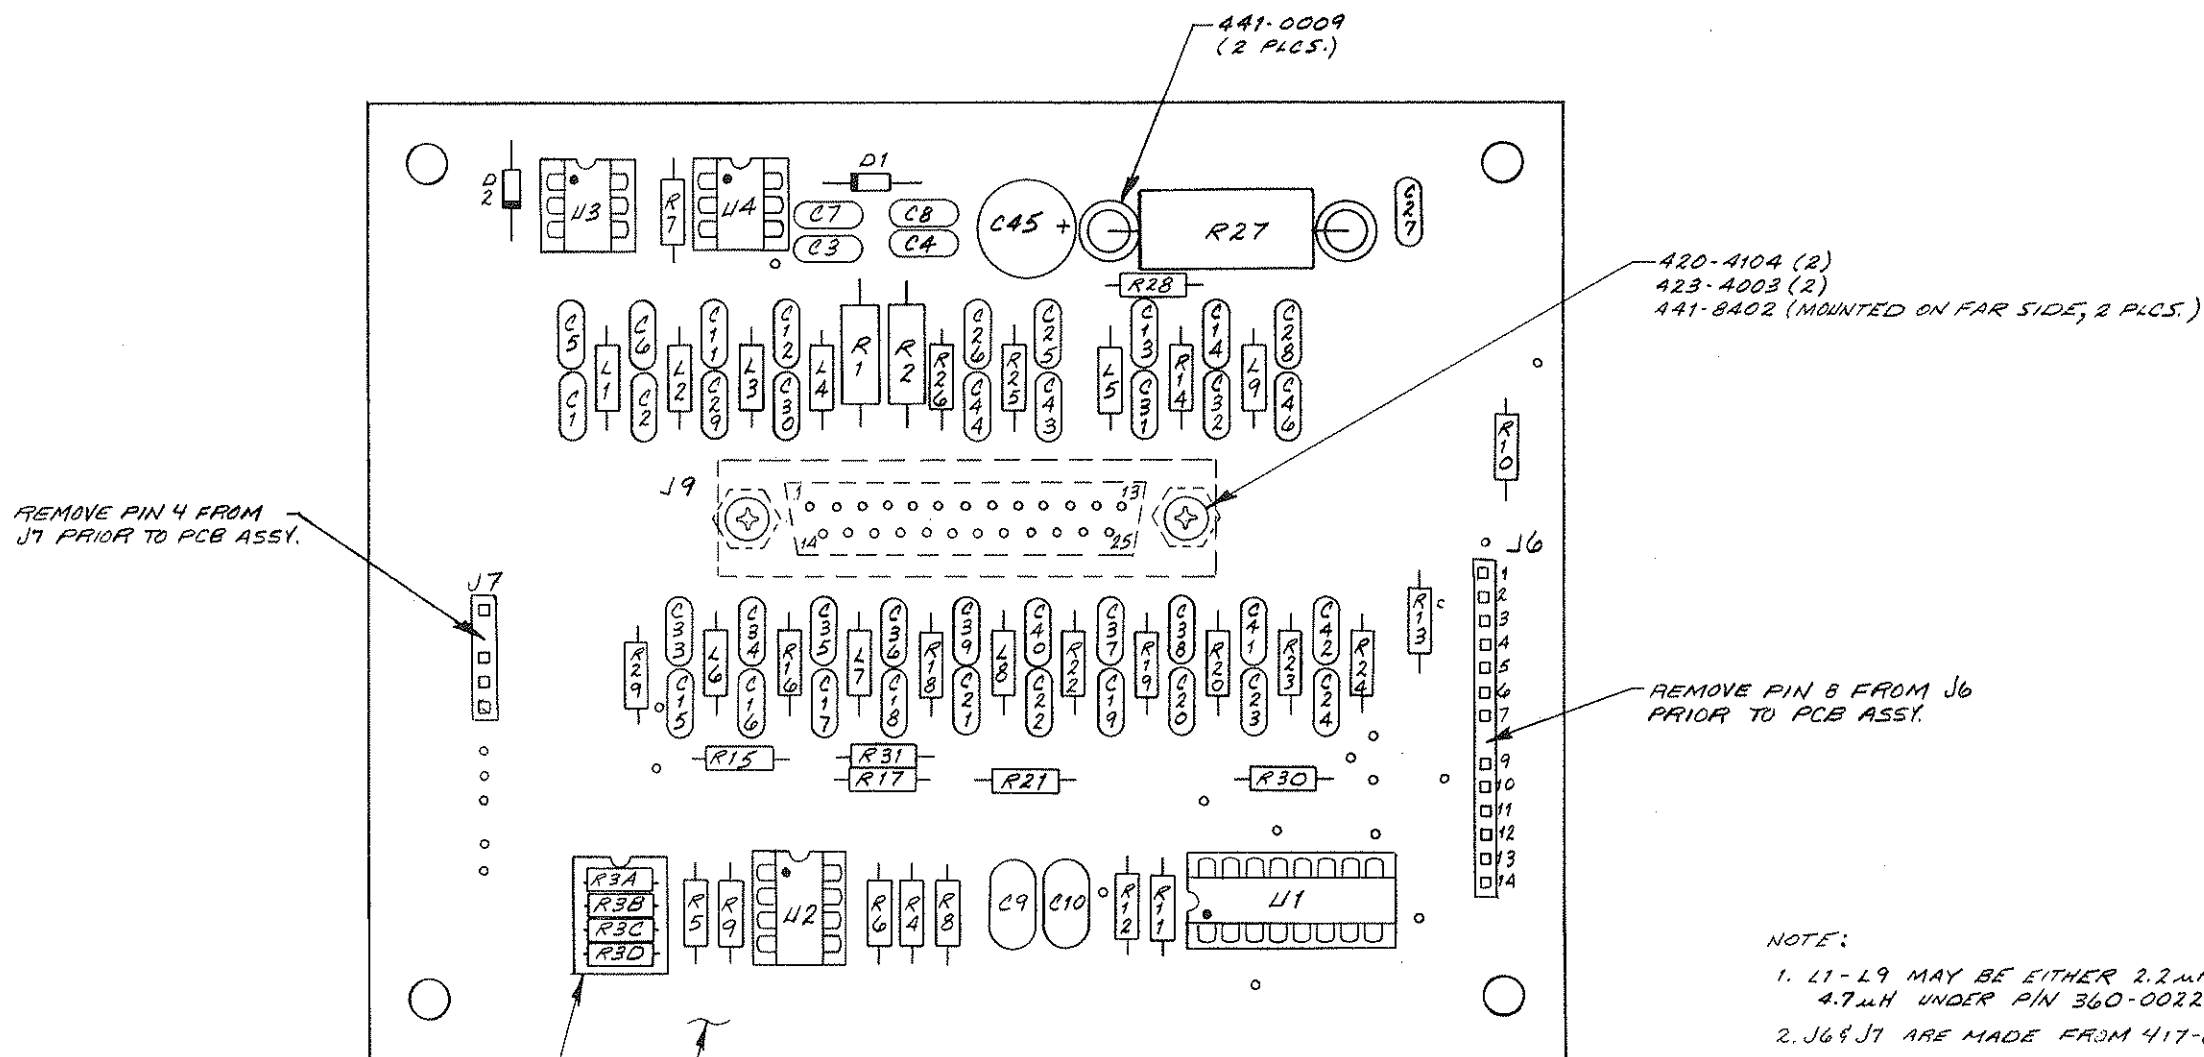

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

519-0042
 INSTALL SOCKET ONLY,
 RESISTOR NETWORK TO BE
 INSTALLED AT FINAL ASSEMBLY
 OF TRANSMITTER.

NOTE:
 1. L1-L9 MAY BE EITHER 2.2µH OR
 4.7µH UNDER PIN 360-0022.
 2. J6 & J7 ARE MADE FROM 417-0200.

SEE SCHEMATIC # D919-0042
 SEE B/M # 919-0042

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.


| | | | | |
|---|-----------------------------|------------------------------|---|--------------|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | DWN BY MERRKEL 2-26-83 | NEXT ASSY. | BE BROADCAST ELECTRONICS INC. 4100 N. 24TH ST. QUINCY, IL 62305 217/224-9600 TELEX 250142 CABLE BCST ELECT QUI | |
| | CHKD. | PRODUCT USED ON IPA | | |
| | ME | FINISH | TITLE PCB ASSEMBLY - IPA INTERCONNECT/ FILTER BOARD | SHEET 1 OF 1 |
| | EE | | SCALE 2/1 | REV D |
| TOLERANCE (DECIMAL) U.O.S. .X ± .030 .XXX ± .005 .XX ± .015 ANGLES ± 1° | PROJ. ENGR. S.S. 5/16/83 | DFTG. SUPVR. M.H. 5-13-83 | DWG. NO. 919-0042 | |
| | MFG. | | TYPE SIZE A C | |

| REF | ZONE | REF | ZONE | REF | ZONE | REF | ZONE |
|-----|------|-----|------|-----|------|-----|-------|
| C1 | A2 | D16 | B1 | R19 | B2 | R55 | B3 |
| C2 | A3 | D17 | B1 | R20 | B1 | R56 | B3 |
| C3 | A2 | D18 | A2 | R21 | A1 | R57 | B3 |
| C4 | A2 | D19 | B3 | R22 | B1 | R58 | B3 |
| C5 | A2 | F1 | A3 | R23 | B1 | R59 | A3 |
| C6 | B2 | J3 | B2 | R24 | A1 | R60 | A3 |
| C7 | A2 | J4 | B3 | R25 | B1 | R61 | B1 |
| C8 | A1 | J5 | A1 | R26 | B1 | R62 | A3 |
| C9 | B1 | J16 | B1 | R27 | B2 | R63 | B1 |
| C10 | A2 | J17 | B1 | R28 | B2 | R64 | B1 |
| C11 | A1 | J18 | A1 | R29 | B2 | R65 | B3 |
| C12 | A1 | P16 | B1 | R30 | B2 | R66 | B3 |
| C13 | B2 | P17 | B1 | R31 | B1 | R67 | B3 |
| C14 | A2 | P18 | A1 | R32 | B3 | R68 | B1 |
| C15 | B3 | Q1 | B2 | R33 | B3 | R69 | B1 |
| C16 | A3 | Q2 | B2 | R34 | B1 | R70 | B1 |
| C17 | B2 | Q3 | A2 | R35 | B3 | R71 | B1 |
| C18 | B3 | Q4 | A2 | R36 | B2 | R72 | B1 |
| C19 | B1 | R1 | B2 | R37 | B3 | R73 | A1 |
| C20 | B3 | R2 | B2 | R38 | B2 | R74 | B1 |
| C21 | B2 | R3 | B2 | R39 | B2 | R75 | B1 |
| D1 | B2 | R4 | B2 | R40 | A1 | R76 | B1 |
| D2 | B2 | R5 | B2 | R41 | A1 | R77 | B1 |
| D3 | B2 | R6 | B2 | R42 | B3 | TP1 | A3 |
| D4 | B2 | R7 | B2 | R43 | A1 | TP2 | B2-B3 |
| D5 | B1 | R8 | B2 | R44 | B2 | U1 | A2 |
| D6 | B1 | R9 | B2 | R45 | B3 | U2 | A2-A3 |
| D7 | B2 | R10 | A1 | R46 | B2 | U3 | A1 |
| D8 | B2 | R11 | B2 | R47 | B2 | U4 | B2 |
| D9 | A1 | R12 | B1 | R48 | B3 | U5 | A1 |
| D10 | B2 | R13 | A1 | R49 | B3 | U6 | B3 |
| D11 | A1 | R14 | B2 | R50 | B3 | U7 | B1 |
| D12 | B2 | R15 | B1 | R51 | A2 | | |
| D13 | B3 | R16 | B1 | R52 | A2 | | |
| D14 | B2 | R17 | B1 | R53 | B3 | | |
| D15 | B2 | R18 | B2 | R54 | B3 | | |

COPYRIGHT © 1988 BROADCAST ELECTRONICS, INC.

597-0032-20


FIGURE 3-7. CONTROL REGULATOR CIRCUIT BOARD COMPONENT LOCATOR

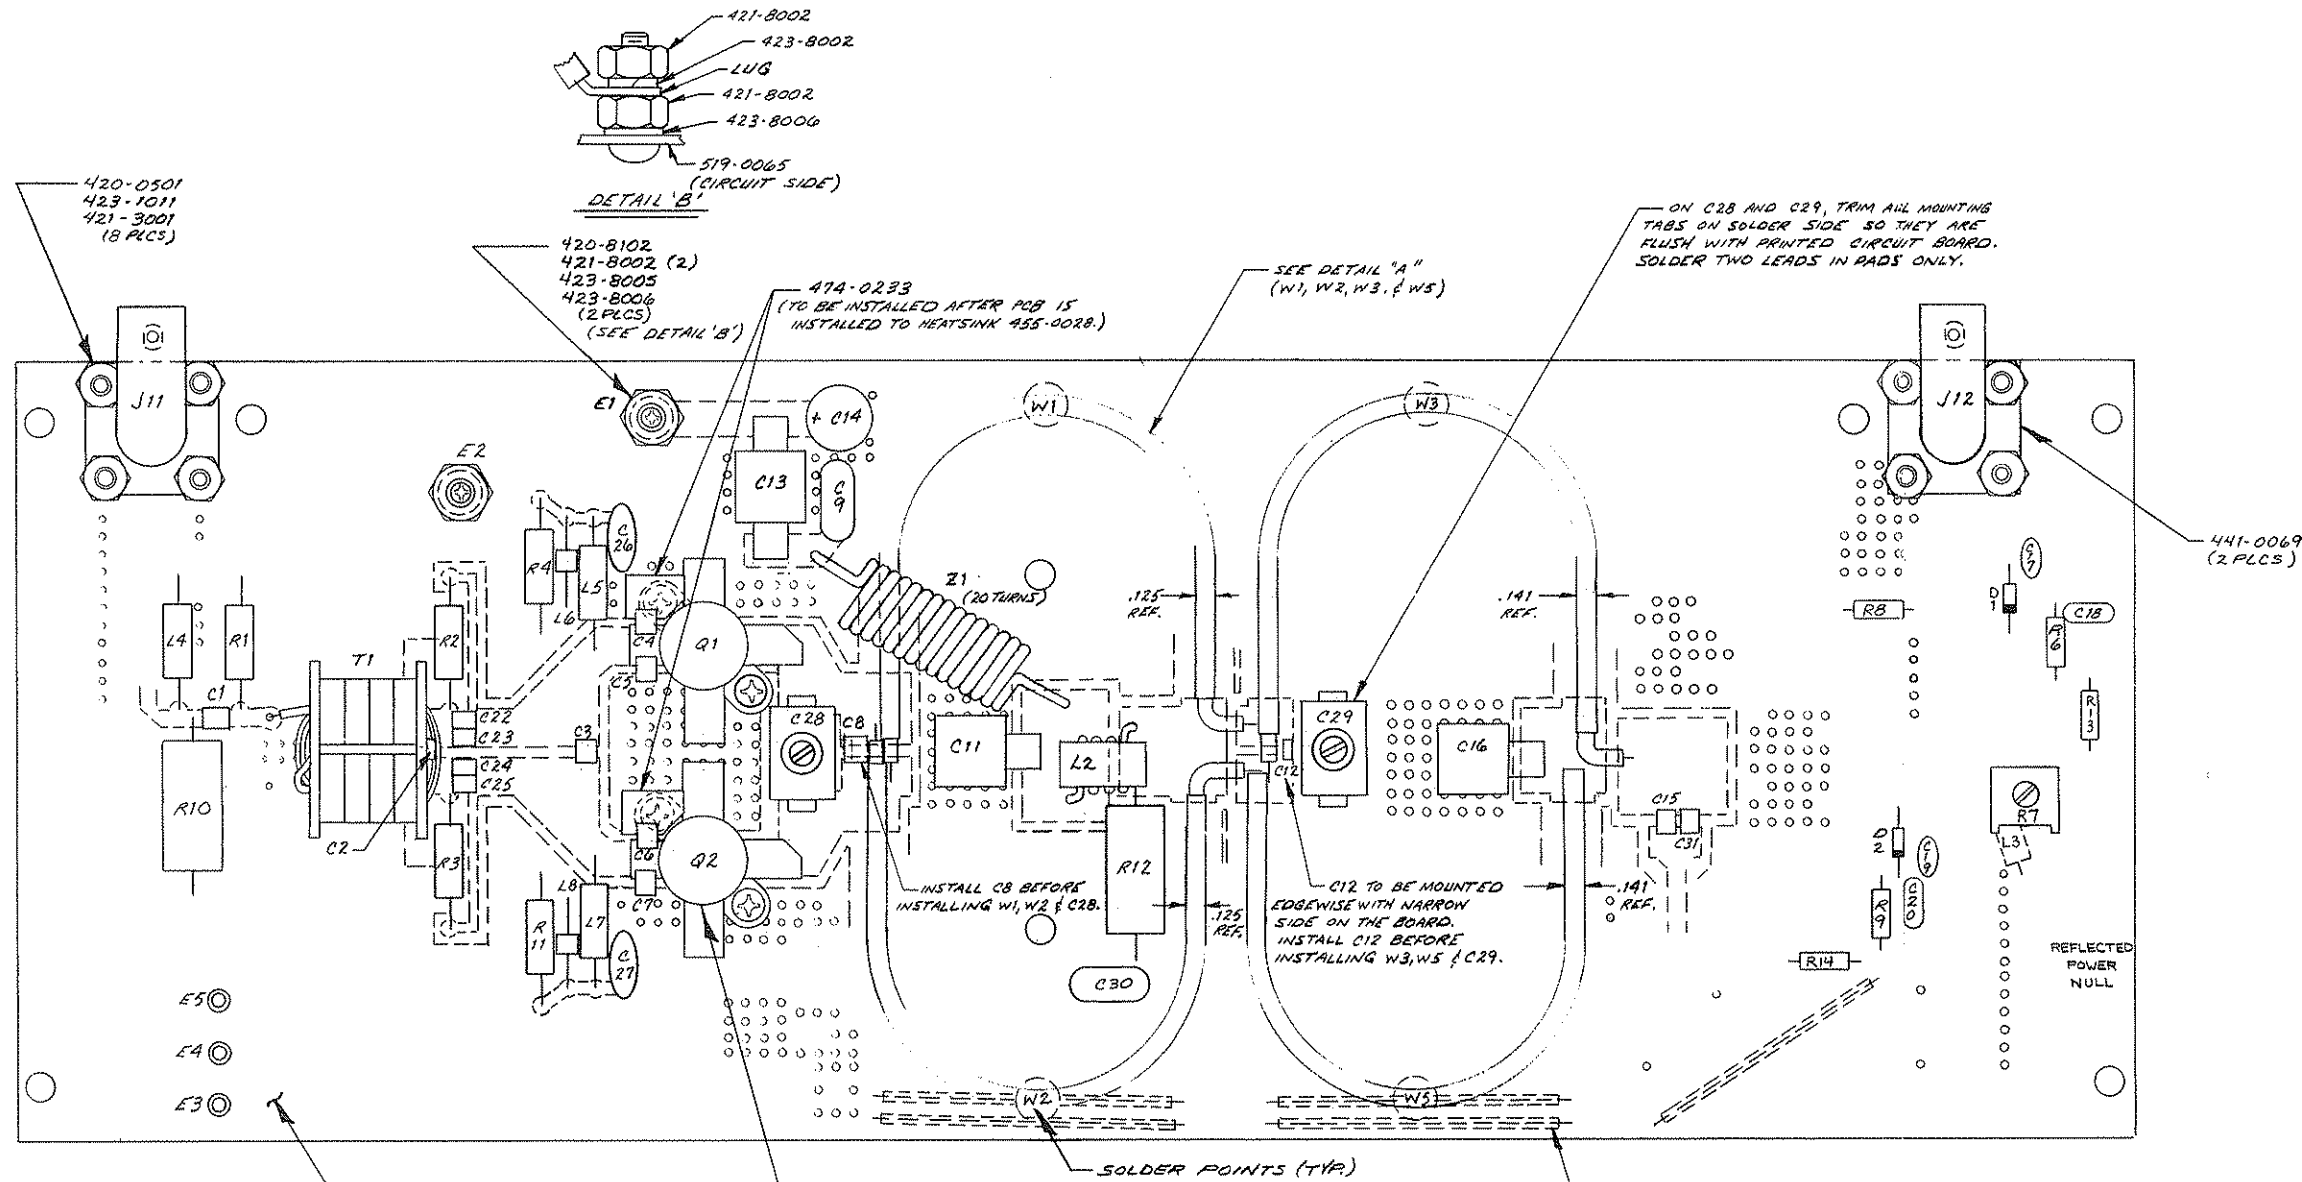

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

THE FOLLOWING COMPONENTS:
 Q1, Q2, C4, C5, C6 AND C7 TO BE
 INSTALLED AFTER PCB IS INSTALLED
 ON HEAT-SINK 455-0028. (SEE SHEET 2)
 (SEE NOTE *5)


- NOTES:
1. USE FIXTURE TO FORM W1, W2, W3, & W5.
 2. REFERENCE SCHEMATIC #D959-0131
 3. REFERENCE BIM 919-0065.
 4. REFERENCE RF AMP PCB SCHEMATIC #C919-0065.
 5. TRANSISTORS Q1 & Q2 ARE MATCHED PAIRS.

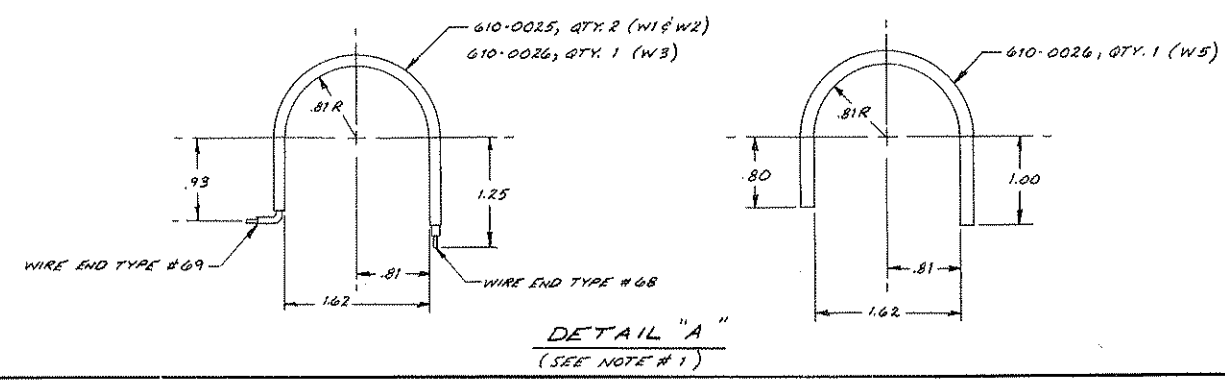

DETAIL "A"
 (SEE NOTE # 1)

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

| | | | | |
|---|---|--|-----------------------------------|--|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | TOLERANCE UNLESS OTHERWISE SPECIFIED DECIMAL 2 PL = .01 SPL = .005 FRACTIONAL ±1/64 ANGULAR ±1° SHARP EDGES BEND RADI FILLET RADI | DRAWN BY CHECKED BY PROJECT ENGR. <i>Z.B.W.</i> APPROVED BY | DATE DATE DATE DATE | BROADCAST ELECTRONICS INC. TITLE IPA RF AMP ASSEMBLY |
| | MATERIAL | TREATMENT OR FINISH | DWG. NO. TYPE 959-0132 A | REV. M. |
| | SCALE 2/1 | SHEET 1 OF 2 | | |

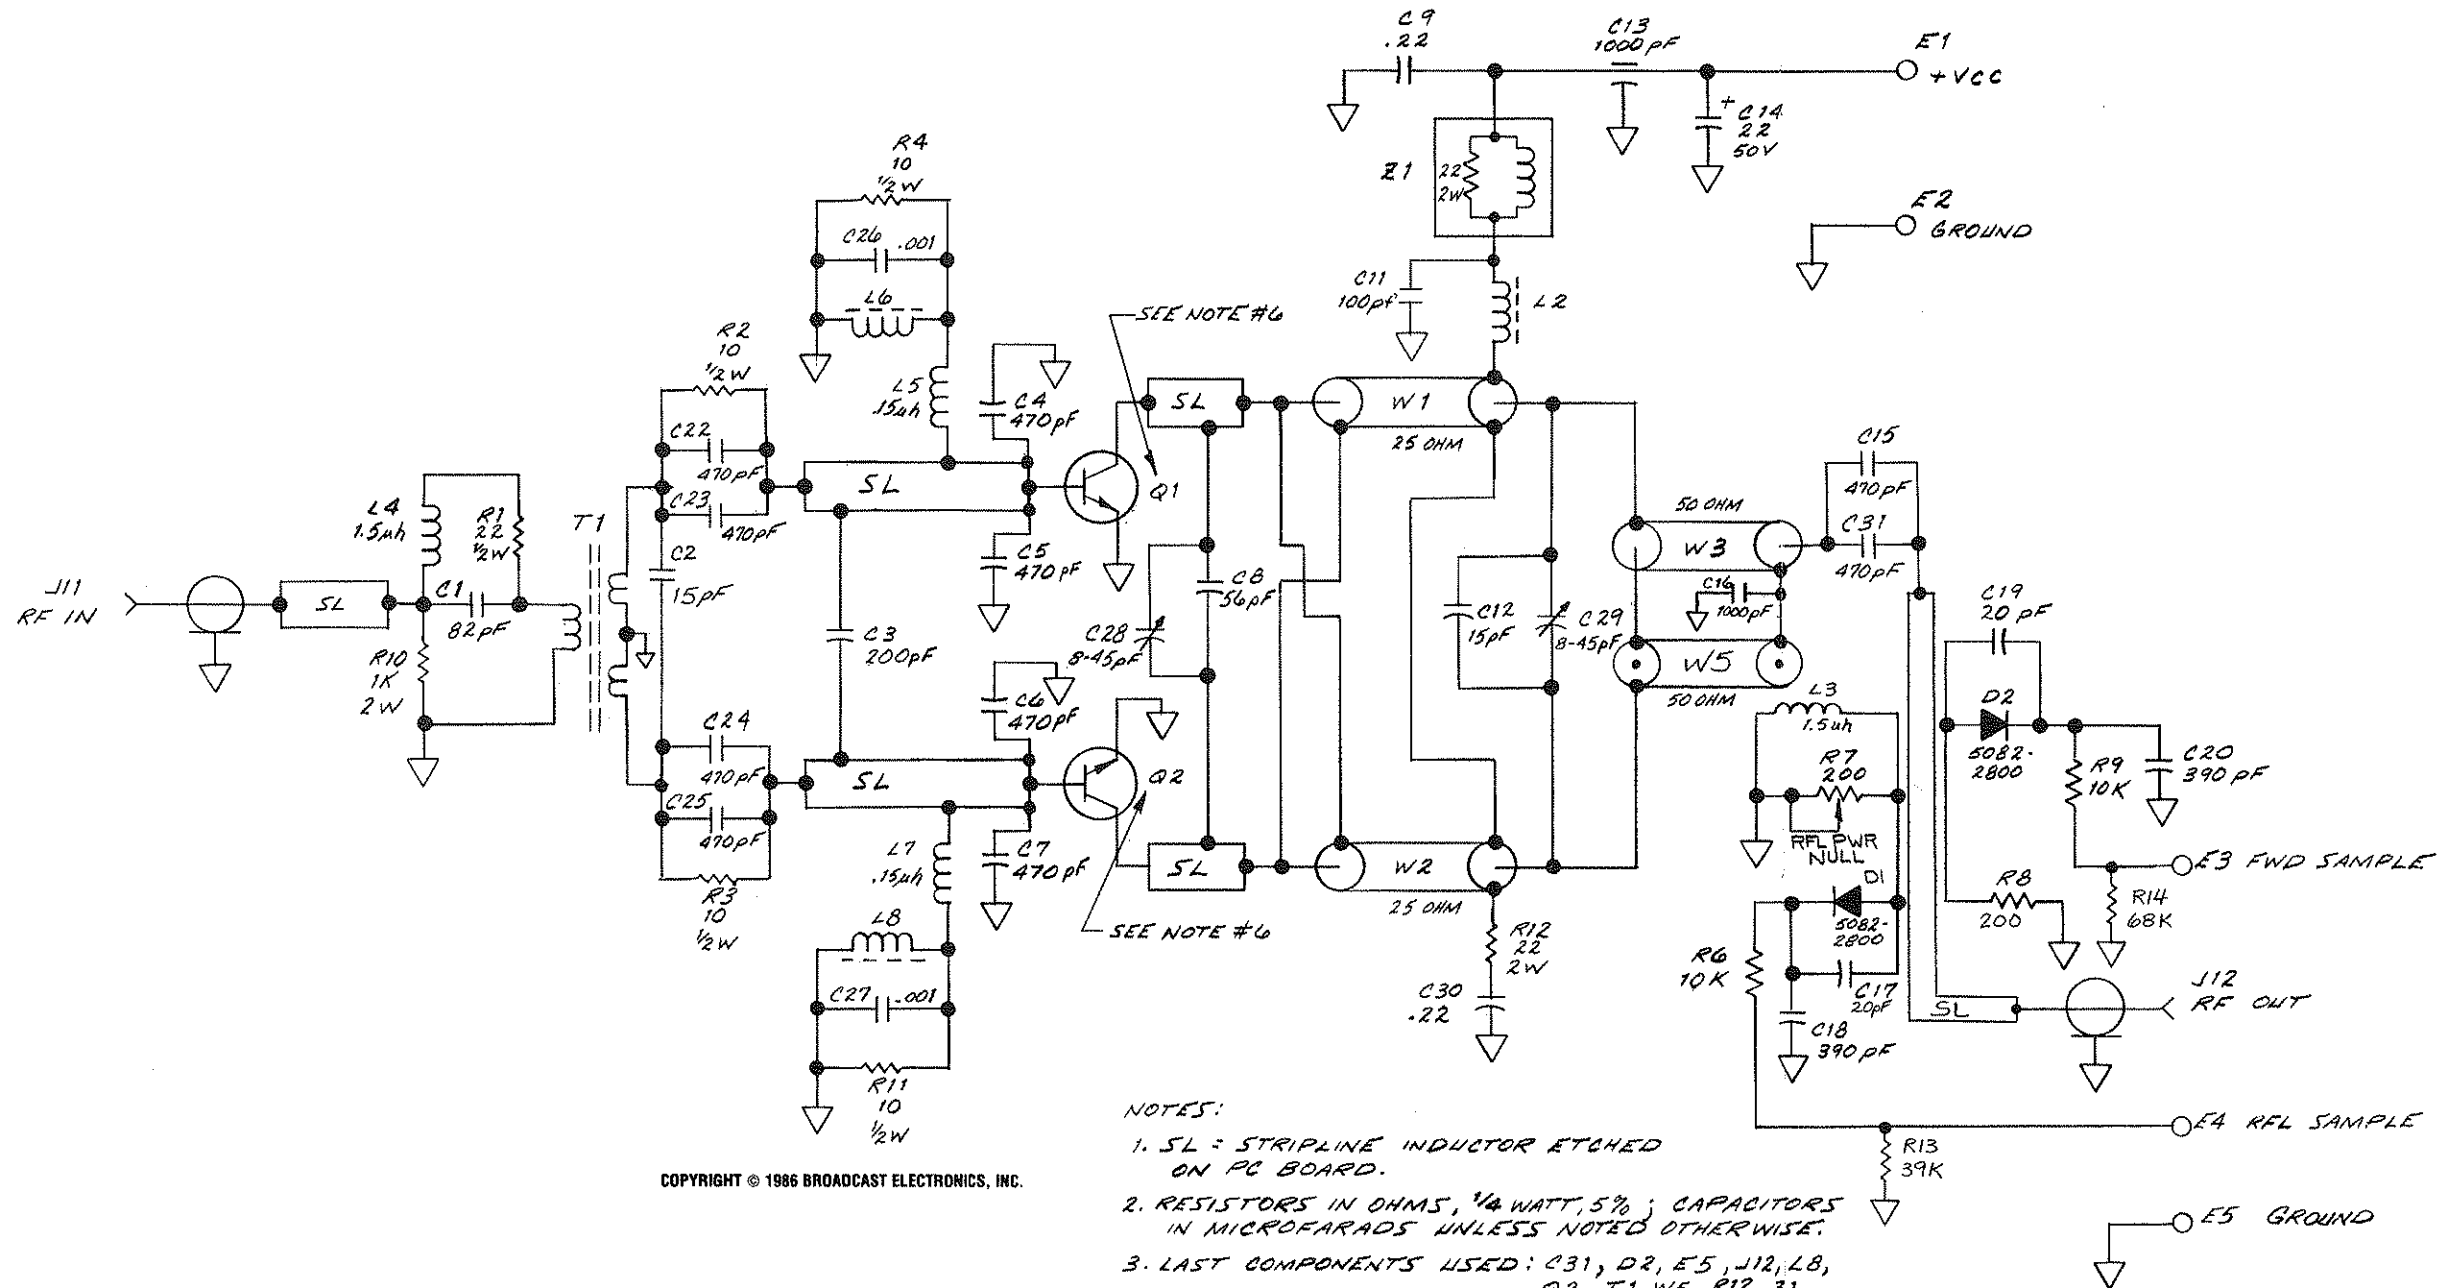

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.


NOTES:

1. SL = STRIPLINE INDUCTOR ETCHED ON PCB BOARD.
2. RESISTORS IN OHMS, 1/4 WATT, 5%; CAPACITORS IN MICROFARADS UNLESS NOTED OTHERWISE.
3. LAST COMPONENTS USED: C31, D2, E5, J12, L8, Q2, T1, W5, R12, Z1
4. SEE PCB ASSY. # D959-0132, SHEET 1 OF 2.
5. COMPONENTS NOT USED: R5, C10, J1-J10
6. Q1 AND Q2 MATCHED PAIR OF B.E. PART NO. 210-1460-001. MUST HAVE SAME COLOR DOT.

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

| | | | | |
|---|---|------------------------|---|--|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | DWN. BY MERKEL 3-10-83 | NEXT ASSY. | BROADCAST ELECTRONICS INC. 4100 N. 24TH ST. QUINCY, IL 62305 217/224-8600 TELEX 250142 CABLE BCST ELECT QUI | |
| | CHKD. | PRODUCT USED ON IPA | | TITLE PCB SCHEMATIC - IPA RF AMP PCB |
| | ME | FINISH | | SHEET 1 OF 1 |
| | EE | | | SCALE 7/4 G |
| TOLERANCE (DECIMAL) U.O.S. .X ± .030 .XXX ± .005 .XX ± .015 ANGLES ± 1° | PROJ. ENGR. 5/16/83 DFTG. SUPVR. 5-13-83 MFG. | DWG. NO. 919-0065 | | |

B.E. PART NO. 418-0112

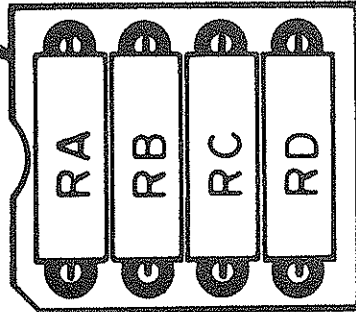

USED ON:
IPA 919-0042 PCB ON FM5A
AS R3.

| B.E.I. PART NO. (VALUE IN OHMS) | RA | RB | RC | RD |
|------------------------------------|----|----|----|----|
| 100-1053 (10K) | X | | | |
| 100-2243 (2.2K) | | X | | |
| 100-1053 (10K) | | | X | |
| 100-2743 (2.7K) | | | | X |

| | | | | | | | |
|---|--|--|--|---|--|-----------------------------------|--|
| <p>PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS.</p> | | <p>TOLERANCE UNLESS OTHERWISE SPECIFIED DECIMAL 2 PL ± 0.1 3PL ± 0.05 FRACTIONAL $\pm 1/64$ ANGULAR ± 1 TO SHARP EDGES BEND RADIUS FILLET RADIUS</p> | | <p>DRAWN BY <u>MERKEL</u> DATE <u>2-22-83</u> CHECKED BY _____ DATE _____ PROJECT ENGR _____ DATE _____ APPROVED BY _____</p> | | <p>BROADCAST ELECTRONICS INC.</p> | |
| <p>RESISTOR NETWORK</p> | | | | <p>ASSEMBLY</p> | | <p>SCALE <u>4/1</u></p> | |
| <p>DWG. NO. <u>959-1000-001</u></p> | | <p>REV. <u>B</u></p> | | <p>TREATMENT OR FINISH _____</p> | | <p>SHEET <u>1</u> OF <u>1</u></p> | |
| <p>A</p> | | <p>IP A - FM5A</p> | | <p>REV. <u>B</u></p> | | <p>SHEET <u>1</u> OF <u>1</u></p> | |

SECTION IV
IPA PARTS LISTS

4-1. INTRODUCTION.

4-2. This section provides descriptions and part numbers of electrical components, assemblies, and selected mechanical parts required for maintenance of the Broadcast Electronics FM-5A FM Transmitter IPA. Each table entry in this section is indexed by reference designators appearing on the applicable schematic diagram.

TABLE 4-1. IPA PARTS LIST INDEX

| TABLE | DESCRIPTION | PART NO. | PAGE |
|-------|-----------------------------------|------------------|------|
| 4-2 | OVERALL IPA | 959-0131 | 4-2 |
| 4-3 | IPA WIRING ASSEMBLY | 949-0029 | 4-2 |
| 4-4 | INTERCONNECT/FILTER CIRCUIT BOARD | 919-0042 | 4-3 |
| 4-5 | RF AMPLIFIER ASSEMBLY | 959-0132 | 4-3 |
| 4-6 | RF AMPLIFIER WIRING ASSEMBLY | 949-0040 | 4-3 |
| 4-7 | RF AMPLIFIER CIRCUIT BOARD | 919-0065 | 4-4 |
| 4-8 | CONTROL REGULATOR ASSEMBLY | 959-0133 | 4-5 |
| 4-9 | CONTROL REGULATOR WIRING ASSEMBLY | 949-0039 | 4-5 |
| 4-10 | CONTROL REGULATOR CIRCUIT BOARD | 919-0045 | 4-5 |
| 4-11 | TEMPERATURE SENSOR CIRCUIT BOARD | 917-0030 | 4-7 |
| 4-12 | RESISTOR ASSEMBLY NETWORK | 959-1000- 001 | 4-7 |

TABLE 4-2. OVERALL IPA - 959-0131

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-------------------------------------|---|--------------|------|
| B1 | Fan, 115V, 50/60 Hz, 18W, 120 ft ³ /min, 3100 r/min, 4.5 inch (11.43 cm) | 380-4600 | 1 |
| C1 | Capacitor, Electrolytic, 22,000 uF, 50V | 027-2200 | 1 |
| D1 | Bridge Rectifier, MDA3502, Silicon, 200V, 35 Amperes | 230-3502 | 1 |
| DS1 | FWD PWR Indicator, LED, Green, 521-9175, 3V @ 40 mA Maximum | 323-9224 | 1 |
| DS2 | VSWR Indicator, LED, Yellow, 521-9176, 3V @ 30 mA Maximum | 323-9225 | 1 |
| DS3 | OVER TEMP Indicator, LED, Red, 521-9212, 2V @ 50 mA Maximum | 323-9217 | 1 |
| ----- 220V AC Input Operation ----- | | | |
| F1,F2,SPARE | Fuse, MDA, 250V, Slow-Blow, Ceramic Element, 4 Amperes | 330-0401 | 3 |
| ----- 110V AC Input Operation ----- | | | |
| F1,F2,SPARE | Fuse, 250V, 8 Amperes, Slow-Blow | 330-0801 | 3 |
| F3,SPARE | Fuse, 3AB, 250V, 20 Amperes | 330-2000 | 2 |
| FL1 | Power Input Connector/RFI Filter, 3 Amperes, 250V ac, 50/60 Hz | 339-0008 | 1 |
| MOV1 | Metal Oxide Varistor, V2506A15A, 250V ac RMS, 15 Joules | 140-0008 | 1 |
| R1 | Resistor, 680 Ohm ±5%, 1/2W | 110-6833 | 1 |
| R2,R3 | Resistor, 820 Ohm ±5%, 1/2W | 110-8233 | 2 |
| ---- | Transformer and Bracket Assembly | 959-0195 | 1 |
| T1 | Transformer, Power, Single Phase, 50/60 Hz Primary: Dual 115 volt windings, one winding tapped at 90V Secondary: 33.1V @ 15 Amperes Continuous, Tapped at 30.2V | 376-0040 | 1 |
| TS1 | Barrier Strip, 10 Terminal | 412-0100 | 1 |
| XF1,XF2 | Fuse Holder, AGC | 415-2012 | 2 |
| XF3 | Fuse Holder, Dual, 3AB | 415-0003 | 1 |
| ---- | Fuse Clips for Spare fuse, AGC | 415-1001 | 2 |
| ---- | Chassis Slides, Pair | 469-0413-002 | 1 |
| ---- | Receptacle, Top Cover Fastener | 420-0022 | 8 |
| ---- | Turn-Lock Fastener, Long | 420-0019 | 6 |
| ---- | Turn-Lock Fastener, Short | 420-0027 | 2 |
| ---- | Retainer, Turn-Lock Fastener | 420-0021 | 8 |
| ---- | LED Circuit Board | 919-0041 | 1 |
| ---- | Interconnect/Filter Circuit Board | 919-0042 | 1 |
| ---- | RF Amplifier Assembly | 959-0132 | 1 |
| ---- | Control Regulator Assembly | 939-0133 | 1 |
| ---- | IPA Wiring Assembly | 949-0029 | 1 |
| ---- | Blank Circuit Board, LED Assembly | 519-0041 | 1 |

TABLE 4-3. IPA WIRING ASSEMBLY - 949-0029

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|--|----------|------|
| J10 | Receptacle, BNC, Bulkhead UC-909 | 417-0106 | 1 |
| J13 | Receptacle, Type N | 417-0076 | 1 |
| P1,P2 | Plug, BNC, Right Angle | 417-0213 | 2 |
| P1 | Plug Assembly: | | |
| | Contact, Male | 418-0036 | 1 |
| | Contact, Female | 417-0100 | 1 |
| | Housing | 417-0099 | 1 |
| P5,P6 | Connector, Housing, 14-Pin In-line | 417-1401 | 2 |
| P7 | Connector, Housing, 5-Pin In-line | 417-0165 | 1 |
| R1 | Resistor, 1.8 k Ohm ±5%, 2W | 130-1843 | 1 |
| ---- | Pins, Receptacle (for Connectors P5, P6, and P7) | 417-8766 | 30 |

TABLE 4-4. INTERCONNECT/FILYER CIRCUIT BOARD - 919-0042

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|--------------|--|--------------|------|
| C1 THRU C8 | Capacitor, Mica, 390 pF \pm 5%, 100V | 042-3922 | 8 |
| C9,C10 | Capacitor, Mylar Film, 0.1 uF \pm 5%, 100V | 030-1053 | 2 |
| C11 THRU C44 | Capacitor, Mica, 390 pF \pm 5%, 100V | 042-3922 | 34 |
| C45 | Capacitor, Electrolytic, 22 uF, 50V | 024-2274 | 1 |
| C46 | Capacitor, Mica, 390 pF \pm 5%, 100V | 042-3922 | 1 |
| D1,D2 | Diode, 1N4148, Silicon, 100V, 10 mA | 203-4148 | 2 |
| J6 | Receptacle, Header, 20-Pin In-line | 417-0200 | .70 |
| J7 | Receptacle, Header, 20-Pin In-line | 417-0200 | .30 |
| J9 | Receptacle, 25-Pin | 417-2500 | 1 |
| L1 THRU L9 | Molded Choke, 4.7 uH \pm 10%, DC Resistance: 0.55 Ohms, 0.43 Amperes Maximum, Resonant at 130 MHz | 360-0022 | 9 |
| R1,R2 | Resistor, 1 k Ohm \pm 5%, 1/2W | 110-1043 | 2 |
| R3 | Resistor Network Assembly | 959-1000-002 | 1 |
| R4,R5 | Resistor, 1 k Ohm \pm 5%, 1/4W | 100-1043 | 2 |
| R6 | Resistor, 10 Meg Ohm \pm 5%, 1/4W | 100-1083 | 1 |
| R7 | Resistor, 10 k Ohm \pm 5%, 1/4W | 100-1053 | 1 |
| R8 | Resistor, 10 Ohm \pm 5%, 1/4W | 100-1023 | 1 |
| R9 | Resistor, 10 Meg Ohm \pm 5%, 1/4W | 100-1083 | 1 |
| R10 THRU R12 | Resistor, 10 k Ohm \pm 5%, 1/4W | 100-1053 | 3 |
| R13 THRU R18 | Resistor, 4.99 k Ohm \pm 1%, 1/4W | 100-5041 | 6 |
| R19,R20 | Resistor, 1.2 k Ohm \pm 5%, 1/4W | 100-1243 | 2 |
| R21,R22 | Resistor, 4.99 k Ohm \pm 1%, 1/4W | 100-5041 | 2 |
| R23 THRU R26 | Resistor, 1.2 k Ohm \pm 5%, 1/4W | 100-1243 | 4 |
| R27 | Resistor, 100 Ohm \pm 5%, 2W | 132-1033 | 1 |
| R28 THRU R31 | Resistor, 100 k Ohm \pm 5%, 1/4W | 100-1063 | 4 |
| U1 | Integrated Circuit, ULN2003A, 7-Channel Driver, CMOS/TTL Compatible, 16-Pin DIP | 229-2003 | 1 |
| U2 | Integrated Circuit, 4N33, Optical Isolator NPN Photo Transistor/Infrared Emitting Diode Type, 1500V Isolation, 6-Pin DIP | 229-0033 | 1 |
| U3,U4 | Integrated Circuit, LM358N, Dual Operational Amplifier, 8-Pin DIP | 221-0358 | 2 |
| XR3 | Receptacle, 8-Pin DIP | 417-0088 | 1 |
| XU1 | Receptacle, 16-Pin DIP | 417-1604 | 1 |
| XU2 | Receptacle, 8-Pin DIP | 417-0804 | 1 |
| XU3,XU4 | Receptacle, 6-Pin DIP | 417-0600 | 2 |
| ---- | Blank Circuit Board | 519-0042 | 1 |

TABLE 4-5. RF AMPLIFIER ASSEMBLY - 959-0132

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|------------|--|----------|------|
| C1 THRU C3 | Capacitor, Ceramic, Feed-Thru, 1000 pF \pm 20%, 500V | 008-1033 | 3 |
| C4 | Capacitor Assembly, Kapton, Feed-Thru, 100 pF | | |
| | Kapton Dielectric | 409-1817 | 2 |
| | Nylon Insulator | 423-6007 | 2 |
| L1 THRU L6 | Ferrite Bead | 360-0003 | 6 |
| ---- | RF Amplifier Wiring Assembly | 949-0040 | 1 |
| ---- | RF Amplifier Circuit Board | 919-0065 | 1 |

TABLE 4-6. RF AMPLIFIER WIRING ASSEMBLY - 949-0040

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|-----------------------------------|----------|------|
| P3 | Connector, Housing, 4-Pin In-line | 417-0138 | 1 |
| P4 | Contact, Female | 417-0100 | 2 |
| | Housing | 417-0099 | 1 |
| ---- | Pins, Receptacle (for P3) | 417-8766 | 3 |

TABLE 4-7. RF AMPLIFIER CIRCUIT BOARD - 919-0065

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|--------------|---|--------------|------|
| C1 | Capacitor, Ceramic, Chip, 82 pF $\pm 5\%$, 500V | 009-8013 | 1 |
| C2 | Capacitor, Ceramic, Chip, 15 pF $\pm 5\%$, 500V | 009-1513 | 1 |
| C3 | Capacitor, Ceramic, Chip, 200 pF $\pm 5\%$, 300V | 009-2023 | 1 |
| C4 THRU C7 | Capacitor, Ceramic, Chip, 470 pF $\pm 5\%$, 200V | 009-4723 | 4 |
| C8 | Capacitor, Ceramic, Chip, 56 pF $\pm 5\%$, 500V | 009-5613 | 1 |
| C9 | Capacitor, Mylar, 0.22 μ F $\pm 10\%$, 100V | 030-2253 | 1 |
| C11 | Capacitor, Mica, 100 pF $\pm 10\%$, 350V | 046-0001 | 1 |
| C12 | Capacitor, Ceramic, Chip, 15 pF $\pm 5\%$, 500V | 009-1513 | 1 |
| C13 | Capacitor, Mica, Feedthru, 1000 pF $\pm 10\%$, 350V | 046-1030 | 1 |
| C14 | Capacitor, Electrolytic, 22 μ F, 50V | 024-2274 | 1 |
| C15 | Capacitor, Ceramic, Chip, 470 pF $\pm 5\%$, 200V | 009-4723 | 1 |
| C16 | Capacitor, Mica, 1000 pF $\pm 10\%$, 350V | 046-0002 | 1 |
| C17 | Capacitor, Ceramic, 20 pF $\pm 10\%$, 1kV | 002-2013 | 1 |
| C18 | Capacitor, Mica, 390 pF $\pm 5\%$, 100V | 042-3922 | 1 |
| C19 | Capacitor, Ceramic, 20 pF $\pm 10\%$, 1kV | 002-2013 | 1 |
| C20 | Capacitor, Mica, 390 pF $\pm 5\%$, 100V | 042-3922 | 1 |
| C22 THRU C25 | Capacitor, Ceramic, Chip, 470 pF $\pm 5\%$, 200V | 009-4723 | 4 |
| C26,C27 | Capacitor, Ceramic, 0.001 μ F $\pm 10\%$, 1kV | 002-1034 | 2 |
| C28,C29 | Capacitor, Mica, Adjustable Compression, 4 to 45 pF, 175V | 090-0403 | 2 |
| C30 | Capacitor, Mylar, 0.22 μ F $\pm 10\%$, 100V | 030-2253 | 1 |
| C31 | Capacitor, Ceramic, Chip, 470 pF $\pm 5\%$, 200V | 009-4723 | 1 |
| D1,D2 | Diode, HP5082-2800, High Voltage Schottky Barrier Type, 70V, 15 mA | 201-2800 | 2 |
| J11,J12 | Receptacle, Right Angle BNC, UG535/U | 417-0049 | 2 |
| L2 | RF Choke: 4 Turns of enameled 16 AWG wire on a 1/2 inch OD ferrite torroid form. | 360-0025 | 1 |
| L3,L4 | RF Choke, 1.5 μ H $\pm 10\%$, 580 mA Maximum, DC Resistance = 0.30 Ohms | 360-0032 | 2 |
| L5 | RF Choke, 0.15 μ H, 1.47A dc Maximum DC Resistance = 0.037 Ohms | 360-0151 | 1 |
| L6 | RF Choke, Consists of BE P/N 360-0041 ferrite bead, OD = 0.13 inch, ID = 0.047 inch, L = 0.11 inch | 360-0042 | 1 |
| L7 | RF Choke, 0.15 μ H, 1.47A dc Maximum DC Resistance = 0.037 Ohms | 360-0151 | 1 |
| L8 | RF Choke, Consists of BE P/N 360-0041 ferrite bead, OD = 0.13 inch, ID = 0.047 inch, L = 0.11 inch | 360-0042 | 1 |
| Q1,Q2 | Transistor, Pair, SD1460-4, NPN, Silicon, CB-290 Case | 210-1460-001 | 1 |
| R1 | Resistor, 22 Ohm $\pm 5\%$, 1/2W | 110-2223 | 1 |
| R2 THRU R4 | Resistor, 10 Ohm $\pm 5\%$, 1/2W | 110-1023 | 3 |
| R6 | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 1 |
| R7 | Potentiometer, 200 Ohm $\pm 10\%$, 1/2W | 177-2034 | 1 |
| R8 | Resistor, 200 Ohm $\pm 5\%$, 1/4W | 103-2003 | 1 |
| R9 | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 1 |
| R10 | Resistor, 1 k Ohm $\pm 5\%$, 2W | 130-1043 | 1 |
| R11 | Resistor, 10 Ohm $\pm 5\%$, 1/2W | 110-1023 | 1 |
| R12 | Resistor, 22 Ohm $\pm 5\%$, 2W | 130-2223 | 1 |
| R13 | Resistor, 39 k Ohm $\pm 5\%$, 1/4W | 100-3953 | 1 |
| R14 | Resistor, 68 k Ohm $\pm 5\%$, 1/4W | 100-6853 | 1 |
| T1 | RF Input Transformer, Broadcast Electronics Manufacture Primary: 50 Ohms Impedance Secondary: 25 Ohm Impedance, C1 | 370-0008 | 1 |
| W1,W2 | Coaxial Cable Sections: 25 Ohm rigid coaxial cable matching section | 610-0025 | 2 |
| W3,W5 | Coaxial Cable Sections: 50 Ohm rigid coaxial cable matching section | 610-0026 | 2 |
| Z1 | Parasitic Suppressor: 20 turns of enameled 16 AWG wire close wound on a 22 Ohm $\pm 5\%$, 2W carbon resistor (BE P/N 130-2223) | 360-0024 | 1 |
| ---- | Blank Circuit Board | 519-0065 | 1 |

TABLE 4-8. CONTROL REGULATOR ASSEMBLY - 959-0133

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------------|--|----------|------|
| Q1 | Transistor, MJ3000, Silicon, NPN Darlington, TO-3 Case | 219-3000 | 1 |
| Q2 THRU Q4 | Transistor, 2N3055A, Silicon, NPN, TO-3 Case | 218-3055 | 3 |
| XQ1 THRU XQ4 | Socket, TO-3 Transistor | 417-0298 | 4 |
| ---- | Insulator, Mica, TO-3 Transistor | 418-0010 | 4 |
| ---- | Control Regulator Wiring Assembly | 949-0039 | 1 |
| ---- | Control Regulator Circuit Board | 919-0045 | 1 |
| ---- | Temperature Sensor Circuit Board | 917-0030 | 1 |

TABLE 4-9. CONTROL REGULATOR WIRING ASSEMBLY - 949-0039

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|-----------------|----------|------|
| J1 | Jack Assembly: | | |
| | Contact, Male | 418-0036 | 1 |
| | Contact, Female | 417-0100 | 1 |
| | Housing | 417-0098 | 1 |

TABLE 4-10. CONTROL REGULATOR CIRCUIT BOARD - 919-0045
(Sheet 1 of 3)

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------------|--|----------|------|
| C1 THRU C4 | Capacitor, Electrolytic, 22 uF, 50V | 024-2274 | 4 |
| C5,C6 | Capacitor, Mica, 390 pF ±5%, 100V | 042-3922 | 2 |
| C7 | Capacitor, Electrolytic, 22 uF, 50V | 024-2274 | 1 |
| C8,C9 | Capacitor, Mylar Film, 0.1 uF, 100V | 030-1053 | 2 |
| C10,C11 | Capacitor, Electrolytic, 22 uF, 50V | 024-2274 | 2 |
| C12 | Capacitor, Electrolytic, 2.2 uF, 50V | 020-2264 | 1 |
| C13 | Capacitor, Mylar Film, 0.01 uF, 100V | 031-1043 | 1 |
| C14 | Capacitor, Mica, 390 pF ±5%, 100V | 042-3922 | 1 |
| C15 | Capacitor, Polyester, 0.0022 uF ±10%, 100V | 031-2033 | 1 |
| C16 THRU C18 | Capacitor, Electrolytic, 22 uF, 50V | 024-2274 | 3 |
| C19 | Capacitor, Mylar Film, 0.1 uF, 100V | 030-1053 | 1 |
| C20 | Capacitor, Electrolytic, 22 uF, 50V | 024-2274 | 1 |
| C21 | Capacitor, Mica, 390 pF ±5%, 100V | 042-3922 | 1 |
| D1 THRU D4 | Diode, 1N4005, Silicon, 600V, 1 Ampere | 203-4005 | 4 |
| D5,D6 | Diode, 1N4148, Silicon, 100V, 10 mA | 203-4148 | 1 |
| D7 | Diode, Zener, 1N4733A, 5.1V, 1W | 200-4733 | 1 |
| D8,D9 | Diode, 1N4148, Silicon, 100V, 10 mA | 203-4148 | 2 |
| D10 | Diode, Zener, 1N4739A, 9.1V, 1W | 200-0009 | 1 |
| D11 | Diode, Zener, 1N4744A, 15V, 1W | 200-0015 | 1 |
| D12 | Diode, 1N4148, Silicon, 100V, 10 mA | 203-4148 | 1 |
| D13 | Diode, Zener, 1N4752A, 33V, 1W | 200-4752 | 1 |
| D14 THRU D17 | Diode, 1N4148, Silicon, 100V, 10 mA | 203-4148 | 4 |
| D18 | Diode, Zener, 1N5363, 30V, 5W | 200-5363 | 1 |
| D19 | Diode, 1N4005, Silicon, 600V @ 1 Ampere | 203-4005 | 1 |
| F1 | Fuse, AGC, 250V, 1/2 Ampere | 330-0050 | 1 |
| J3 | Receptacle, Header, 20-Pin In-line | 417-0200 | .20 |
| J4 | Receptacle, Header, 2-Pin | 417-0097 | 1 |
| J5 | Receptacle, Header, 20-Pin In-line | 417-0200 | .70 |
| J16 THRU J18 | Receptacle, Header, 3-Pin | 418-0003 | 3 |
| P16 THRU P18 | Plug, Shorting, 2-Pin | 340-0004 | 3 |
| Q1 | Transistor, MPSA06, NPN, TO-92 Case | 211-0006 | 1 |
| Q2 | Transistor, MPSA56, PNP, TO-92 Case | 210-0056 | 1 |
| Q3,Q4 | Transistor, MPSA06, NPN, TO-92 Case | 211-0006 | 2 |
| R1 | Resistor, 169 Ohms ±1%, 1/4W | 103-1693 | 1 |
| R2 | Resistor, 7.32 k Ohm ±1%, 1/4W | 103-7324 | 1 |

TABLE 4-10. CONTROL REGULATOR CIRCUIT BOARD - 919-0045
(Sheet 2 of 3)

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------------|--|----------|------|
| R3,R4 | Resistor, 100 k Ohm $\pm 5\%$, 1/4W | 100-1063 | 2 |
| R5 | Resistor, 115 Ohm $\pm 1\%$, 1/4W | 100-1131 | 1 |
| R6 | Resistor, 1.24 k Ohm $\pm 1\%$, 1/4W | 103-1244 | 1 |
| R7,R8 | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 2 |
| R9 | Resistor, 7.32 k Ohm $\pm 1\%$, 1/4W | 103-7324 | 1 |
| R10 | Resistor, 24 k Ohm $\pm 5\%$, 1/4W | 100-2453 | 1 |
| R11 | Resistor, 2.4 k Ohm $\pm 5\%$, 1/4W | 100-2443 | 1 |
| R12 | Resistor, 1.40 k Ohm $\pm 1\%$, 1/4W | 103-1404 | 1 |
| R13 | Resistor, 16 k Ohm $\pm 5\%$, 1/4W | 100-1653 | 1 |
| R14 | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 1 |
| R15 | Resistor, 1.13 k Ohm $\pm 1\%$, 1/4W | 103-1134 | 1 |
| R16 | Resistor, 787 Ohm $\pm 1\%$, 1/4W | 103-7873 | 1 |
| R17 | Potentiometer, 10 k Ohm $\pm 10\%$, 1/2W | 178-1053 | 1 |
| R18 | Potentiometer, 100 k Ohm $\pm 10\%$, 1/2W | 178-1064 | 1 |
| R19 | Potentiometer, 50 k Ohm $\pm 10\%$, 1/2W | 178-5053 | 1 |
| R20 | Resistor, 100 k Ohm $\pm 5\%$, 1/4W | 100-1063 | 1 |
| R21 | Resistor, 1.1 k Ohm $\pm 5\%$, 1/4W | 100-1143 | 1 |
| R22,R23 | Resistor, 10 Ohm $\pm 5\%$, 1/4W | 100-1023 | 2 |
| R24 | Resistor, 100 k Ohm $\pm 5\%$, 1/4W | 100-1063 | 1 |
| R25 | Resistor, 10.0 k Ohm $\pm 1\%$, 1/4W | 100-1051 | 1 |
| R26 | Resistor, 4.99 k Ohm $\pm 1\%$, 1/4W | 100-5041 | 1 |
| R27 | Resistor, 10 k Ohm $\pm 1\%$, 1/4W | 100-1051 | 1 |
| R28 | Resistor, 4.99 k Ohm $\pm 1\%$, 1/4W | 100-5041 | 1 |
| R29 | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 1 |
| R30 | Potentiometer, 10 k Ohm $\pm 10\%$, 1/2W | 178-1053 | 1 |
| R31 | Resistor, 2.49 k Ohm $\pm 1\%$, 1/4W | 103-2494 | 1 |
| R32 | Resistor, 11.0 k Ohm $\pm 1\%$, 1/4W | 103-1105 | 1 |
| R33 | Resistor, 3.57 k Ohm $\pm 1\%$, 1/4W | 103-3574 | 1 |
| R34 | Resistor, 2.21 k Ohm $\pm 1\%$, 1/4W | 103-2241 | 1 |
| R35 | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 1 |
| R36 | Resistor, 12 k Ohm $\pm 5\%$, 1/4W | 100-1253 | 1 |
| R37 | Resistor, 5.6 Meg Ohm $\pm 5\%$, 1/4W | 100-5673 | 1 |
| R38 | Resistor, 390 Ohm $\pm 5\%$, 1/4W | 100-3933 | 1 |
| R39 | Resistor, 4.7 k Ohm $\pm 5\%$, 1/4W | 100-4743 | 1 |
| R40 THRU R42 | Resistor, 10 Ohm $\pm 5\%$, 1/4W | 100-1023 | 3 |
| R43 | Resistor, 1.2 k Ohm $\pm 5\%$, 1/4W | 100-1243 | 1 |
| R44 | Resistor, 100 Ohm $\pm 5\%$, 1/4W | 100-1033 | 1 |
| R45 | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 1 |
| R46 | Resistor, 1.8 k Ohm $\pm 5\%$, 1/4W | 100-1843 | 1 |
| R47 | Resistor, 100 Ohm $\pm 5\%$, 1/4W | 100-1033 | 1 |
| R48,R49 | Resistor, 20 k Ohm $\pm 5\%$, 1/4W | 100-2053 | 2 |
| R50 | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 1 |
| R51 | Resistor, 6.2 k Ohm $\pm 5\%$, 1/4W | 100-6243 | 1 |
| R52 | Resistor, 120 Ohm $\pm 5\%$, 1/4W | 100-1233 | 1 |
| R53 | Resistor, 100 k Ohm $\pm 5\%$, 1/4W | 100-1063 | 1 |
| R54 | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 1 |
| R55 THRU R57 | Resistor, 22 Ohm $\pm 5\%$, 1/4W | 100-2223 | 3 |
| R58 | Resistor, 1 k Ohm $\pm 5\%$, 1/4W | 100-1043 | 1 |
| R59,R60 | Resistor, 0.1 Ohm $\pm 1\%$, 5W, W/W | 130-1000 | 2 |
| R61 | Resistor, 1 k Ohm $\pm 5\%$, 1/4W | 100-1043 | 1 |
| R62 | Resistor, 0.1 Ohm $\pm 1\%$, 5W, W/W | 130-1000 | 1 |
| R63 | Resistor, 4.99 k Ohm $\pm 1\%$, 1/4W | 100-5041 | 1 |
| R64 | Resistor, 1.00 k Ohm $\pm 1\%$, 1/4W | 103-1041 | 1 |
| R65 THRU R67 | Resistor, 22 Ohm $\pm 5\%$, 1/4W | 100-2223 | 3 |
| R68 THRU R70 | Resistor, 10.0 k Ohm $\pm 1\%$, 1/4W | 100-1051 | 3 |
| R71 | Resistor, 9.76 k Ohm $\pm 1\%$, 1/4W | 103-9764 | 1 |
| R72 | Potentiometer, 500 Ohm $\pm 10\%$, 1/2W | 178-5000 | 1 |
| R73 | Resistor, 10 Ohm $\pm 5\%$, 1/4W | 100-1023 | 1 |
| R74 | Resistor, 1.10 k Ohm $\pm 1\%$, 1/4W | 103-1104 | 1 |
| R75 | Resistor, 9.53 k Ohm $\pm 1\%$, 1/4W | 103-9534 | 1 |
| R76 | Potentiometer, 1 k Ohm $\pm 10\%$, 1/2W | 178-1043 | 1 |
| R77 | Resistor, 10 Ohm $\pm 5\%$, 1/4W | 100-1023 | 1 |

TABLE 4-10. CONTROL REGULATOR CIRCUIT BOARD - 919-0045
(Sheet 3 of 3)


| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|--------------|---|----------|------|
| U1,U2 | Integrated Circuit, LM317K, Three-Terminal Adjustable Positive Voltage Regulator, 1.2 to 37V, 1.5 Ampere Maximum, TO-3 Case | 227-0318 | 1 |
| U3 THRU U5 | Integrated Circuit, LM358N, Dual Operational Amplifier, 8-Pin DIP | 221-0358 | 3 |
| U6 | Integrated Circuit, LF353N, Dual JFET Input Operational Amplifier, 8-Pin DIP | 221-0353 | 1 |
| U7 | Integrated Circuit, LM358N, Dual Operational Amplifier, 8-Pin DIP | 221-0358 | 1 |
| XF1 | Fuse Clips, AGC | 415-2068 | 2 |
| XU3 THRU XU7 | Socket, 8-Pin DIP | 417-0804 | 5 |

TABLE 4-11. TEMPERATURE SENSOR CIRCUIT BOARD - 917-0030

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|------------|--|----------|------|
| C1 THRU C3 | Capacitor, Mica, 390 pF $\pm 5\%$, 100V | 042-3922 | 3 |
| U1 | Integrated Circuit, LM335Z, Precision Temperature Sensor, TO-92 Case | 229-0335 | 1 |
| ---- | Blank Circuit Board | 517-0030 | 1 |

TABLE 4-12. RESISTOR ASSEMBLY NETWORK - 959-1000-001

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|---------------------------------------|----------|------|
| R3A | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 1 |
| R3B | Resistor, 2.2 k Ohm, $\pm 5\%$, 1/4W | 100-2243 | 1 |
| R3C | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 1 |
| R3D | Resistor, 2.7 k Ohm $\pm 5\%$, 1/4W | 100-2743 | 1 |
| ---- | Plug, 8-Pin DIP | 418-0112 | 1 |

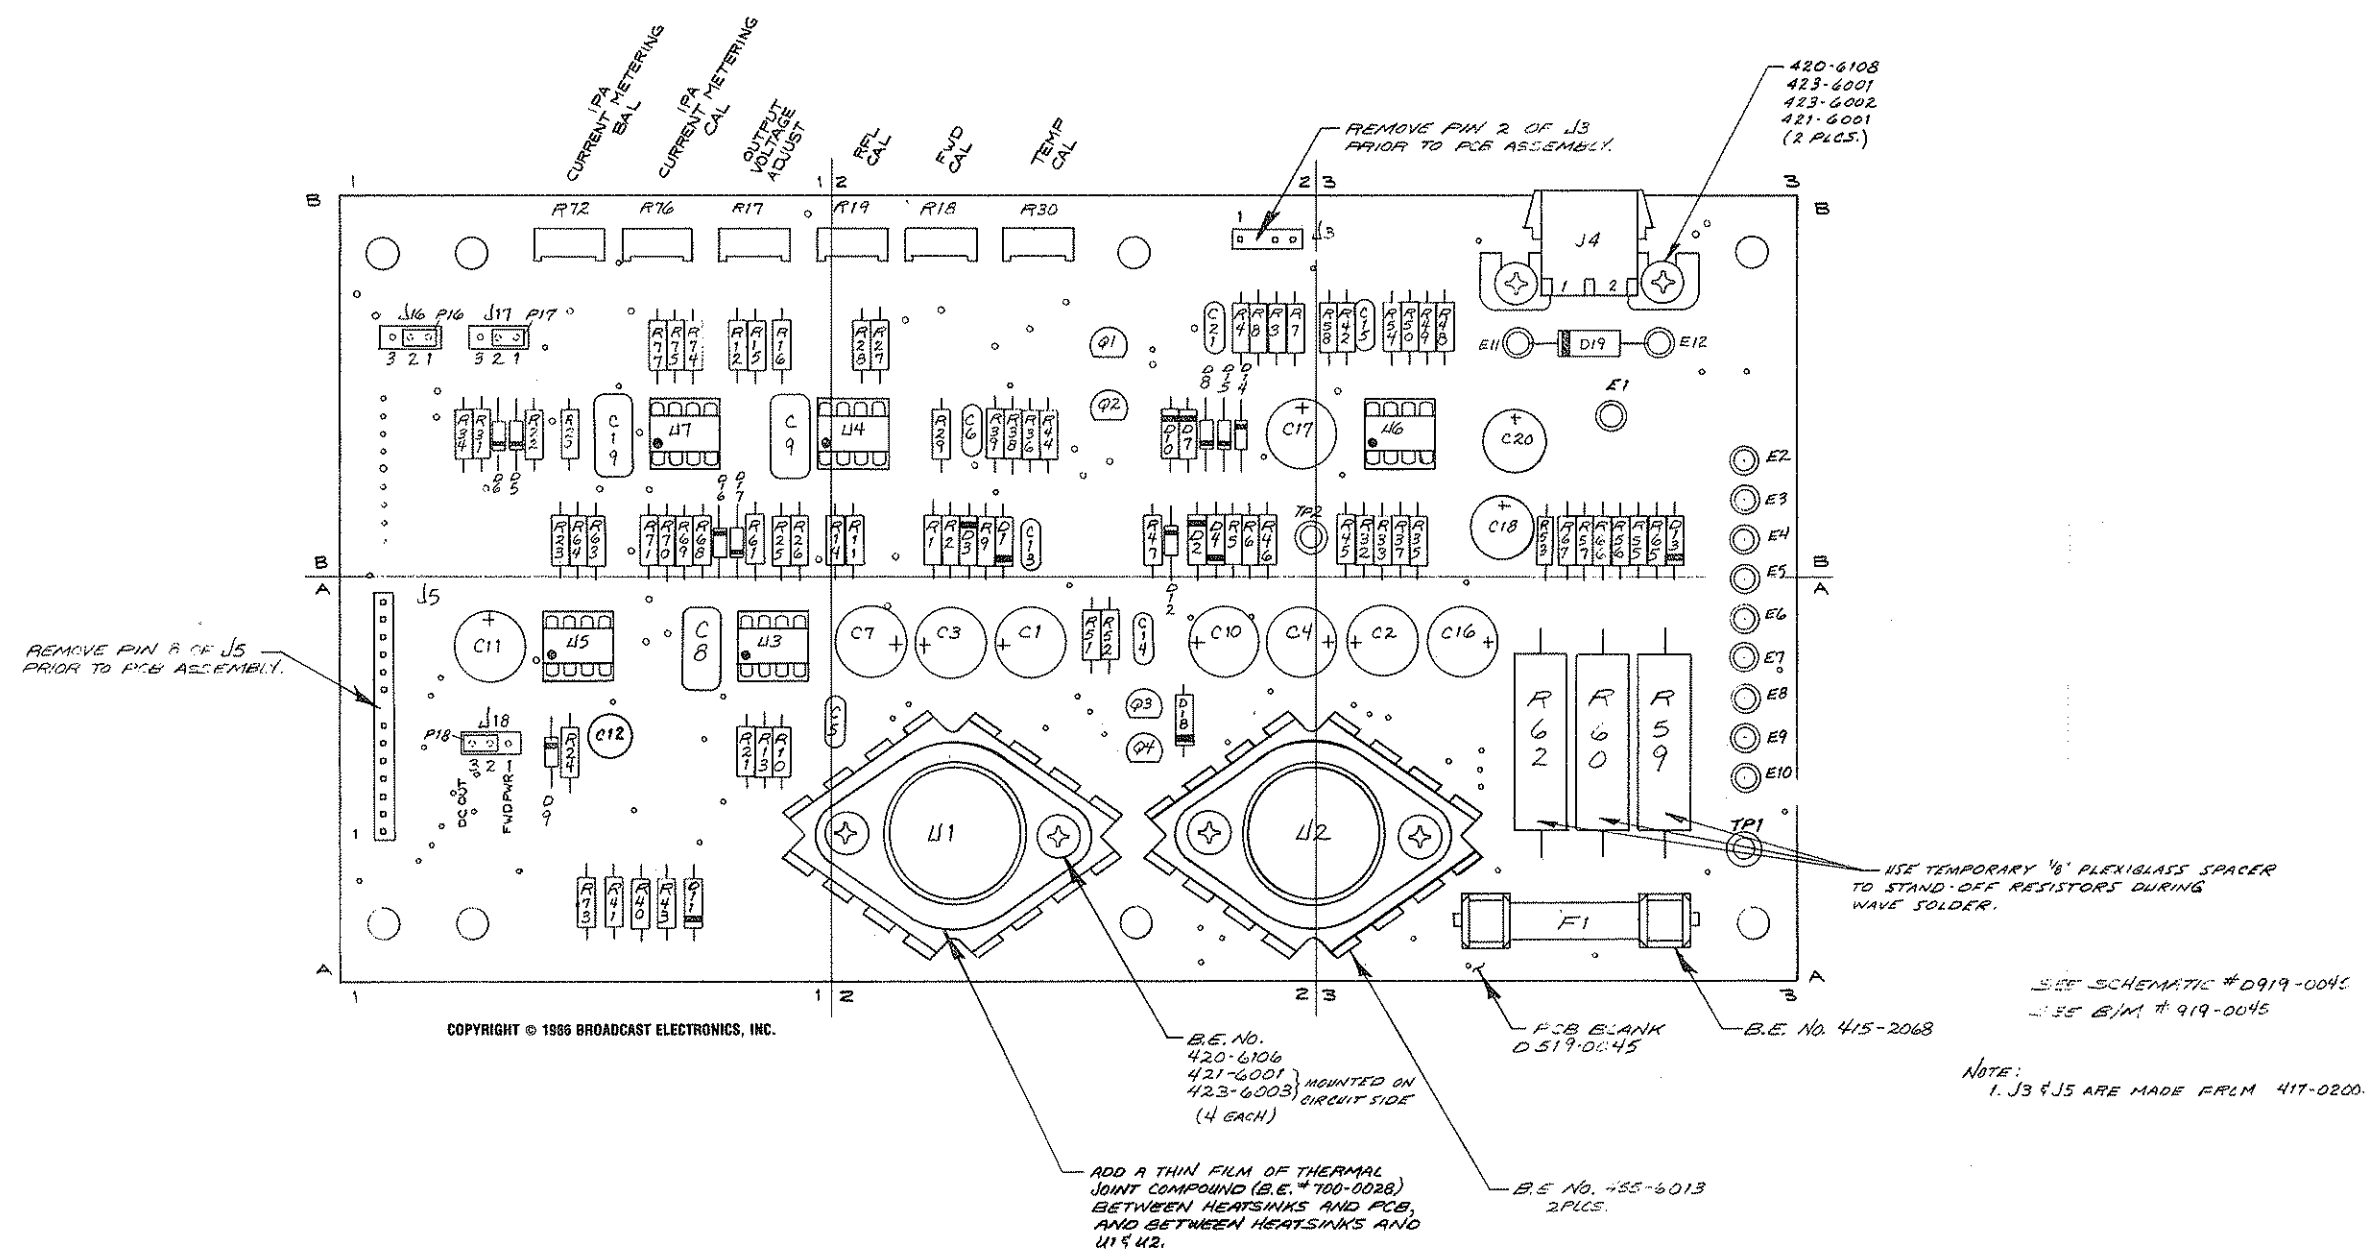

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

B.E. NO. 420-6106
421-6001 } MOUNTED ON
423-6003 } CIRCUIT SIDE
(4 EACH)

ADD A THIN FILM OF THERMAL
JOINT COMPOUND (B.E. # 700-0028)
BETWEEN HEATSINKS AND PCB,
AND BETWEEN HEATSINKS AND
U1 & U2.

B.E. NO. 455-6013
2PLCS.

PCB BLANK
D519-0045

B.E. NO. 415-2068

420-6108
423-6001
423-6002
421-6001
(2 PLCS.)

SEE SCHEMATIC # D919-0045
SEE B/M # 919-0045

NOTE:
1. J3 & J5 ARE MADE FROM 417-0200.

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

| | | | | |
|---|---|--|--|--|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | TOLERANCE UNLESS OTHERWISE SPECIFIED DECIMAL ± PL-01 SPL-005 FRACTIONAL ± 1/64 ANGULAR ± 1° SHARP EDGES BEND RADIUS FILLET RADIUS | DRAWN BY: <i>DMF</i> CHECKED BY: <i>DMF</i> PROJECT ENGR: <i>DMF</i> APPROVED BY: <i>MH</i> | DATE: 3-7-83 DATE: 7/16/83 DATE: 5-13-83 | BROADCAST ELECTRONICS INC. TITLE: <i>PCB ASSEMBLY</i> IFA CONTROL REGULATOR PCB Dwg. No. 919-0045 SCALE: 2X SHEET 1 OF 1 |
| | MATERIAL | TREATMENT OR FINISH | | REV. F |
| | | | | |
| | | | | |

TABLE OF CONTENTS

| <u>PARAGRAPH</u> | | <u>PAGE NO.</u> |
|------------------|---|-----------------|
| SECTION I | AUTOMATIC POWER CONTROL THEORY OF OPERATION | |
| 1-1 | Introduction | 1-1 |
| 1-3 | Functional Description | 1-1 |
| 1-5 | General Description | 1-1 |
| 1-7 | Operation | 1-1 |
| 1-17 | Detailed Description | 1-5 |
| 1-19 | Power Supply | 1-5 |
| 1-28 | APC Logic Circuitry | 1-7 |
| 1-29 | Manual Operation | 1-7 |
| 1-37 | Automatic Operation | 1-11 |
| 1-74 | Preset Power | 1-17 |
| 1-77 | Emergency Operation | 1-18 |
| SECTION II | APC MAINTENANCE | |
| 2-1 | Introduction | 2-1 |
| 2-3 | Safety Considerations | 2-1 |
| 2-5 | Maintenance | 2-1 |
| 2-7 | Adjustments | 2-1 |
| 2-9 | FWD CAL (R42) | 2-2 |
| 2-19 | RFL CAL (R44) | 2-3 |
| 2-37 | PRESET CAL (R87) | 2-5 |
| 2-44 | Output Meter Calibrate (R17) | 2-6 |
| 2-57 | Troubleshooting | 2-8 |
| SECTION III | APC DRAWINGS | |
| 3-1 | Introduction | 3-1 |
| SECTION IV | APC REPLACEMENT PARTS | |
| 4-1 | Introduction | 4-1 |

LIST OF ILLUSTRATIONS

| <u>FIGURE NO.</u> | <u>DESCRIPTION</u> | <u>PAGE NO.</u> |
|-------------------|--------------------------|-----------------|
| 1-1 | APC Block Diagram | 1-3 |
| 1-2 | APC Power Supply | 1-6 |
| 1-3 | APC Simplified Schematic | 1-9 |

LIST OF TABLES

| <u>TABLE NO.</u> | <u>DESCRIPTION</u> | <u>PAGE NO.</u> |
|------------------|---|-----------------|
| 4-1 | AUTOMATIC POWER CONTROL UNIT PARTS LIST INDEX | 4-1 |

SECTION I
APC THEORY OF OPERATION

1-1. INTRODUCTION.

1-2. The following text provides theory of operation with supporting diagrams for the FM-5A transmitter automatic power control unit.

1-3. FUNCTIONAL DESCRIPTION.

1-4. Two levels of discussion are provided. A general discussion of the automatic power control unit operation at block diagram level is followed by a detailed discussion of circuit operation.

1-5. GENERAL DESCRIPTION.

1-6. The automatic power control unit (APC) measures several transmitter parameters and allows both manual and automatic control of RF power output. Additional features include switched operation at a power level which has been predetermined (preset power), automatic power reduction in event of an output VSWR (VSWR foldback), and automatic reduction of power to minimum at plate-off so that when power is re-applied, full RF output will not suddenly be established, but will slowly increase from minimum (soft start). The unit also contains a front-panel test receptacle for AM noise measurements.

1-7. OPERATION. Manual screen control can be selected by switching the APC off. In the manual mode, the RAISE and LOWER switch/indicators directly control the dc servo motor which varies the screen voltage supply. The RAISE and LOWER switch/indicators are illuminated by the actual motor drive signal (see Figure 1-1).

1-8. In the automatic mode, the RAISE and LOWER switch/indicators control a reference voltage stored as an eight-bit word in a digital memory. A nine-volt battery maintains this memory after a power failure so that restoration to operation will proceed automatically after power is reapplied. Battery power consumption of 0.8 microamperes results in a battery life of approximately two years (the shelf life of an alkaline battery).

1-9. The dc servo motor control circuit in the APC uses duty-cycle modulation to vary the motor speed. When large excursions of screen voltage are required, a faster speed is utilized. Small adjustments of screen voltage utilize a shorter pulse duty cycle and consequently slower motor speed. The illumination intensity and flashing rate of the front panel RAISE and LOWER switch/indicators show in which mode the servo system is operating. The combination of a two-speed loop and analog "deadbands" in the circuitry eliminates over-shoot and hunting of the servo loop.

1-10. Five circuit-board mounted LED indicators provide information concerning operation of the APC for maintenance personnel. Each indicator will illuminate to signify its respective function or parameter is active or out-of-tolerance.


1-11. The APC houses the circuitry which rectifies and calibrates the PA directional coupler forward and reflected power signals. These signals serve as APC control inputs and are applied to the OUTPUT POWER meter for measurement. These parameters, PA screen current, and IPA forward power allow automatic control of the PA screen voltage as part of a closed loop employing a dc servo-motor driven variable autotransformer. If excessive PA reflected power, excessive screen current, or low IPA power is measured, the "raise power" function will be inhibited to prevent an overload condition. The absence of plate voltage will inhibit the raise function and signal the circuit to adjust the screen voltage to minimum. Excessive transmitter RF output or a high PA reflection will first inhibit the raise function. If the condition exceeds built-in limits, the circuit will initiate a sequence which lowers power proportionately in response to the condition.

1-12. VSWR Foldback. In the automatic mode, PA power will be automatically reduced if PA reflected power becomes excessive enough to overload the transmitter. As the condition which caused the high VSWR returns to normal, RF power will be proportionally raised until full output is restored. A similar circuit for PA forward power will reduce power if the output is excessive. The balance of these two circuits stabilizes the transmitter output at a specific level.

1-13. Soft Start. In the automatic mode, a circuit monitors plate voltage and reduces the screen voltage to zero upon the absence of plate voltage. When the plate supply is energized, as during power-on, the circuit will gradually increase the screen voltage until the "stored" power level is achieved. This circuit prevents inadvertent cycling of the VSWR overload at turn-on if the load is not optimal, such as during an ice storm.

1-14. Preset Power. The preset power function provides a simple means to switch the transmitter output power to a predetermined level other than the rated output power. This feature can be conveniently activated with a generator for emergency operation at a lower power level.

1-15. Emergency Back-Up Operation. Emergency adjustment of the screen adjust motor is possible even with the APC main circuit board removed for maintenance. The jumper-plug arrangement and the emergency back-up raise/lower switch on the rear panel circuit board will allow application of a 25 volt potential obtained directly from the power transformer on the chassis for clockwise or counterclockwise rotation of the motor as desired.

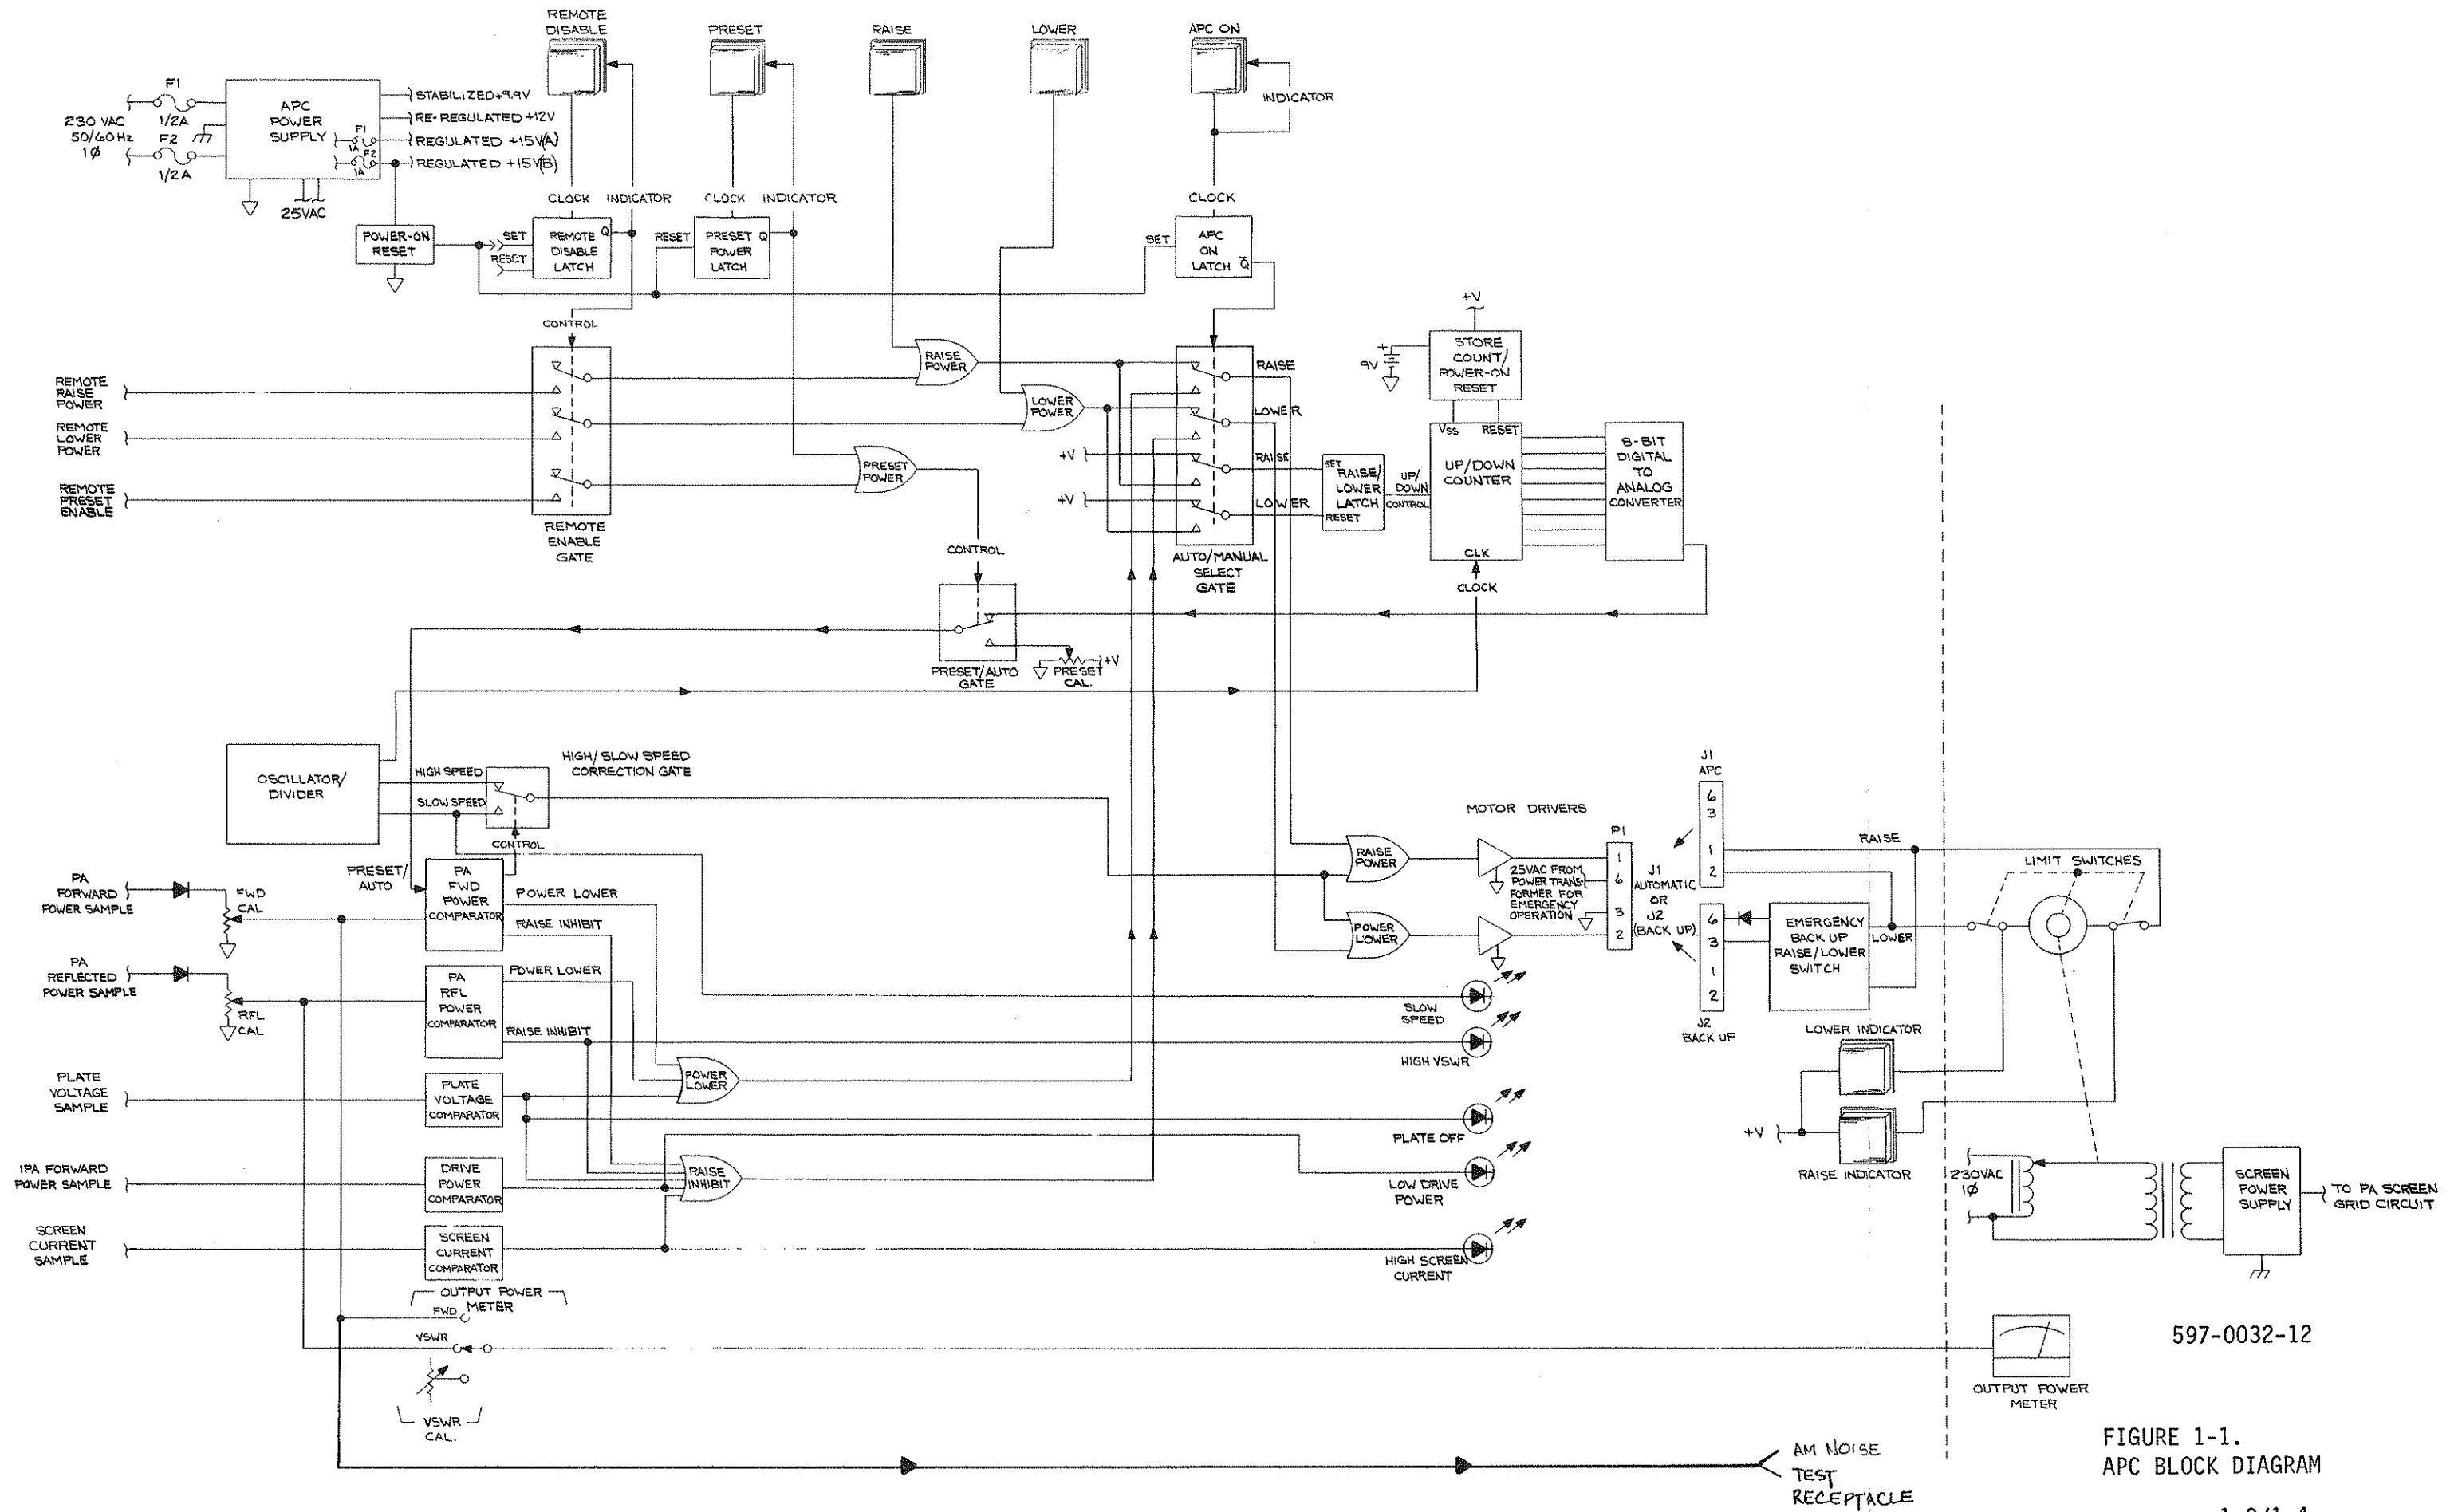

597-0032-12

FIGURE 1-1.
APC BLOCK DIAGRAM

1-16. Power Supply. The APC power supply consists of two +15 volt regulated sources, a +12 volt regulated source, and a +9.9 volt source established by a zener diode. Each +15 volt supply is fused with a one-ampere fuse. The entire supply is overload protected by two half-ampere fuses in the primary circuit. The transformer secondary of 25 Vac is half-wave rectified to provide a potential to operate the motor if the emergency back-up operation provision is used.

1-17. DETAILED DESCRIPTION.


1-18. The APC unit circuitry is implemented on three circuit boards with certain additional components (such as the power transformer) mounted to the chassis.

- A. The front panel circuit board contains the switch/indicators and some resistors which calibrate the OUTPUT POWER METER circuitry.
- B. The rear panel circuit board primarily contains interface circuitry. It 1) contains the forward and reflected power rectifier circuitry, 2) the PI section low-pass filters which provide RFI filtering for all ac, dc and control inputs, 3) the power supplies which operate the unit, and 4) the emergency bypass circuitry which allows manual screen voltage raise and lower control even with the main circuit board removed.
- C. The main circuit board contains all the circuitry required to implement the APC analog and digital control functions.

1-19. POWER SUPPLY. The APC power supply operates from an input of 230 volts ac at a maximum of 1/2 ampere (see Figure 1-2). AC power is input through RFI filter FL1 which provides 55 dB of attenuation to frequencies of 10 MHz and above. A conservatively rated power transformer allows operation from both 50 and 60 Hz. Fuses F1 and F2 provide overload protection for the primary circuit and metal-oxide varistor MOV1 provides suppression of transient voltage surges.

1-20. The secondary of transformer T1 is full-wave bridge rectified by diodes D6, D7, D8, and D9 into a +28 volt source and filtered by C34. This potential is regulated into four separate sources. The transformer plug (P1) may be moved to J2 to provide 25 Vac for emergency back-up screen voltage raise/lower switch operation.

1-21. Positive Fifteen Volt Source A. The input potential is regulated into a 15 volt supply by U1. Capacitor C35 prevents regulator oscillation and C46 improves the response of the regulator. The output voltage is established by the value of resistors R24 and R25. The output of this supply operates all APC logic.

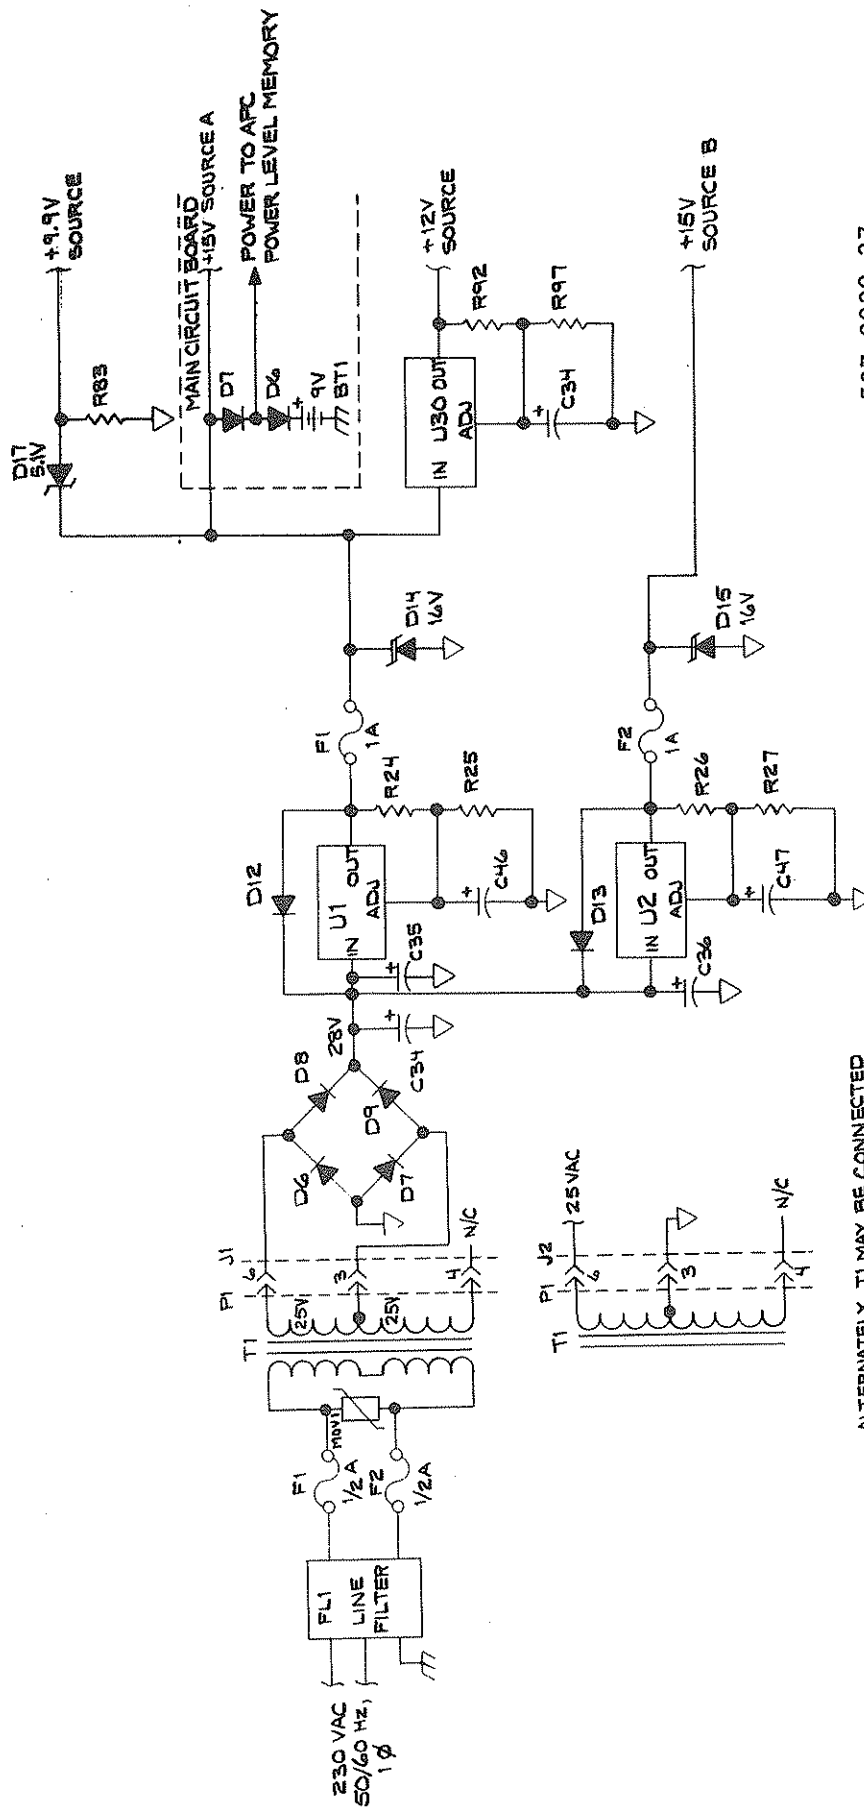

ALTERNATELY, T1 MAY BE CONNECTED TO J2 WHICH PROVIDES 25 VAC FOR EMERGENCY BACK-UP OPERATION.

597-0032-37
 COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

FIGURE 1-2. APC POWER SUPPLY

1-22. Integrated circuit U1 is a three-terminal adjustable positive regulator containing internal thermal overload protection and short-circuit current limiting features. Overload protection for U1 is provided by fuse F1. Diode D14 protects the regulator from a reverse polarity potential applied to the output and provides transient suppression for all voltages exceeding 16 volts. Diode D12 protects the regulator from possible damage resulting from an input short.

1-23. A second supply connected to the output of U1 consists of regulator U30 which re-regulates the input into a 12 volt source which is applied to the PRESET CAL control and the 8-bit digital-to-analog converter on the main circuit board.

1-24. A third supply connected to the output of U1 consists of zener diode D17 and resistor R83. These components establish a 9.9 volt source which is used as a reference for precision current sources for the close-tolerance comparators on the main circuit board.

1-25. In case of power failures, the supply to the APC power level memory circuit will be maintained by a battery. Diode D7 prevents battery discharge through the APC circuitry during periods of battery operation and diode D6 isolates the 9 volt battery from the 15 volt A supply. Battery drain is approximately 0.8 microamperes which allows approximately two years of use (depending on the battery type). The battery is not maintained on charge and must be replaced when discharged.

1-26. Positive Fifteen Volt Source B. The power supply input potential is regulated into a 15 volt supply by U2. Capacitor C46 prevents regulator oscillation and C47 improves the response of the regulator. The output voltage is established by the value of resistors R26 and R27. The output of this supply operates all APC indicators and provides power for the APC output stages.

1-27. Integrated circuit U2 is a three-terminal adjustable positive regulator containing internal thermal overload protection and short-circuit current limiting features. Overload protection for U2 is provided by fuse F2. Diode D15 protects the regulator from a reverse polarity potential applied to the output and provides transient suppression for all voltages exceeding 16 volts. Diode D13 protects the regulator from possible damage resulting from input shorts.

1-28. APC LOGIC CIRCUITRY.

1-29. MANUAL OPERATION. Manual operation refers to operation of the transmitter with the automatic power control circuitry switched off (APC ON switch/indicator not illuminated). In this mode, RF power output is not automatically controlled, but responds only to manual raise and lower commands (see Figure 1-3).

1-30. When the APC unit is switched off, the \bar{Q} output of U3A will go HIGH which selects the A inputs to the manual/automatic selector (U14). A HIGH through U7A and U9A will clear any preset power command. Fast speed correction is selected by a HIGH applied to analog switch U13B through U10A and U9C.

1-31. The local and remote raise power commands are applied to NOR gate U34C and the local and remote lower power commands are applied to NOR gate U34D. Each NOR gate will output the logical sum of its inputs. If the Q output of U3B is HIGH (remote disable), the remote inputs will be inhibited as one input of NOR gates U34A and U34B will be held HIGH.

1-32. The logic configuration used prevents simultaneous raise and lower commands. In event both commands are simultaneously initiated, U7B will give the lower power command priority over the raise power command by holding a HIGH on one input of NOR gate U7C.

1-33. The raise or lower power command will be routed through U14 which functions as if it were a four-pole double-throw relay. In this situation, the "A" inputs will be routed to the outputs as follows:

Z0 will output a LOW if power raise was selected.


Z1 will output a LOW if power lower was selected.

Z2 will output a HIGH to U10D to prevent the power reference counter from counting down.

Z3 will output a HIGH to U8B to prevent the power reference counter from counting up.

1-34. A 9.77 Hertz square-wave is applied as a clock to flip-flop U4B through analog switch U13B and is also applied as a set input to U4B. The resultant output forms the signal that actually drives the motor. This drive signal is gated by NAND gate U12B with inverted 9.77 Hertz square-wave from U12A. The resultant logical sum of the inputs to U12B is a rather short-duration pulse which is applied to the motor through U10B or U10C as a power raise or a power lower signal. This gating of the motor drive pulse through U4B, U12A and U12B forms a precise short-duration motor drive signal and minimizes motor coasting without the requirement for dynamic braking.

1-35. The power raise or power lower drive is then applied through an inverter to a Darlington output stage. When there is no command to raise or lower power, both outputs will be HIGH. When there is a command to raise or lower power, the one output will go LOW. Current through DS5 (the LOWER indicator) or DS4 (the RAISE indicator) will actually display the motor drive signal.

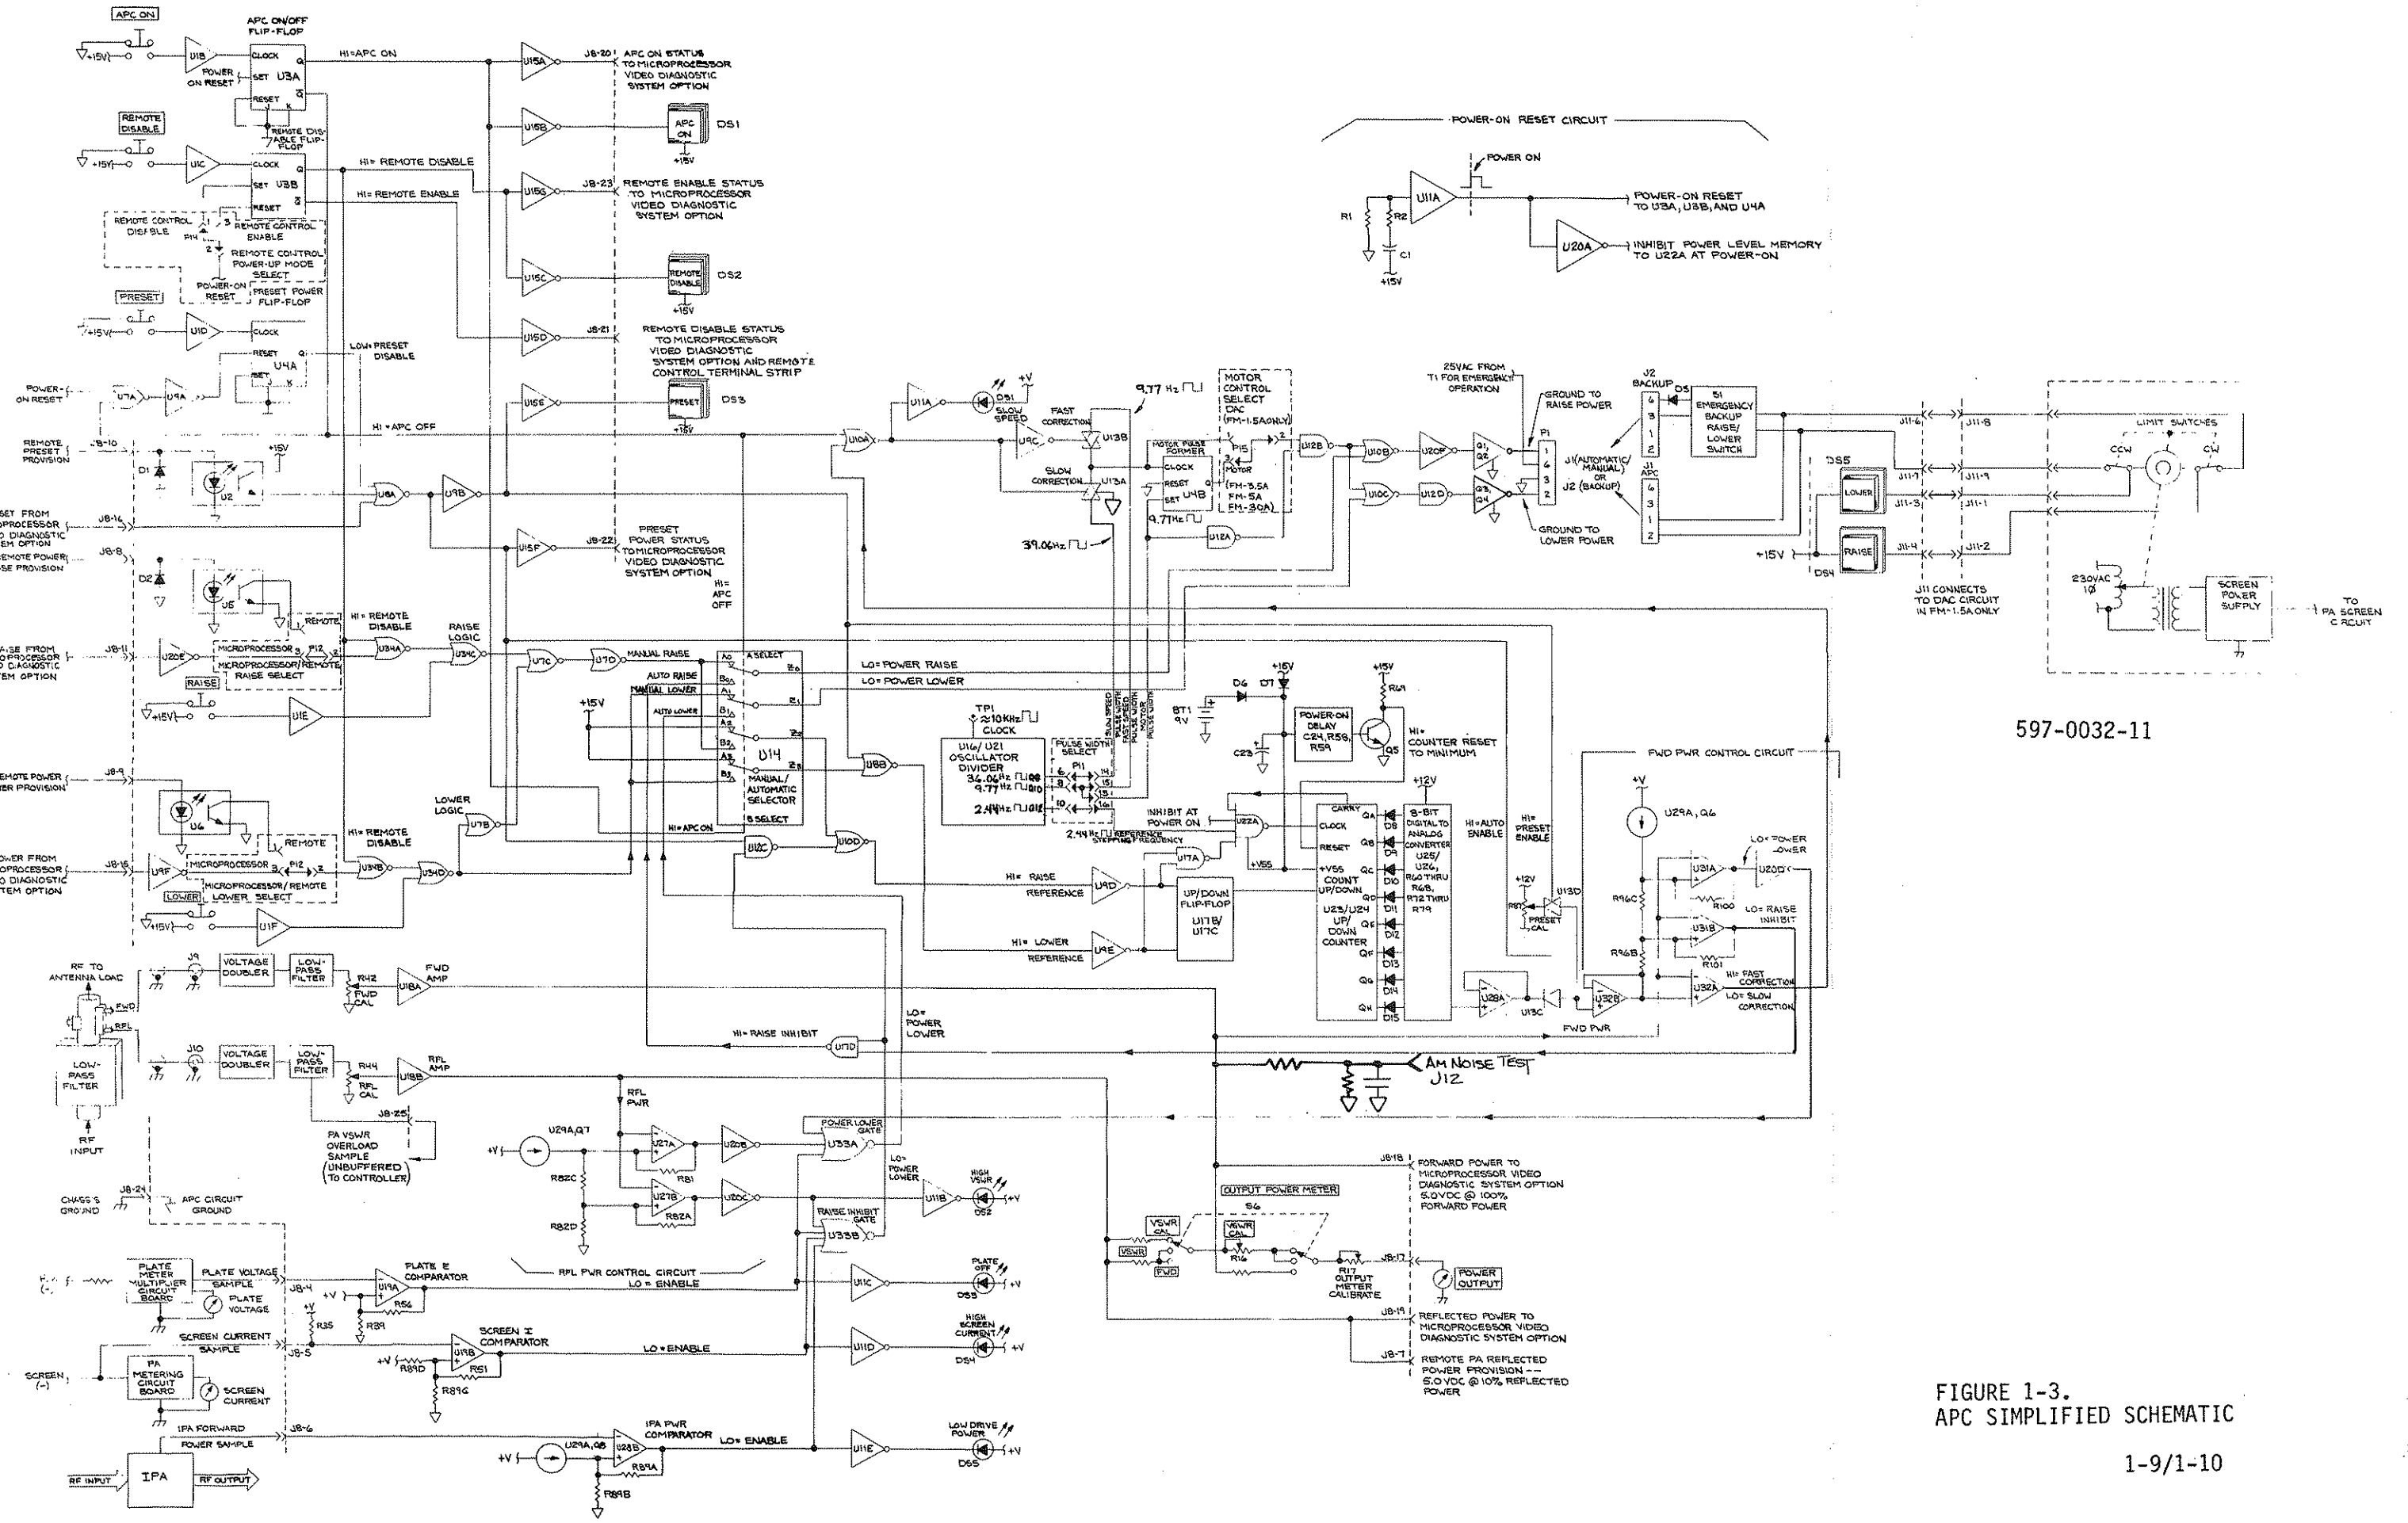

597-0032-11

FIGURE 1-3.
APC SIMPLIFIED SCHEMATIC

1-9/1-10

1-36. The primary of screen power transformer T2 is controlled by variable autotransformer T1 which is driven by dc gearmotor B4. As the motor is a series-wound dc type, the speed at which the motor turns may be controlled by the duty cycle of the applied drive signal. Limit switches S4 and S5 on the motor prevent possible damage to the autotransformer by disconnecting the drive signal at the end of travel for each direction.

1-37. AUTOMATIC OPERATION. When power is first applied to the APC, a high-going pulse will be generated by U11 which resets the command logic as follows. The duration of the pulse is determined by the value of C1, R1, and R2.

- A. The APC on flip-flop (U3A) will be set to Q = HIGH to signify that the APC is on.
- B. The remote disable flip-flop (U3B) will be set to the condition selected by the remote control power-up mode select jumper plug (P14). The following discussion will assume this jumper is set to disable remote control in which case Q = HIGH to signify remote control disable. The REMOTE DISABLE indicator will illuminate to signify that the remote control inputs are inhibited and additional outputs inform the optional microprocessor video display system of the remote control states, as well as a separate logic output on the remote control terminal block.
- C. The preset power flip-flop (U4A) will be set to Q = LOW via NOR gate U7A and inverter U9A. This action will clear any preset power command at power-on.
- D. Inverter U20A will hold a LOW on U22A to disable the power level memory inputs until power is fully energized.

1-38. The HIGH from U3A will inform the optional microprocessor video diagnostic system that the APC is enabled via U15A, illuminate the front-panel APC ON switch/indicator via U15B, and select the "B" inputs to the manual/automatic selector (U14).

1-39. The LOW from U4A will hold one input to NOR gate U8A LOW to disable the preset inputs. The HIGH from U8A will inform the optional microprocessor video diagnostic system that the preset power option is disabled via U15F, enable NOR gate U10D via U12C which allows raise memory reference, and enables the automatic level analog switch (U13C). The HIGH from U8A through inverter U9B will hold the front-panel PRESET switch/indicator off via U15E, disable the preset power analog switch (U13D), and enable NOR gate U8B which allows lower memory reference.

1-40. Normally, the power level memory battery (BT1) will always be installed and transistor Q5 will constantly be energized. When power is applied to the transmitter, current will be applied to the up/down counter (U23/U24). As the reset line to the up/down counter is normally held LOW by Q5, the count representative of the transmitter RF power output will be retained.

1-41. If, however, the power level memory battery is discharged, current will be applied to the up/down counter with Q5 off which resets the up/down counter to minimum count, representative of minimum transmitter RF power output. After a short delay determined by the value of C24, R58, and R59, Q5 will energize and the reset line will go LOW to terminate the reset.

1-42. During periods of battery operation, diode D7 prevents battery discharge through the power supply and diodes D8 through D15 prevent battery discharge through the digital to analog converter. The battery is not maintained on charge and is isolated from the power supply by diode D6. When the battery is discharged, it must be replaced with a new battery. The only circuitry backed-up by the battery is the up/down counter, composed of U22, U23 and U24.

1-43. Assuming that the up/down counter count has been retained, the up/down counter will begin to output eight-bit digital words as soon as the 2.44 Hertz clock is applied via U22A. The eight-bit digital output of the up/down counter is converted to a dc level by the digital-to-analog converter (U26/U26). This level is buffered by U28A and routed through analog switch U13C (which was selected when the APC ON switch was depressed) to voltage follower U32B.

1-44. If the count in the up/down counter was not preserved and was reset at power-on, the count must be manually re-established with the front-panel RAISE and LOWER switches.

1-45. The raise and lower command input circuit operates in a manner identical to that described by the manual operation discussion, however these inputs do not move the screen control motor directly as in manual operation, but change the count stored in the up/down counter (U23, U24) which establishes the RF output with a dc reference level.

1-46. The raise or lower power commands from the front-panel switches will be routed through U14 which functions as if it were a four-pole, double-throw relay. In this situation, the "B" inputs will be routed to the outputs as follows:

Z2 will output a LOW if power reference raise was manually selected.

Z3 will output a LOW if power reference lower was manually selected.

1-47. Any LOW from the Z2 output of U14 for power reference lower is applied through U10D to inverter U9D and bistable flip-flop U17B/U17C. The second input of U10D will inhibit power reference raise if preset power has been selected or an abnormal operating condition is signaled by U33B.

1-48. Any LOW from output Z3 of U14 for power reference raise is applied through U8B to inverter U9E and bistable flip-flop U17B/U17C. The second input to U8B will inhibit power reference lower if preset power has been selected.

1-49. When the output of inverter U9D or U9E goes LOW, the resultant output of flip-flop U17B/U17C will enable the up/down counter to count up or count down. A HIGH from the flip-flop will enable the counter to count up. A LOW from the flip-flop will enable the counter to count down. U22A will toggle the clock of the up/down counter (U23/U24) when either a lower or raise reference command is passed by U17A. The carry output of U24, the up/down counter, when LOW, stops the up/down counter from "rolling over" at maximum (1111 1111) or minimum (0000 0000) count.

1-50. PA Forward Power Control Circuit. Voltage follower U32B sinks current from constant current source U29A and Q6 to establish three precise voltages across the series string of resistors R96B and R96C. These voltages create dead-bands or windows which determine how the PA forward power control circuit will react when PA forward power increases beyond the level established by the input to U32B.

1-51. A sample of forward power from the PA forward meter amplifier (U18A) is applied to the inverting inputs of U31A, U31B, and U32A. If the PA forward power decreases to the extent that the level applied to the inverting input of U32A falls below the fixed reference on the non-inverting input of U32A, the output of voltage comparator U32A will change states and output a HIGH. This HIGH will force a LOW from U10A which is inverted by U9C to energize analog switch U13B for fast-speed correction. This allows fast correction when the forward power differs greatly from the fixed set-point.

1-52. The motor speed is determined by the duty cycle of the drive signal. In automatic operation, slow-speed and fast-speed correction is used. The lower frequency signal from U13B will drive the motor faster as the duty cycle of the drive signal is greater. The higher frequency signal from U13A will drive the motor slower as the duty cycle is less and the motor "on time" is less.

1-53. As PA forward power increases to the proper level (approximately 90% power), the level applied to the inverting input of U32A will rise above the fixed reference on the non-inverting input of U32A. The output of voltage comparator U32A will change states and output a LOW. This LOW will force a HIGH from U10A which energizes analog switch U13A for slow-speed correction. The HIGH from U10A will also illuminate the SLOW SPEED LED on the circuit board via U11A. U9C inverts this HIGH to deenergize analog switch U13B, the fast-speed gate.

1-54. If PA forward power then increases, the level on the inverting input of U31B will rise above the fixed reference on the non-inverting input of U31B. The output of voltage comparator U31B will change states and output a HIGH to U17D which inhibits further raise functions. This is the lower edge of the set-point "window" or deadband. It is usually 1% to 2% below the desired power setting.

1-55. If the PA power should continue to increase to the point which is 1% to 2% above the desired setting, the level on the inverting input of U31A will rise above the fixed level on the non-inverting input of U31A and U31A will output a HIGH. This HIGH is inverted by U20D and applied as a LOW to U33A which lowers power.

1-56. As the PA power is lowered to the normal level, the potential on the inverting inputs of U31A and U31B will fall. First, U31A will return to a LOW output which removes the power lower command from U33A. The power will remain at this point within the set-point deadband. If the power should drop further, then U31B will return to a HIGH output which will output the raise command from U17D. The circuit will now function normally to control power, maintaining operation within the deadband.

1-57. The raise or lower power command will be routed through U14 which functions as if it were a four-pole, double-throw relay. In this situation, the "B" inputs will be routed to the outputs as follows:

Z0 will output a LOW via NAND gate U17D if automatic power raise is required. A LOW input to U17D from U33B will inhibit the raise function.

Z1 will output a LOW via NOR gate U33A if automatic power lower is required.

1-58. The remainder of the control circuitry functions in a manner identical to that described by the manual operation discussion.

1-59. PA Reflected Power Control Circuit. A sample of reflected power from the PA reflected meter amplifier (U18B) is applied to the inverting inputs of U27A and U27B.

1-60. Constant current source U29A/Q7 establishes two precise voltages across the series string of resistors R82C and R82B. The voltage across R82C creates a dead-band or "window", which determines how the PA reflected power control circuit will react when PA reflected power increases beyond the level established by the reference on the non-inverting inputs of voltage comparators U27A and U27B.

1-61. The circuit will remain idle when the PA reflected power is below acceptable limits. If the PA reflected power increases and the level applied to the inverting input of U27B rises above the fixed reference on the non-inverting input of U27B (determined by the voltage across R82B), the output of voltage comparator U27B will change states and output a LOW. This LOW is applied as a HIGH to the raise inhibit gate (U33B) through inverter U20C to prevent PA power from increasing and illuminates the HIGH VSWR LED on the circuit board via inverter U11B. This prevents the forward power control circuit from raising power if a high VSWR exists, preventing transmitter overload.

1-62. If the PA reflected power continues to rise, the level on the inverting input of U27A will rise above the fixed reference on the non-inverting input and U27A will change states to output a LOW. This LOW is applied as a HIGH to the power lower gate (U33A) through inverter U20B to lower power. Thus, R82C establishes a "deadband", within which no raising or lowering power will occur.

1-63. When PA reflected power falls to a safe level and the level on the inverting input of U27A falls below the fixed reference on the non-inverting input, U27A will output a HIGH. This HIGH is applied as a LOW to U33A via U20B to halt the power reduction. However the raise command will still be inhibited by U27B at the lower edge of the dead-band.

1-64. If the PA reflected power continues to fall, the level on the inverting input of U27B will fall below the fixed reference on the non-inverting input and U27B will change states to output a HIGH. The resultant LOW from inverter U20C will enable U33B and allow power raise functions as required by the forward power control circuit. The automatic power control unit will then function normally again with full raise/lower control of the screen voltage.

1-65. Forward and Reflected Power Circuits. The directional coupler located at the output end of the low-pass filter provides RF voltages proportional to the PA forward and reflected power. The reflected power sample is rectified by a voltage doubler (D2 and D4 on the rear panel circuit board), calibrated by R44, and amplified by U18B. The forward power sample is rectified by a voltage doubler (D1 and D3), calibrated by R42, and amplified by U18B. A low-pass filter after the rectifiers attenuates carrier envelope modulation caused by power supply ripple and synchronous audio rate amplitude modulation.

1-66. The reflected power signal is applied to the PA reflected power control circuit and the metering circuit. The forward power signal is applied to the PA forward power control circuit and the metering circuit. The metering information is applied to the OUTPUT POWER METER switch and displayed by the OUTPUT POWER meter. R17 provides a means to calibrate the OUTPUT POWER meter without affecting the setup of the automatic system set by R42 and R44. This allows adjustment for routine calibration.

1-67. Plate Voltage Monitor Circuit. The soft start circuit monitors actual PA plate voltage. This circuit reduces the PA screen potential to minimum whenever plate voltage is off. Whenever the plate voltage is above the trip point, the circuit will gradually increase the PA screen voltage until the rated transmitter RF output is established unless limited by low IPA drive, excessive screen current, or a high VSWR condition, as gated by U33B.

1-68. A plate voltage sample derived from the plate meter multiplier circuit board is applied to the inverting input of voltage comparator U19A. When the plate voltage sample decreases below the fixed level (approximately 2.5 volts) on the non-inverting input of U19A established by R38 and R39 (such as when the high voltage power supply is off), U19A will output a HIGH. This HIGH will be applied to both the raise inhibit gate (U33B) and the lower power gate (U33A). U33B will inhibit the raise function and U33A will lower power to minimum. The HIGH from U19A will also illuminate the PLATE OFF LED on the circuit board via U11C. The power control element will stop lowering at minimum setting, but the lower command will remain present at the output of U33A through U12D.

1-69. When the HIGH VOLTAGE ON switch/indicator is depressed, the plate voltage sample from the plate meter multiplier circuit board will rise above the fixed reference on the non-inverting input and U19A will output a LOW. This LOW will remove the raise inhibit from U12C and U17D via U33B to raise power and will remove the power lower signal from U33A to allow the APC circuitry to re-establish transmitter RF power output as previously discussed.

1-70. Screen Current Monitor Circuit. A sample of PA screen current obtained from the negative side of the screen supply is applied to the inverting input of voltage comparator U19B. It is biased positive by voltage divider consisting of R35 on main circuit board and R4 on the rear panel circuit board. When the screen current increases, the voltage on the inverting input of U19B will fall below the fixed level on the non-inverting input and U19B will output a HIGH. This HIGH is applied to the raise inhibit gate (U33B) to prevent PA power from increasing and illuminates the HIGH SCREEN CURRENT LED on the circuit board via inverter U11D.

1-71. When the PA screen current returns to normal and the screen current sample falls below the fixed level on the non-inverting input, U19B will output a LOW. This LOW will remove the raise inhibit from U12C and U17D via U33B and allow PA power to increase.

1-72. IPA Forward Power Monitor Circuit. A dc voltage representative of the reflected power from the IPA directional coupler is applied to the inverting input of voltage comparator U28B. When the IPA power decreases below the fixed level on the non-inverting input established by current source Q8 and resistor R89B, U28B will output a HIGH. This HIGH is applied to the raise inhibit gate (U33B) to prevent PA power from increasing. The HIGH from U28B will also illuminate the LOW DRIVE POWER LED on the circuit board via inverter U11E.

1-73. When the IPA power returns to normal, the IPA forward power sample will rise above the fixed reference on the non-inverting input and U28B will output a LOW. This LOW will remove the raise inhibit from U12C and U17D via U33B and allow PA power to increase.

1-74. PRESET POWER. As an additional function, a preset power level may be selected by the front-panel PRESET switch/indicator or activated with a continuous positive voltage connection to one of the APC preset power inputs (the APC must be enabled). This feature is normally used to automatically switch the transmitter to a predetermined power output level such as half-power for periods of auxiliary generator operation. The APC functions as before, only the internal POWER reference is manually adjusted by potentiometer R87.

NOTE PRESET POWER IS ONLY USED FOR EMERGENCY OPERATION AT LESS THAN LICENSED POWER OPERATION.
NOTE NO PROVISION TO REMOTELY ADJUST POWER IS PROVIDED IN THIS MODE.

1-75. The local, remote, and microprocessor video display system generated preset power inputs are applied to NOR gate U8A which outputs the logical sum of its inputs. If preset power is selected by any source, the output of U8A will be a HIGH. This HIGH accomplishes the following:

- A. Deenergizes the automatic power control analog switch (U13C).
- B. Disables NOR gate U10C via U12C to inhibit raise memory. Thus no change in the original APC power setting can occur if the RAISE switch is inadvertently depressed.

- C. Informs the optional microprocessor video diagnostic system via U15F that the preset power function is energized.
- D. Disables NOR gate U8B via U9B to inhibit lower memory. No change in the original APC power setting can occur if the LOWER switch is inadvertently depressed.
- E. Energizes the preset analog switch (U13D).
- F. Illuminates the front-panel PRESET switch/indicator via U15E as a local indication that the preset power function is energized.

1-76. The transmitter power output will now be determined by the setting of the preset cal potentiometer (R87) on the main circuit board. If power is removed from the APC unit, even momentarily, the preset power command will be automatically reset. The preset power mode will remain energized, however, if the remote input is connected to a voltage source.

1-77. EMERGENCY OPERATION. During normal operation, P1 on the rear panel circuit board will be connected to J1. If the APC circuitry fails and the main circuit board must be removed for repairs, the transmitter RF output power may be manually controlled by disconnecting P1 from J1 and connecting P1 to J2. The transmitter RF output power may now be controlled with the emergency backup raise/lower switch (S1) on the rear panel circuit board. The potential required for screen control motor operation is obtained from half of the APC power transformer secondary. Half-wave rectification for the dc motor is provided by D5. This mode bypasses all electronics except the fuses, transformer, and auxiliary diodes for a redundant control system.

SECTION II
APC MAINTENANCE

2-1. INTRODUCTION.

2-2. This section provides maintenance information for the FM-5A FM Transmitter Automatic Power Control Unit (APC).

2-3. SAFETY CONSIDERATIONS.

2-4. The FM-5A transmitter contains high voltages and currents which, if regarded carelessly, could be fatal. The transmitter has many built-in safety features, however good judgement, care, and common sense are the best accident preventives. The maintenance information contained in this section should be performed only by trained and experienced maintenance personnel.

2-5. MAINTENANCE

WARNING NEVER OPEN THE EQUIPMENT UNLESS ALL TRANSMITTER PRIMARY POWER IS DISCONNECTED.

WARNING BEFORE ATTEMPTING TRANSMITTER MAINTENANCE, ASSURE THE REMOTE DISABLE SWITCH/INDICATOR IS ILLUMINATED, THEN DISCONNECT POWER FROM THE TRANSMITTER.

WARNING IF A FAULT WILL NOT ALLOW THE REMOTE DISABLE SWITCH/INDICATOR TO ILLUMINATE, DISCONNECT POWER FROM THE TRANSMITTER, THEN UNPLUG P1 FROM J1 ON THE REAR OF THE TRANSMITTER CONTROLLER.

2-6. The FM-5A maintenance philosophy consists of preventative maintenance such as cleaning applied to the equipment to forestall future failures and second level maintenance consisting of procedures required to restore the equipment to operation after a fault.

2-7. ADJUSTMENTS.

WARNING

NEVER OPEN THE EQUIPMENT UNLESS ALL TRANSMITTER PRIMARY POWER IS DISCONNECTED.

2-8. The following procedures present information required to adjust all controls in the APC. These adjustments are factory preset and therefore will require readjustment only if components in the specific circuit has been replaced. Adjustments for the main circuit board (R42, R44, and R87) are presented first, followed by an adjustment procedure for R17 on the front-panel circuit board. The adjustments may be accessed by extending the APC chassis forward on its slide rails out of the rack and removing the top cover.

2-9. FWD CAL (R42). To adjust the FWD CAL control (R42) on the main circuit board, proceed as follows. This adjustment will be required only if repairs have been made to the directional coupler forward port, the low-pass filter has been replaced, or if potentiometer R42 has been replaced. If the transmitter OUTPUT POWER meter forward power display only requires calibration, refer to paragraph 2-44.

2-10. Required Equipment. The following equipment is required to adjust the FWD CAL control (R42).

- A. Flat-blade screwdriver, 1/4 inch tip.
- B. Insulated adjustment tool, flat-tip (BE P/N 710-0001).
- C. Digital voltmeter, Fluke 8020 or equivalent 3 1/2 digit model.
- D. Test load and connecting line (50 Ohm non-inductive, 1 5/8 inch line input, 5000 Watt minimum).
- E. Calibrated in-line wattmeter with 1 5/8 inch sampling section and cables (Bird 4712 ThruLine with 5kW element or equivalent).

2-11. Procedure. To adjust the control, proceed as follows:

WARNING

ASSURE ALL PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

2-12. Disconnect primary power.

2-13. Connect the voltmeter between U18A, pin 1 and chassis ground.

2-14. Connect the test load and wattmeter to the transmitter output.

WARNING MAINTENANCE WITH POWER ENERGIZED IS ALWAYS CONSIDERED HAZARDOUS AND THEREFORE CAUTION SHOULD BE OBSERVED. DO NOT TOUCH ANY COMPONENTS WITHIN THE APC WHEN POWER IS ENERGIZED.

WARNING USE AN INSULATED TOOL FOR ADJUSTMENT.

2-15. Apply power and operate the transmitter in the local manual mode (REMOTE DISABLE illuminated, APC ON out) at the licensed RF power output as indicated by the in-line wattmeter.

2-16. Using the insulated adjustment tool, adjust R42 on the main circuit board for a voltmeter indication of +5.00V dc.

NOTE THE TRANSMITTER OUTPUT POWER METER SHOULD INDICATE 100%. IF NOT, ADJUST R17 PER PARAGRAPH 2-44 BEFORE PROCEEDING.

WARNING ASSURE ALL PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

2-17. Disconnect primary power.

2-18. Remove the test equipment and reconnect the transmitter output to the antenna load.

2-19. RFL CAL (R44). To adjust the RFL CAL control (R44) on the main circuit board, proceed as follows. This adjustment will be required only if repairs have been made to the directional coupler reflected port, the low-pass filter has been replaced, or potentiometer R44 has been replaced.

2-20. Required Equipment. The following equipment is required to adjust the RFL CAL control (R44).

- A. Flat-blade screwdriver, 1/4 inch tip.
- B. Insulated adjustment tool, flat-tip (BE P/N 710-0001).
- C. RF millivoltmeter, 50 Ohm input (Boonton Model 92B with Model 91-12F RF probe and Model 91-8B 50 Ohm adapter or Fluke Model 85 RF probe or equivalent).
- D. BNC plug-to-plug adapter, UG-491B/U (BE P/N 417-0116).
- E. Digital voltmeter, Fluke 8020 or equivalent 3 1/2 digit model.

2-21. Procedure. To adjust the control, proceed as follows:

NOTE CORRECT ADJUSTMENT OF R44 REQUIRES THAT THE OUTPUT OF U18B BE ADJUSTED TO +5.00V DC WITH A 10% TRANSMITTER RF OUTPUT REFLECTION. IN THE FOL-
NOTE LOWING PROCEDURE, THE FORWARD PORT OF THE DIRE-
NOTE CTIONAL COUPLER IS CLOSELY CALIBRATED AND USED AS A SIGNAL SOURCE TO CALIBRATE R44.

2-22. Operate the transmitter at 100% power output and verify the VSWR CAL control is set at 100%.

2-23. Determine the RMS voltage (E) required to calibrate R44 as follows:

Transmitter 100% RF output power=_____Watts.
10% of transmitter rated RF output power=_____Watts =P.

FORMULA
$$E = \frac{\sqrt{P \times 50 \text{ Ohms}}}{100}$$

EXAMPLE Transmitter rated RF output power = 4200 Watts.
10% of transmitter RF output power = 420 Watts (P).

$$E = \frac{\sqrt{420 \times 50}}{100} \qquad E = \frac{\sqrt{21000}}{100}$$
$$E = \frac{144.91}{100} \qquad E = 1.45 \text{ VRMS}$$

WARNING ASSURE ALL PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

2-24. Disconnect primary power.

2-25. Connect the voltmeter between U18B, pin 7 and chassis ground.

2-26. Disconnect cables 130 and 131 from the APC and route cable 130 out the top of the transmitter.

2-27. Assemble the RF millivoltmeter probe, 50 Ohm termination, and the BNC plug-to-plug adapter.

2-28. Connect the RF millivoltmeter to cable 130.

2-29. Apply power and operate the transmitter in the local manual mode (REMOTE DISABLE illuminated, APC ON out).

2-30. Manually adjust the transmitter RF output power to obtain a millivoltmeter indication of the voltage (E) calculated in paragraph 2-23.

WARNING ASSURE ALL PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

2-31. Disconnect primary power.

2-32. Disconnect the millivoltmeter from cable 130. Route the cable back inside the transmitter and connect cable 130 to the APC RFL PWR RF SAMPLE input (J10).

WARNING MAINTENANCE WITH POWER ENERGIZED IS ALWAYS CONSIDERED HAZARDOUS AND THEREFORE CAUTION SHOULD BE OBSERVED. DO NOT TOUCH ANY COMPONENTS WITHIN THE APC WHEN POWER IS ENERGIZED.

WARNING USE AN INSULATED TOOL FOR ADJUSTMENT.

2-33. Apply power and operate the transmitter in the local manual mode (REMOTE DISABLE illuminated, APC ON out).

2-34. Using the insulated adjustment tool, adjust R44 on the main circuit board for a voltmeter indication of +5.00V dc.

WARNING ASSURE ALL PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

2-35. Disconnect primary power.

2-36. Remove the test equipment, reconnect cable 130 from the APC FWD PWR RF SAMPLE input (J9) to the FWD directional coupler port, and reconnect cable 131 from the APC RFL PWR RF SAMPLE input (J10) to the RFL directional coupler port.

2-37. PRESET CAL (R87). To adjust the PRESET CAL control (R87) on the main circuit board, proceed as follows. This adjustment determines the power level which the transmitter will output when the preset power circuit is energized. The RAISE or LOWER controls have no effect on this adjustment.

2-38. Required Equipment. The following equipment is required to adjust the PRESET CAL control (R87).

- A. Flat-blade screwdriver, 1/4 inch tip.
- B. Insulated adjustment tool, flat-tip (BE P/N 710-0001).

2-39. Procedure. To adjust the control, proceed as follows:

WARNING

MAINTENANCE WITH POWER ENERGIZED IS ALWAYS CONSIDERED HAZARDOUS AND THEREFORE CAUTION SHOULD BE OBSERVED. DO NOT TOUCH ANY COMPONENTS WITHIN THE APC WHEN POWER IS ENERGIZED.

WARNING

WARNING

USE AN INSULATED TOOL FOR ADJUSTMENT.

2-40. Apply power and operate the transmitter in the local automatic mode (REMOTE DISABLE and APC ON illuminated).

2-41. Operate the OUTPUT POWER METER switch to FWD.

2-42. Depress the PRESET POWER switch/indicator.

2-43. Using the insulated adjustment tool, adjust R87 until the desired percentage of RF power output is indicated by the OUTPUT POWER meter.

2-44. OUTPUT METER CALIBRATE (R17). To adjust the output meter calibrate control (R17) on the front panel circuit board, proceed as follows. This adjustment will be required only if the OUTPUT POWER meter or potentiometer R17 is replaced.

2-45. The FWD CAL control (R42) must be checked and adjusted if required before R17 is adjusted (refer to paragraph 2-9).

2-46. Required Equipment. The following equipment is required to adjust the output meter calibrate control (R17).

- A. Flat-blade screwdriver, 1/4 inch tip.
- B. Insulated adjustment tool, flat-tip (BE P/N 710-0001).
- C. Digital voltmeter, Fluke 8020 or equivalent 3 1/2 digit model.
- D. Test load and connecting line (50 Ohm non-inductive, 1 5/8 inch line input, 5000 Watt minimum).
- E. Calibrated in-line wattmeter with 1 5/8 inch sampling section and cables (Bird 4712 ThruLine with 5kW element or equivalent).

2-47. Procedure. To adjust the control, proceed as follows:

WARNING ASSURE ALL PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

2-48. Disconnect primary power.

2-49. Connect the voltmeter between U18A, pin 1 and chassis ground.

2-50. Connect the test load and wattmeter to the transmitter output.

WARNING MAINTENANCE WITH POWER ENERGIZED IS ALWAYS CONSIDERED HAZARDOUS AND THEREFORE CAUTION SHOULD BE OBSERVED. DO NOT TOUCH ANY COMPONENTS WITHIN THE APC WHEN POWER IS ENERGIZED.

WARNING USE AN INSULATED TOOL FOR ADJUSTMENT.

2-51. Apply power and operate the transmitter in the local manual mode (REMOTE DISABLE illuminate, APC ON out) at the desired 100% RF power output as indicated by the in-line wattmeter.

2-52. Using the insulated adjustment tool, adjust the FWD CAL control (R42) on the main circuit board for a voltmeter indication of +5.00V dc.

2-53. Operate the OUTPUT POWER METER switch to FWD.

2-54. Using the insulated adjustment tool, adjust R17 to obtain a 100% OUTPUT POWER meter indication. The VSWR CAL control must also be adjusted to 100% at this time.

WARNING ASSURE ALL PRIMARY POWER IS DISCONNECTED BEFORE PROCEEDING.

2-55. Disconnect primary power.

2-56. Remove the test equipment and reconnect the transmitter output to the antenna load.

2-57. TROUBLESHOOTING.

WARNING

WARNING

WARNING

NEVER OPEN THE EQUIPMENT UNLESS ALL TRANSMITTER PRIMARY POWER IS DISCONNECTED. USE THE GROUNDING STICK PROVIDED TO ENSURE ALL COMPONENTS AND ALL SURROUNDING COMPONENTS ARE DISCHARGED BEFORE ATTEMPTING MAINTENANCE ON ANY AREA WITHIN THE TRANSMITTER.

2-58. Most troubleshooting consists of visual checks. Because of the voltages and high currents in the transmitter, it is considered hazardous to work with power energized. Therefore, the various transmitter indicators (meters, LEDs, fuses, and circuit breakers) should be used to isolate the malfunction to one specific area.

2-59. Once the trouble is isolated and power is totally deenergized, it is suggested that the exact problem be located with resistance checks using the schematic diagrams and theory of operation presented throughout the test.






2-60. If a circuit is diagnosed as faulty, the circuit fault may be isolated and repaired locally or the entire device may be returned to Broadcast Electronics, Inc. for exchange, alignment, or replacement.

SECTION III
APC DRAWINGS

3-1. INTRODUCTION.

3-2. This section provides assembly drawings and schematic diagrams, as listed below for the FM-5A Transmitter Automatic Power Control Unit.

| <u>FIGURE</u> | <u>TITLE</u> | <u>NUMBER</u> |
|---------------|---|---------------|
| 3-1 | SCHEMATIC, APC OVERALL | SD959-0243 |
| 3-2 | ASSEMBLY, APC OVERALL | 597-0032-23 |
| 3-3 | SCHEMATIC, MAIN CIRCUIT BOARD | SD919-0206 |
| 3-4 | ASSEMBLY, MAIN CIRCUIT BOARD | AD919-0206 |
| 3-5 | APC MAIN CIRCUIT BOARD COMPONENT LOCATOR | 597-0032-38 |
| 3-6 | SCHEMATIC, FRONT PANEL CIRCUIT BOARD | SC919-0028 |
| 3-7 | ASSEMBLY, FRONT PANEL CIRCUIT BOARD | AC919-0028 |
| 3-8 | SCHEMATIC, REAR PANEL CIRCUIT BOARD | SD919-0207 |
| 3-9 | ASSEMBLY, REAR PANEL CIRCUIT BOARD | AD919-0207 |
| 3-10 | APC PROGRAM NETWORKS NETWORKS | 597-0033-14 |

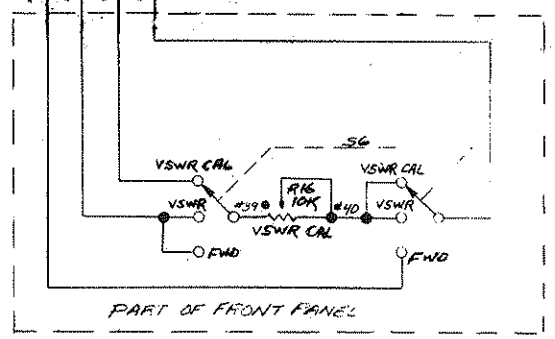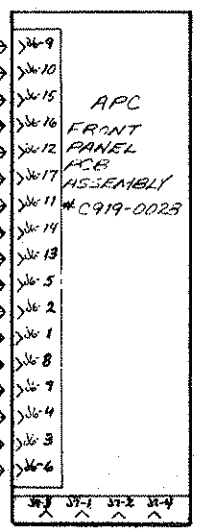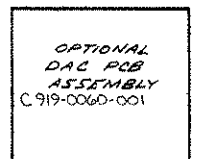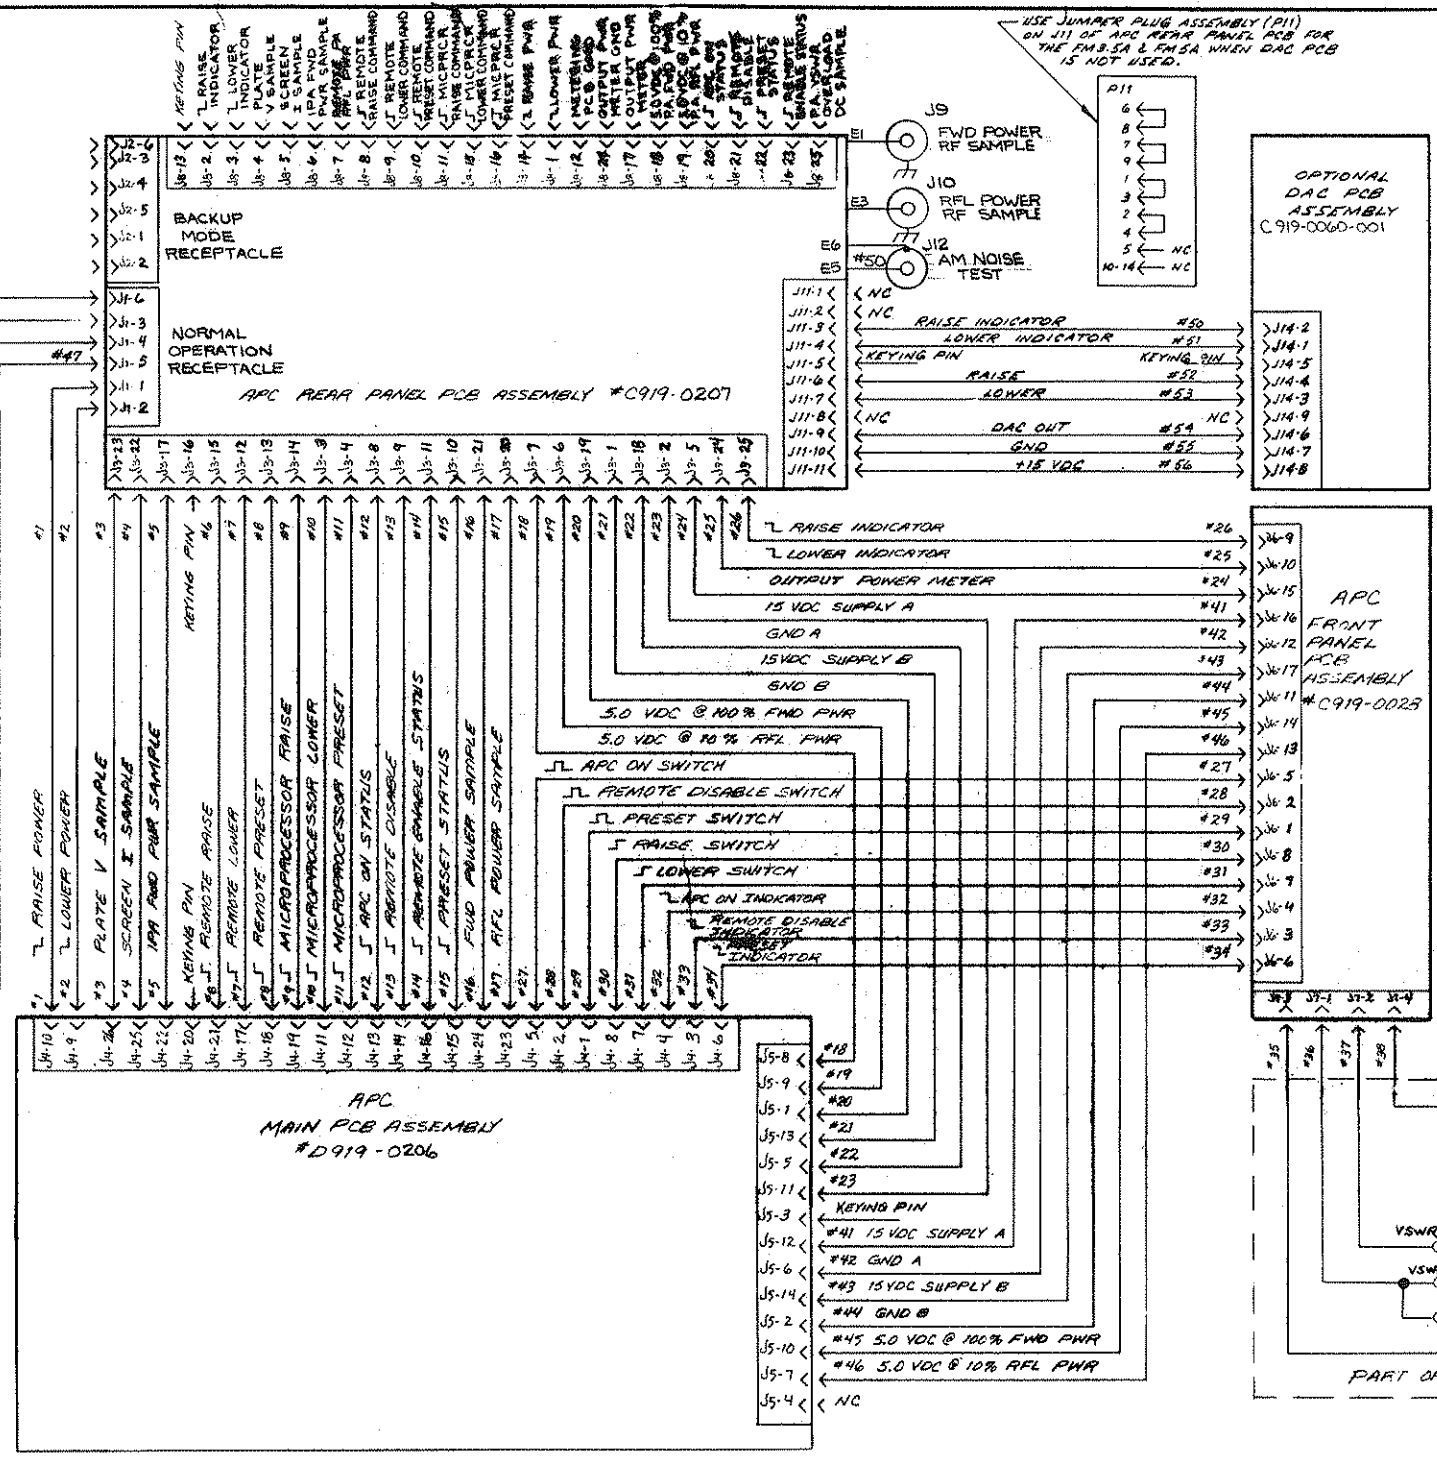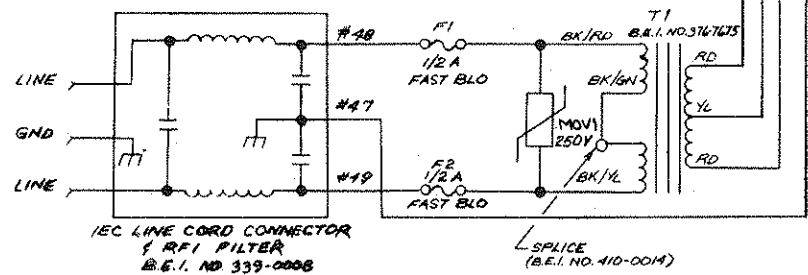

NOTE:
1. LAST WIRE NUMBER USED = #56

| | | | | | | | | | |
|---|--|---|--|--|--|---|--|---------------------------------|--|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | | TOLERANCE UNLESS OTHERWISE SPECIFIED DECIMAL 2 PL - .01 SPL - .005 FRACTIONAL 3/16" | | DRAWN BY JAH DATE 2-5-88 CHECKED BY DATE PROJECT ENGR. / JAH / DATE 2-5-88 APPROVED BY TO | | BROADCAST ELECTRONICS, INC. TITLE SCHEMATIC APC OVERALL DWG NO. 959-0243 TYPE S | | REV. B SCALE SHEET 1 OF 1 | |
|---|--|---|--|--|--|---|--|---------------------------------|--|


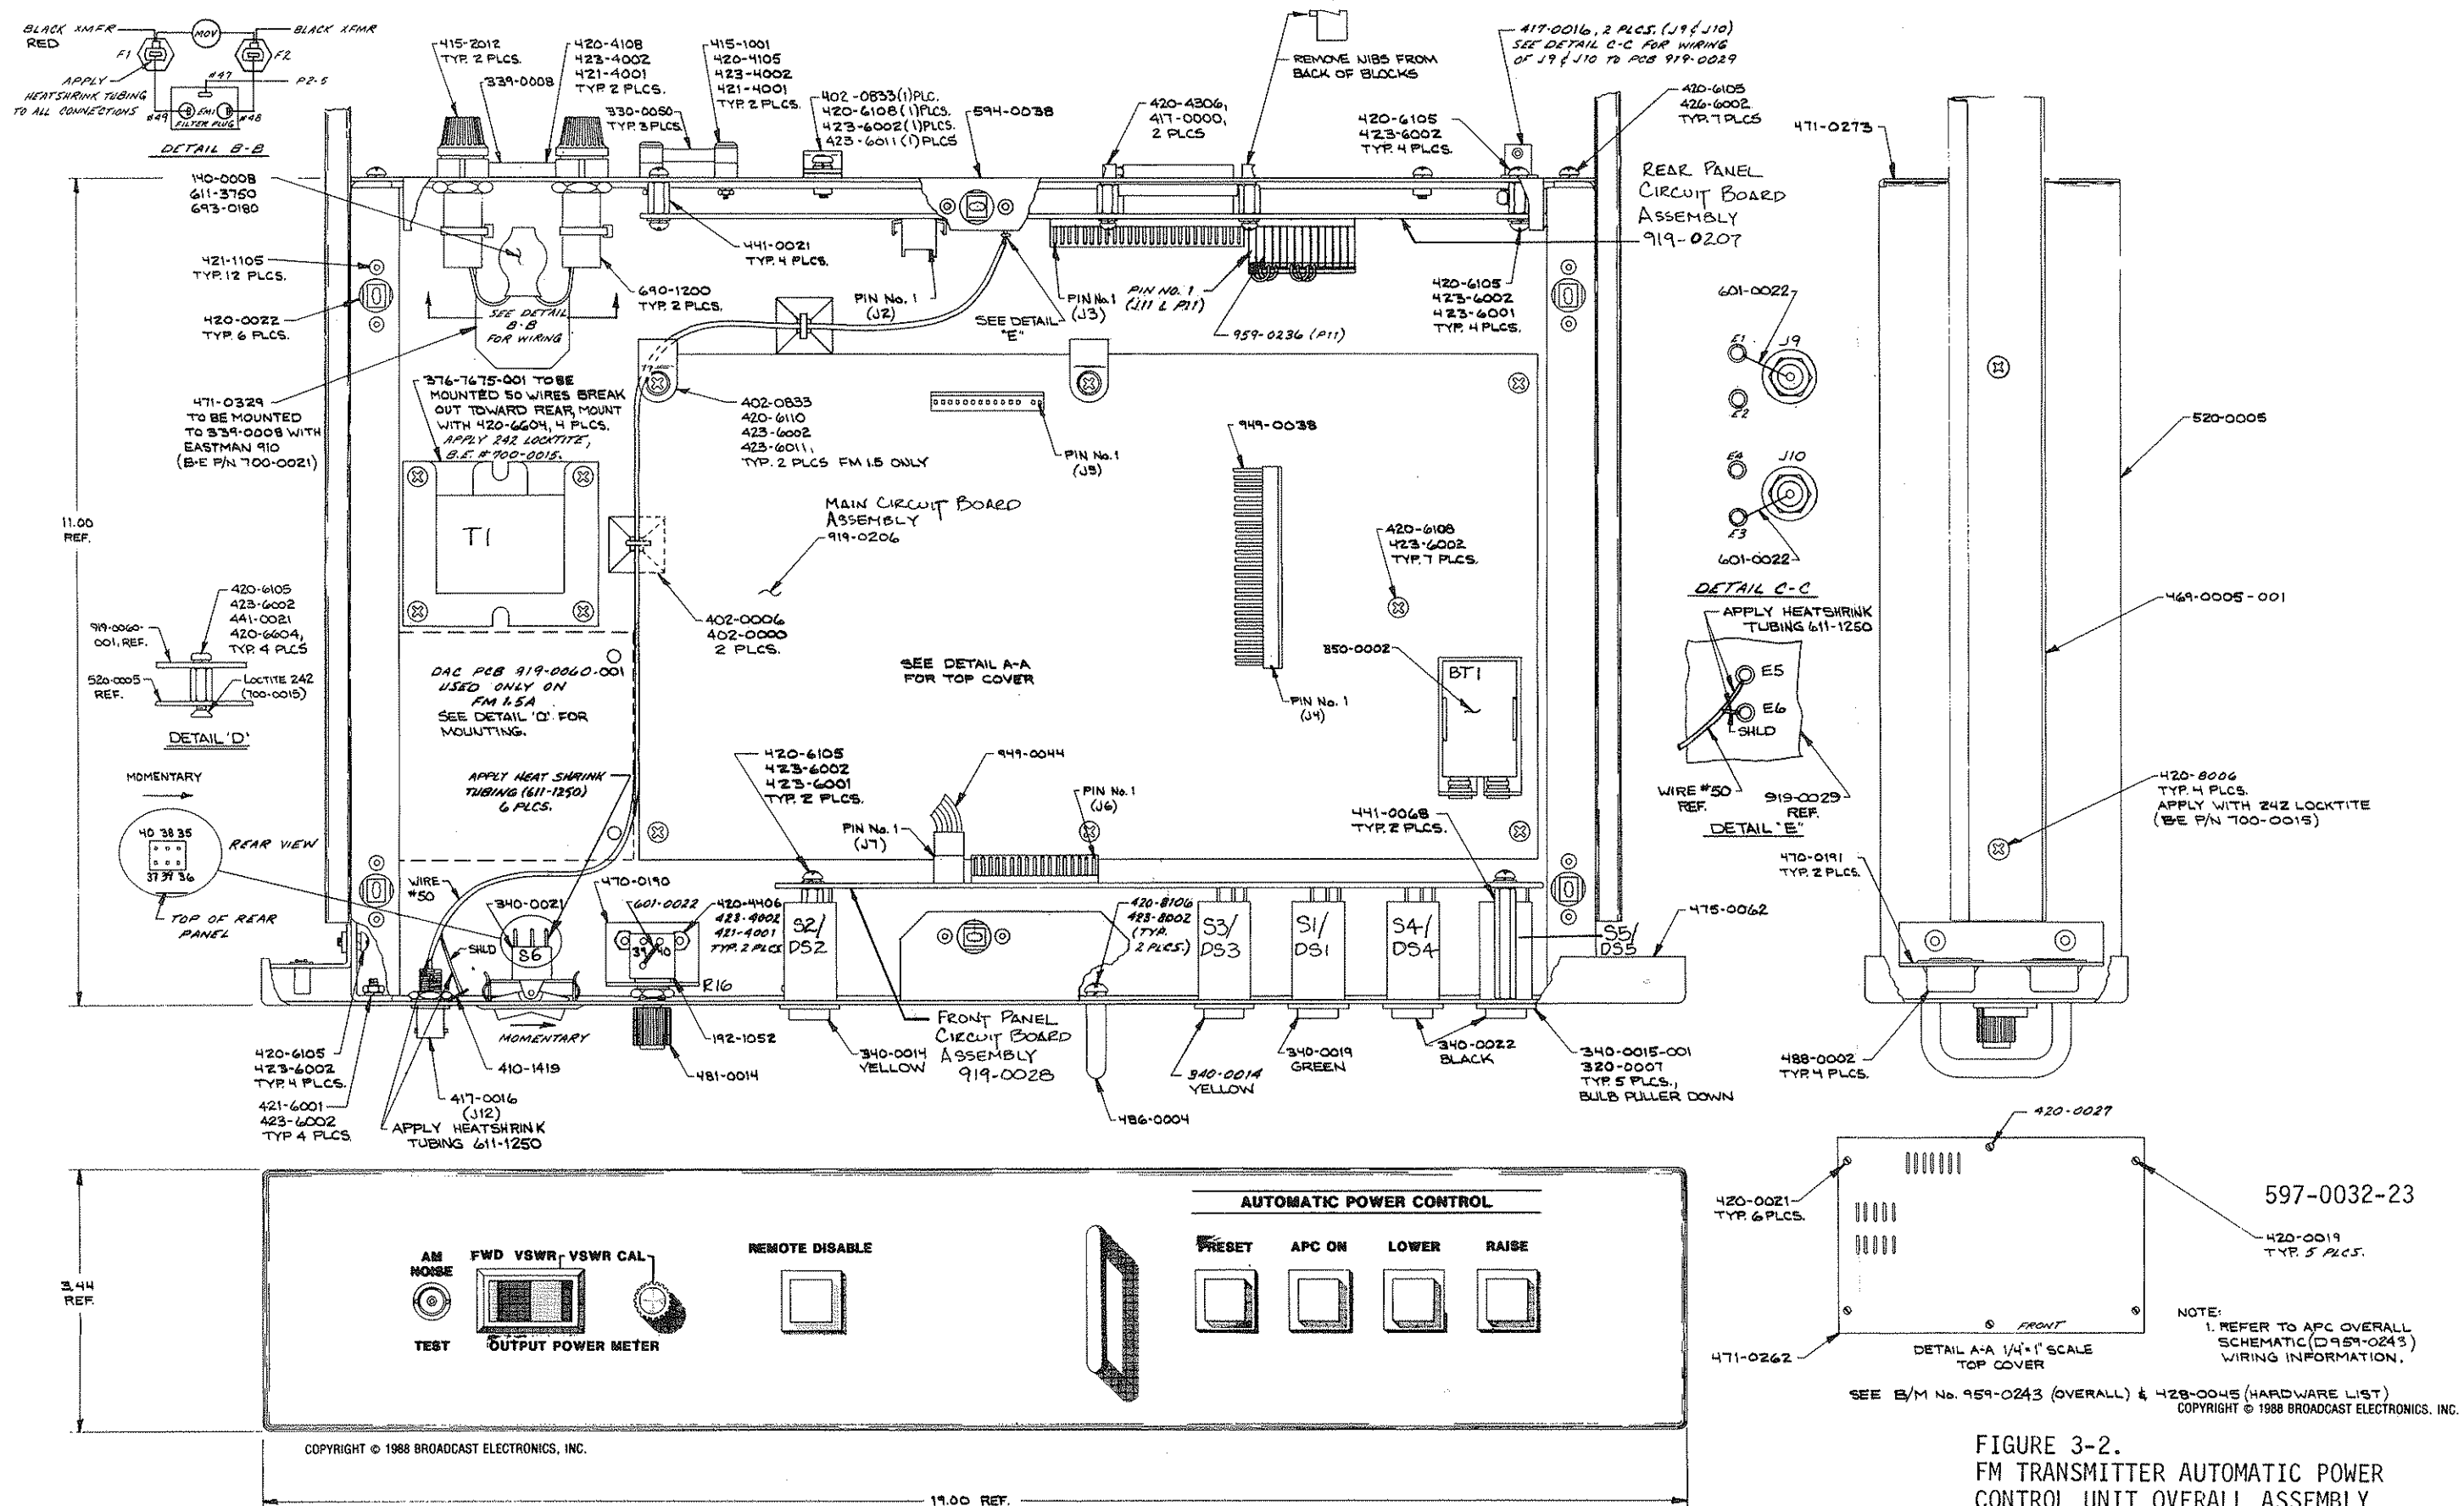


FIGURE 3-2.
FM TRANSMITTER AUTOMATIC POWER CONTROL UNIT OVERALL ASSEMBLY

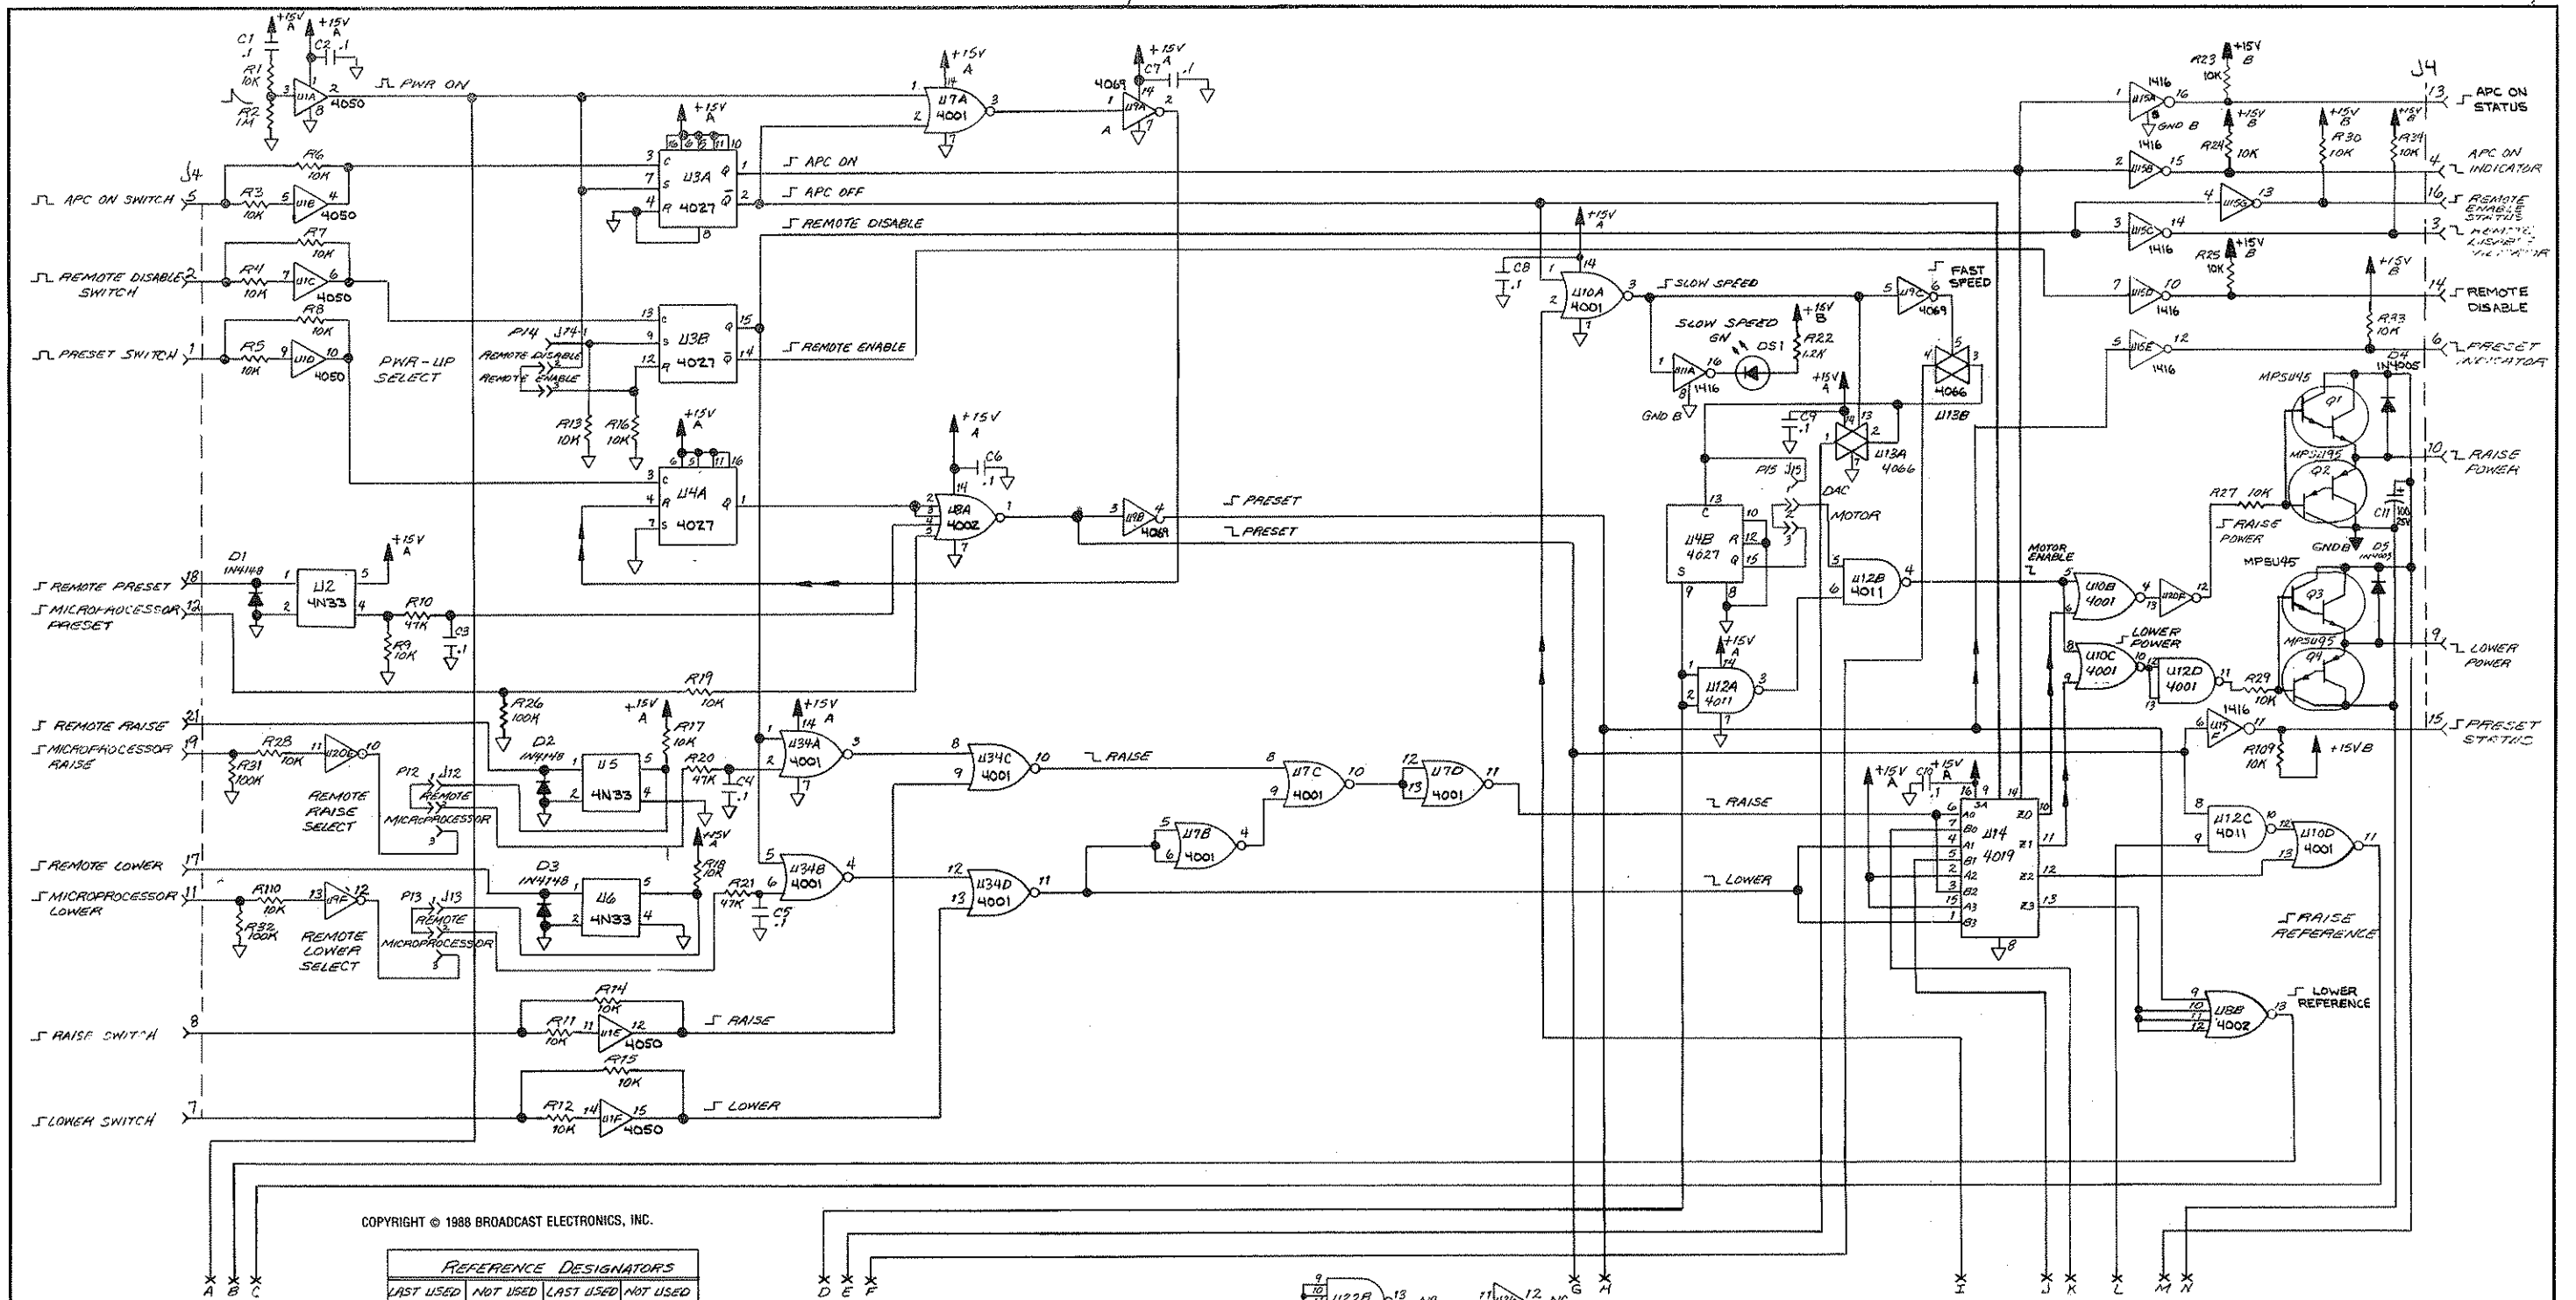

COPYRIGHT © 1988 BROADCAST ELECTRONICS, INC.

| REFERENCE DESIGNATORS | | | |
|-----------------------|----------|-----------|----------|
| LAST USED | NOT USED | LAST USED | NOT USED |
| C39 | U29-B | D55 | U26-E,F |
| D17 | U11-F,G | TP1 | R36,R37 |
| J15 | | BT1 | R48,R50 |
| Q8 | | | R70,R71 |
| R113 | U22-B | | R80,R88 |
| U34 | U25-E,F | | R95,R97 |
| | | | R98 |

NOTE:
 1. RESISTORS IN OHMS, 1/4W 5%; CAPACITORS IN MICROFARADS, U.O.S.
 2. SEE PCB ASSY #D919-0206 SEE B/M #919-0206

| REFERENCE DESIGNATORS | U1, U25, U26 | U2, U5, U6 | U3, U14 | U7, U10, U24 | U8, U33 | U9, U20 | U11, U15 | U12, U17 | U13 | U14 | U16 | U18, U19, U27-U29, U31, U32 | U21 | U22 | U25, U24 | U30 |
|-----------------------|--------------|------------|----------|--------------|----------|----------|----------|----------|----------|----------|----------|-----------------------------|----------|----------|----------|----------|
| B.E. PART NO. | 228-4050 | 229-0052 | 225-0003 | 228-4001 | 228-4002 | 228-4069 | 226-2004 | 228-4011 | 225-0004 | 228-4019 | 220-4047 | 221-0358 | 228-4020 | 228-4012 | 228-4516 | 227-0317 |
| VENDOR PART NO. | 4050 | 4N35 | 4027 | 4001 | 4002 | 4069 | MC1416 | 4011 | 4066 | 4019 | 4047 | LM358 | 4020 | 4012 | 4516 | LM317T |
| INSTALL PIN NO. | 1 | | 16 | 14 | 14 | 14 | | 14 | 14 | 16 | 14 | 8 | 16 | 14 | 16 | |
| GROUND PIN NO. | 8 | | 8 | 7 | 7 | 7 | | 8 | 7 | 7 | 7 | 4 | 8 | 7 | 8 | |

PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC.

TOLERANCE UNLESS OTHERWISE SPECIFIED
 DECIMAL ± PL-01 SPL-005
 FRACTIONAL ± 1/16
 ANGULAR ± 1°
 SHARP EDGES
 BEAD RADI
 FILLET RADI


DATE: 1-26-88
 PROJECT ENGR: JAR
 APPROVED BY: [Signature]

TITLE: SCHEMATIC APC MAIN PCB
 Dwg. No. 919-0206
 REV. C

MATERIAL: _____ TREATMENT OR FINISH: _____

SCALE: N.T. SHEET 1 OF 2


COPYRIGHT © 1988 BROADCAST ELECTRONICS, INC.

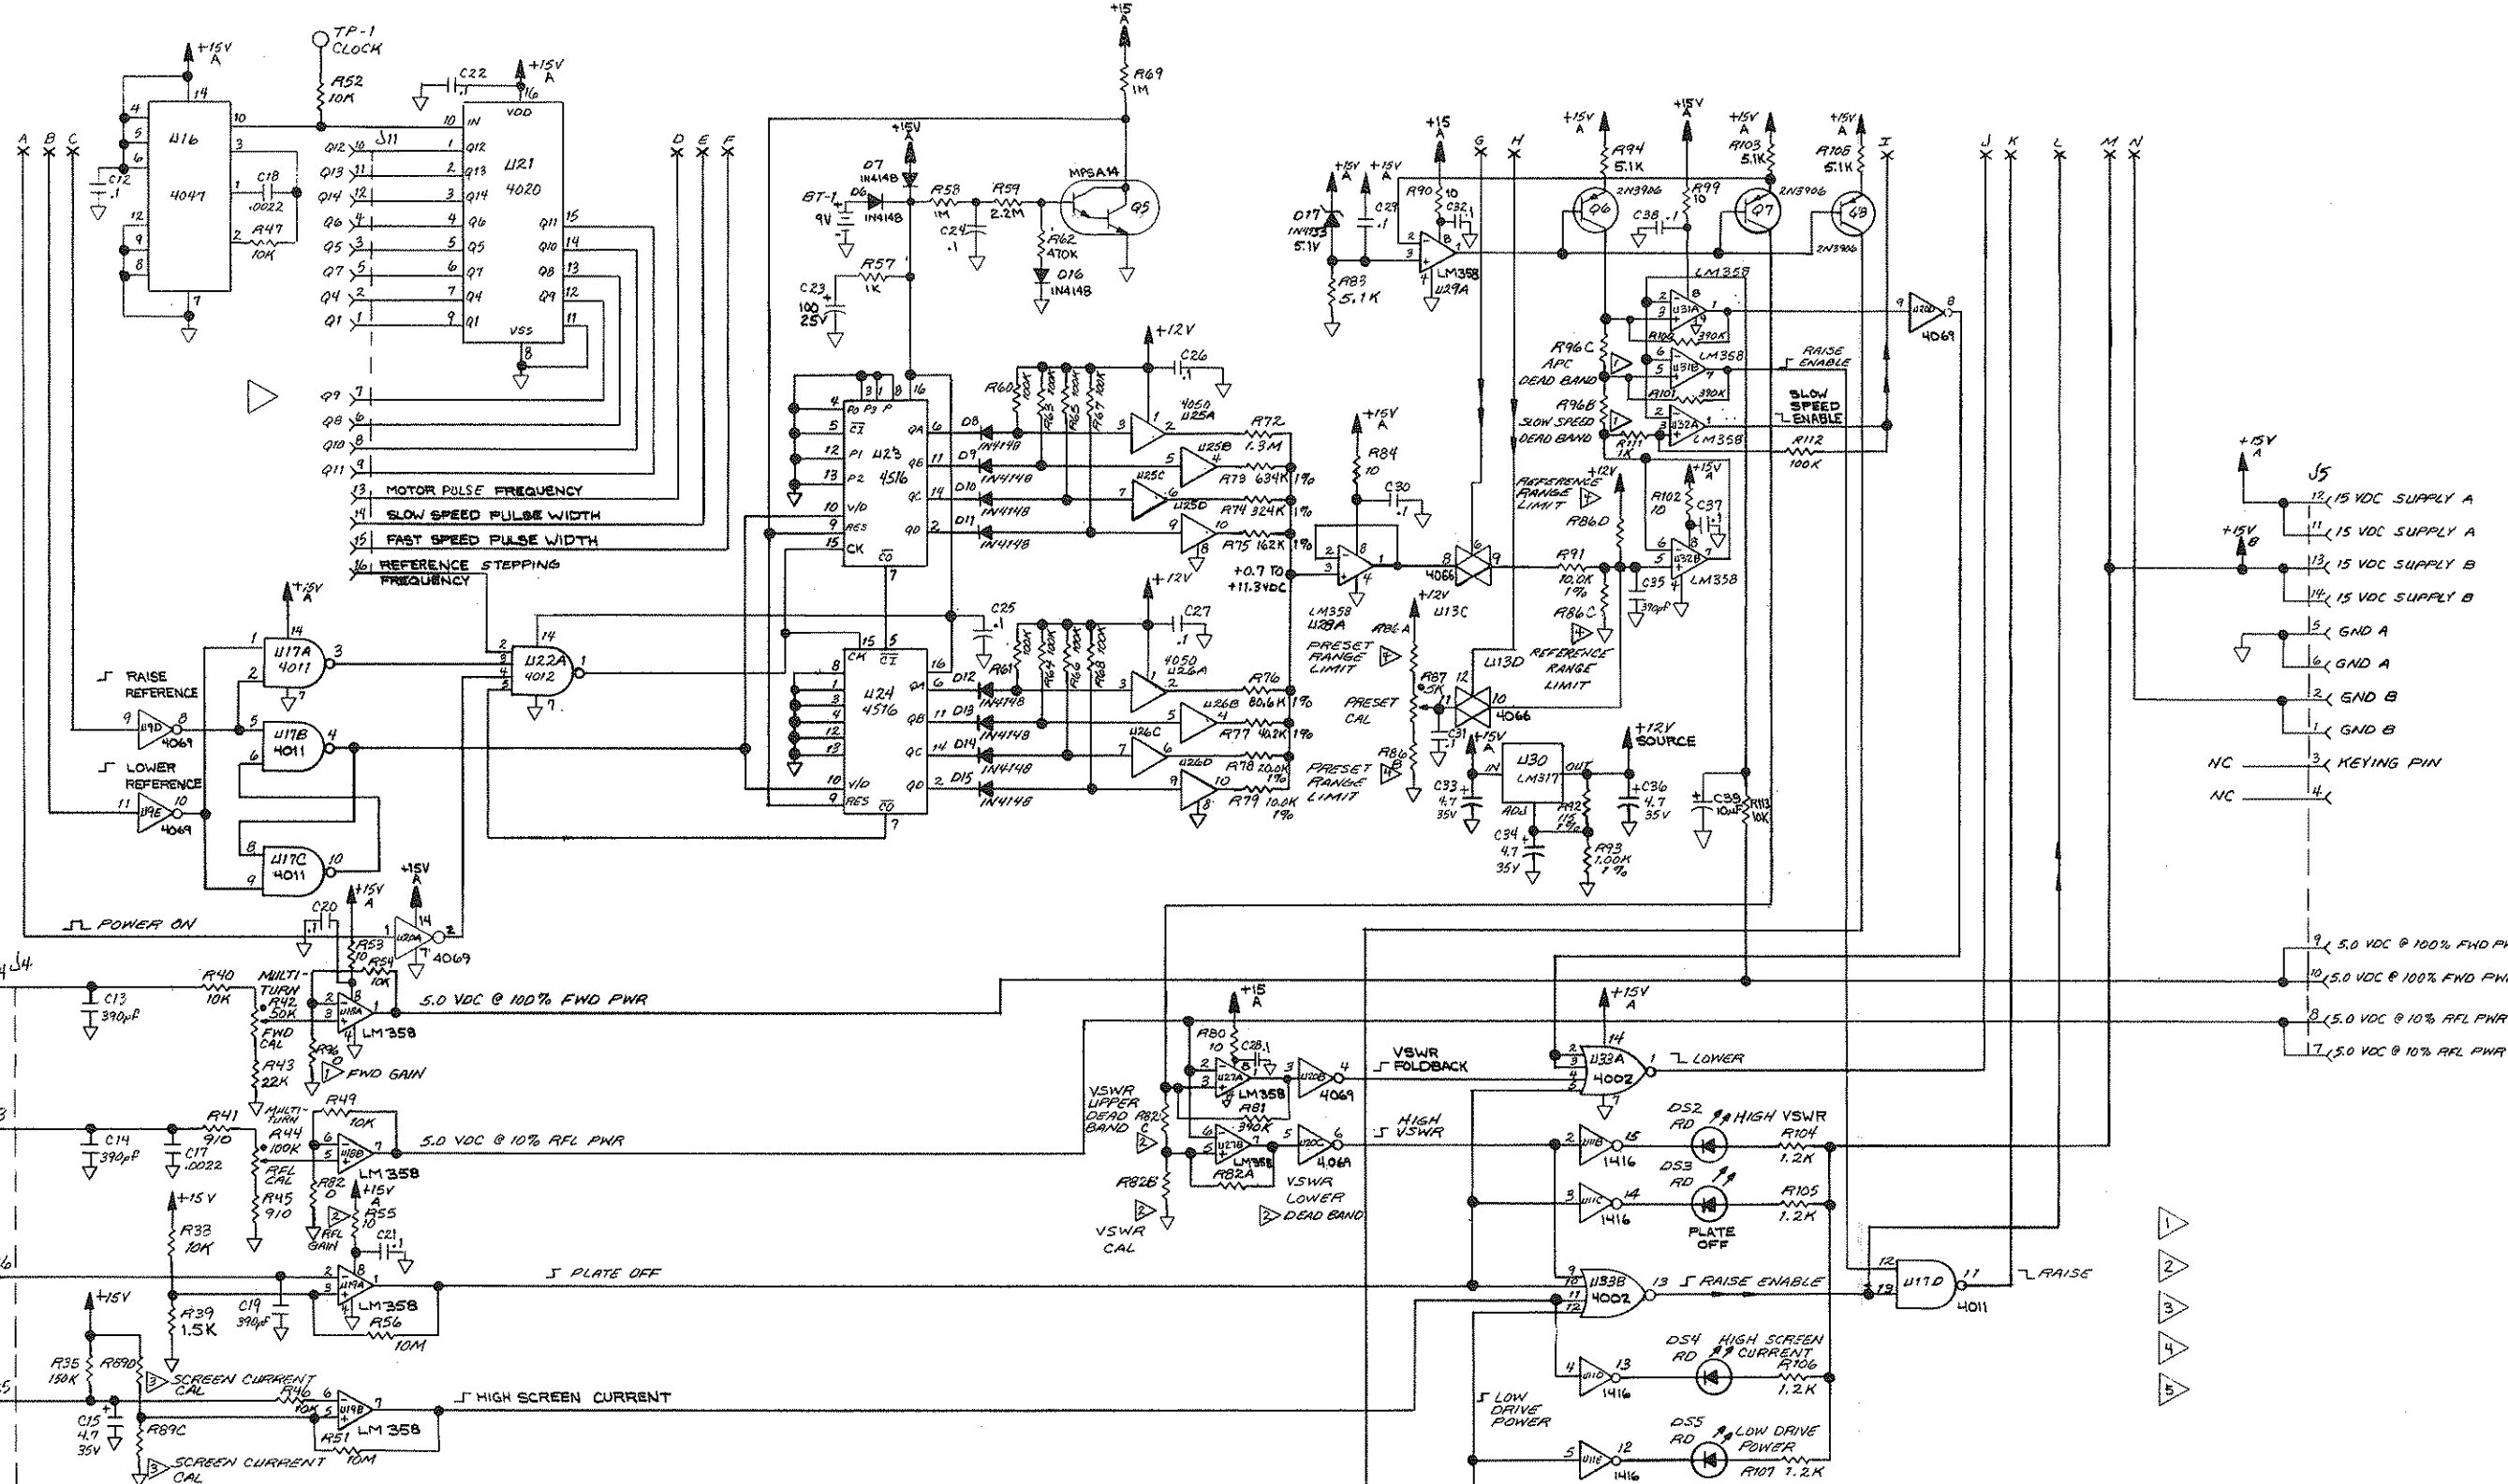

COPYRIGHT © 1988 BROADCAST ELECTRONICS, INC.

COPYRIGHT © 1988 BROADCAST ELECTRONICS, INC.

| | | | | | | | |
|---|--|---|--|---|--|---|--|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | | TOLERANCE UNLESS OTHERWISE SPECIFIED DECIMAL 2 PL = 01 3PL = 005 FRACTIONAL ± 1/64 ANGULAR ± 1° TO SHARP EDGES BEND RADIUS FILLET RADIUS | | DRAWN BY LAH DATE 1-19-88 CHECKED BY DATE PROJECT ENGR. DATE 7-26-88 APPROVED BY | | BROADCAST ELECTRONICS INC. TITLE APC MAIN PCB DWG. NO. 919-0206 TYPE 5 SCALE NTS SHEET 2 OF 2 | |
|---|--|---|--|---|--|---|--|

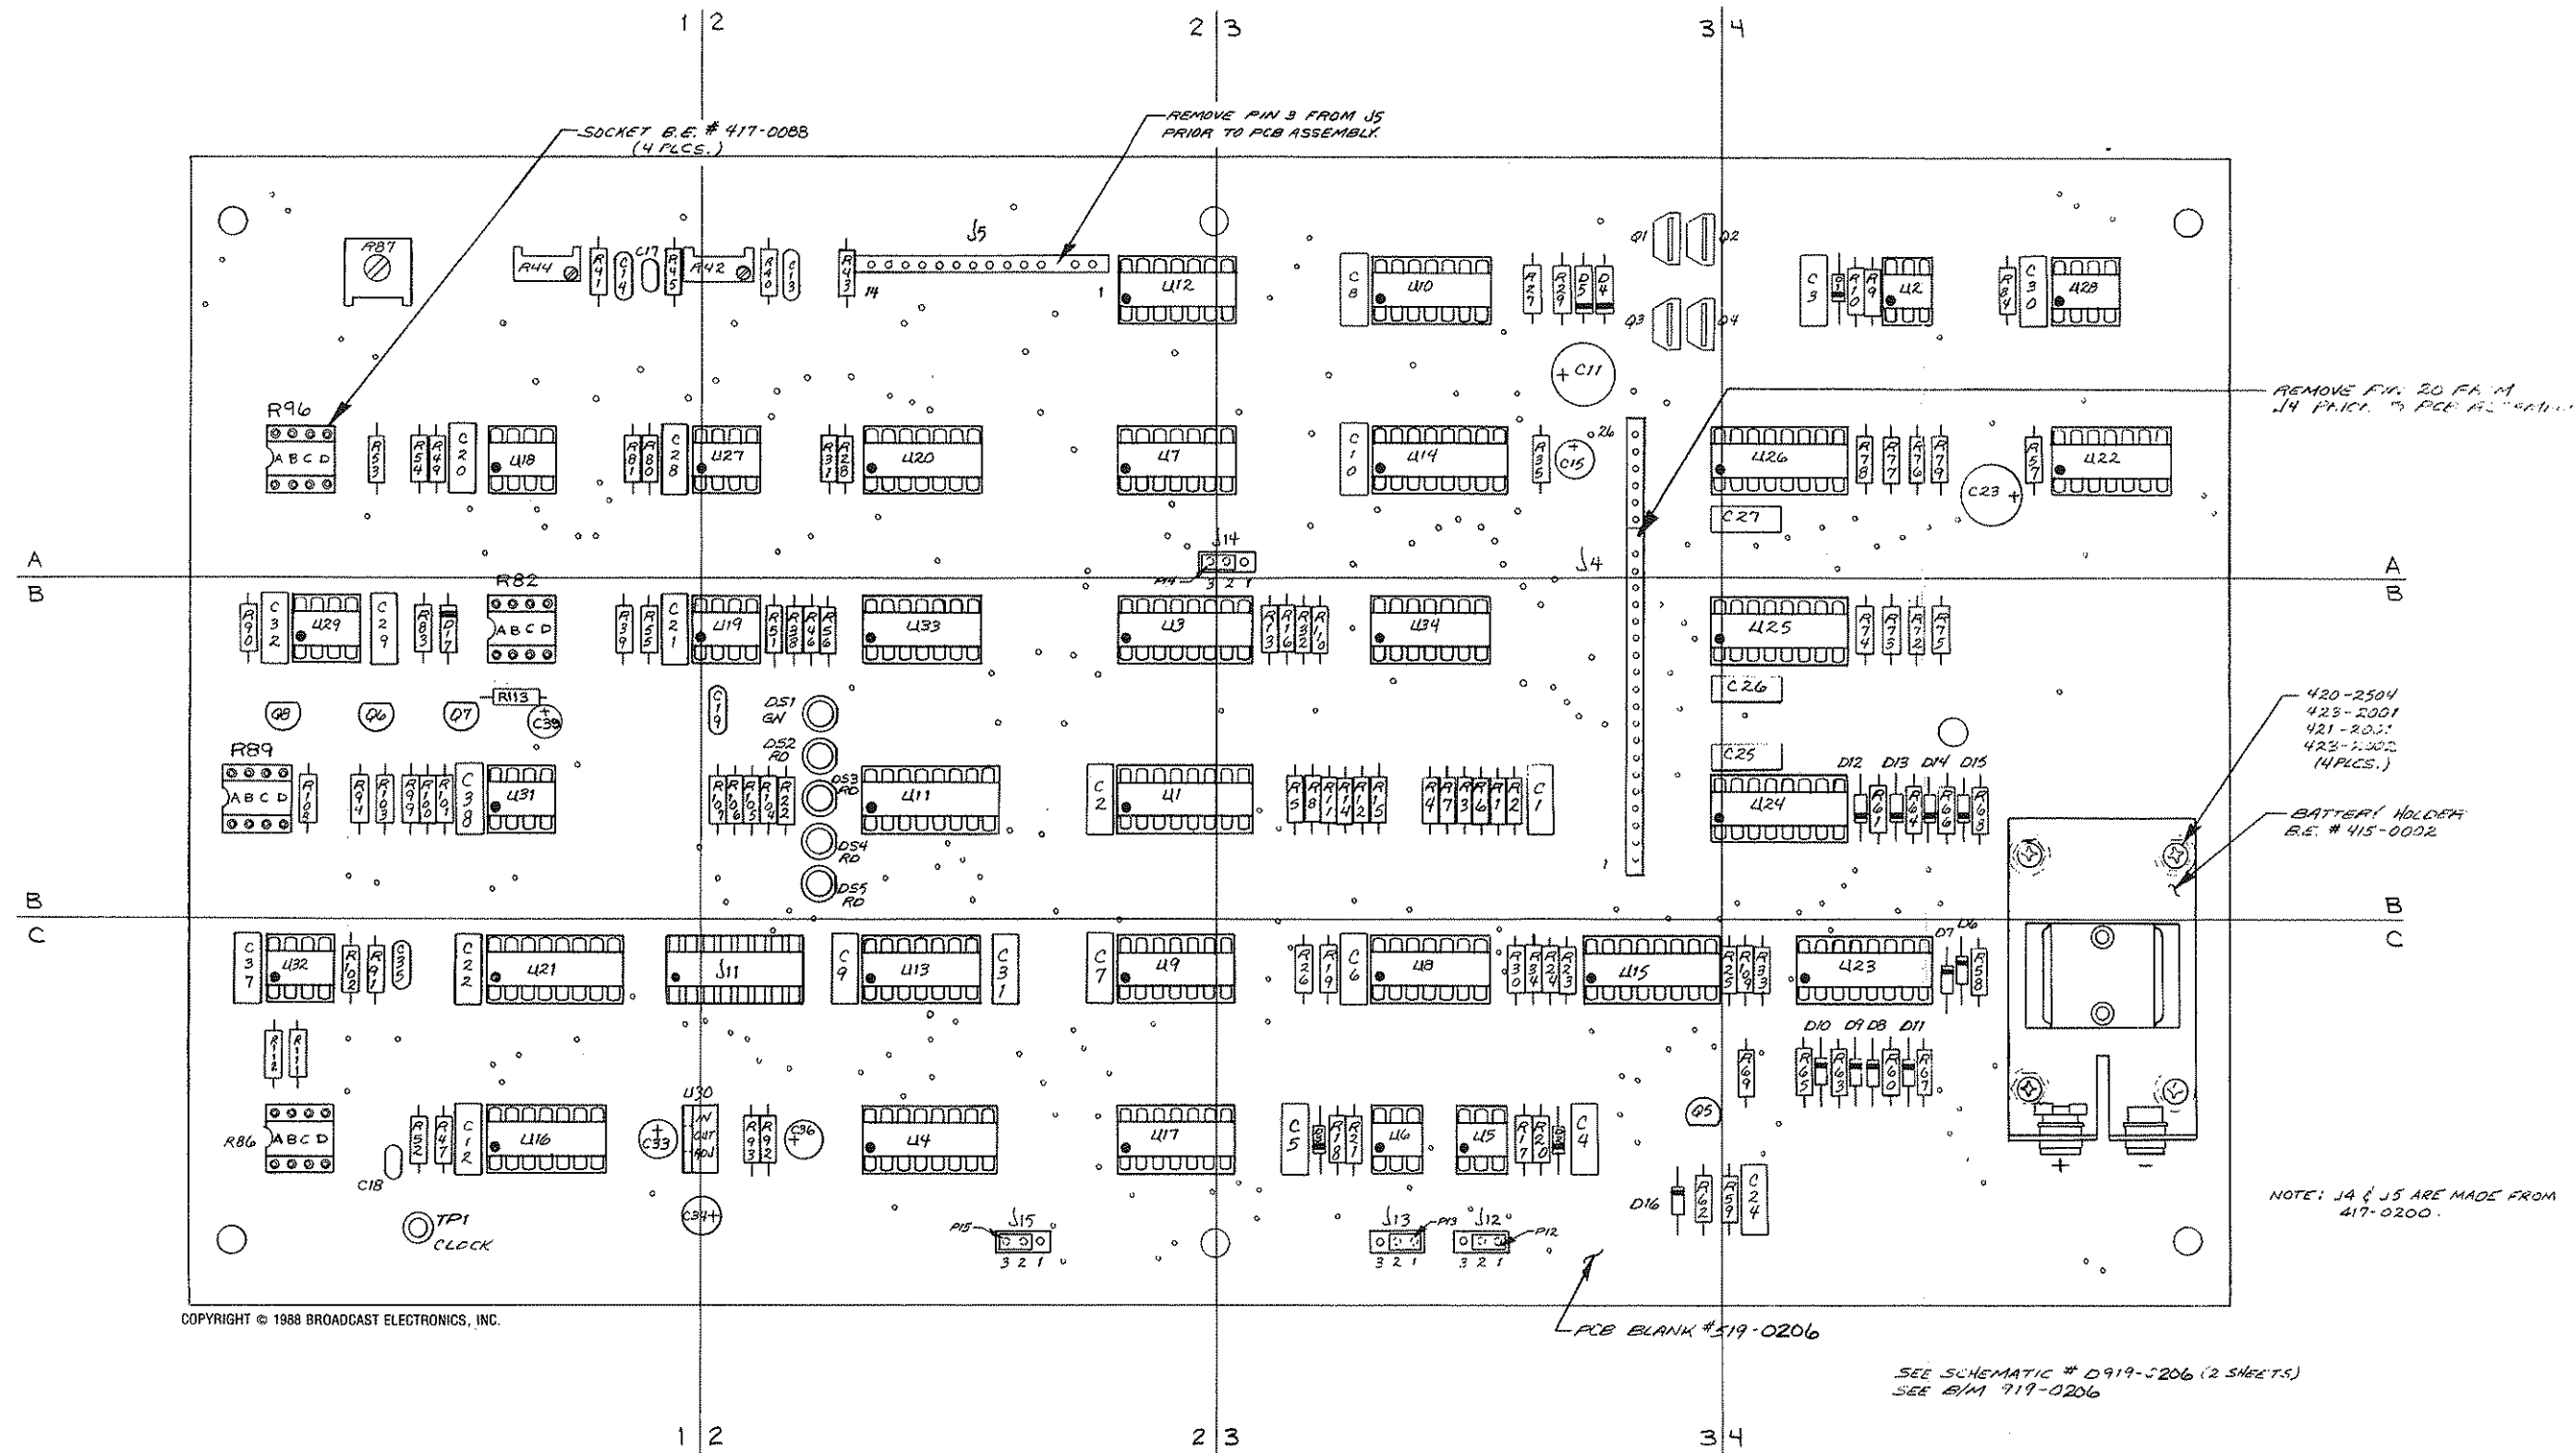

COPYRIGHT © 1988 BROADCAST ELECTRONICS, INC.


COPYRIGHT © 1988 BROADCAST ELECTRONICS, INC.

| | | | | |
|---|--------------------------------------|---------------------|--------------|---|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | TOLERANCE UNLESS OTHERWISE SPECIFIED | DRAWN BY JAU | DATE 1-19-88 | BROADCAST ELECTRONICS, INC. TITLE PCB ASSEMBLY APC MAIN PCB Dwg. No. 919-0206 SCALE 2/1 SHEET 1 OF 1 |
| | DECIMAL 2 PL = .01 3 PL = .005 | CHECKED BY | DATE 1-16-88 | |
| | FRACTIONAL ± 1/64 | PROJECT ENGR. JMM | DATE 1-16-88 | |
| | ANGULAR ± 1° | APPROVED BY | | |
| SHARP EDGES TO BE INDICATED | MATERIAL | TREATMENT OR FINISH | REV. C | |
| ROUND RADI FILLET RADI | | | | |

| REF | ZONE | REF | ZONE | REF | ZONE | REF | ZONE | REF | ZONE | REF | ZONE | REF | ZONE | REF | ZONE | REF | ZONE |
|-----|-------|-----|-------|-----|------|-----|-------|------|-------|-----|-------|-----|------|-----|------|-----|------|
| BT1 | C4 | C39 | B1 | R2 | B3 | R41 | A1 | R80 | A1 | U5 | C3 | | | | | | |
| C1 | B3 | D1 | A4 | R3 | B3 | R42 | A1-A2 | R81 | A1 | U6 | C3 | | | | | | |
| C2 | B2 | D2 | C3 | R4 | B3 | R43 | A2 | R82 | B1 | U7 | A2-A3 | | | | | | |
| C3 | A4 | D3 | C3 | R5 | B3 | R44 | A1 | R83 | B1 | U8 | C3 | | | | | | |
| C4 | C3 | D4 | A3 | R6 | B3 | R45 | A1 | R84 | A4 | U9 | C2-C3 | | | | | | |
| C5 | C3 | D5 | A3 | R7 | B3 | R46 | B2 | R85 | -- | U10 | A3 | | | | | | |
| C6 | C3 | D6 | C4 | R8 | B3 | R47 | C1 | R86 | C1 | U11 | B2 | | | | | | |
| C7 | C2 | D7 | C4 | R9 | A4 | R48 | -- | R87 | A1 | U12 | A2-A3 | | | | | | |
| C8 | A3 | D8 | C4 | R10 | A4 | R49 | A1 | R88 | -- | U13 | C2 | | | | | | |
| C9 | C2 | D9 | C4 | R11 | B3 | R50 | -- | R89 | B1 | U14 | A3 | | | | | | |
| C10 | A3 | D10 | C4 | R12 | B3 | R51 | B2 | R90 | B1 | U15 | C3 | | | | | | |
| C11 | A3 | D11 | C4 | R13 | B3 | R52 | C1 | R91 | C1 | U16 | C1 | | | | | | |
| C12 | C1 | D12 | B4 | R14 | B3 | R53 | A1 | R92 | C2 | U17 | C2-C3 | | | | | | |
| C13 | A2 | D13 | B4 | R15 | B3 | R54 | A1 | R93 | C2 | U18 | A1 | | | | | | |
| C14 | A1 | D14 | B4 | R16 | B3 | R55 | B1 | R94 | B1 | U19 | B2 | | | | | | |
| C15 | A3 | D15 | B4 | R17 | C3 | R56 | B2 | R95 | -- | U20 | A2 | | | | | | |
| C16 | -- | D16 | C3 | R18 | C3 | R57 | A4 | R96 | A1 | U21 | C1 | | | | | | |
| C17 | A1 | D17 | B1 | R19 | C3 | R58 | C4 | R97 | -- | U22 | A4 | | | | | | |
| C18 | C1 | DS1 | B2 | R20 | C3 | R59 | C4 | R98 | -- | U23 | C4 | | | | | | |
| C19 | B2 | DS2 | B2 | R21 | C3 | R60 | C4 | R99 | B1 | U24 | B4 | | | | | | |
| C20 | A1 | DS3 | B2 | R22 | B2 | R61 | B4 | R100 | B1 | U25 | B4 | | | | | | |
| C21 | B1 | DS4 | B2 | R23 | C3 | R62 | C3 | R101 | B1 | U26 | A4 | | | | | | |
| C22 | C1 | DS5 | B2 | R24 | C3 | R63 | C4 | R102 | C1 | U27 | A1-A2 | | | | | | |
| C23 | A4 | J4 | A3-B3 | R25 | C4 | R64 | B4 | R103 | B1 | U28 | A4 | | | | | | |
| C24 | C4 | J5 | A2 | R26 | C3 | R65 | C4 | R104 | B2 | U29 | B1 | | | | | | |
| C25 | B4 | J11 | C1-C2 | R27 | A3 | R66 | B4 | R105 | B2 | U30 | C1-C2 | | | | | | |
| C26 | B4 | J12 | C3 | R28 | A2 | R67 | C4 | R106 | B2 | U31 | B1 | | | | | | |
| C27 | A4 | J13 | C3 | R29 | A3 | R68 | B4 | R107 | B2 | U32 | C1 | | | | | | |
| C28 | A1 | J14 | B2-B3 | R30 | C3 | R69 | C4 | R108 | B1 | U33 | B2 | | | | | | |
| C29 | B1 | J15 | C2 | R31 | A2 | R70 | -- | R109 | C4 | U34 | B3 | | | | | | |
| C30 | A4 | Q1 | A3 | R32 | B3 | R71 | -- | R110 | B3 | | | | | | | | |
| C31 | C2 | Q2 | A3 | R33 | C4 | R72 | B4 | R111 | C1 | | | | | | | | |
| C32 | B1 | Q3 | A3 | R34 | C3 | R73 | B4 | R112 | C1 | | | | | | | | |
| C33 | C1 | Q4 | A3 | R35 | A3 | R74 | B4 | R113 | B1 | | | | | | | | |
| C34 | C1-C2 | Q5 | C3 | R36 | -- | TP1 | B4 | | C1 | | | | | | | | |
| C35 | C1 | Q6 | B1 | R37 | -- | U1 | A4 | | B2-B3 | | | | | | | | |
| C36 | C2 | Q7 | B1 | R38 | B2 | U2 | A4 | | A4 | | | | | | | | |
| C37 | C1 | Q8 | B1 | R39 | B1 | U3 | A4 | | B2-B3 | | | | | | | | |
| C38 | B1 | R1 | B3 | R40 | A2 | U4 | A4 | | C2 | | | | | | | | |

FIGURE 3-5. APC MAIN CIRCUIT BOARD COMPONENT LOCATOR

597-0032-38
 COPYRIGHT © 1988 BROADCAST ELECTRONICS, INC.

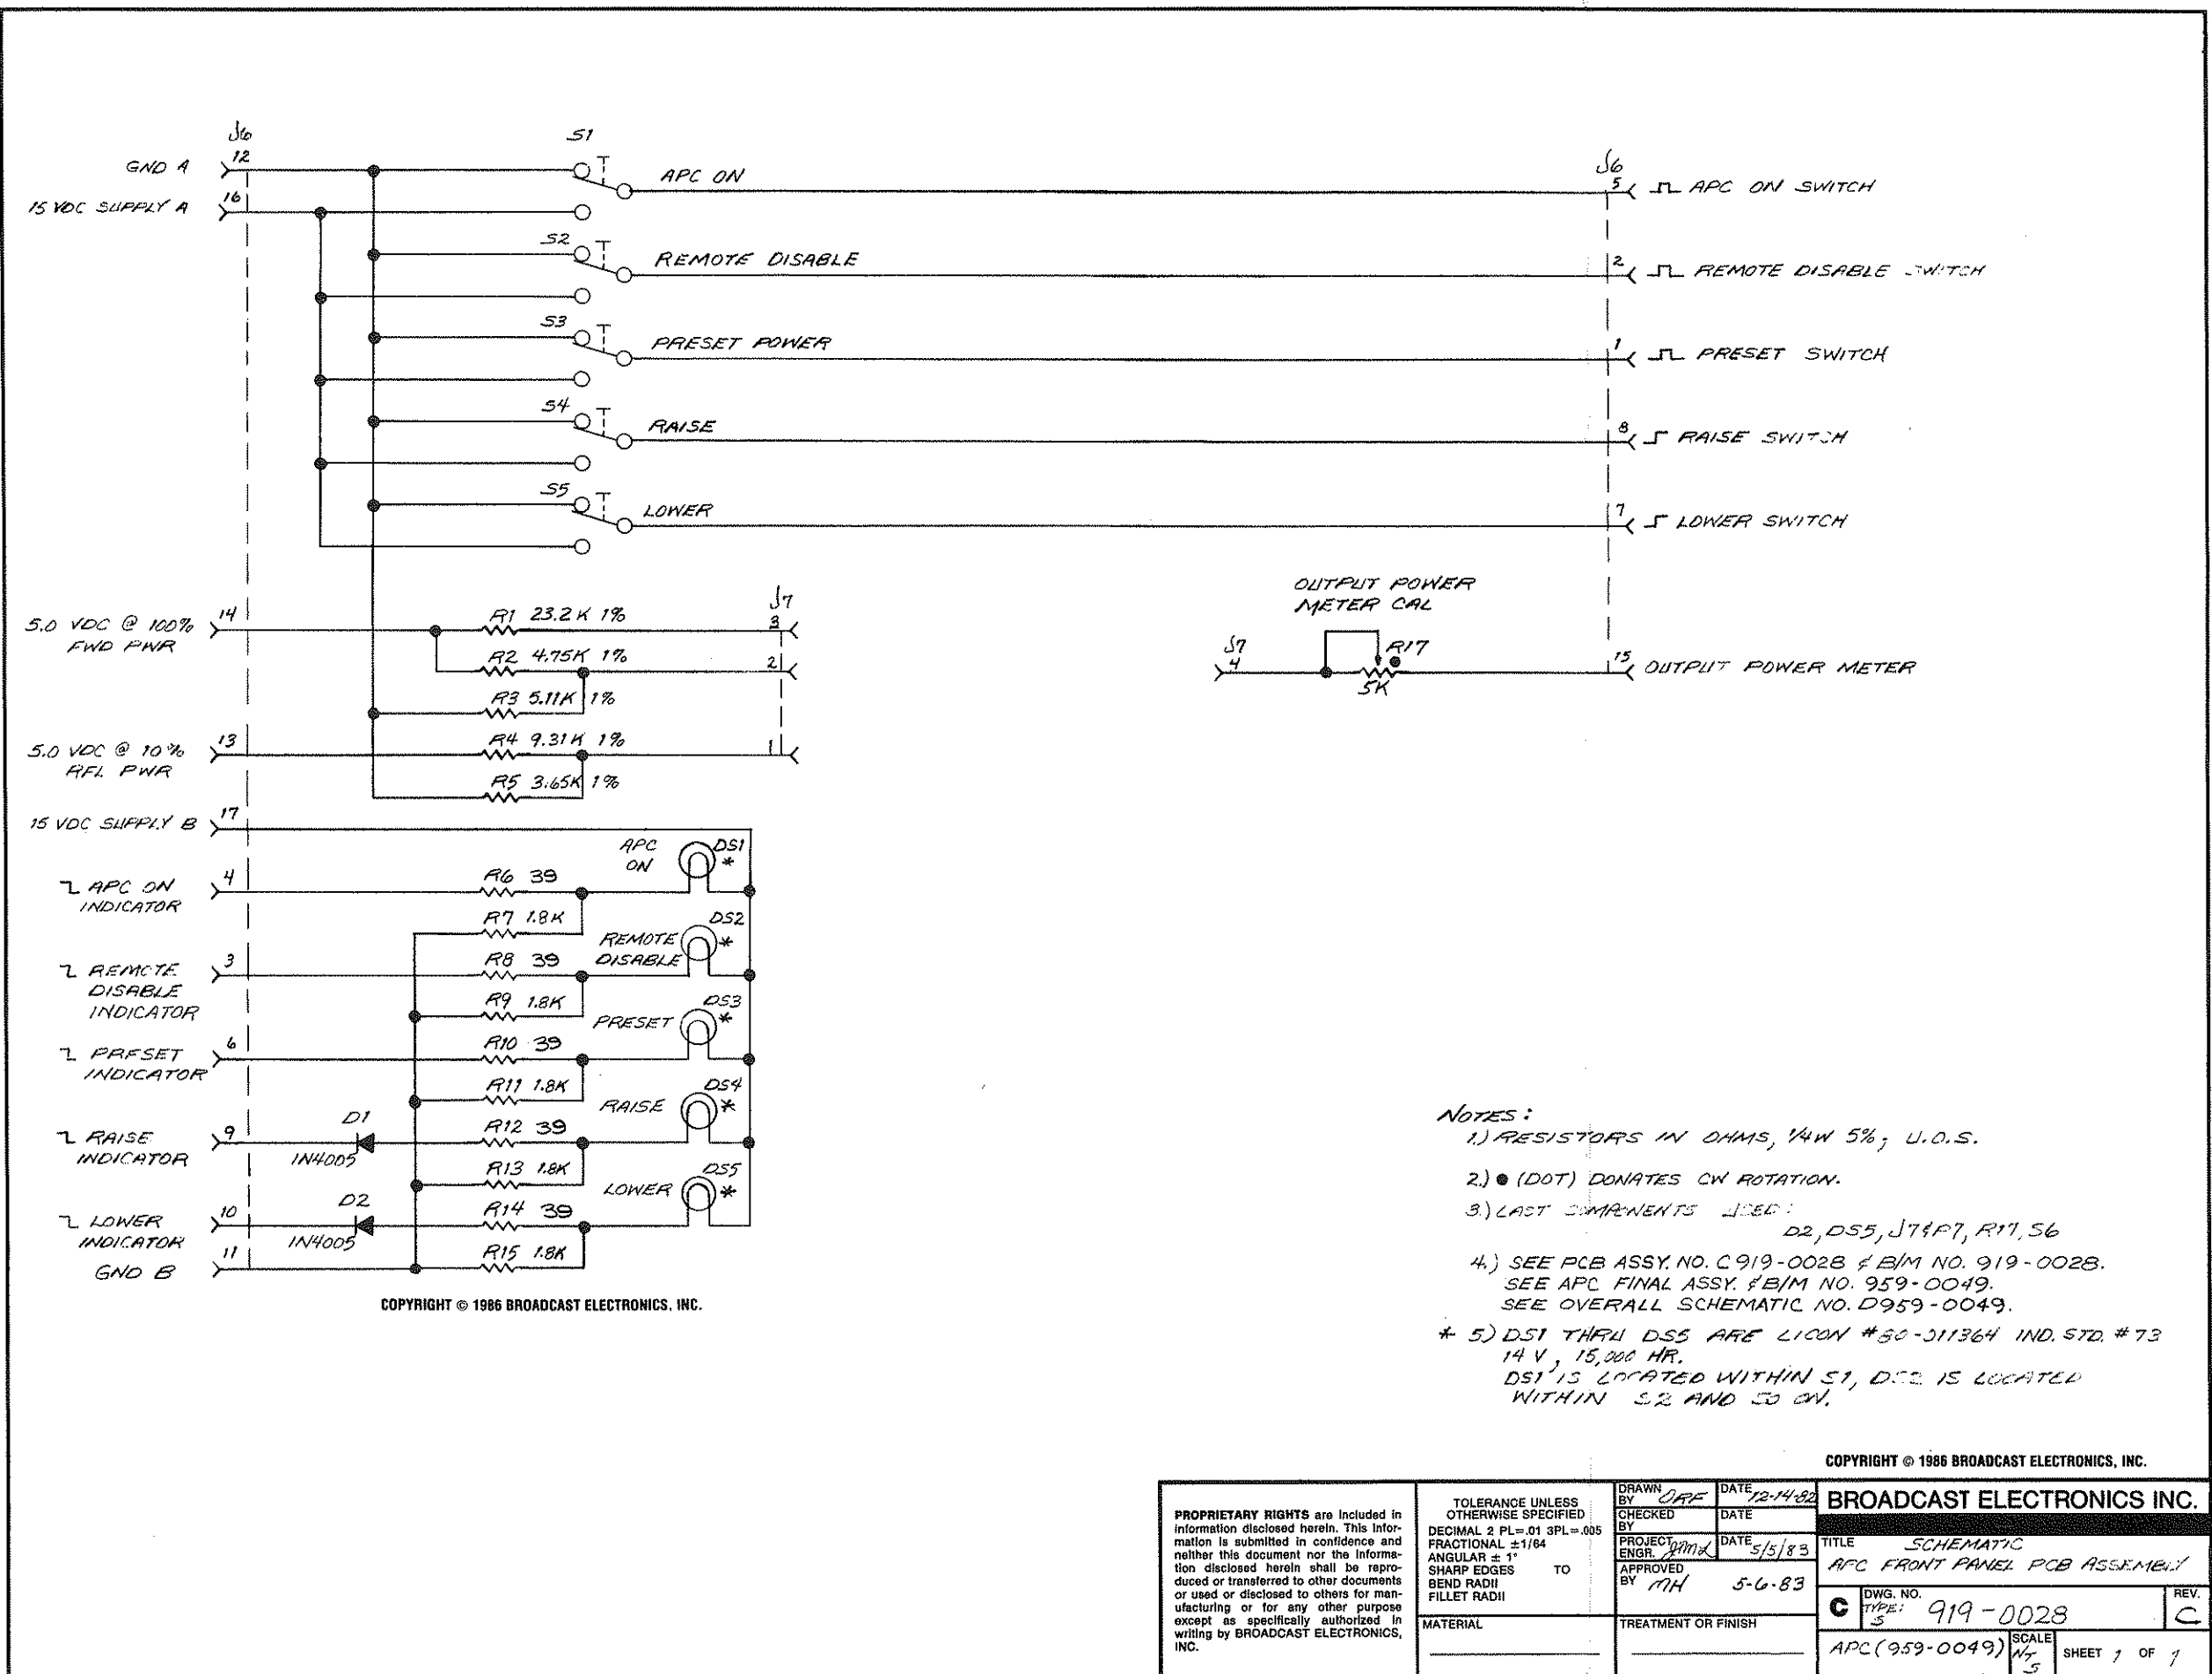


COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

- NOTES:**
- 1.) RESISTORS IN OHMS, 1/4W 5%, U.O.S.
 - 2.) ● (DOT) DONATES CW ROTATION.
 - 3.) LAST COMPONENTS USED: D2, DS5, J7, R7, R11, S6
 - 4.) SEE PCB ASSY. NO. C919-0028 & B/M NO. 919-0028. SEE APC FINAL ASSY. #B/M NO. 959-0049. SEE OVERALL SCHEMATIC NO. D959-0049.
 - * 5.) DS1 THRU DS5 ARE LICON #80-311364 IND. STD. #73 14V, 15,000 HR. DS1 IS LOCATED WITHIN S1, DS2 IS LOCATED WITHIN S2 AND S3 ON.

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

| | | | |
|--|---|--|--|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | TOLERANCE UNLESS OTHERWISE SPECIFIED DECIMAL 2 PL = .01 3PL = .005 FRACTIONAL ±1/64 ANGULAR ±1° SHARP EDGES BEND RADII FILLET RADII | DRAWN BY <i>JAF</i> DATE 12-14-82 CHECKED BY DATE PROJECT ENGR. <i>MMX</i> DATE 5/5/83 APPROVED BY <i>MH</i> 5-6-83 | BROADCAST ELECTRONICS INC. TITLE <i>SCHEMATIC</i> <i>APC FRONT PANEL PCB ASSEMBLY</i> |
| | MATERIAL | TREATMENT OR FINISH | DWG. NO. <i>919-0028</i> TYPE: <i>5</i> |
| | | | SCALE <i>NF</i> SHEET 1 OF 1 |
| | | | |

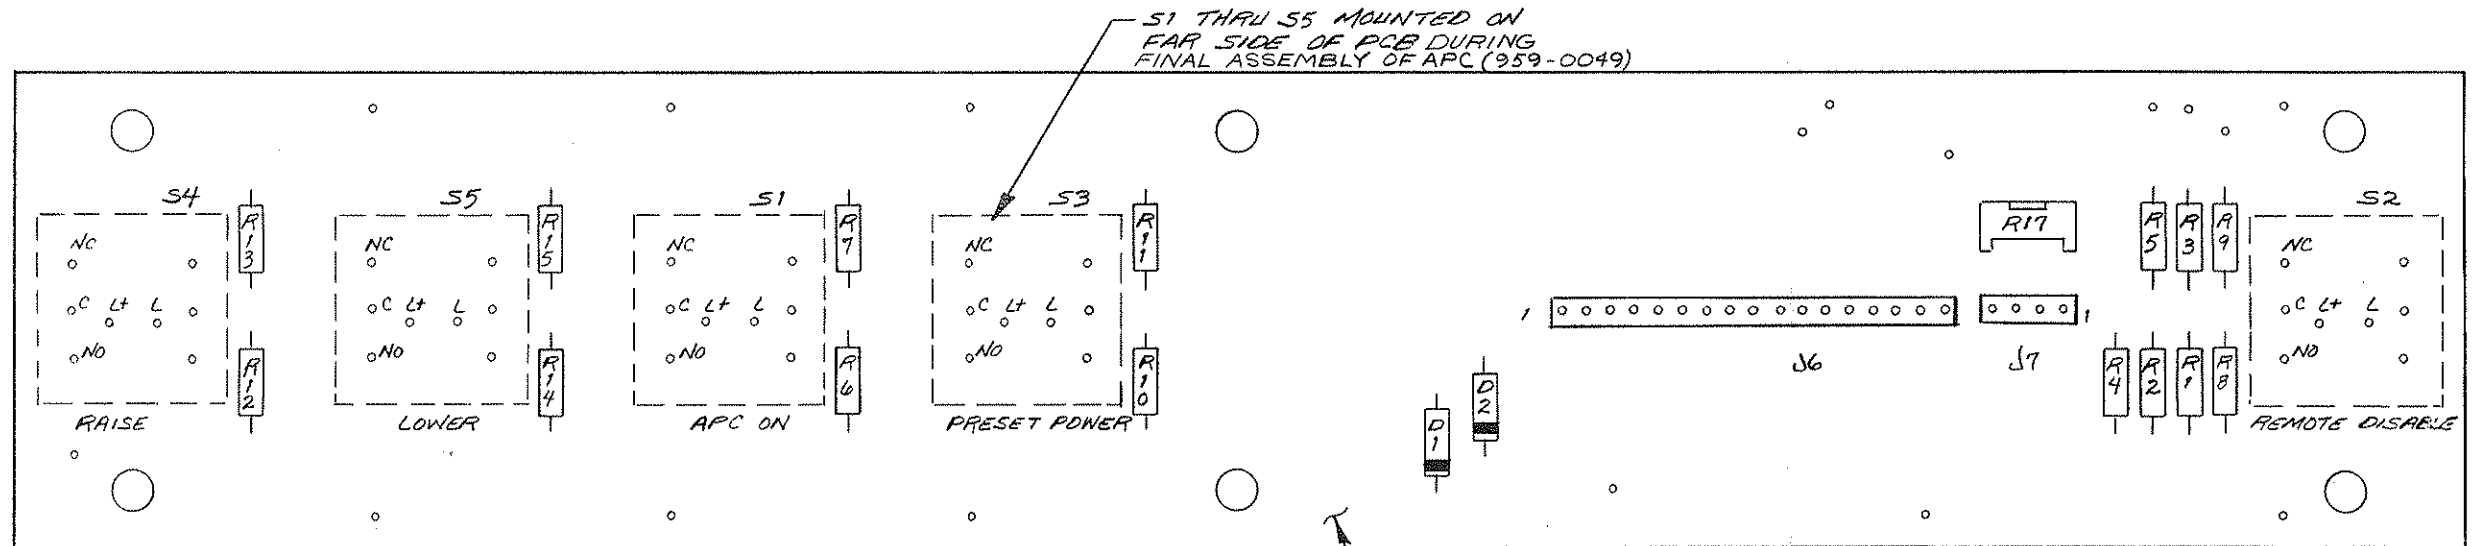


COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

NOTE: J6 & J7 ARE MADE FROM 417-0200.

SEE SCHEMATIC C919-0028
SEE BOM 919-0028

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.


| | | | | | |
|---|--------------|-------------|-----------------|---|--|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | OWN. BY | M.S. OFF | NEXT ASSY. | BROADCAST ELECTRONICS INC. | |
| | CHKD. | | 959-0049 | 4100 N. 24TH ST. QUINCY, IL 62305 217/224-9600 TELEX 250142 CABLE BCST ELECT QUI | |
| | ME | | PRODUCT USED ON | TITLE PCB ASSEMBLY APC FRONT PANEL | |
| | EE | JAMM 5/5/83 | APC | SHEET 1 OF 1 SCALE 2/1 REV B | |
| TOLERANCE (DECIMAL) U.S.S. | DFTG. SUPVR. | MH 5-6-83 | FINISH | TYPE A SIZE C DWG. NO. 919-0028 | |
| .X ± .030 .XXX ± .005 | MFG. | | | | |
| .XX ± .015 ANGLES ± 1° | | | | | |

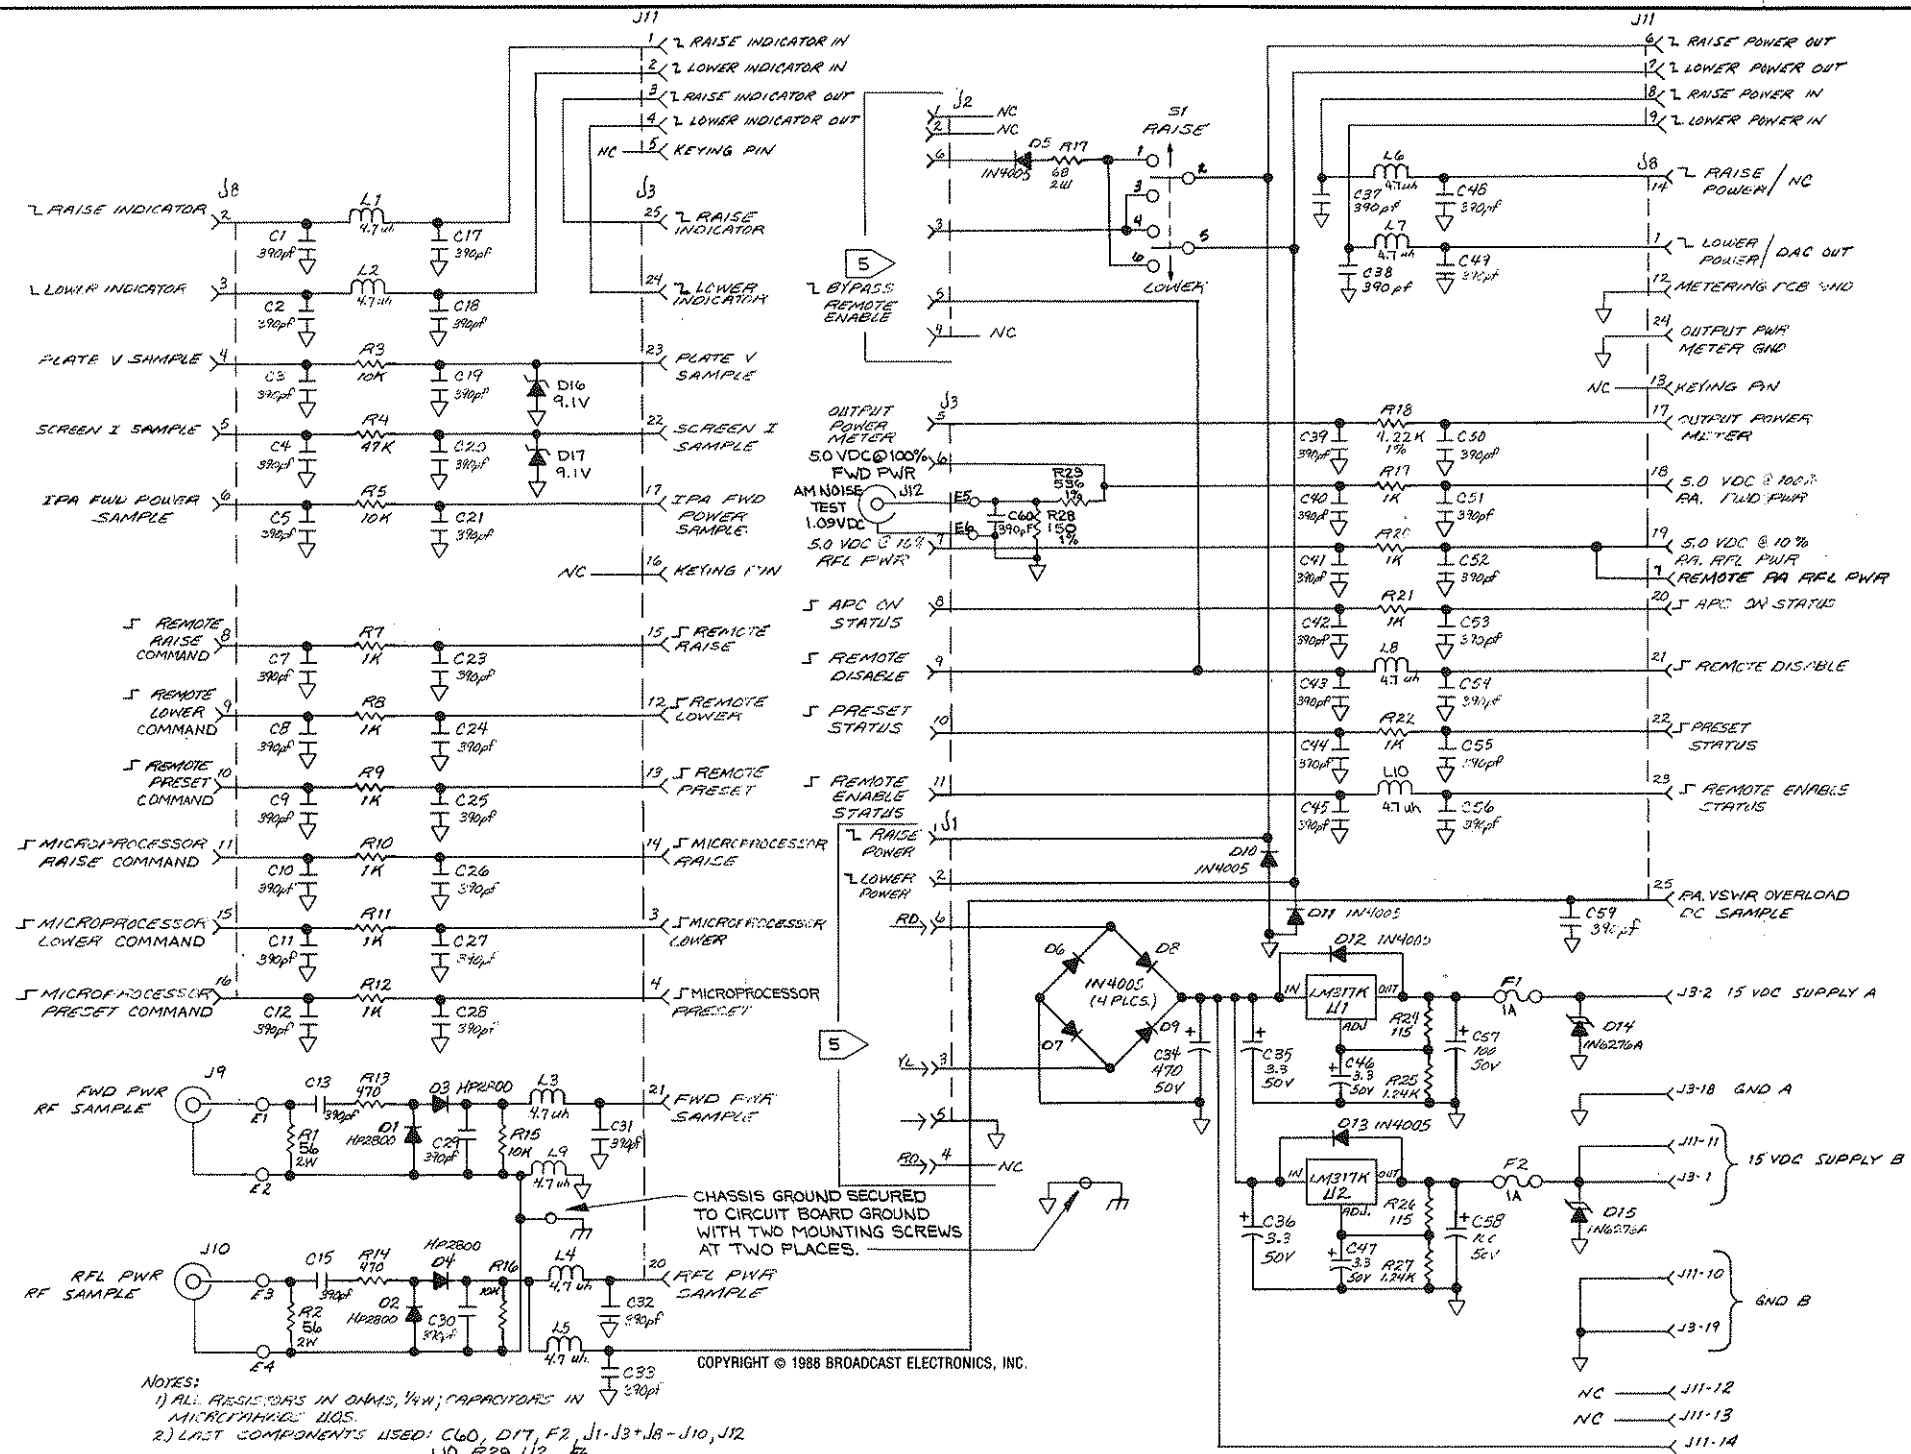

- NOTES:
- 1) ALL RESISTORS IN OHMS, 1/4W; CAPACITORS IN MICROFARADS UNLESS OTHERWISE SPECIFIED.
 - 2) LAST COMPONENTS USED: C60, D17, F2, J1-J3, J8-J10, J12, L10, R29, U2, R6.
 - 3) COMPONENTS NOT USED: C6, R6, C22, R23, C14, C16.
 - 4) SEE B/M 919-0207
 - 5) FOR NORMAL APC OPERATION, PLUG P1 MUST BE CONNECTED TO RECEPTACLE J1. PLUG P1 IS CONNECTED TO P2 ONLY TO ALLOW MANUAL EMERGENCY BACKUP OPERATION.
 - 6) L1-L10 MAY BE EITHER 2.2 OR 4.7uH AS P/N 360-0022

COPYRIGHT © 1988 BROADCAST ELECTRONICS, INC.

| | | | | | |
|---|--|--|--|--|--|
| PROPRIETARY RIGHTS ARE INCLUDED IN INFORMATION DISCLOSED HEREIN. THIS INFORMATION IS SUBMITTED IN CONFIDENCE AND NEITHER THIS DOCUMENT NOR THE INFORMATION DISCLOSED HEREIN SHALL BE REPRODUCED OR TRANSFERRED TO OTHER DOCUMENTS OR USED OR DISCLOSED TO OTHERS FOR MANUFACTURING OR FOR ANY OTHER PURPOSE EXCEPT AS SPECIFICALLY AUTHORIZED IN WRITING BY BROADCAST ELECTRONICS, INC. | TOLERANCE UNLESS OTHERWISE SPECIFIED DECIMAL ± 1/100 ± 0.05 FRACTIONAL ± 1/64 ANGULAR ± 1° SHARP EDGES BEND RADIUS FILLET RADIUS | | DRAWN BY JAH CHECKED BY PROJECT ENGR JRM APPROVED BY MATERIAL TREATMENT OR FINISH | DATE 1-19-88 DATE 1-16-88 SCALE SHEET 1 OF 1 | BROADCAST ELECTRONICS, INC. TITLE SCHEMATIC APC REAR PANEL PCB DWS. NO. 919-0207 REV. B |
| | DECIMAL ± 1/100 ± 0.05 FRACTIONAL ± 1/64 ANGULAR ± 1° SHARP EDGES BEND RADIUS FILLET RADIUS | | DATE 1-19-88 DATE 1-16-88 SCALE SHEET 1 OF 1 | BROADCAST ELECTRONICS, INC. TITLE SCHEMATIC APC REAR PANEL PCB DWS. NO. 919-0207 REV. B | |
| | DECIMAL ± 1/100 ± 0.05 FRACTIONAL ± 1/64 ANGULAR ± 1° SHARP EDGES BEND RADIUS FILLET RADIUS | | DATE 1-19-88 DATE 1-16-88 SCALE SHEET 1 OF 1 | BROADCAST ELECTRONICS, INC. TITLE SCHEMATIC APC REAR PANEL PCB DWS. NO. 919-0207 REV. B | |
| | DECIMAL ± 1/100 ± 0.05 FRACTIONAL ± 1/64 ANGULAR ± 1° SHARP EDGES BEND RADIUS FILLET RADIUS | | DATE 1-19-88 DATE 1-16-88 SCALE SHEET 1 OF 1 | BROADCAST ELECTRONICS, INC. TITLE SCHEMATIC APC REAR PANEL PCB DWS. NO. 919-0207 REV. B | |

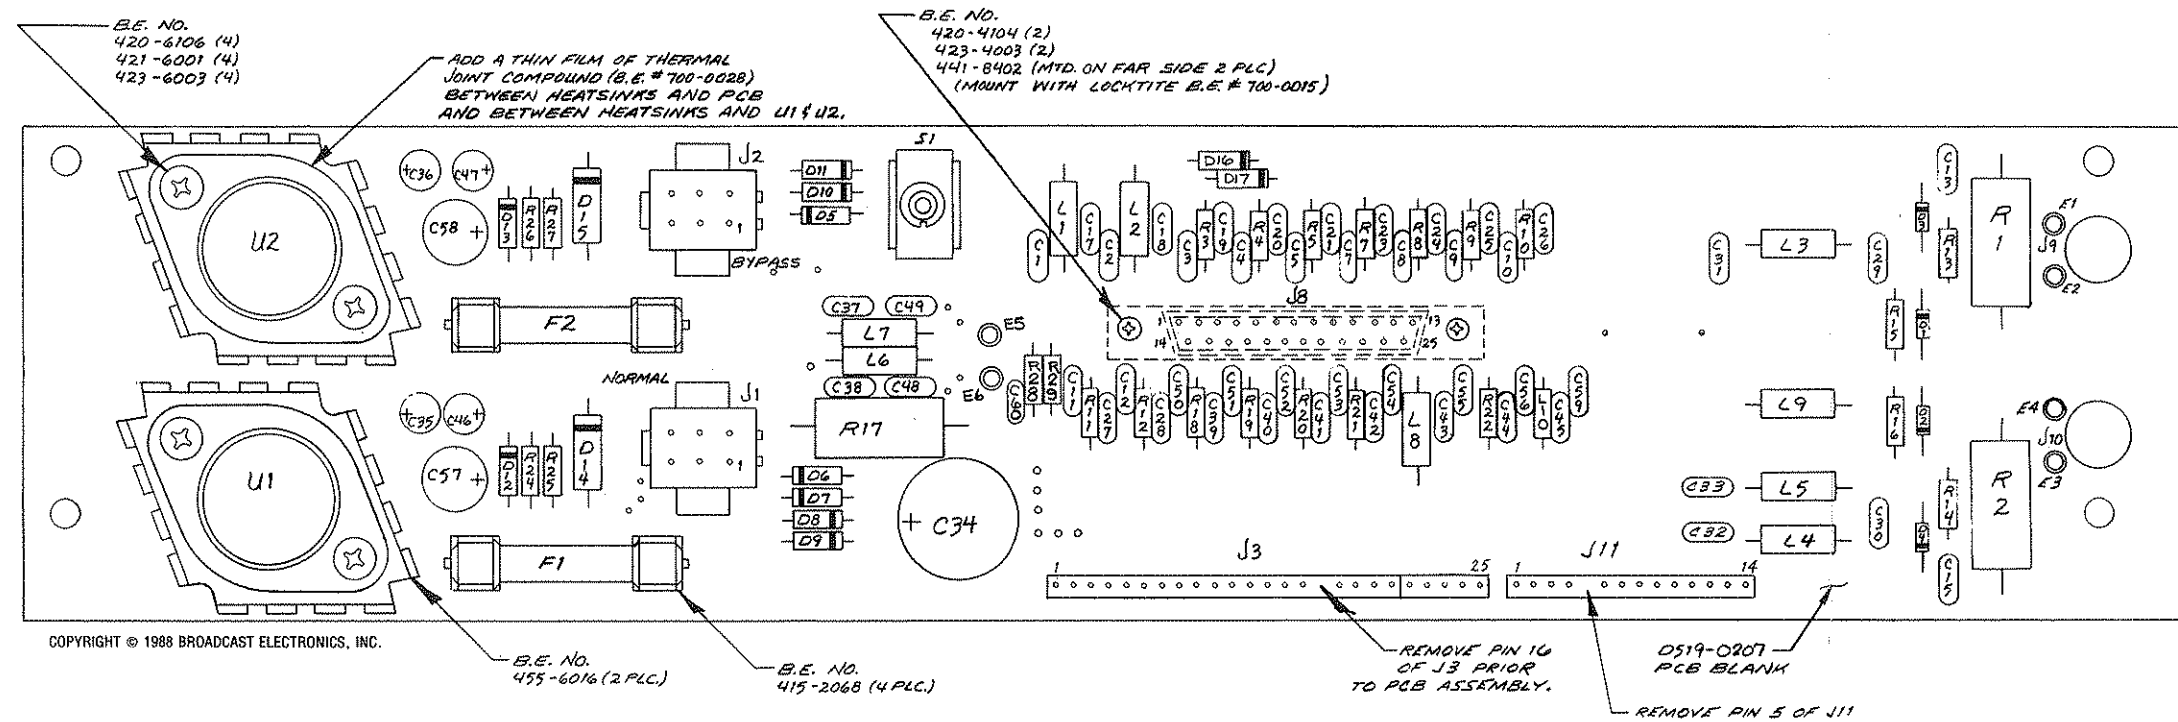

SEE SCHEMATIC #D919-0207
 SEE B/M #919-0207

- NOTE:
- L1 - L10 MAYBE EITHER 2.2 OR 4.7 μH AS P/N 360-0022
 - J3 & J11 ARE MADE FROM 417-0200.

| | | | | | |
|---|--|--|---|--------------------------------------|---|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other customers or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | | TOLERANCE UNLESS OTHERWISE SPECIFIED DECIMAL 2 PL = .01 3PL = .005 FRACTIONAL ± 1/64 ANGULAR ± 1° SHARP EDGES 90° RADIUS FILLET RADIUS | DRAWN BY JAH CHECKED BY PROJECT ENGR. JAH APPROVED BY MATERIAL TREATMENT OR FINISH | DATE 1-19-88 DATE DATE 1-14-88 | BROADCAST ELECTRONICS, INC. TITLE PCB ASSEMBLY APC REAR PANEL DWS. NO. A 919-0207 SCALE 2/1 SHEET 1 OF 1 |
|---|--|--|---|--------------------------------------|---|

SECTION IV
APC PARTS LIST

4-1. INTRODUCTION.

4-2. This section provides descriptions and part numbers of electrical components, assemblies, and selected mechanical parts required for maintenance of the Broadcast Electronics FM-5A FM Transmitter Automatic Power Control Unit. Each table entry in this section is indexed by reference designators appearing on the applicable schematic diagram.

TABLE 4-1. AUTOMATIC POWER CONTROL UNIT PARTS LIST INDEX

| TABLE | DESCRIPTION | PART NO. | PAGE |
|-------|--|------------------|------|
| 4-2 | AUTOMATIC POWER CONTROL UNIT ASSEMBLY | 959-0243 | 4-2 |
| 4-3 | POWER TRANSFORMER ASSEMBLY | 376-7675- 001 | 4-2 |
| 4-4 | WIRE HARNESS ASSEMBLY | 949-0038 | 4-2 |
| 4-5 | MAIN CIRCUIT BOARD ASSEMBLY | 919-0206 | 4-3 |
| 4-6 | FRONT PANEL CIRCUIT BOARD ASSEMBLY | 919-0028 | 4-5 |
| 4-7 | REAR PANEL CIRCUIT BOARD ASSEMBLY | 919-0207 | 4-6 |
| 4-8 | AUTOMATIC POWER CONTROL JUMPER NETWORK ASSEMBLY | 959-1001 | 4-6 |
| 4-9 | REAR-PANEL CIRCUIT BOARD JUMPER ASSEMBLY, AUTOMATIC POWER CONTROL UNIT | 959-0236 | 4-7 |
| 4-10 | AUTOMATIC POWER CONTROL RESISTOR NETWORK ASSEMBLY | 959-1000- 007 | 4-7 |
| 4-11 | AUTOMATIC POWER CONTROL RESISTOR NETWORK ASSEMBLY | 959-1000- 008 | 4-7 |
| 4-12 | AUTOMATIC POWER CONTROL RESISTOR NETWORK ASSEMBLY | 959-1000- 009 | 4-7 |
| 4-13 | AUTOMATIC POWER CONTROL RESISTOR NETWORK ASSEMBLY | 959-1000- 010 | 4-7 |

TABLE 4-2. AUTOMATIC POWER CONTROL ASSEMBLY - 959-0243

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|--------------|---|--------------|------|
| BT1 | Battery, 9 Volt, Alkaline | 350-0002 | 1 |
| DS1 THRU DS5 | Lamp, No. 73, 14V, 0.08A, T-1 3/4 Bulb, Wedge Base | 320-0007 | 5 |
| F1,F2,SPARE | Fuse, 250V, 1/2 Ampere, AGC | 330-0050 | 3 |
| FL1 | RFI Line Filter, 250V ac, 3 Ampere Maximum, 50/60 Hz | 339-0008 | 1 |
| J9,J10,J12 | Receptacle, BNC, Insulated | 417-0016 | 3 |
| MOV 1 | Metal Oxide Varistor, V250LA15A, 250V ac RMS, 15 Joules | 140-0008 | 1 |
| R16 | Potentiometer, 10 k Ohm $\pm 10\%$, 1W (VSWR CAL) | 192-1052 | 1 |
| S6 | Rocker Switch, DPDT, 5A @ 120V ac or 28V dc Resistive Load or 2A @ 250V ac, Resistive Load (FWD/VSWR/VSWR CAL) | 340-0021 | 1 |
| S1 THRU S5 | Push Switch, Momentary, Illuminated, SPDT 3A @ 125V ac Maximum, Gold Contacts (REMOTE DISABLE, PRESET, APC ON, LOWER and RAISE) | 340-0015-001 | 5 |
| XF1,XF2 | Fuse Holder, AGC | 415-2012 | 2 |
| ---- | Turn-Lock Fastener, Stud, Rear | 420-0027 | 1 |
| ---- | Turn-Lock Fastener, Stud, Front and Sides | 420-0019 | 5 |
| ---- | Stud Retainer, Split Ring | 420-0021 | 6 |
| ---- | Receptacle, Turn-Lock Fastener | 420-0022 | 6 |
| ---- | Power Transformer Assembly | 376-7675-001 | 1 |
| ---- | Rear-Panel Circuit Board Jumper Assembly, Automatic Power Control Unit | 959-0236 | 1 |
| ---- | Wire Harness Assembly | 949-0038 | 1 |
| ---- | Main Circuit Board Assembly | 919-0206 | 1 |
| ---- | Front Panel Circuit Board Assembly | 919-0028 | 1 |
| ---- | Rear Panel Circuit Board Assembly | 919-0207 | 1 |
| ---- | Chassis Slides | 469-0413-002 | 1 |
| ---- | Magnet for Latch | 488-0002 | 2 |
| ---- | Clips for Spare Line Fuse | 415-1001 | 2 |
| ---- | Knob, Black, 1/4 inch ID (0.635 cm) for VSWR CAL Control | 481-0014 | 1 |
| ---- | Lens, Gray, for LOWER and RAISE Switch/Indicators | 340-0022 | 2 |
| ---- | Lens, Yellow, for PRESET and REMOTE DISABLE Switch/Indicators | 340-0014 | 2 |
| ---- | Lens, Green, for APC ON Switch/Indicator | 340-0019 | 1 |

TABLE 4-3. POWER TRANSFORMER ASSEMBLY - 376-7675-001

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|--|----------|------|
| P1 | Plug, 6-Pin | 418-0670 | 1 |
| ---- | Pins for P1 | 417-0053 | 6 |
| T1 | Transformer, Power Dual Primary: 120V, 50/60 Hz Dual Secondary: 25V @ 1.0 Ampere | 376-7675 | 1 |

TABLE 4-4. WIRE HARNESS ASSEMBLY - 949-0038

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|--|----------|------|
| P3 | Connector, Housing, 25-Pin In-line | 417-0163 | 1 |
| P4 | Connector, Housing, 26-Pin In-line | 417-0164 | 1 |
| P5 | Connector, Housing, 14-Pin In-line | 417-1401 | 1 |
| P6 | Connector, Housing, 17-Pin In-line | 417-0162 | 1 |
| P7 | Connector, Housing, 4-Pin In-line | 417-0138 | 1 |
| ---- | Pins, Receptacle (for Connectors P3, P4, P5, P6, and P7) | 417-0053 | 83 |

TABLE 4-5. MAIN CIRCUIT BOARD ASSEMBLY - 919-0206
(Sheet 1 of 3)

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|--------------|---|----------|------|
| C1 THRU C10 | Capacitor, Mylar, 0.1 uF, 100V | 030-1053 | 10 |
| C11 | Capacitor, Electrolytic, 100 uF, 25V | 023-1084 | 1 |
| C12 | Capacitor, Mylar, 0.1 uF, 100V | 030-1053 | 1 |
| C13,C14 | Capacitor, Mica, 390 pF ±5%, 100V | 042-3922 | 2 |
| C15 | Capacitor, Electrolytic, 4.7 uF, 35V | 024-4753 | 1 |
| C17,C18 | Capacitor, Poly Film, 0.0022 uF ±10%, 100V | 031-2033 | 2 |
| C19 | Capacitor, Mica, 390 pF ±5%, 100V | 042-3922 | 1 |
| C20 THRU C22 | Capacitor, Mylar, 0.1 uF, 100V | 030-1053 | 3 |
| C23 | Capacitor, Electrolytic, 100 uF, 25V | 023-1084 | 1 |
| C24 THRU C32 | Capacitor, Mylar, 0.1 uF, 100V | 030-1053 | 9 |
| C33,C34 | Capacitor, Electrolytic, 47 uF, 35V | 024-4753 | 2 |
| C35 | Capacitor, Mica, 390 pF ±5%, 100V | 042-3922 | 1 |
| C36 | Capacitor, Electrolytic, 4.7 uF, 35V | 024-4753 | 1 |
| C37,C38 | Capacitor, Mylar, 0.1 uF, 100V | 030-1053 | 2 |
| C39 | Capacitor, Electrolytic, 10 uF, 35V | 023-1076 | 1 |
| D1 THRU D3 | Diode, 1N4148, Silicon, 75V, 0.3 Ampere | 203-4148 | 3 |
| D4,D5 | Diode, 1N4005, Silicon, 600V, 1 Ampere | 203-4005 | 2 |
| D6 THRU D16 | Diode, 1N4148, Silicon, 75V, 0.3 Ampere | 203-4148 | 11 |
| D17 | Diode, 1N4733A, Zener, 5.1V, 1W | 200-4733 | 1 |
| DS1 | Indicator, LED, Green, 521-9175, 3V @ 40 mA Maximum | 323-9224 | 1 |
| DS2 THRU DS5 | Indicator, LED, Red, 521-9212, 2V @ 50 mA Maximum | 323-9217 | 4 |
| J4 | Receptacle, Header, 20-Pin In-line | 417-0200 | 1.3 |
| J5 | Receptacle, Header, 20-Pin In-line | 417-0200 | .70 |
| J11 | Socket, 16-Pin DIP | 417-1604 | 1 |
| J12 THRU J15 | Receptacle, Header, 3-Pin | 417-0003 | 4 |
| P12 THRU P15 | Jumper, Programmable | 340-0004 | 4 |
| Q1 | Transistor, MPS-U45, Silicon, NPN, Darlington | 210-0045 | 1 |
| Q2 | Transistor, MPS-U95, Silicon, PNP, Darlington | 210-0095 | 1 |
| Q3 | Transistor, MPS-U45, Silicon, NPN, Darlington | 210-0045 | 1 |
| Q4 | Transistor, MPS-U95, Silicon, PNP, Darlington | 210-0095 | 1 |
| Q5 | Transistor, MPS-A14, Silicon, NPN, Darlington, 10-92 Case | 211-0014 | 1 |
| Q6 THRU Q8 | Transistor, 2N3906, Silicon, PNP, 10-92 Case | 210-3906 | 3 |
| R1 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 1 |
| R2 | Resistor, 1 Meg Ohm ±5%, 1/4W | 100-1073 | 1 |
| R3 THRU R9 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 7 |
| R10 | Resistor, 47 k Ohm ±5%, 1/4W | 100-4753 | 1 |
| R11 THRU R19 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 9 |
| R20,R21 | Resistor, 47 k Ohm ±5%, 1/4W | 100-4753 | 2 |
| R22 | Resistor, 1.2 k Ohm ±5%, 1/4W | 100-1243 | 1 |
| R23 THRU R25 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 3 |
| R26 | Resistor, 100 k Ohm ±5%, 1/4W | 100-1063 | 1 |
| R27 THRU R30 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 4 |
| R31,R32 | Resistor, 100 k Ohm ±5%, 1/4W | 100-1063 | 2 |
| R33,R34 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 2 |
| R35 | Resistor, 150 k Ohm ±5%, 1/4W | 100-1563 | 1 |
| R38 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 1 |
| R39 | Resistor, 2 k Ohm ±5%, 1/4W | 100-2043 | 1 |
| R40 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 1 |
| R41 | Resistor, 910 Ohm ±5%, 1/4W | 100-9133 | 1 |
| R42 | Potentiometer, 50 k Ohm ±10%, 1/2W (FWD CAL) | 177-5050 | 1 |
| R43 | Resistor, 22 k Ohm ±5%, 1/4W | 100-2253 | 1 |
| R44 | Potentiometer, 100 k Ohm ±10%, 1/2W (RFL CAL) | 177-1065 | 1 |
| R45 | Resistor, 910 Ohm ±5%, 1/4W | 100-9133 | 1 |
| R46,R47,R49 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 3 |
| R51 | Resistor, 10 Meg Ohm ±5%, 1/4W | 100-1083 | 1 |
| R52 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 1 |
| R53 | Resistor, 10 Ohm ±5%, 1/4W | 100-1023 | 1 |
| R54 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 1 |
| R55 | Resistor, 10 Ohm ±5%, 1/4W | 100-1023 | 1 |
| R56 | Resistor, 10 Meg Ohm ±5%, 1/4W | 100-1083 | 1 |

TABLE 4-5. MAIN CIRCUIT BOARD ASSEMBLY - 919-0206
(Sheet 2 of 3)

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-------------------|---|----------|------|
| R57 | Resistor, 1 k Ohm $\pm 5\%$, 1/4W | 100-1043 | 1 |
| R58 | Resistor, 1 Meg Ohm $\pm 5\%$, 1/4W | 100-1073 | 1 |
| R59 | Resistor, 2.2 Meg Ohm $\pm 5\%$, 1/4W | 100-2273 | 1 |
| R60,R61 | Resistor, 100 k Ohm $\pm 5\%$, 1/4W | 100-1063 | 2 |
| R62 | Resistor, 470 k Ohm $\pm 5\%$, 1/4W | 100-4763 | 1 |
| R63 THRU R68 | Resistor, 100 k Ohm $\pm 5\%$, 1/4W | 100-1063 | 6 |
| R69 | Resistor, 1 Meg Ohm $\pm 5\%$, 1/4W | 100-1073 | 1 |
| R72 | Resistor, 1.3 Meg Ohm $\pm 5\%$, 1/4W | 100-1373 | 1 |
| R73 | Resistor, 634 k Ohm $\pm 1\%$, 1/4W | 103-6346 | 1 |
| R74 | Resistor, 324 k Ohm $\pm 1\%$, 1/4W | 103-3246 | 1 |
| R75 | Resistor, 162 k Ohm $\pm 1\%$, 1/4W | 103-1626 | 1 |
| R76 | Resistor, 80.6 k Ohm $\pm 1\%$, 1/4W | 103-8065 | 1 |
| R77 | Resistor, 40.2 k Ohm $\pm 1\%$, 1/4W | 103-4025 | 1 |
| R78 | Resistor, 20 k Ohm $\pm 1\%$, 1/4W | 103-2051 | 1 |
| R79 | Resistor, 10 k Ohm $\pm 1\%$, 1/4W | 100-1051 | 1 |
| R80 | Resistor, 10 Ohm $\pm 5\%$, 1/4W | 100-1023 | 1 |
| R81 | Resistor, 390 k Ohm $\pm 5\%$, 1/4W | 100-3963 | 1 |
| R83 | Resistor, 5.1 k Ohm $\pm 5\%$, 1/4W | 100-5143 | 1 |
| R84 | Resistor, 10 Ohm $\pm 5\%$, 1/4W | 100-1023 | 1 |
| R87 | Potentiometer, 5 k Ohm $\pm 10\%$, 1/2W (PRESET CAL) | 177-5044 | 1 |
| R90 | Resistor, 10 Ohm $\pm 5\%$, 1/4W | 100-1023 | 1 |
| R91 | Resistor, 10 k Ohm $\pm 1\%$, 1/4W | 100-1051 | 1 |
| R92 | Resistor, 115 Ohm $\pm 1\%$, 1/4W | 100-1131 | 1 |
| R93 | Resistor, 1 k Ohm $\pm 1\%$, 1/4W | 103-1041 | 1 |
| R94 | Resistor, 5.1 k Ohm $\pm 5\%$, 1/4W | 100-5143 | 1 |
| R99 | Resistor, 10 Ohm $\pm 5\%$, 1/4W | 100-1023 | 1 |
| R100,R101 | Resistor, 390 k Ohm $\pm 5\%$, 1/4W | 100-3963 | 2 |
| R102 | Resistor, 10 Ohm $\pm 5\%$, 1/4W | 100-1023 | 1 |
| R103 | Resistor, 5.1 k Ohm $\pm 5\%$, 1/4W | 100-5143 | 1 |
| R104 THRU R107 | Resistor, 1.2 k Ohm $\pm 5\%$, 1/4W | 100-1243 | 4 |
| R108 | Resistor, 5.1 k Ohm $\pm 5\%$, 1/4W | 100-5143 | 1 |
| R109,R110 | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 2 |
| R111 | Resistor, 1 k Ohm $\pm 5\%$, 1/4W | 100-1043 | 1 |
| R112 | Resistor, 100 k Ohm $\pm 5\%$, 1/4W | 100-1063 | 1 |
| R113 | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 1 |
| U1 | Integrated Circuit, CD4050BCN, Hex Non-Inverting Buffer, 16-Pin DIP | 228-4050 | 1 |
| U2 | Integrated Circuit, 4N33, Infrared LED, Photo Darlington, 6-Pin DIP | 229-0033 | 1 |
| U3,U4 | Integrated Circuit, CD4027BE, Dual J-K Flip-Flop, 16-Pin DIP | 225-0003 | 2 |
| U5,U6 | Integrated Circuit, 4N33, Infrared LED, Photo Darlington, 6-Pin DIP | 229-0033 | 2 |
| U7 | Integrated Circuit, MC14001B, Quad 2-Input NOR Gate, 14-Pin DIP | 228-4001 | 1 |
| U8 | Integrated Circuit, MC14002B, Dual 4-Input NOR Gate, 14-Pin DIP | 228-4002 | 1 |
| U9 | Integrated Circuit, CD4069CN, Inverter, CMOS, 14-Pin DIP | 228-4069 | 1 |
| U10 | Integrated Circuit, MC14001B, Quad 2-Input NOR Gate, 14-Pin DIP | 228-4001 | 1 |
| U11 | Integrated Circuit, MC1416, Seven Darlington Peripheral Drivers, 16-Pin DIP | 226-2004 | 1 |
| U12 | Integrated Circuit, MC14011B, Quad 2-Input NAND Gate, 14-Pin DIP | 228-4011 | 1 |
| U13 | Integrated Circuit, CD4066BE, Quad Bilateral Switch, 14-Pin DIP | 225-0004 | 1 |
| U14 | Integrated Circuit, CD4019AE, Quad AND/OR Select Gate, 16-Pin DIP | 228-4019 | 1 |
| U15 | Integrated Circuit, MC1416, Seven Darlington Peripheral Drivers, 16-Pin DIP | 226-2004 | 1 |
| U16 | Integrated Circuit, 4047B, Monostable/Astable Multivibrator, CMOS, 14-Pin DIP | 220-4047 | 1 |
| U17 | Integrated Circuit, MC14011B, Quad 2-Input NAND Gate, 14-Pin DIP | 228-4011 | 1 |
| U18,U19 | Integrated Circuit, LM358N, Low Power, Dual Operational Amplifier, 8-Pin DIP | 221-0358 | 2 |
| U20 | Integrated Circuit, CD4069CN, Inverter, CMOS, 14-Pin DIP | 228-4069 | 1 |

TABLE 4-5. MAIN CIRCUIT BOARD ASSEMBLY - 919-0206
(Sheet 3 of 3)

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|---------------------------------|---|----------|------|
| U21 | Integrated Circuit, 14 Stage Counter, CMOS, 16-Pin DIP | 228-4020 | 1 |
| U22 | Integrated Circuit, CD4012, Dual 4-Input NAND Gate, 14-Pin DIP | 228-4012 | 1 |
| U23,U24 | Integrated Circuit, MC14516B, Binary Up/Down Counter, CMOS, 16-Pin DIP | 228-4516 | 2 |
| U25,U26 | Integrated Circuit, CD4050BC, Hex Non-Inverting Buffer, 16-Pin DIP | 228-4050 | 2 |
| U27 THRU U29 | Integrated Circuit, LM358, Low Power Dual Operational Amplifier, 8-Pin DIP | 221-0358 | 3 |
| U30 | Integrated Circuit, LM317T, Positive 3-Terminal Adjustable Voltage Regulator, 1.2V-37V, 1.5A Maximum, TO-220 Case | 227-0317 | 1 |
| U31,U32 | Integrated Circuit, LM358, Low Power Dual Operational Amplifier, 8-Pin DIP | 221-0358 | 2 |
| U33 | Integrated Circuit, MC14002B, Dual 4-Input NOR Gate, 14-Pin DIP | 228-4002 | 1 |
| U34 | Integrated Circuit, MC14001B, Quad 2-Input NOR Gate, 14-Pin DIP | 228-4001 | 1 |
| XR82,XR86, XR89,XR96 | Socket, 8-Pin DIP | 417-0088 | 4 |
| XU1 | Socket, 16-Pin DIP | 417-1604 | 1 |
| XU2 | Socket, 6-Pin DIP | 417-0600 | 1 |
| XU3,XU4 | Socket, 16-Pin DIP | 417-1604 | 2 |
| XU5,XU6 | Socket, 6-Pin DIP | 417-0600 | 2 |
| XU7 THRU XU10 | Socket, 14-Pin DIP | 417-1404 | 4 |
| XU11 | Socket, 16-Pin DIP | 417-1604 | 1 |
| XU12,XU13 | Socket, 14-Pin DIP | 417-1404 | 2 |
| XU14,XU15 | Socket, 16-Pin DIP | 417-1604 | 2 |
| XU16,XU17 | Socket, 14-Pin DIP | 417-1404 | 2 |
| XU18,XU19 | Socket, 8-Pin DIP | 417-0804 | 2 |
| XU20 | Socket, 14-Pin DIP | 417-1404 | 1 |
| XU21 | Socket, 16-Pin DIP | 417-1604 | 1 |
| XU22 | Socket, 14-Pin DIP | 417-1404 | 1 |
| XU23 THRU XU26 | Socket, 16-Pin DIP | 417-1604 | 4 |
| XU27 THRU XU29,XU31, XU32 | Socket, 8-Pin DIP | 417-0804 | 5 |
| XU33,XU34 | Socket, 14-Pin DIP | 417-1404 | 2 |
| ---- | Holder, Battery | 415-0002 | 1 |
| ---- | Blank Circuit Board | 519-0027 | 1 |

TABLE 4-6. FRONT PANEL CIRCUIT BOARD ASSEMBLY - 919-0028

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|--|----------|------|
| D1,D2 | Diode, 1N4005, Silicon, 600V, 1 Ampere | 203-4005 | 2 |
| J6 | Receptacle, Header, 20-Pin In-line | 417-0200 | .8 |
| J7 | Receptacle, Header, 20-Pin In-line | 417-0200 | .2 |
| R1 | Resistor, 23.2 k Ohm $\pm 1\%$, 1/4W | 103-2325 | 1 |
| R2 | Resistor, 4.75 k Ohm $\pm 1\%$, 1/4W | 103-4741 | 1 |
| R3 | Resistor, 5.11 k Ohm $\pm 1\%$, 1/4W | 103-5141 | 1 |
| R4 | Resistor, 9.31 k Ohm $\pm 1\%$, 1/4W | 103-9314 | 1 |
| R5 | Resistor, 3.65 k Ohm $\pm 1\%$, 1/4W | 103-3641 | 1 |
| R6 | Resistor, 39 Ohm $\pm 5\%$, 1/4W | 100-3923 | 1 |
| R7 | Resistor, 1.8 k Ohm $\pm 5\%$, 1/4W | 100-1843 | 1 |
| R8 | Resistor, 39 Ohm $\pm 5\%$, 1/4W | 100-3923 | 1 |
| R9 | Resistor, 1.8 k Ohm $\pm 5\%$, 1/4W | 100-1843 | 1 |
| R10 | Resistor, 39 Ohm $\pm 5\%$, 1/4W | 100-3923 | 1 |
| R11 | Resistor, 1.8 k Ohm $\pm 5\%$, 1/4W | 100-1843 | 1 |
| R12 | Resistor, 39 Ohm $\pm 5\%$, 1/4W | 100-3923 | 1 |
| R13 | Resistor, 1.8 k Ohm $\pm 5\%$, 1/4W | 100-1843 | 1 |
| R14 | Resistor, 39 Ohm $\pm 5\%$, 1/4W | 100-3923 | 1 |
| R15 | Resistor, 1.8 k Ohm $\pm 5\%$, 1/4W | 100-1843 | 1 |
| R17 | Potentiometer, 5 k Ohm $\pm 10\%$, 1/2W | 178-5043 | 1 |
| ---- | Blank Circuit Board | 519-0028 | 1 |

TABLE 4-7. REAR PANEL CIRCUIT BOARD ASSEMBLY - 919-0207

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|---|---|-------------------|------|
| C1 THRU C5, C7 THRU C13, C15,C17 THRU C21, C23 THRU C33 | Capacitor, Mica, 390 pF ±5%, 100V | 042-3922 | 29 |
| C34 | Capacitor, Electrolytic, 470 uF, 50V | 024-4783 | 1 |
| C35,C36 | Capacitor, Electrolytic, 3.3 uF, 50V | 020-3363 | 2 |
| C37 THRU C45 | Capacitor, Mica, 390 pF ±5%, 100V | 042-3922 | 9 |
| C46,C47 | Capacitor, Electrolytic, 3.3 uF, 50V | 020-3363 | 2 |
| C48 THRU C56 | Capacitor, Mica, 390 pF ±5%, 100V | 042-3922 | 9 |
| C57,C58 | Capacitor, Electrolytic, 100 uF, 50V | 020-1083 | 2 |
| C59,C60 | Capacitor, Mica, 390 pF ±5%, 100V | 042-3922 | 2 |
| D1 THRU D4 | Diode, HP5082-2800, Silicon, High Voltage Schottky Barrier Type, 70V, 15 mA | 201-2800 | 4 |
| D5 THRU D13 | Diode, 1N4005, Silicon, 600V, 1 Ampere | 203-4005 | 9 |
| D14,D15 | Diode, 1N6276A, Silicon, Transient Voltage Suppressor, 16V ±0.05% Breakdown | 206-6276 | 2 |
| D16,D17 | Diode, Zener, 1N4739A, 9.1V ±5%, 1W | 200-0009 | 2 |
| F1,F2 | Fuse, 3 AG, 1 Ampere | 330-0100 | 2 |
| J1,J2 | Receptacle, 6-Pin | 417-0677 | 2 |
| J3 | Receptacle, 20-Pin, In-line | 417-0200 | 1.3 |
| J8 | Receptacle, 25-Pin | 417-2500 | 1 |
| J11 | Receptacle, 20-Pin In-line (Jumper in place of DAC circuit board used in FM-1.5A only) | 417-0200 | .70 |
| L1 THRU L10 | Choke, 4.7 uH ±10%, 430 mA, dc Resistance = 0.55 Ohms | 360-0022 | 10 |
| P11 | Plug, Header, 14-Pin | 417-6002- 0014 | 1 |
| R1,R2 | Resistor, 56 Ohm ±5%, 2W | 130-5621 | 2 |
| R3 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 1 |
| R4 | Resistor, 47 k Ohm ±5%, 1/4W | 100-4753 | 1 |
| R5 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 1 |
| R7 THRU R12 | Resistor, 1 k Ohm ±5%, 1/4W | 100-1043 | 6 |
| R13,R14 | Resistor, 470 Ohm ±5%, 1/4W | 100-4733 | 2 |
| R15,R16 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 2 |
| R17 | Resistor, 68 Ohm ±5%, 2W | 132-6832 | 1 |
| R18 | Resistor, 4.22 k Ohm ±1%, 1/4W | 103-4224 | 1 |
| R19 THRU R22 | Resistor, 1 k Ohm ±5%, 1/4W | 100-1043 | 4 |
| R24 | Resistor, 115 Ohm ±1%, 1/4W | 100-1131 | 1 |
| R25 | Resistor, 1.24 k Ohm ±1%, 1/4W | 103-1244 | 1 |
| R26 | Resistor, 115 Ohm ±1%, 1/4W | 100-1131 | 1 |
| R27 | Resistor, 1.24 k Ohm ±1%, 1/4W | 103-1244 | 1 |
| R28 | Resistor, 150 Ohm ±1%, 1/4W | 100-1531 | 1 |
| R29 | Resistor, 536 Ohm ±1%, 1/4W | 103-5363 | 1 |
| S1 | Switch, Toggle, DPDT 5 Amperes, resistive load @ 120V ac/28V dc 2 Amperes, resistive load @ 250V ac | 340-0012 | 1 |
| U1,U2 | Integrated Circuit, LM317K, Positive 3-Terminal Adjustable Voltage Regulator, 1.2V to 37V, 1.5A Maximum, 10-3 Case | 227-0318 | 2 |
| ---- | Fuse Clips | 415-2068 | 4 |
| ---- | Blank Circuit Board | 519-0029 | 1 |

TABLE 4-8. ASSEMBLY, AUTOMATIC POWER CONTROL JUMPER NETWORK - 959-1001

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|--------------------------|----------|------|
| P11 | Plug, Header, 16-Pin DIP | 418-0030 | 1 |

TABLE 4-9. REAR-PANEL CIRCUIT BOARD JUMPER ASSEMBLY, AUTOMATIC POWER CONTROL UNIT
959-0236

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|--------------------------------------|----------|------|
| P11 | Connector, Housing, 14-Pin In-line | 417-1401 | 1 |
| ---- | Pins, Receptacle (for Connector P11) | 417-8766 | 8 |

TABLE 4-10. ASSEMBLY, AUTOMATIC POWER CONTROL RESISTOR NETWORK - 959-1000-007

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|--------------------------------------|----------|------|
| PR82 | Plug, Header, 8-Pin DIP | 418-0112 | 1 |
| R82A | Resistor, 390 k Ohm $\pm 5\%$, 1/4W | 100-3963 | 1 |
| R82B | Resistor, 5.1 k Ohm $\pm 5\%$, 1/4W | 100-5143 | 1 |
| R82C,R82D | Resistor, 1 k Ohm $\pm 5\%$, 1/4W | 100-1043 | 2 |

TABLE 4-11. ASSEMBLY, AUTOMATIC POWER CONTROL RESISTOR NETWORK - 959-1000-008



| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|--------------------------------------|----------|------|
| PR86 | Plug, Header, 8-Pin DIP | 418-0112 | 1 |
| R86A | Resistor, 4.7 k Ohm $\pm 5\%$, 1/4W | 100-4743 | 1 |
| R86B | Resistor, 470 Ohm $\pm 5\%$, 1/4W | 100-4733 | 1 |
| R86C | Resistor, 4.7 k Ohm $\pm 5\%$, 1/4W | 100-4743 | 1 |
| R86D | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 1 |

TABLE 4-12. ASSEMBLY, AUTOMATIC POWER CONTROL RESISTOR NETWORK - 959-1000-009

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|---------------------------------------|----------|------|
| PR89 | Plug, Header, 8-Pin DIP | 418-0112 | 1 |
| R89A | Resistor, 10 Meg Ohm $\pm 5\%$, 1/4W | 100-1083 | 1 |
| R89B | Resistor, 2.7 k Ohm $\pm 5\%$, 1/4W | 100-2743 | 1 |
| R89C | Resistor, 2.4 k Ohm $\pm 5\%$, 1/4W | 100-2443 | 1 |
| R89D | Resistor, 22 k Ohm $\pm 5\%$, 1/4W | 100-2253 | 1 |

TABLE 4-13. ASSEMBLY, AUTOMATIC POWER CONTROL RESISTOR NETWORK - 959-1000-010

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|--------------------------------------|----------|------|
| PR96 | Plug, Header, 8-Pin DIP | 418-0112 | 1 |
| R96B | Resistor, 270 Ohm $\pm 5\%$, 1/4W | 100-2733 | 1 |
| R96C | Resistor, 100 Ohm $\pm 5\%$, 1/4W | 100-1033 | 1 |
| R96D | Resistor, 2.7 k Ohm $\pm 5\%$, 1/4W | 100-2743 | 1 |

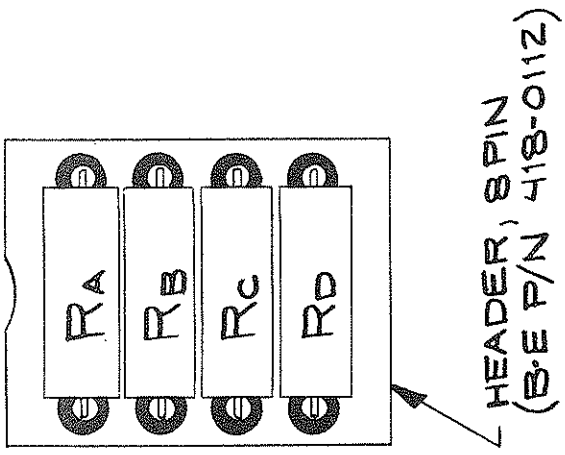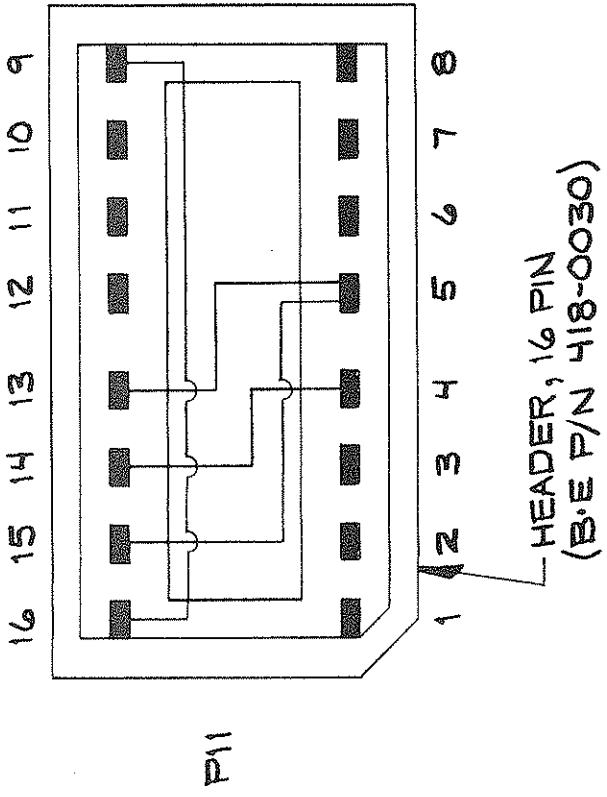

| RESISTOR NETWORK NO. | OHMS RESISTANCE | | | |
|----------------------|-----------------|-------|------|------|
| | RA | RB | RC | RD |
| R82 | 390K | 5.1K. | 1K | 1.8K |
| R86 | 4.7K | 470 | 4.7K | 10K |
| R89 | 10M | 2.7K | 2.4K | 22K |
| R96 | UNUSED | 270 | 100 | 3.9K |

FIGURE 3-10. AUTOMATIC POWER CONTROL PROGRAM NETWORKS

TABLE OF CONTENTS

| <u>PARAGRAPH</u> | | <u>PAGE NO.</u> |
|------------------|---|-----------------|
| SECTION I | THEORY OF OPERATION | |
| 1-1 | Introduction | 1-1 |
| 1-3 | Functional Description | 1-1 |
| 1-5 | General Description | 1-1 |
| 1-9 | Operation | 1-1 |
| 1-16 | Remote Control | 1-2 |
| 1-17 | Interlocks | 1-2 |
| 1-19 | Overloads | 1-5 |
| 1-23 | Detailed Description | 1-5 |
| 1-24 | RFI Filter Circuit Board | 1-5 |
| 1-25 | Motherboard | 1-5 |
| 1-26 | Controller Circuit Board | 1-5 |
| 1-66 | Power Supply Circuit Board | 1-16 |
| SECTION II | MAINTENANCE | |
| 2-1 | Introduction | 2-1 |
| 2-3 | Safety Considerations | 2-1 |
| 2-5 | Maintenance | 2-1 |
| 2-7 | Adjustments | 2-1 |
| 2-9 | Controller Circuit Board Control Adjustment | 2-2 |
| 2-10 | VSWR Overload Threshold Adjust (R88) | 2-2 |
| 2-28 | Grid (R84), Plate (R75), and Screen (R80) Overload Adjustments | 2-4 |
| 2-39 | Warm-Up Adjustment (R101) | 2-5 |
| 2-45 | Cool-Down Adjustment (R97) | 2-5 |
| 2-52 | Recycle Adjustment (R67) | 2-6 |
| 2-57 | Warm-Up Defeat Adjustment (R106) | 2-6 |
| 2-64 | Plate I Meter Cal. Adjustment (R125) | 2-7 |
| 2-72 | Power Supply Circuit Board | 2-8 |
| 2-73 | +15 Volt Adjust (R2) | 2-8 |
| 2-95 | Troubleshooting | 2-10 |
| SECTION III | DRAWINGS | |
| 3-1 | Introduction | 3-1 |
| SECTION IV | PARTS LIST | |
| 4-1 | Introduction | 4-1 |

SECTION I
TRANSMITTER CONTROLLER THEORY OF OPERATION

1-1. INTRODUCTION.

1-2. The following text provides theory of operation with supporting diagrams for the FM-5A transmitter controller.

1-3. FUNCTIONAL DESCRIPTION.

1-4. Two levels of discussion are provided. A general discussion of the transmitter controller operation at block diagram level is followed by a detailed discussion of circuit operation.

1-5. GENERAL DESCRIPTION.

1-6. All status displays and most control functions in the FM-5A transmitter are implemented through use of a digital controller that monitors transmitter operation (see Figure 1-1). Using information collected throughout the transmitter, the controller will determine what control actions are required and complete these actions (such as timed intervals, overloads, or interlocks) without delay. The transmitter control logic will interface with most modern remote control devices and ATS units.

1-7. Information concerning overloads is presented by four front-panel indicators and stored for analysis after the problem has occurred to aid in problem resolution. Seven additional front-panel status indicators provide information relative to transmitter operation. Two internal LEDs indicate the transmitter power supply status and the controller overload and power-up memory battery status.

1-8. An optional diagnostic monitoring system utilizing a CRT display is available with the FM-5A transmitter. This microprocessor-based system continuously monitors and controls all major parameters of the transmitter and functions independently of the standard digital control circuit. Video displays of the transmitter operating conditions may be displayed in either an analog tabular chart format or a digital bargraph format. This system may be factory installed or field retrofitted to an existing FM-5A transmitter.

1-9. OPERATION.

1-10. The controller is constructed with solid-state digital circuitry on five circuit boards. The circuit boards are mounted within an enclosed chassis with a removable top for ease of maintenance. The RFI filter circuit board processes all inputs and outputs to minimize susceptibility to RF interference, the motherboard provides bus interconnections for the controller circuit board, and the controller circuit board provides logic functions. All the front-panel LED indicators are mounted on the front-panel indicator circuit board and all the front-panel switches are mounted on the front-panel switch circuit board. All operational potentials for the controller are provided by its own power supply. A fan ensures cool and reliable operation of the controller power supply.

1-11. Commands such as "filament on" and "high voltage on" are initiated by a momentary HIGH applied to conditional logic circuitry on the controller circuit board. A "one-button start" may be selected by depressing the HIGH VOLTAGE ON switch/indicator only. As each switch is depressed, the associated switch/indicator will illuminate to indicate that the selected command has been received and stored.

1-12. Assuming the FILAMENT ON and/or HIGH VOLTAGE ON switch/indicators have been depressed and all safety interlocks are closed, the blower will start. The safety-interlocks closed condition is signified by illumination of the front-panel INTERLOCK indicator.


1-13. When the air pressure switch closes, the BLOWER indicator will illuminate and the conditional logic will start the filament warm-up timer, apply filament voltage to the PA tube, and illuminate the FILAMENT indicator.

1-14. After the filament warm-up delay expires, if no overloads exist, all interlocks remain closed, and the air switch remains closed, a "high-voltage on" signal will be output to the high voltage step-start circuitry and remove the mute command from the FM exciter. The associated HIGH VOLTAGE indicator will illuminate to indicate that a "high voltage on command" has been output from the controller.

1-15. If the HIGH VOLTAGE OFF switch/indicator is depressed, a momentary HIGH applied to the conditional logic circuitry will deenergize the high voltage supply. When the FILAMENT OFF switch is depressed, a momentary HIGH applied to the conditional logic circuitry will deenergize the filament supply and initiate a filament cool-down interval. When the filament cool-down timer delay expires, the blower will deenergize. The FILAMENT OFF switch/indicator can be used to simultaneously deenergize both the plate and filament supplies if desired.

1-16. REMOTE CONTROL. Transmitter remote control is enabled whenever the automatic power control unit (APC) REMOTE DISABLE switch/indicator is not illuminated. Local control of the transmitter is possible at all times. The remote control inputs are routed through the controller RFI filter and coupled to the conditional logic circuitry in parallel with the local inputs through optical isolators. These optical isolators are enabled by a ground from the APC REMOTE DISABLE switch/indicator. Remote metering and status outputs are active at all times. A "one-button start" feature is incorporated as a remote control provision by using the high voltage on feature for one-button start and the filament off feature for one-button stop. All timing will be handled by the controller logic.

1-17. INTERLOCKS. If a safety interlock opens, the transmitter will deenergize immediately. The transmitter must be manually restored to operation after the open interlock is closed. The controller front-panel INTERLOCK indicator will go out to indicate an open interlock. If the opened safety interlock is closed before the filament cool-down timer interval expires, the blower will re-energize for the remaining duration of the cool-down cycle and then deenergize. If the air pressure interlock opens, the power supplies will deenergize immediately. When the interlock closes, the transmitter will return to operation automatically.

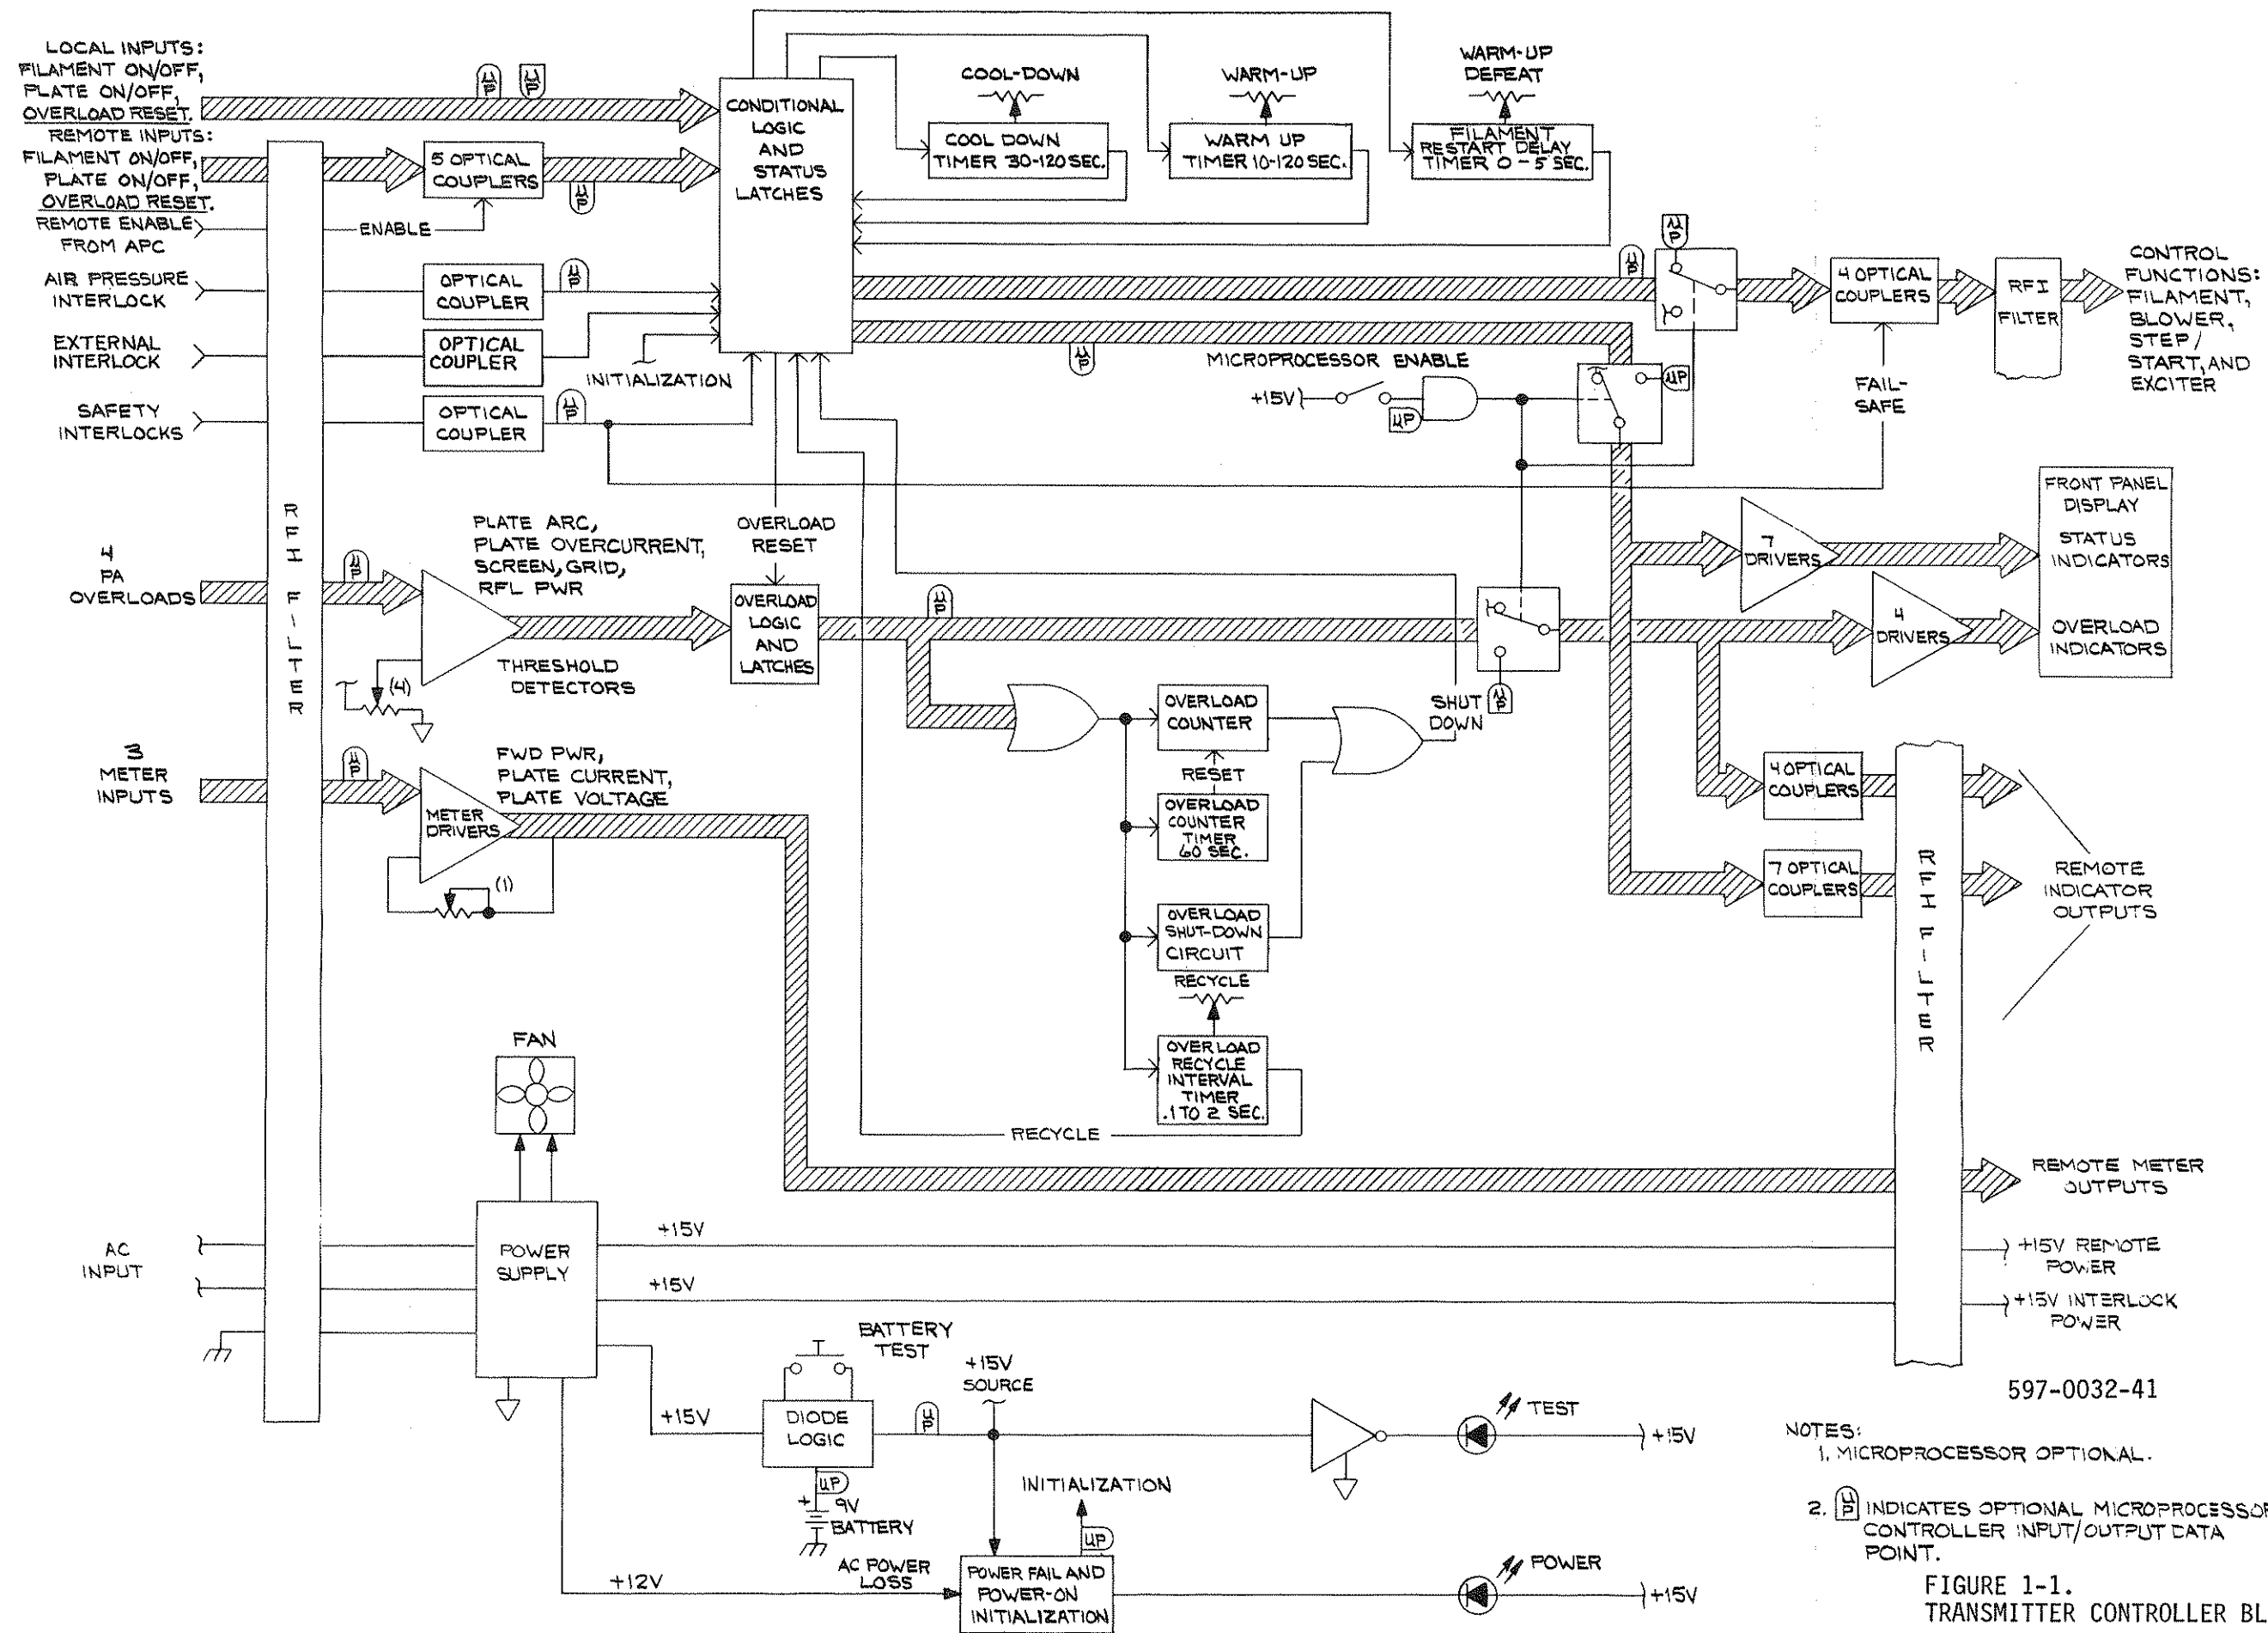


- NOTES:
1. MICROPROCESSOR OPTIONAL.
 2.  INDICATES OPTIONAL MICROPROCESSOR CONTROLLER INPUT/OUTPUT DATA POINT.

FIGURE 1-1.
TRANSMITTER CONTROLLER BLOCK DIAGRAM

1-18. If the external interlock is opened, only the high voltage plate supply will be deenergized. The controller HIGH VOLTAGE STATUS indicator and the external interlock indicator (if installed) will extinguish to indicate an open interlock. When the external interlock is closed, the transmitter will return to operation automatically.

1-19. OVERLOADS. Plate current, screen current, control grid bias supply current, and PA reflected power are monitored for overload conditions. If an overload occurs, this information will be applied to the overload logic circuitry.

1-20. Any overload will illuminate the OVERLOAD indicator and initiate two timed intervals. A timer/counter pair monitors the number of times an overload occurs during a 60 second interval and the second timer delays restoration of the transmitter to operation to allow the condition that prompted the overload to dissipate.

1-21. When the timed interval delaying restoration of the transmitter to operation has expired, the transmitter will recycle back into operation. If no further overloads occur during the 60 second interval following the first overload, the 60 second timer will clear the overload counter. If four overload recycles occur during the 60 second counter/timer interval, the transmitter will deenergize and must be manually reset. This can be done by depressing the OVERLOAD switch/indicator, the FILAMENT ON switch/indicator, and the HIGH VOLTAGE ON switch/indicator. The overload can also be cleared by remote control if remote control is enabled by the APC REMOTE DISABLE switch/indicator.

1-22. If an overload persists in duration for longer than 0.22 seconds, the overload shut-down circuit will consider the overload a short circuit and immediately deenergize the transmitter. The transmitter must then be manually restored to operation after the fault is repaired.

1-23. DETAILED DESCRIPTION.

1-24. RFI FILTER CIRCUIT BOARD. All controller inputs and outputs are routed through connectors J1, J2, and J3 mounted to the RFI filter circuit board. The circuitry consists of single PI-section low-pass RC and LC filters effective to 108 MHz and connected in series with each input and output to prevent RF leakage into the controller.

1-25. MOTHERBOARD. The motherboard provides a single 100-pin edge connector (J1) to mount the controller circuit board. Logic inputs and outputs to the motherboard are routed via ribbon cables and connected to J3 and J4. Power is connected to J2.

1-26. CONTROLLER CIRCUIT BOARD. Input latches U17A, U17B, and U17C are used to store the momentary contact closures representative of command inputs (see Figure 1-2). When the FILAMENT ON switch/indicator is depressed, a momentary LOW from NOR gate U9A will force the Q output of U17A HIGH. When the HIGH VOLTAGE ON switch/indicator is depressed, a momentary LOW from NOR gate U10A will force the Q output of U17B HIGH. A "one-button start" feature is provided by a connection from the Q output of U17B to U9A.

1-27. Blower On. The HIGH from the Q output of U17A is applied to the blower off delay circuit, analog switch U32, blower timer U23A and filament gate U19A. The blower off delay circuit has no function at transmitter turn-on. The input to analog switch U32 illuminates the FILAMENT ON switch/indicator to signify that the filament on command has been received and stored. A HIGH from the Q output of blower timer U23A will be applied to blower AND gate U26A through OR gate U24A. Assuming the safety interlocks remain closed, the remaining input to U26A will be HIGH and a HIGH will be output through analog switch U32 and optical isolator U38 to energize the blower control circuitry.

1-28. The output potential for optical isolator U38 is routed through the safety interlocks. If the safety interlock string opens, the blower control voltage will be disconnected and the safety interlock control logic will completely deenergize the transmitter.

1-29. Filament On. As the blower continues to operate, the air switch will close. The air switch closed signal is applied to optical isolator U6 which forces a HIGH from U12B and a LOW from U12C. The LOW from U12C is applied to inverter U18A which will output a HIGH to filament AND gate U19A. As the remaining input to U19A was set HIGH by the Q output of U17A, a HIGH will be output through analog switch U34 and optical isolator U37 to activate the filament circuit. The FILAMENT status indicator will illuminate to signify that the filament circuit is energized.

1-30. The output potential for optical isolator U37 is routed through the safety interlocks. If the safety interlock string opens, the filament control voltage will be disconnected and the safety interlock control logic will completely deenergize the transmitter.

1-31. High Voltage On. Assuming the HIGH VOLTAGE ON switch/indicator has been depressed, a HIGH from the Q output of U17B through analog switch U32 will illuminate the HIGH VOLTAGE ON switch/indicator to signify the high voltage on command has been received and stored. The previously set HIGH from U19A (the filament gate) will also be applied to the filament on delay and gate U14B.

1-32. If the ac power status input to U14B is HIGH, AND gate U14B will output a HIGH to start filament timer U23B. The output of U23B will start HIGH, go LOW for the duration of the filament heating delay, then return HIGH. The filament on delay circuit will hold a momentary LOW on high voltage gate U25A to prevent the time delay encountered in starting timer U23B from pulsing the high voltage circuit on, then off, then back on after the filament heating delay.

1-33. When the filament heating delay has expired and a HIGH from U19B signals that no overloads exist, U25A will output a HIGH to U34. U34 operating in conjunction with inverter U51C will output a LOW to step-start OR gate U24B. If a LOW from the external interlock circuit is present (indicating the interlock is closed), U24B will output a LOW to energize the step-start circuit.


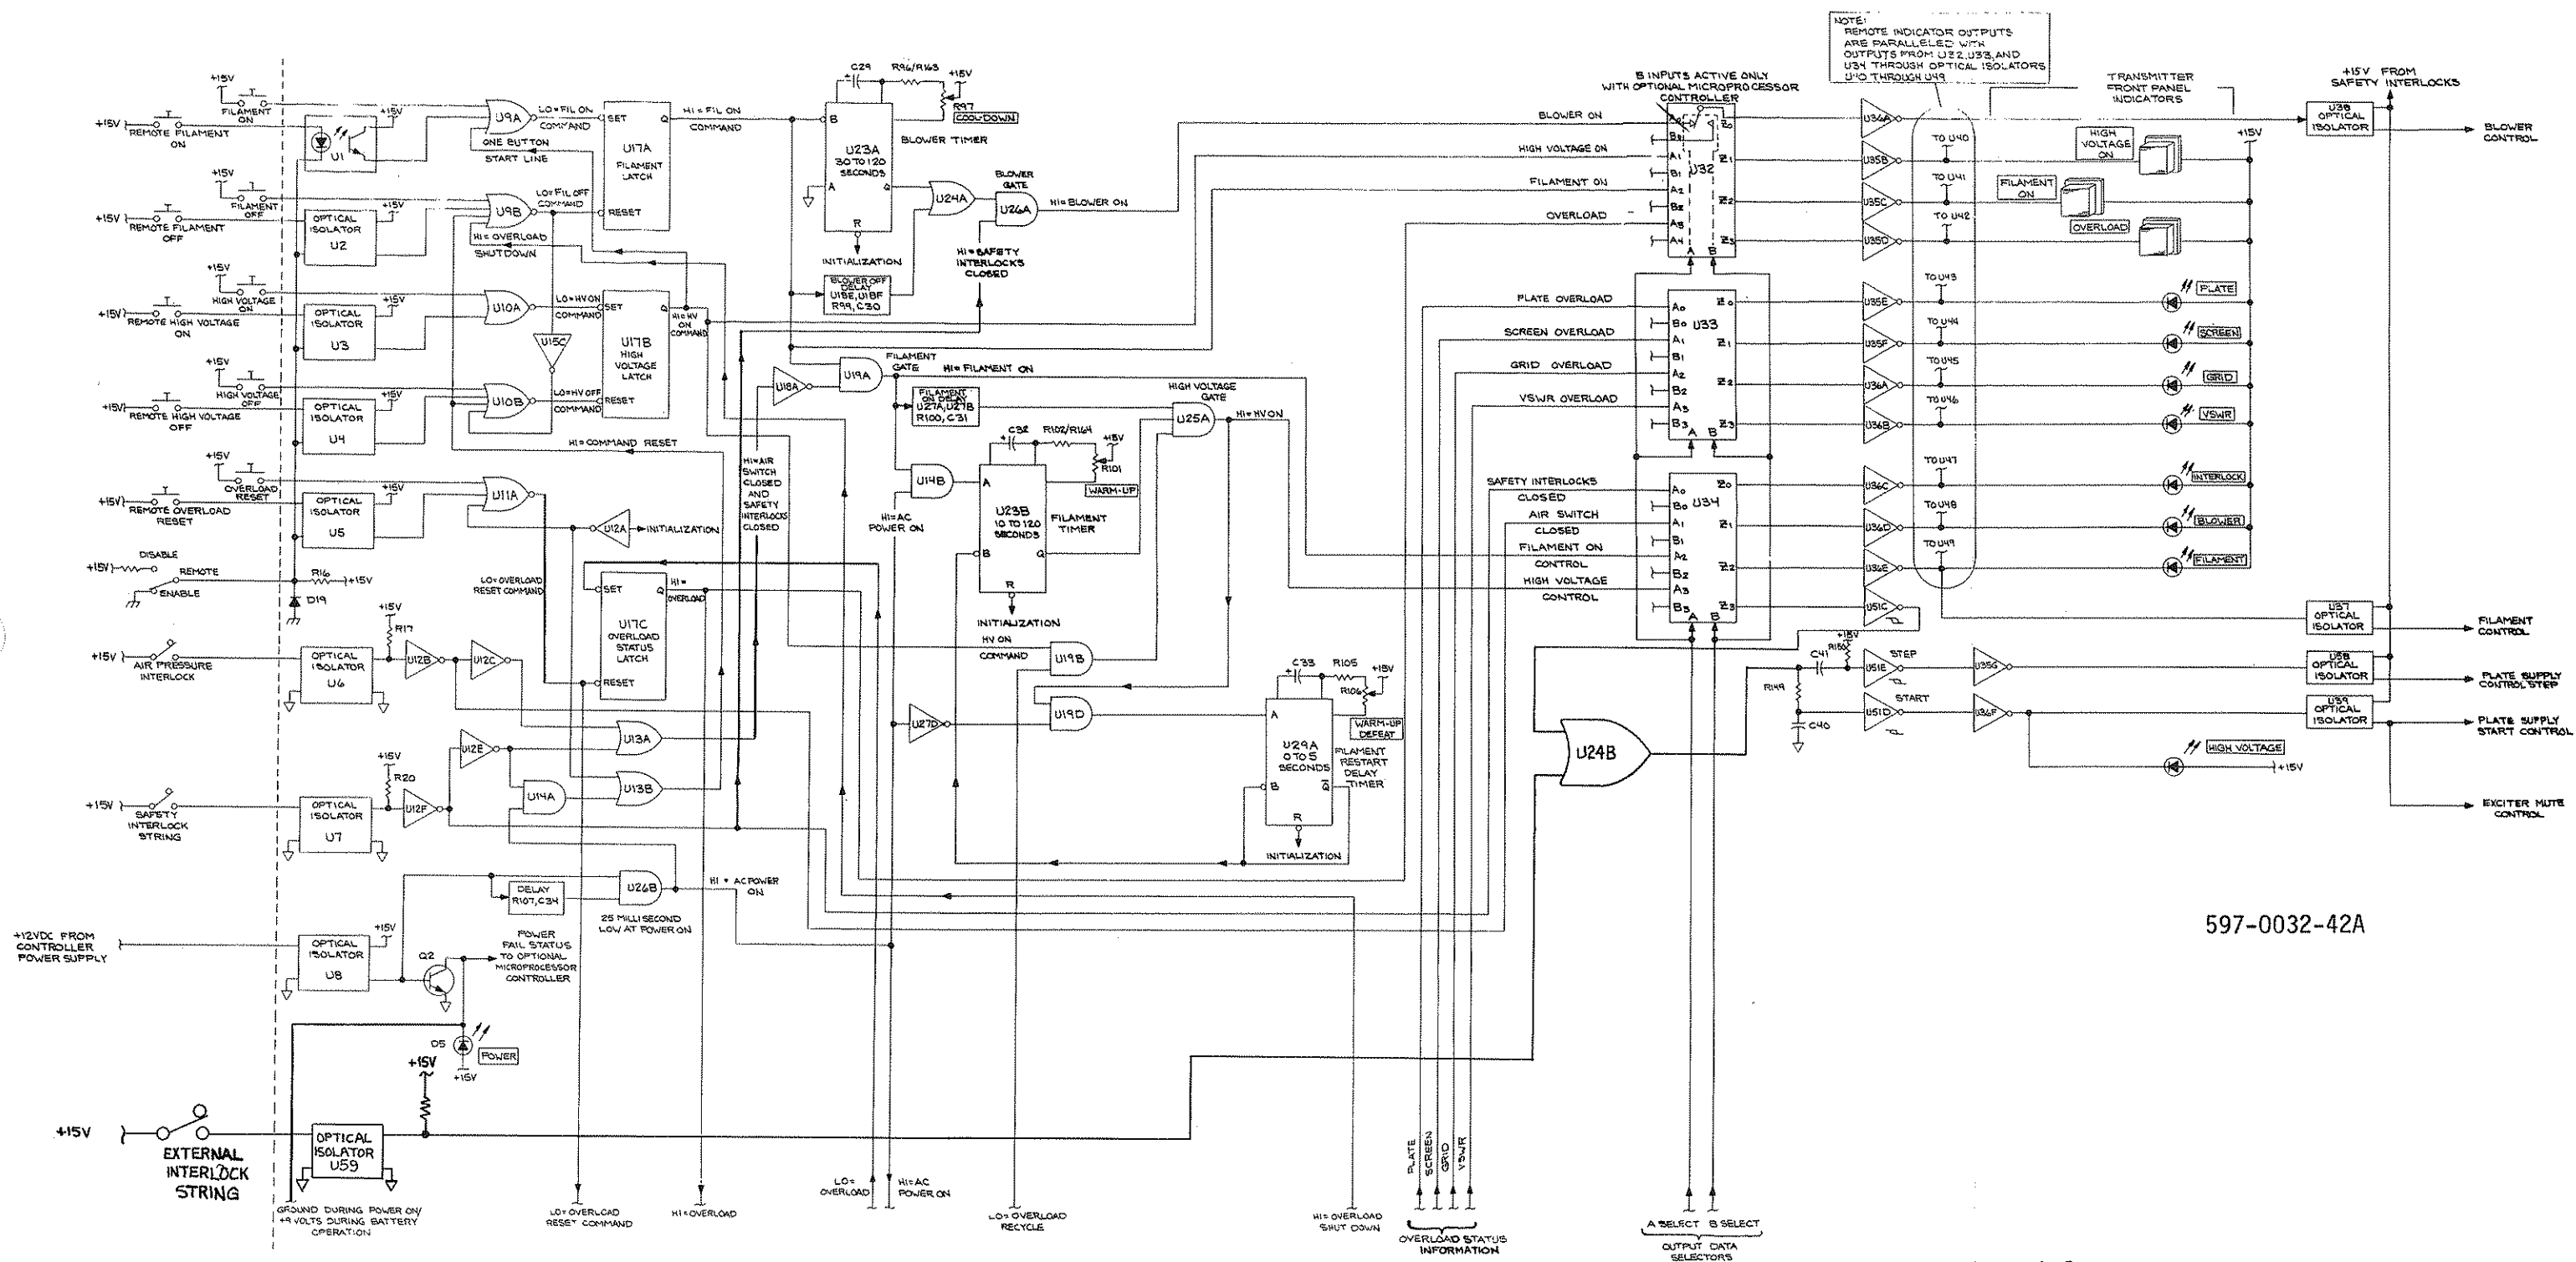


FIGURE 1-2.
CONTROLLER CIRCUIT BOARD SIMPLIFIED SCHEMATIC
(SHEET 1 OF 2)

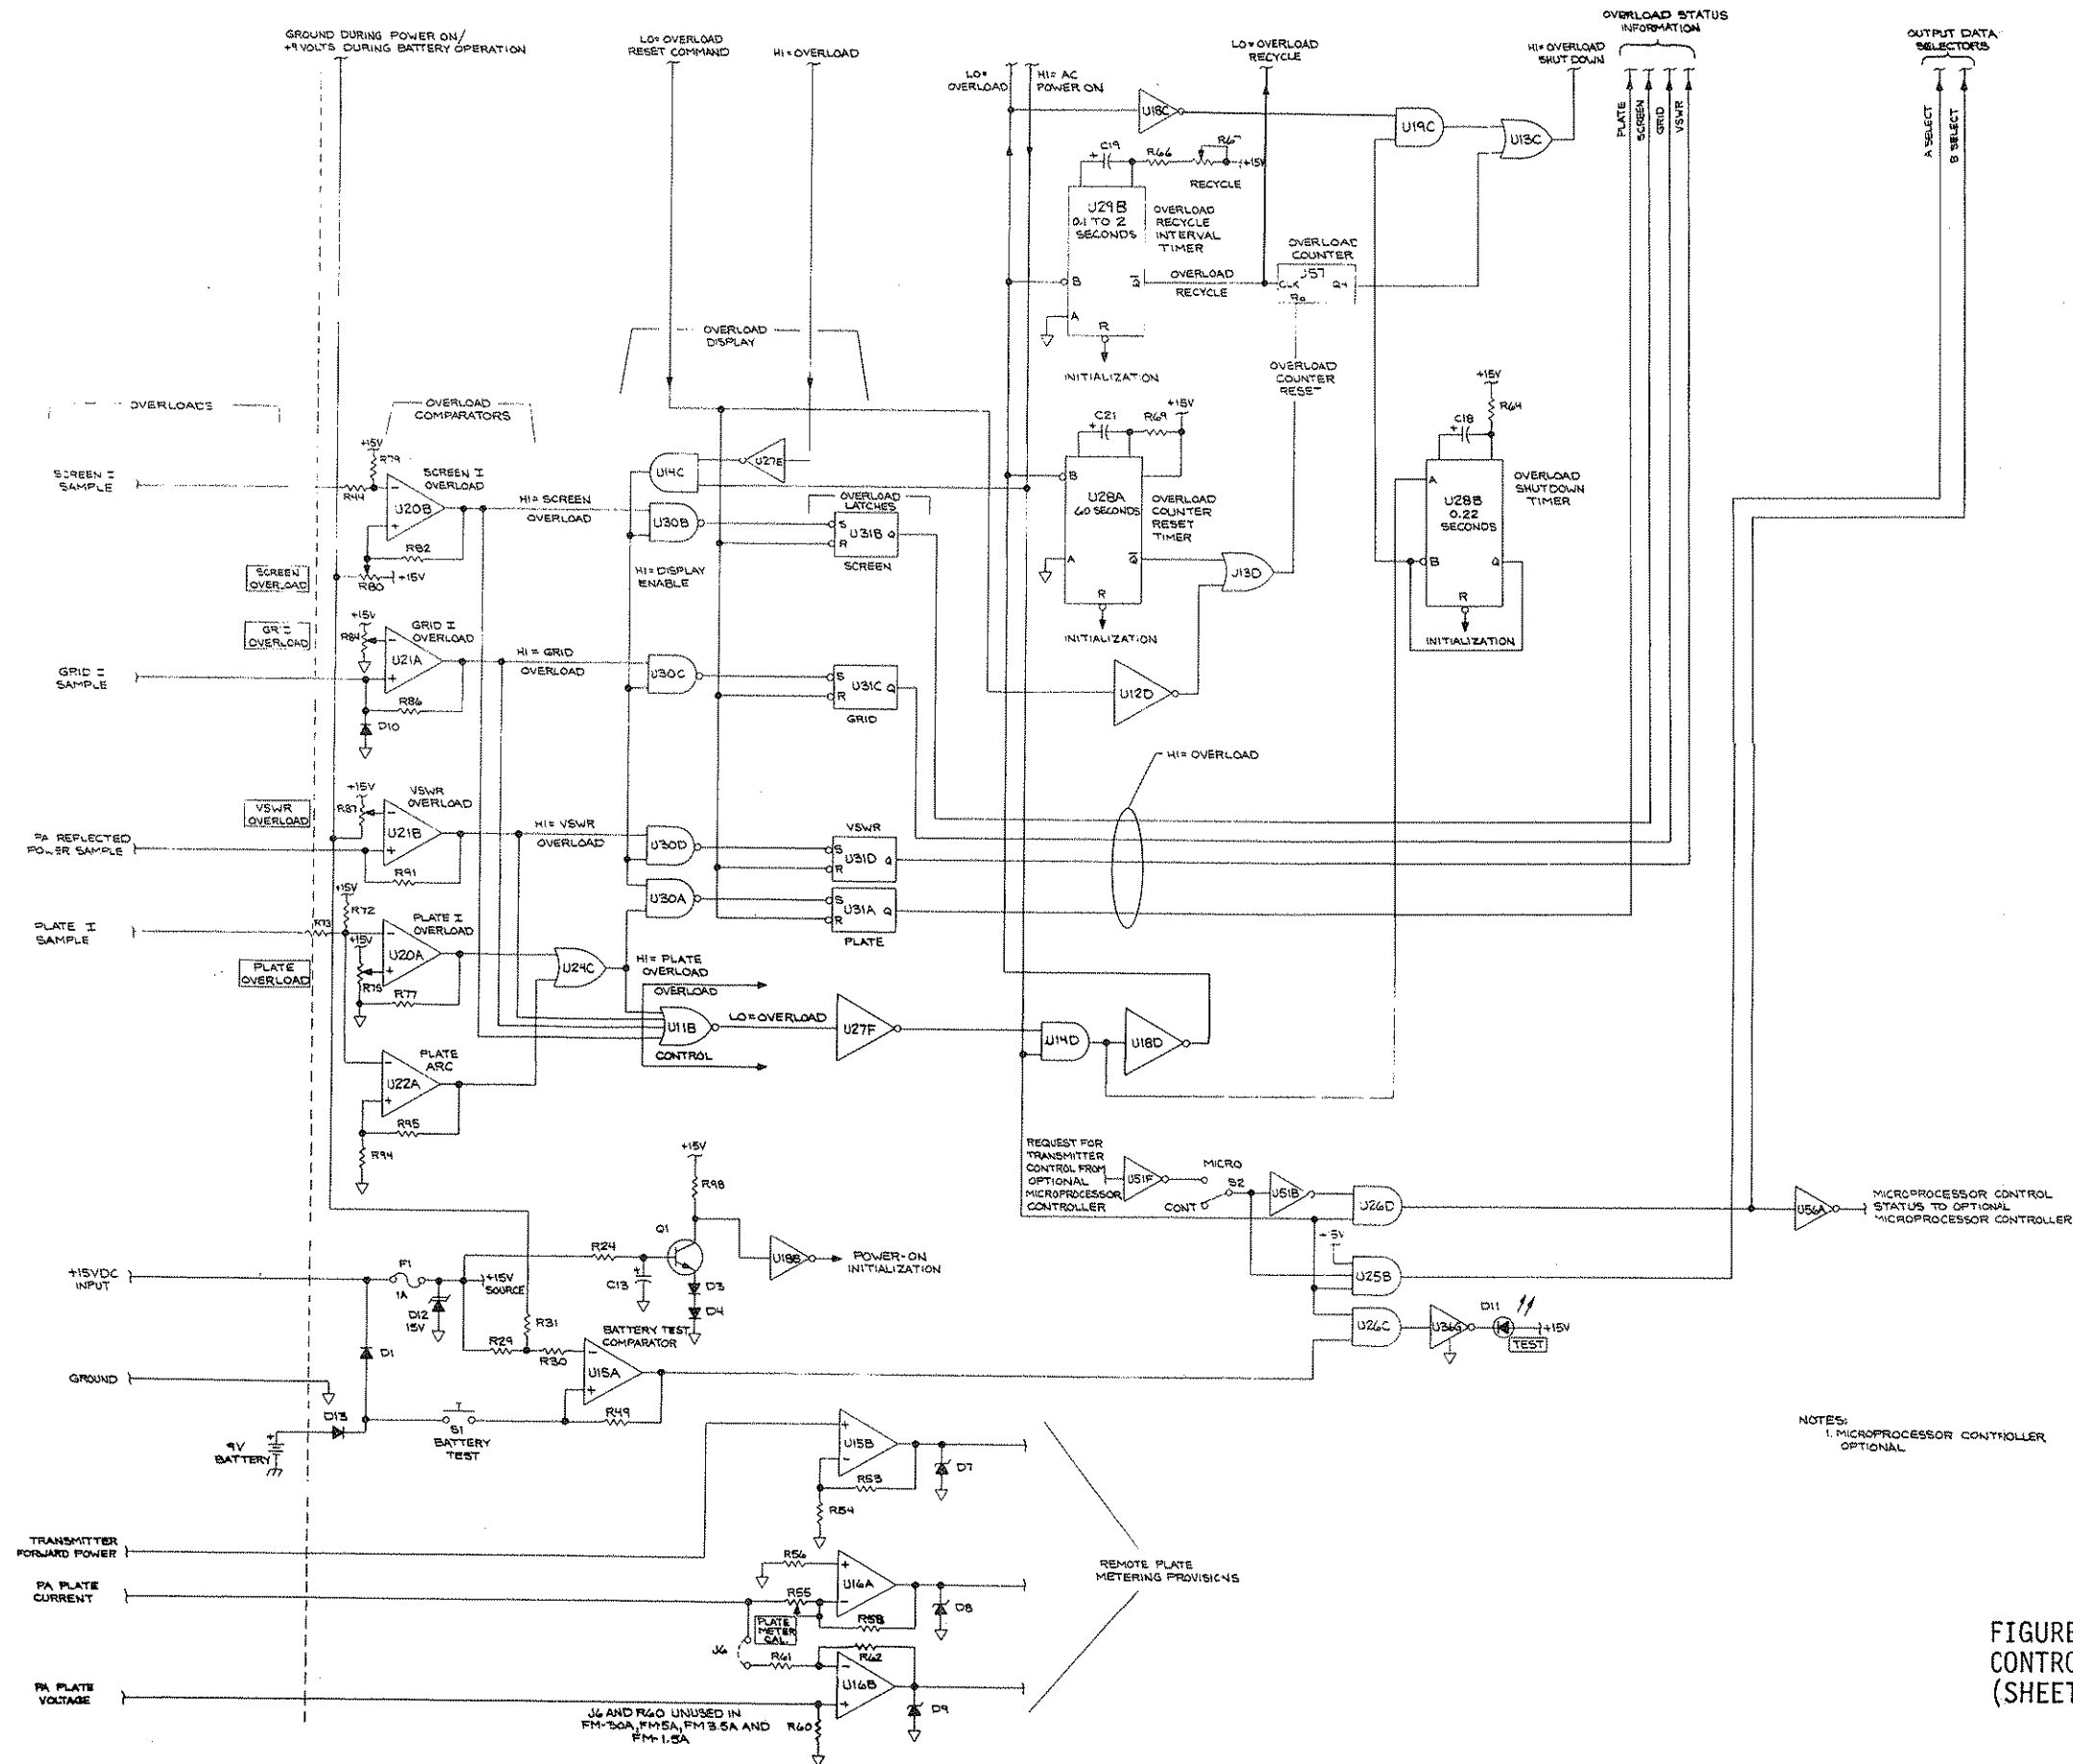

597-0032-42B

FIGURE 1-2.
CONTROLLER CIRCUIT BOARD SIMPLIFIED SCHEMATIC
(SHEET 2 OF 2)

1-34. The step driver will energize the plate supply step relay to apply primary voltage to the plate supply transformer through three limiting resistors. After a 100 millisecond delay determined by R149, C40, and U51D, the start driver will energize the start contactor and apply the full primary potential to the plate supply transformer. The step circuit will deenergize after being energized for 160 milliseconds, determined by R150, C41, and U51E. In this manner, the plate supply inrush is limited and the current limiting resistors are subject to heating only during a 100 millisecond interval before start contactor closure. For added reliability, the limiting resistors are disconnected after 160 milliseconds.

1-35. The exciter enable line and the HIGH voltage status indicator are wired in parallel from U39 with the start driver. Simultaneous with generation of the start signal, the exciter will be enabled and the HIGH VOLTAGE status indicator will illuminate to indicate that the plate supply control signal has been output. The high voltage supply is prevented from step-starting under full load in this manner.

1-36. The output potential for optical isolator U39 is routed through the safety interlocks. If the safety interlock string opens, the plate supply start control voltage will be disconnected and the safety interlock control logic will completely deenergize the transmitter.

1-37. Power-On Initialization. When power is initially first applied to the transmitter controller circuit board, the +15 volt input to inverter U18B through R98 will produce a LOW output from U18B which clears all timers and resets all latches to the off condition. Capacitor C13 will gradually charge from the +15 volt dc input through resistor R24. When the charge on C13 equals the 2 volt threshold established by D3, D4, and Q1, transistor Q1 will conduct and force a HIGH from inverter U18B which will terminate the power-on initialization. Q1 will remain conducting as long as power is continuously applied to the +15 volt input.

1-38. Initialization is also applied to inverter U12A. U12A outputs a HIGH which resets the overload status latch (U17) via U11A, resets the overload latches (U31A, U31B, U31C, and U31D), and resets the overload counter (U57) through inverter U12D. The HIGH from U12A is also applied through OR gate U13B to U9B and U10B to reset the filament latch and the high voltage latch.

1-39. Ac Power Monitor. A +12 volt dc input from the controller power supply is monitored for instantaneous loss of ac power information. This input to optical isolator U8 will drive transistor Q2 into conduction which illuminates the POWER indicator. U8 also forces a HIGH from U26B which signifies ac power is applied to the transmitter. A 25 millisecond delay connected to the second input of U26B will delay the HIGH from U26B to allow all logic adequate time to reset before signaling ac power has returned to normal.

1-40. The ac power status information from U26B is ANDed in U14A with the safety interlock status. If the safety interlocks are opened while ac power is energized, a HIGH from U14A will be applied through OR gate U13B to U9B and UI0B to reset the filament latch and the high voltage latch.

1-41. When the output of U26B is LOW (ac power lost), several actions occur:

- A. The filament restart delay timer (U29A) is set via U19D as soon as ac power is lost. If ac power is removed long enough for the filament restart delay timer interval to expire, U29A will reset the filament timer. When power returns, a new filament heating delay will be initiated before the plate supply is energized. If the ac power outage is momentary and U29A is not allowed to time out, high voltage will energize immediately upon restoration of ac power.
- B. The overload comparators and latches will be inhibited by U30 as any inputs during power off will be false.
- C. Additional circuitry inhibits the battery TEST indicator to conserve battery current, selects the A inputs to the analog switches for solid-state controller operation only, and advises the optional microprocessor controller of battery operation status.

1-42. The collector of Q2 routes power failure information to the optional microprocessor controller and provides a ground reference when ac power is on for SCREEN overload control R80, VSWR overload control R97, and battery test comparator U15A. During periods of battery operation, this same line routes a positive potential to the SCREEN overload and VSWR overload reference controls. This eliminates false overloads on ac power failure due to slowly decaying screen current and VSWR samples.

1-43. Safety Interlocks. The safety interlock circuitry consists of a series string of normally closed switches mounted in areas which contain electrical or mechanical hazards. Each switch is mechanically activated by a door or panel to deenergize the entire transmitter when opened. Logic states from the safety interlock circuitry are used in conditional logic for blower and filament turn on as described in the following text.

1-44. All outputs from the controller are routed through optical isolators. The output potential for the optical isolators is obtained from the series-wired safety interlock string. If an interlock opens, all output drivers from the controller circuit board will be disconnected. In addition, the safety interlock control logic input will be removed and the transmitter will completely deenergize.

1-45. The safety interlock closed information is input to optical isolator U7 and applied to inverter U12F as a LOW. When HIGH, the output of U12F will illuminate the INTERLOCK status indicator through analog switch U34 to signify the interlocks are closed and enable blower gate U26A.

1-46. The HIGH from U12F is also applied as a LOW to OR gate U13A and AND gate U14A through inverter U12E. OR gate U13A enables the filament gate (U19A) to allow filament turn-on. When both inputs to U13A are LOW, U13A will output a LOW to inverter U18A which applies a HIGH to the filament AND gate. This will occur whenever both the air pressure and the safety interlock switches are closed. AND gate U14A will produce the logical sum of a LOW from the safety interlock circuit and a HIGH from the ac power monitor circuit. If the safety interlocks are opened while ac power is applied to the transmitter, a HIGH through U13B will reset the filament latch via U9B and the high voltage latch via U10B to deenergize the transmitter. This will prevent the transmitter from re-energizing the filament or high voltage circuit upon closing the open interlock condition. Only the blower run-down timer (U23A) is allowed to continue operation.

1-47. External Interlock. The external interlock circuit is independent of the transmitter safety interlock circuit. External interlock closed information is applied to optical isolator U59 as a HIGH. The output of U59 will pull one input of step-start control OR gate U24B LOW, allowing a control pulse from U51C to enable the step-start circuitry. If the interlock is opened during transmitter operation, a HIGH is applied to U24B which disables the high voltage step-start circuit and deenergizes the plate supply.

1-48. Overload Input Circuit. Four parameters are monitored for overload conditions by the controller circuit board: screen current, control grid bias supply current, PA VSWR, and plate current. Each sample is input to a threshold comparator which converts the analog input to a digital state. Depending upon the polarity of the sample, the input is applied to the inverting or non-inverting input of the comparator. Resistors R92 and R72 on the plate sample and R79 on the screen sample form voltage dividers with the series input resistors (R93, R73, and R74) to convert the negative samples to positive voltages for the comparators. An adjustable threshold is established on the remaining input to each comparator. When the sample crosses the preset threshold, the output will switch from a LOW to a HIGH to signal an overload condition. The grid bias supply current overload trips on excessive supply current such as a short circuit in the tube socket.

1-49. Two comparators are used to monitor the plate current sample. The slower overload comparator (U20A) monitors for gradual increases such as mistuning which can draw up to two times normal plate current. The plate arc comparator (U22A) is a faster operating circuit that monitors for high-level short-duration arcs which will not trigger U20A. The two plate overload comparators are ORed in U24C. A HIGH from U24C signals a plate overload.

1-50. All five comparators normally output a LOW and switch to a HIGH to signal an overload condition. This logic is used as inputs for the overload display as well as the overload control circuitry.

1-51. Overload Diagnostics. For diagnostic display purposes, the output of each comparator is ANDed with a comparator enable signal and latched into a bistable flip-flop. Immediately after an overload is latched, the display enable signal will go LOW and inhibit further inputs. Until cleared with the overload RESET switch, no further overload information will be accepted for diagnostic display purposes. Any overload will be output from the latches as a HIGH through analog switch U33 for display as a diagnostic indication.

1-52. The overload latch (U17C) is set by a LOW from inverter U18D. A HIGH from the Q output of U17C will illuminate the OVERLOAD switch/indicator to signify that an overload has occurred. The HIGH from U17C is also inverted by U27E and ANDed in U14C with the ac power status to disable the overload latches (U31A, U31B, U31C, and U31D) through U30A, U30B, U30C, and U30D, inhibiting further overload inputs to the latches. The overload latch that was set by the overload input will illuminate its respective front-panel indicator via U33.

1-53. The overload display reset sequence is initiated by a positive potential which resets overload status latch U17C through NOR gate U11A. When U17C is reset, several actions occur:

- A. The OVERLOAD reset switch/indicator and the overload diagnostic indicator (PLATE, SCREEN, GRID, or VSWR) indicator will go out.
- B. The overload display latches (U31A, U31B, U31C, and U31D) will be reset.
- C. The inhibit from U14C will be removed from the overload display gates.
- D. The overload counter will be cleared via inverter U12D and OR gate U13D.

1-54. Overload Control Circuits. The overload control circuit inputs are obtained from the overload comparators. This circuit is not inhibited by a single overload as is the overload display circuit. The logical output of each comparator is ORed in U11B, routed through inverter U27F, and ANDed with the ac power status in U14D. An output from U14D is applied as a HIGH to overload shutdown timer U28B. This timer measures the duration of the high overload signal. If it is greater than 220 milliseconds, it applies a signal through U19C and U13C to de-energize filament latch U17A via U9B. This same HIGH is routed through inverter U18D and applied as a LOW to enable the overload counter reset timer (U28A), enable the overload recycle interval timer (U29B), and set the overload status latch (U17C).

1-55. The overload recycle interval timer (U29B) determines the length of time the transmitter remains off-the-air after an overload to allow the condition that prompted the overload to dissipate. Timer U29B can be adjusted from 0.1 to 2 seconds using R67. The overload counter (U57) counts the overload recycle attempts and the overload counter reset timer (U28A) resets the overload counter 60 seconds after the first overload occurred.

1-56. Each overload will initiate a recycle by deenergizing high voltage via AND gates U19B and U25A to attempt to clear the overload. The overload counter (U57) will count each recycle attempt. If four overloads occur within the 60 second interval of U28A, OR gate U13C will output a HIGH. This HIGH is applied to OR gate U9B which resets the filament latch (U17A) and deenergize the transmitter.

1-57. If an overload cycles the transmitter off-the-air and removing high voltage does not clear the overload after 220 milliseconds, the overload shutdown timer (U28B) will output a HIGH. This HIGH is ANDed in U19C with a HIGH from inverter U18C and signals overload shutdown through OR gate U13C.

1-58. Turn Off. The high voltage off sequence is initiated by a positive potential which resets the high voltage latch (U17B) through NOR gate U10B. When U17B is reset, the following actions will occur:

- A. The HIGH VOLTAGE ON switch/indicator will go out.
- B. A LOW via U19B and U25A will deenergize the plate power supply and the HIGH VOLTAGE status indicator will go out.

1-59. The filament off sequence is initiated by a positive potential which resets the filament latch (U17A) through NOR gate U9B. When U17A is reset, the following actions will occur:

- A. The plate latch (U17B) will be reset by U10B via U9B.
- B. The FILAMENT ON switch/indicator will go out.
- C. A LOW via U19A will deenergize the filament supply and the FILAMENT status indicator will go out.
- D. The blower timer (U23A) will begin time-down operation. The blower-off delay circuit composed of U18E, U18F, C30, and R99 will hold a momentary HIGH through U24A on blower gate U26A to prevent the time delay encountered in starting timer U23A from pulsing the blower off, then on, then back off after the blower run-down delay.
- E. When the blower ceases operation, the BLOWER status indicator will go out.

1-60. Remote Control. The transmitter can be controlled by momentary positive-polarity dc inputs to the controller circuit board. Positive-logic enabled remote inputs are used for safety. Each remote input is routed through an optical isolator for isolation. Additional resistance to noise interference is provided by an RC circuit in each remote input. Diodes across each optical isolator input and diode D19 prevent possible damage to the remote circuitry caused by inadvertent connection to negative polarity control inputs. A +15 volt output is provided for remote operation, however the optical isolators can operate on any positive dc voltage from +5 volts to +24 volts.

1-61. The remote circuitry is enabled by a ground through the REMOTE ENABLE/DISABLE switch which enables the optically-isolated inputs. The input of this switch is connected to a pull-up resistor (R16) as a safety consideration to prevent remote operation in case the switch input were to become disconnected.

1-62. Remote PA Metering. The remote meter amplifiers for transmitter forward power, PA plate current, and PA plate voltage are mounted on the controller circuit board.

1-63. U15B is a non-inverting voltage amplifier with a gain of approximately one used for transmitter forward power. The input is obtained from the forward power buffer in the automatic power control unit. The output is clamped with a 15 volt zener diode for circuit protection. Positive five volts output corresponds to 100% power.

1-64. U16A is an inverting voltage amplifier with a gain of approximately 12. The input is obtained from one end of a resistor in the negative side of the plate power supply. As the plate current varies with power, R55 is included for level adjustment. Positive five volts output can be obtained by varying R55. The output is clamped with a 15 volt zener diode for circuit protection.

1-65. U16B functions as a non-inverting with a gain of one. The input is obtained from the low-potential end of the plate meter multiplier circuit board. Positive five volts corresponds to full-scale plate voltage (6 kV). J6 and R60 are not installed in the FM-5A transmitter.

1-66. POWER SUPPLY CIRCUIT BOARD. AC power is input to the controller through a voltage range selector which additionally provides overload protection and RFI isolation for the ac input (see Figure 1-3). A special power transformer with a tapped dual primary allows operation from both 50 and 60 Hz and a wide range of ac voltages without component changes. The primary and secondary windings are electrostatically shielded from each other. The secondary windings of the transformer produce three ac potentials which are full-wave rectified and regulated into four dc sources which supply all operating voltages for the exciter circuitry. When power is applied to the controller, the cooling fan will run continuously.


1-67. Positive Fifteen Volt Controller Supply. A 20.4 volt secondary of transformer T1 is full-wave bridge-rectified into a +27.5 volt supply by diodes D1, D2, D7, and D8 and filtered by capacitor C1. This rectified voltage is routed to U1 which regulates the input potential to a +15 volt source for the controller logic circuitry. The output potential is adjusted by R3. Diode D19 prevents capacitor and battery discharge through the regulator biasing circuit during power failures. Test point TP1 provides a convenient point to check operation of the supply.

1-68. Integrated circuit U1 is a three-terminal adjustable positive regulator containing internal thermal overload protection and short-circuit current limiting features. Further protection for U1 is provided by diode D16 which protects the regulator from a reverse polarity potential applied to the output.

1-69. The 15 volt potential is routed to the controller circuit board to provide operating potentials for the logic circuitry. Fuse F1 provides overload protection and diode D12 limits transients on the supply to 15.2 volts. Diodes D1 and D13 are steering diodes which isolate the 9 volt battery from the 15 volt supply and allow the battery to be tested while the circuit operates from the 15 volt input. In case of power failures, the 15 volt supply will be maintained at 9 volts by current flow through D1 and D13 to allow transmitter restoration to proceed automatically. Battery drain is approximately six milliamperes which allows three days of memory. The battery is not maintained on charge and must be replaced when discharged.

1-70. Positive Twelve Volt AC Loss-of-Power Supply. A 17.6 volt secondary (open-circuit voltage) of transformer T1 is full-wave bridge-rectified into a +12 volt supply by diodes D5, D6, D11, and D12 and filtered by capacitor C3. This potential is routed to optical isolator U8 on the controller circuit board for loss of ac power information. Test point TP4 provides a convenient point to check operation of the supply.

1-71. Positive Fifteen Volt Remote Control Supply. A 20.4 volt secondary of transformer T1 is full-wave bridge-rectified into a +27 volt supply by diodes D3, D4, D9, and D10 and filtered by capacitor C1. This rectified voltage is routed to U2 which regulates the input potential to a +15 volt source for the remote control circuitry. Diode D20 prevents capacitor discharge through the regulator during power failures. Test point TP2 provides a convenient point to check operation of the supply.

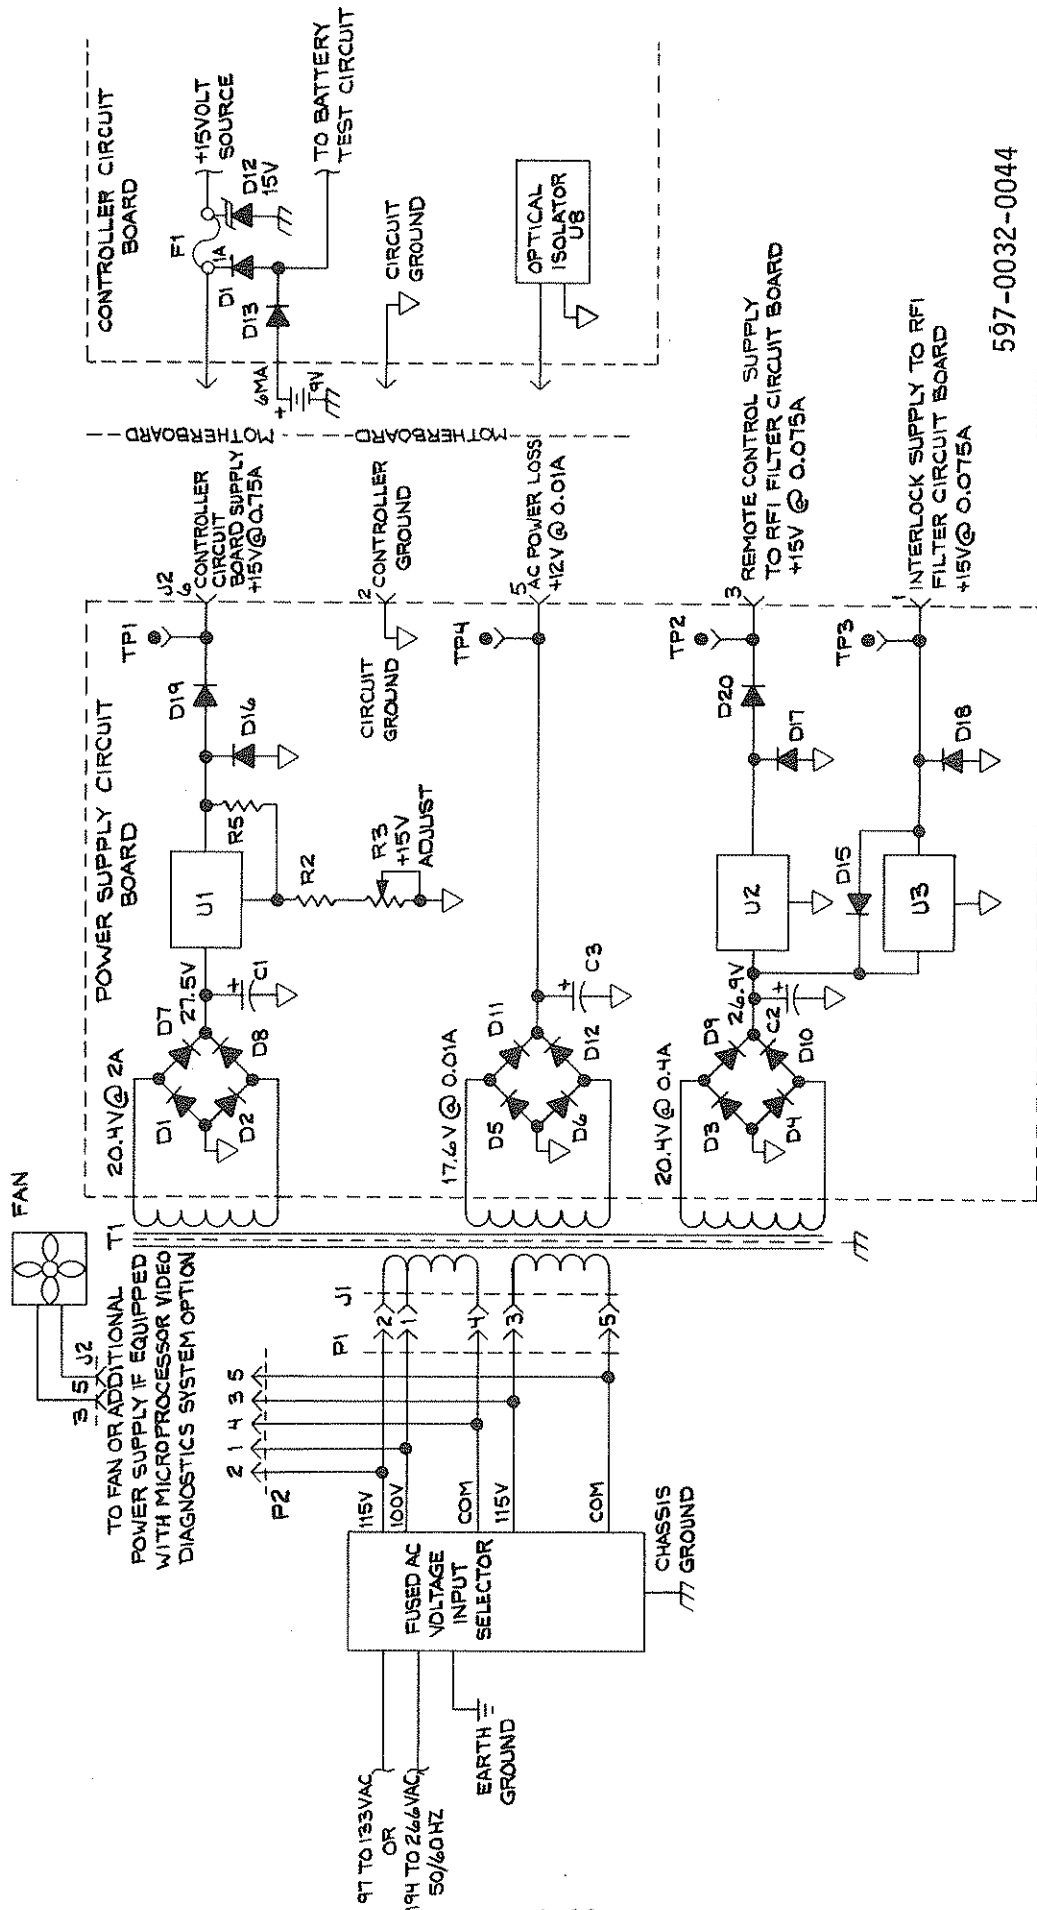

597-0032-0044

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

FIGURE 1-3. CONTROLLER POWER SUPPLY SIMPLIFIED SCHEMATIC

1-72. Integrated circuit U2 is a three-terminal fixed positive regulator containing internal thermal overload protection and short-circuit current limiting features. Further protection for U2 is provided by diode D17 which protects the regulator from a reverse polarity potential applied to the output.

1-73. Positive Fifteen Volt Interlock Supply. The input to regulator U3 is paralleled from the same +27 volt supply as regulator U2. Test point TP3 provides a convenient point to check operation of the supply.

1-74. Integrated circuit U3 is a three-terminal fixed positive regulator containing internal thermal overload protection and short-circuit current limiting features. Further protection for U3 is provided by diode D18 which protects the regulator from a reverse polarity potential applied to the output and diode D15 which protects the regulator from a short circuit on the regulator input.

SECTION II
TRANSMITTER CONTROLLER MAINTENANCE

2-1. INTRODUCTION.

2-2. This section provides maintenance information for the FM-5A FM transmitter controller.

2-3. SAFETY CONSIDERATIONS.

2-4. The FM-5A transmitter contains high voltages and currents which, if regarded carelessly, could be fatal. The transmitter has many built-in safety features, however good judgement, care, and common sense are the best accident preventives. The maintenance information contained in this section should be performed only by trained and experienced maintenance personnel.

2-5. MAINTENANCE.

WARNING NEVER OPEN THE EQUIPMENT UNLESS ALL TRANSMITTER PRIMARY POWER IS DISCONNECTED.

WARNING BEFORE ATTEMPTING TRANSMITTER MAINTENANCE, ASSURE THE REMOTE DISABLE SWITCH/INDICATOR IS ILLUMINATED, THEN DISCONNECT POWER FROM THE TRANSMITTER.

WARNING IF A FAULT WILL NOT ALLOW THE REMOTE DISABLE SWITCH/INDICATOR TO ILLUMINATE, DISCONNECT POWER FROM THE TRANSMITTER, THEN UNPLUG P1 FROM J1 ON THE REAR OF THE TRANSMITTER CONTROLLER.

2-6. The FM-5A maintenance philosophy consists of preventative maintenance such as cleaning applied to the equipment of forestall future failures and second level maintenance consisting of procedures required to restore the equipment to operation after a fault.


2-7. ADJUSTMENTS.

WARNING NEVER OPEN THE EQUIPMENT UNLESS ALL TRANSMITTER PRIMARY POWER IS DISCONNECTED.

2-8. The following text provides procedures to adjust all controls associated with the transmitter controller. Adjustment procedures for each control are presented in the following order.

- A. Controller circuit board control adjustment.
- B. Power supply circuit board control adjustment.

- 2-9. CONTROLLER CIRCUIT BOARD CONTROL ADJUSTMENT.
- 2-10. VSWR OVERLOAD THRESHOLD ADJUST (R88). To adjust the VSWR overload control on the controller circuit board, proceed as follows.
- 2-11. Required Equipment. The following equipment is required to adjust the VSWR overload control (R88).
- A. Insulated adjustment tool, flat-tip (BE P/N 710-0001).
- 2-12. Procedure. To adjust the control, proceed as follows.
- 2-13. Refer to Figure 2-1 and adjust the VSWR overload threshold adjust control (R88) fully clockwise.
- 2-14. Operate the transmitter at the normal power output with the APC on.
- 2-15. Operate the OUTPUT POWER METER switch to FWD. Assure the OUTPUT POWER meter indicates 100%.
- 2-16. Operate the OUTPUT POWER METER switch to VSWR CAL and adjust the VSWR CAL control to obtain an OUTPUT POWER meter indication of 100%.
- 2-17. Depress the HIGH VOLTAGE OFF switch/indicator.
- 2-18. When the LOWER switch/indicator stops flashing, depress the APC ON and FILAMENT OFF switch indicators.
- 2-19. From the top of the transmitter, disconnect cable No. 131 from the output directional coupler RFL port and connect the cable to the MON port.
- CAUTION ADJUSTMENT OF THE OVERLOAD CONTROLS DETERMINES AT WHAT POINT THE CONTROLLER WILL INITIATE ACTION. IF A CONTROL IS INCORRECTLY ADJUSTED, THE CONTROLLER MAY NOT SENSE A FAULT AND DAMAGE TO THE TRANSMITTER MAY RESULT.
- CAUTION
- CAUTION
- 2-20. Depress the FILAMENT ON and HIGH VOLTAGE ON switch/indicators.
- 2-21. Verify that the OUTPUT POWER METER switch is set to VSWR and the APC ON switch/indicator is not illuminated.
- 2-22. Raise power manually by depressing the RAISE switch/indicator until the OUTPUT POWER meter indicates a VSWR of 3 : 1.

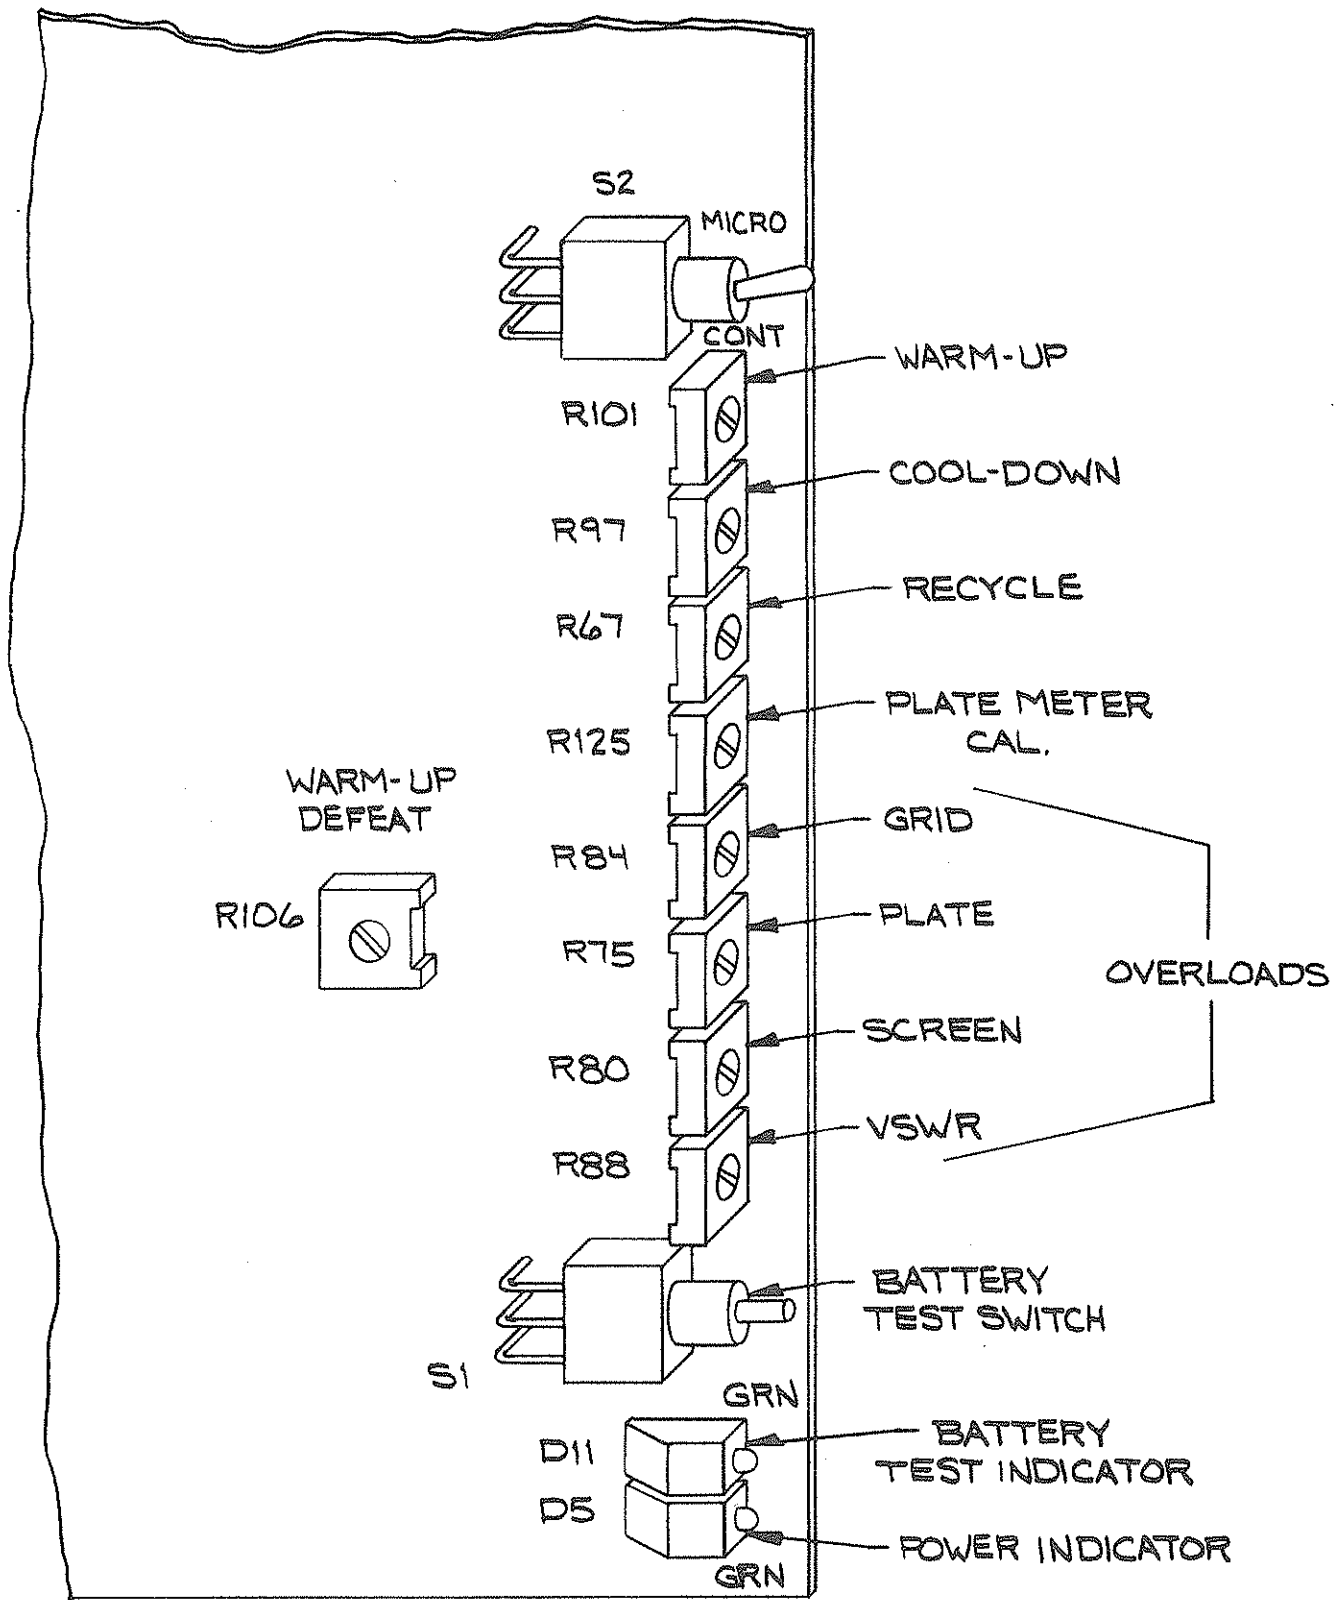

597-0032-43

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

FIGURE 2-1. CONTROLLER CIRCUIT BOARD CONTROLS

WARNING: DISCONNECT POWER PRIOR TO SERVICING

2-23. Refer to Figure 2-1 and adjust R88 until the VSWR indicator and the overload reset switch/indicator illuminate and the transmitter cycles off.

2-24. Depress the LOWER switch/indicator to lower the transmitter power, then depress the overload reset switch/indicator.

2-25. Depress the RAISE switch/indicator to raise power. The transmitter will cycle off at a VSWR indication of 3 : 1. If not, repeat the adjustment.

2-26. Depress the HIGH VOLTAGE OFF, FILAMENT OFF, and APC ON switch/indicators.

CAUTION

ENSURE CABLE NO. 131 IS RECONNECTED TO THE OUTPUT DIRECTIONAL COUPLER RFL PORT IN THE FOLLOWING STEP OR DAMAGE TO THE TRANSMITTER COULD RESULT.

CAUTION

2-27. Reconnect cable No. 131 to the RFL port in the output directional coupler.

2-28. GRID (R84), PLATE (R75), AND SCREEN (R80) OVERLOAD ADJUSTMENTS. To adjust the GRID, PLATE, and SCREEN overload controls on the controller circuit board, proceed as follows.

2-29. Required Equipment. The following equipment is required to adjust the GRID (R84), PLATE (R75), and SCREEN (R80) overload controls.

A. Insulated adjustment tool, flat-tip (BE P/N 407-0083).

2-30. Procedure. To adjust the controls, proceed as follows. If more than one overload control is to be adjusted, the controls must be adjusted in a specific sequence: VSWR, PLATE, SCREEN, and GRID. The VSWR control is adjusted in paragraph 2-10.

2-31. Assure the APC ON switch/indicator is not illuminated.

2-32. Apply power and operate the transmitter within specifications at the rated RF output into a proper 50 Ohm load.

CAUTION

ADJUSTMENT OF THE OVERLOAD CONTROLS DETERMINES AT WHAT POINT THE CONTROLLER WILL INITIATE ACTION. IF A CONTROL IS INCORRECTLY ADJUSTED, THE CONTROLLER MAY NOT SENSE A FAULT AND DAMAGE TO THE TRANSMITTER MAY RESULT.

CAUTION

CAUTION

2-33. Refer to Figure 2-1 and locate the control to be adjusted.

- 2-34. Adjust the control until the transmitter deenergizes, then back the control off slightly, noting the direction of rotation.
- 2-35. Wait approximately three seconds and depress the overload reset and the HIGH VOLTAGE ON switch/indicators.
- 2-36. If the equipment does not return to operation, adjust the control a bit more in the direction of rotation noted in paragraph 2-34.
- 2-37. Wait approximately three seconds and depress the overload reset and the HIGH VOLTAGE ON switch/indicators.
- 2-38. If the transmitter does not return to operation, repeat paragraphs 2-36 and 2-37 until the control is adjusted to the point where the transmitter will just return to operation.
- 2-39. WARM-UP ADJUSTMENT (R101). To adjust the WARM-UP control on the controller circuit board, proceed as follows. This control adjusts the filament heating delay, prior to high voltage on. The control allows adjustment from 9 seconds to 2 minutes. A minimum interval is preset so that incorrect adjustment cannot damage the PA tube.
- 2-40. Required Equipment. The following equipment is required to adjust the WARM-UP control (R101).
- A. Insulated adjustment tool, flat-tip (BE P/N 407-0083).
 - B. Wristwatch with seconds hand or stopwatch function.
- 2-41. Procedure. To adjust the control, proceed as follows.
- 2-42. Apply filament power to the transmitter. Simultaneously note the time and depress the HIGH VOLTAGE ON switch/indicator.
- 2-43. Again note the time when the plate contactor energizes.
- 2-44. Refer to Figure 2-1 and adjust R101 to increase or decrease the time delay. Check the adjustment by repeating paragraphs 2-42 and 2-43. The control is factory set for 9 seconds.
- 2-45. COOL-DOWN ADJUSTMENT (R97). To adjust the COOL-DOWN control on the controller circuit board, proceed as follows. This control adjusts the blower run-down interval after high voltage is switched off. The control allows adjustment from 30 seconds to 2.5 minutes. A minimum interval is preset so that incorrect adjustment cannot damage the PA tube.
- 2-46. Required Equipment. The following equipment is required to adjust the COOL-DOWN control (R97).
- A. Insulated adjustment tool, flat-tip (BE P/N 407-0083).
 - B. Wristwatch with seconds hand or stopwatch function.

- 2-47. Procedure. To adjust the control, proceed as follows.
- 2-48. Apply power and operate the transmitter.
- 2-49. Simultaneously depress the FILAMENT OFF switch and note the time.
- 2-50. Again note the time when the blower halts operation.
- 2-51. Refer to Figure 2-1 and adjust R97 to increase or decrease the blower run-down interval. Check the adjustment by repeating paragraphs 2-49 and 2-50. The control is factory set for 45 seconds.
- 2-52. RECYCLE ADJUSTMENT (R67). To adjust the RECYCLE control on the controller circuit board, proceed as follows. This control adjusts the time the transmitter will remain deenergized to allow an overload to dissipate after an overload occurs. The control allows adjustment from 100 milliseconds to 2.5 seconds. A minimum delay is built into the circuitry to prevent transmitter damage.
- 2-53. Required Equipment. The following equipment is required to adjust the RECYCLE control (R67).
- A. Insulated adjustment tool, flat-tip (BE P/N 710-0001).
- 2-54. Procedure. To adjust the control, proceed as follows.
- 2-55. Apply power and operate the transmitter.
- 2-56. Refer to Figure 2-1 and adjust R67 for the desired delay. The control is factory preset for 2.5 seconds. The adjustment may be checked by simulating a screen or plate overload with the OUTPUT LOADING control.
- 2-57. WARM-UP DEFEAT ADJUSTMENT (R106). To adjust the WARM-UP defeat control on the controller circuit board, proceed as follows. This control adjusts the length of the interval the transmitter will tolerate after a power interruption before initiating a new filament warm-up cycle. The control allows adjustment from 25 milliseconds to 5 seconds. A minimum delay is built into the circuitry so that momentary power fluctuations will not initiate a new filament warm-up cycle.
- 2-58. Required Equipment. The following equipment is required to adjust the WARM-UP defeat control (R106).
- A. Insulated adjustment tool, flat-tip (BE P/N 710-0001).
 - B. Controller Extender Board (BE P/N 919-0061).
 - C. Wristwatch with seconds hand or stopwatch function.

- 2-59. Procedure. To adjust the control, proceed as follows.
- 2-60. Mount the controller circuit board on the extender board.
- 2-61. Apply power and operate the transmitter.
- 2-62. Refer to Figure 2-1 and adjust R106 for the desired interval. The control is factory preset for two seconds. The adjustment may be checked by interrupting the transmitter ac feed for known time intervals, and observing if the high voltage is reapplied immediately or a recycle is initiated.
- 2-63. Replace the controller circuit board in the transmitter.
- 2-64. PLATE I METER CAL. ADJUSTMENT (R125). To adjust the PLATE I meter cal. control on the controller circuit board, proceed as follows. This control adjusts the remote plate current meter output level for approximately 5 volts dc at normal plate current.
- 2-65. Required Equipment. The following equipment is required to adjust the PLATE I meter cal. control (R125).
- A. Insulated adjustment tool, flat-tip (BE P/N 710-0001).
 - B. Digital voltmeter, Fluke 8020 or equivalent 3 1/2 digit model.
- 2-66. Procedure. To adjust the control, proceed as follows.

WARNING

DISCONNECT ALL TRANSMITTER PRIMARY POWER BEFORE PROCEEDING.

- 2-67. Assure all transmitter power is off and open the cabinet rear door. Connect the voltmeter between TB3, terminal 25 and terminal 26 (meter ground).
- 2-68. Route the voltmeter leads out the hinge side of the cabinet door and close and lock the door.
- 2-69. Apply power and operate the transmitter at the normal power output.
- 2-70. Refer to Figure 2-1 and adjust R125 until the voltmeter indicates +5 volts dc.

WARNING

DISCONNECT ALL TRANSMITTER PRIMARY POWER BEFORE PROCEEDING.

- 2-71. Assure all transmitter power is off and disconnect the voltmeter and leads.

2-72. POWER SUPPLY CIRCUIT BOARD.

2-73. +15 VOLT ADJUST (R2). To adjust the +15 volt adjust control on the power supply circuit board, proceed as follows.

2-74. Required Equipment. The following equipment is required to adjust the +15 volt adjust control (R2).

- A. Flat-blade screwdriver, 1/4 inch tip.
- B. No. 2 Phillips screwdriver, 11 inch blade.
- C. Insulated adjustment tool, flat-tip (BE P/N 407-0083).
- D. Small pair of needle-nose pliers.
- E. Power interlock line cord (BE P/N 682-0001), shipped with exciter accessory pack.
- F. Fuse, 1 Ampere, Type AGC, quick acting.
- G. Digital voltmeter, Fluke 75 or equivalent 3 1/2 digit model.

2-75. Procedure. To adjust the control, proceed as follows:

WARNING

DISCONNECT ALL TRANSMITTER PRIMARY POWER BEFORE PROCEEDING.

2-76. Assure all transmitter power is off.

2-77. Open the transmitter rear door and disconnect all plugs and cables from the rear of the transmitter controller chassis.

2-78. Remove the eight screws securing the transmitter controller in the rack.

2-79. Remove the transmitter controller from the rack and set the chassis on a work surface.

2-80. Remove the screws which secure the top on the transmitter controller and remove the top cover.

2-81. Remove the four screws securing the power supply in the chassis.

- 2-82. Disconnect the plug from the power supply circuit board.
- 2-83. Lift the power supply out of the chassis and set it on top of the card cage.
- 2-84. Connect the voltmeter between test point TP1 and chassis ground.
- 2-85. Remove the ac line voltage selector circuit board with a small pair of needle-nose pliers, reinsert the circuit board so that 115/120V is visible when the circuit board is reinserted into the receptacle.
- 2-86. Replace the fuse with a 1 Ampere fuse.
- 2-87. Apply power to the controller and adjust R2 to obtain a voltmeter indication of 15.6 volts dc.

WARNING

DISCONNECT PRIMARY POWER BEFORE PROCEEDING.

- 2-88. Assure primary power is disconnected before proceeding.
- 2-89. Disconnect the voltmeter.
- 2-90. Remove the ac line voltage selector circuit board with a small pair of needle-nose pliers. Reinsert the circuit board so that 220V is visible when the circuit board is reinserted into the receptacle.
- 2-91. Replace the fuse with the original 1/2 Ampere slow-blow fuse.
- 2-92. Secure the power supply in the controller chassis and reconnect the circuit board plug.
- 2-93. Replace the top cover on the controller.

WARNING

DISCONNECT ALL TRANSMITTER PRIMARY POWER BEFORE PROCEEDING.

- 2-94. Replace the controller in the transmitter. Connect the rear panel plugs.

2-95. TROUBLESHOOTING.

WARNING

NEVER OPEN THE EQUIPMENT UNLESS ALL TRANSMITTER PRIMARY POWER IS DISCONNECTED. USE THE GROUNDING STICK PROVIDED TO ENSURE ALL COMPONENTS AND ALL SURROUNDING COMPONENTS ARE DISCHARGED BEFORE ATTEMPTING ANY MAINTENANCE ON ANY AREA WITHIN THE TRANSMITTER.

WARNING

WARNING

2-96. Most troubleshooting consists of visual checks. Because of the voltages and high currents in the equipment, it is considered hazardous to work with power energized. Therefore, the various transmitter indicators (meters, LEDs, and fuses) should be used to isolate the malfunction to one specific area.

2-97. Troubleshooting within the controller card cage is not considered hazardous due to the low potentials and currents involved. An extender circuit board (BE P/N 919-0061) is provided to assist troubleshooting. When the extender circuit board is not used, it must be inserted in the far left side position in the controller card cage to allow the front door to close.

2-98. Once the trouble is isolated and power is totally deenergized, it is suggested that the exact problem be located with resistance checks using the schematic diagrams and theory of operation presented throughout the text.

CAUTION

MANY COMPONENTS IN THE TRANSMITTER ARE MOUNTED TO HEAT-SINKS UTILIZING A THIN FILM OF HEAT-SINK COMPOUND FOR THERMAL CONDUCTION.

CAUTION

CAUTION

IF ANY SUCH COMPONENT IS REPLACED, ENSURE A THIN FILM OF A ZINC-BASED HEAT-SINK COMPOUND IS USED (BE P/N 700-0028) TO ASSURE GOOD HEAT DISSIPATION.

CAUTION

2-99. If a circuit is diagnosed as faulty, the circuit fault may be isolated and repaired locally or the entire device may be returned to Broadcast Electronics, Inc. for exchange, alignment, or replacement.

2-100. A built-in microprocessor video diagnostic system is optionally available which enables the transmitter controller to display fault conditions and diagnosis to the sub-system level in plain English on a CRT screen. The system may be field-installed in an existing transmitter.

SECTION III
DRAWINGS

3-1. INTRODUCTION.

3-2. This section provides assembly drawings, schematic diagrams, and wiring diagrams as indexed below for the FM-5A transmitter controller.

| <u>FIGURE</u> | <u>TITLE</u> | <u>NUMBER</u> |
|---------------|---|---------------|
| 3-1 | ASSEMBLY, CONTROLLER CABINET | 597-0032-105 |
| 3-2 | SCHEMATIC, INPUT FILTER CIRCUIT BOARD | DS919-0056 |
| 3-3 | ASSEMBLY, INPUT FILTER CIRCUIT BOARD | DA919-0056 |
| 3-4 | ASSEMBLY, MOTHERBOARD | 597-0032-18 |
| 3-5 | SCHEMATIC, POWER SUPPLY | CS959-0045 |
| 3-6 | ASSEMBLY, POWER SUPPLY CIRCUIT BOARD | BA919-0020 |
| 3-7 | SCHEMATIC, DOOR ELECTRICAL ASSEMBLY | CS959-0153 |
| 3-8 | ASSEMBLY, DOOR ELECTRICAL ASSEMBLY | CA959-0153 |
| 3-9 | SCHEMATIC, CONTROLLER CIRCUIT BOARD | DS919-0019 |
| 3-10 | ASSEMBLY, CONTROLLER CIRCUIT BOARD | DA919-0019 |
| 3-11 | COMPONENT LOCATOR, CONTROLLER CIRCUIT BOARD | 597-0032-19 |







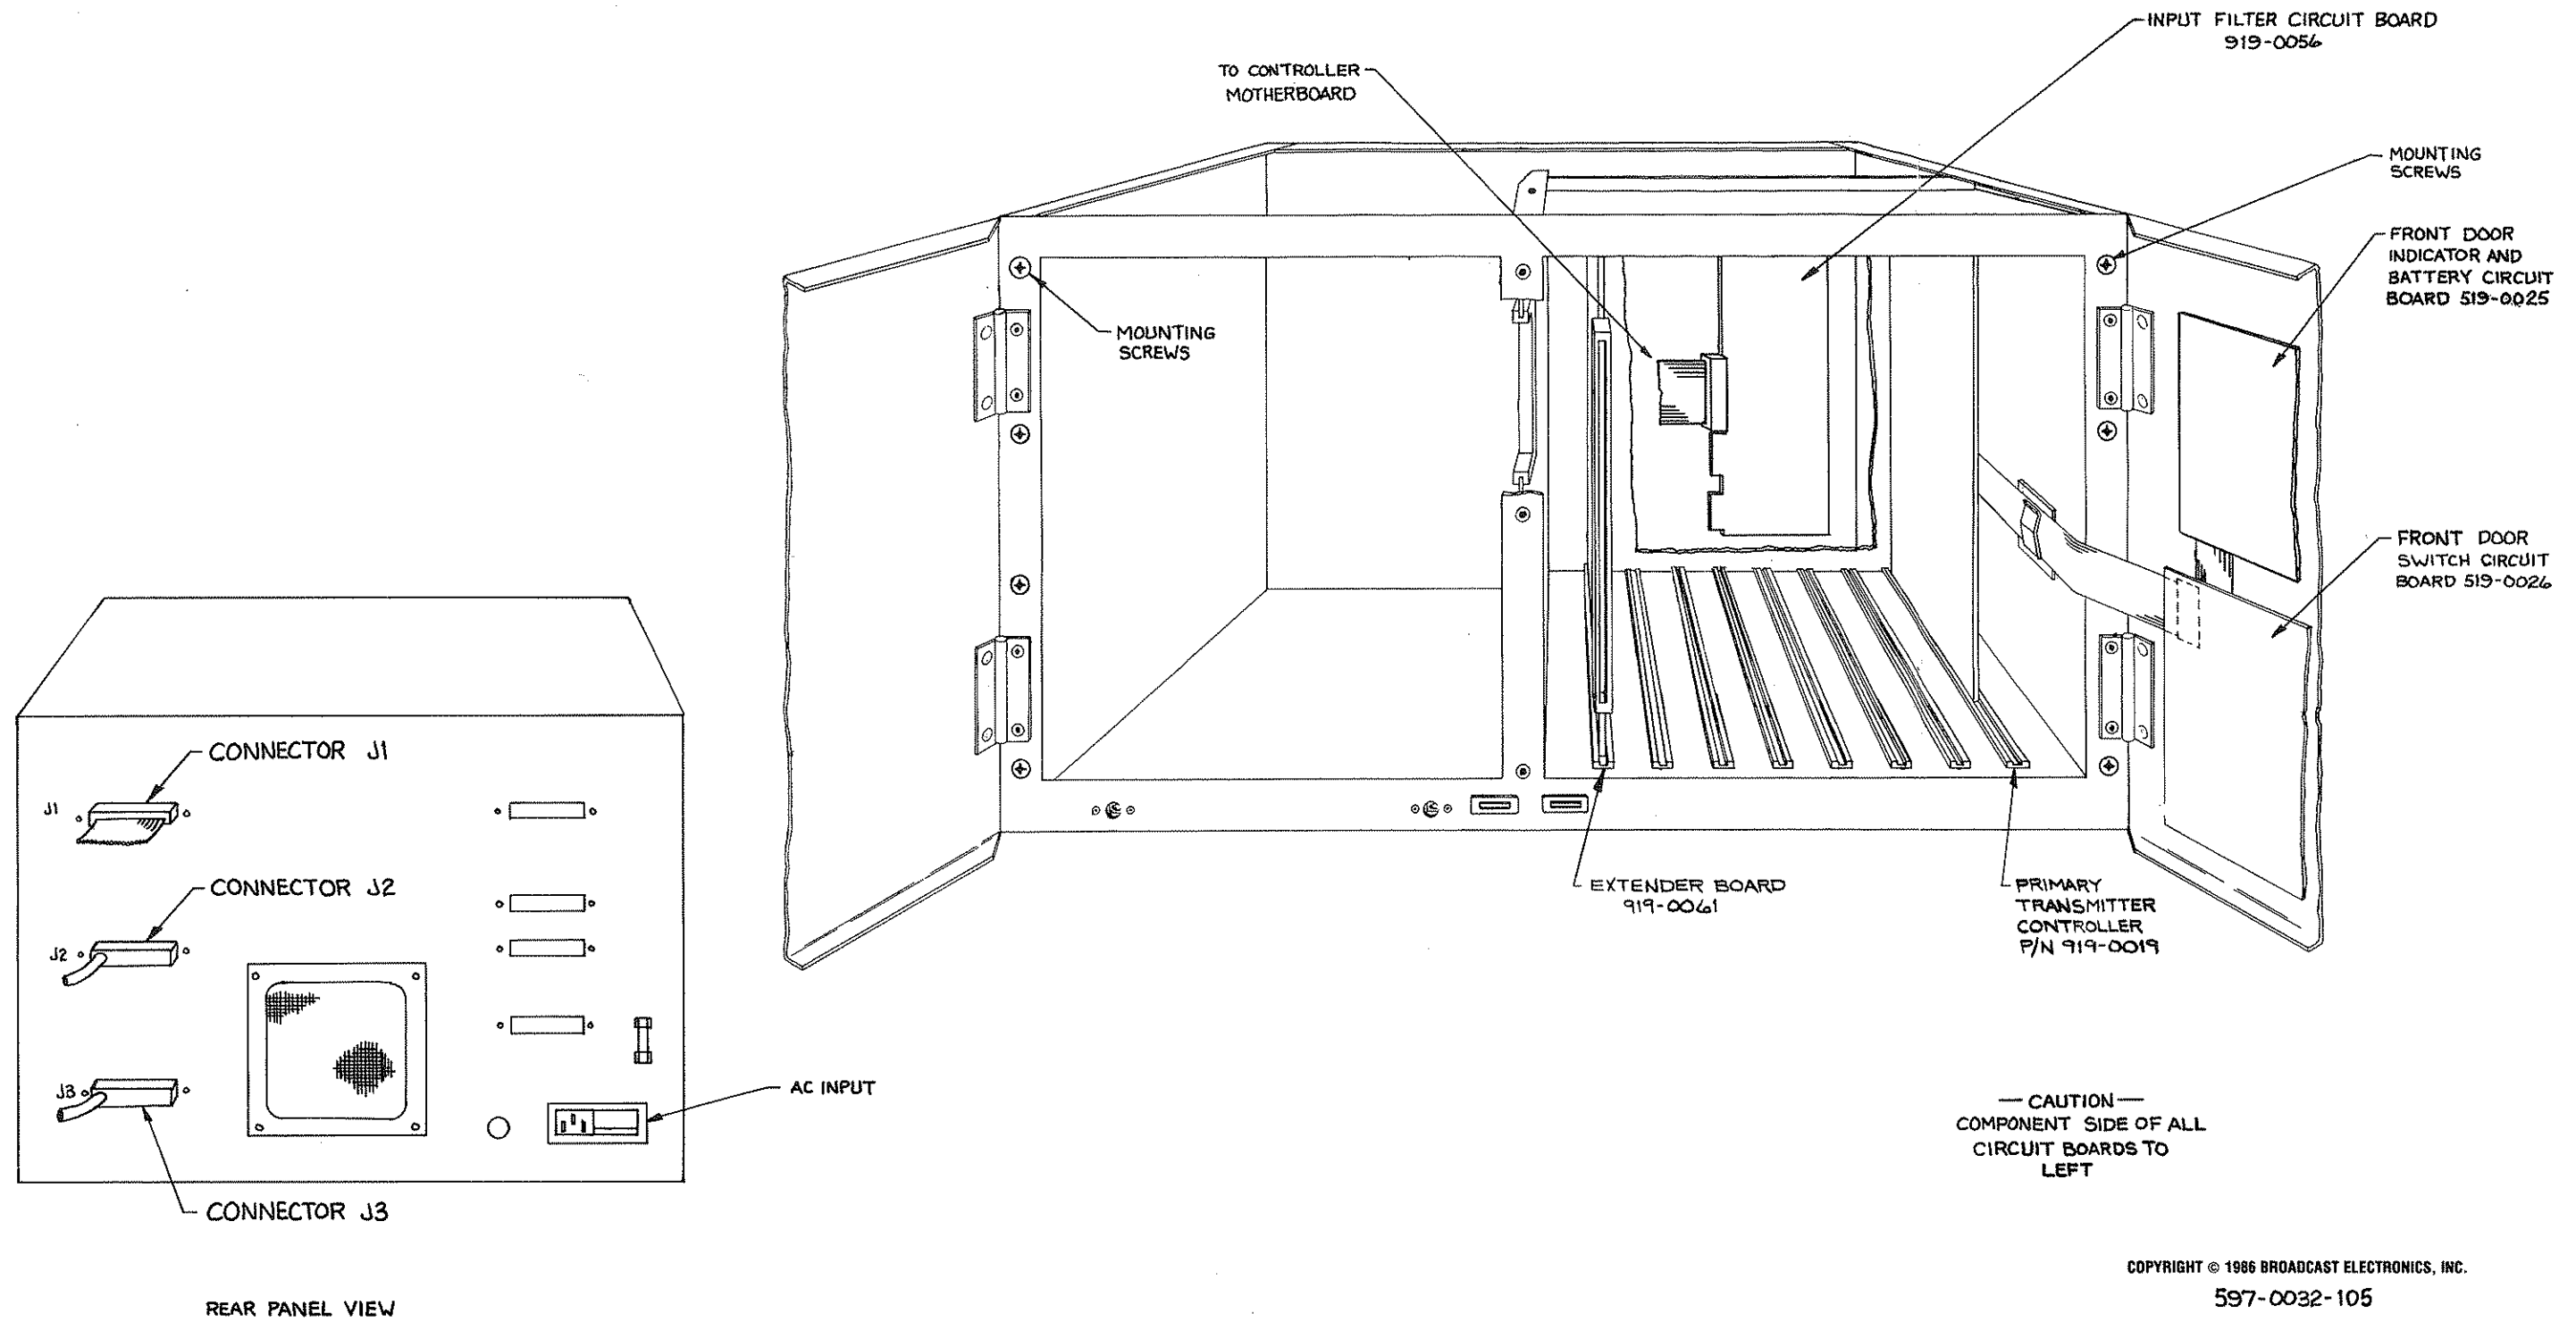


FIGURE 3-1. ASSEMBLY, CONTROLLER CABINET

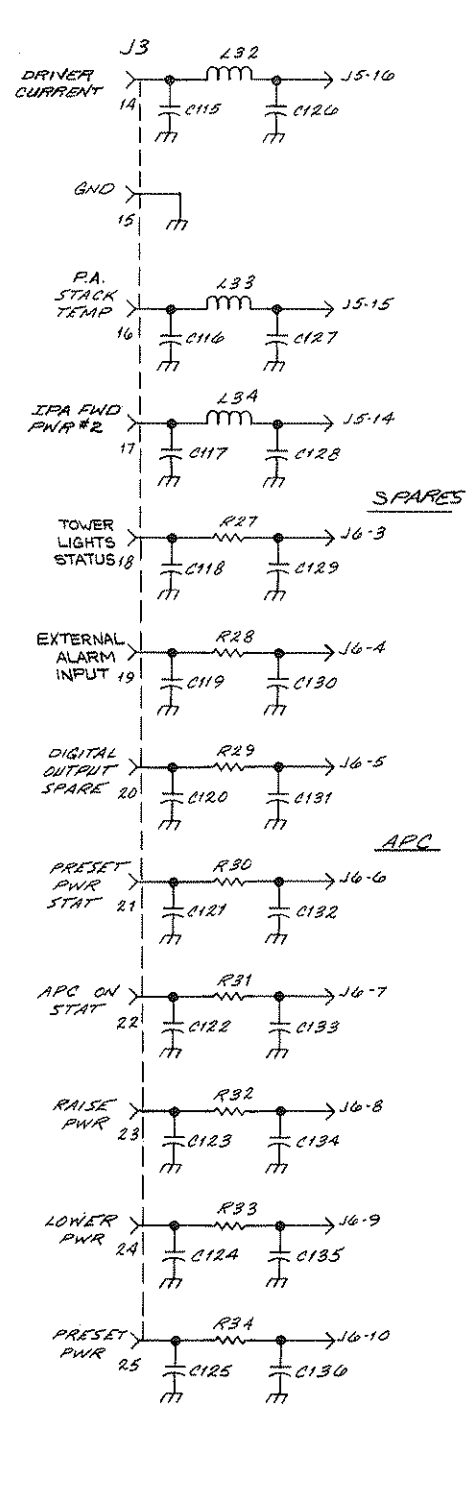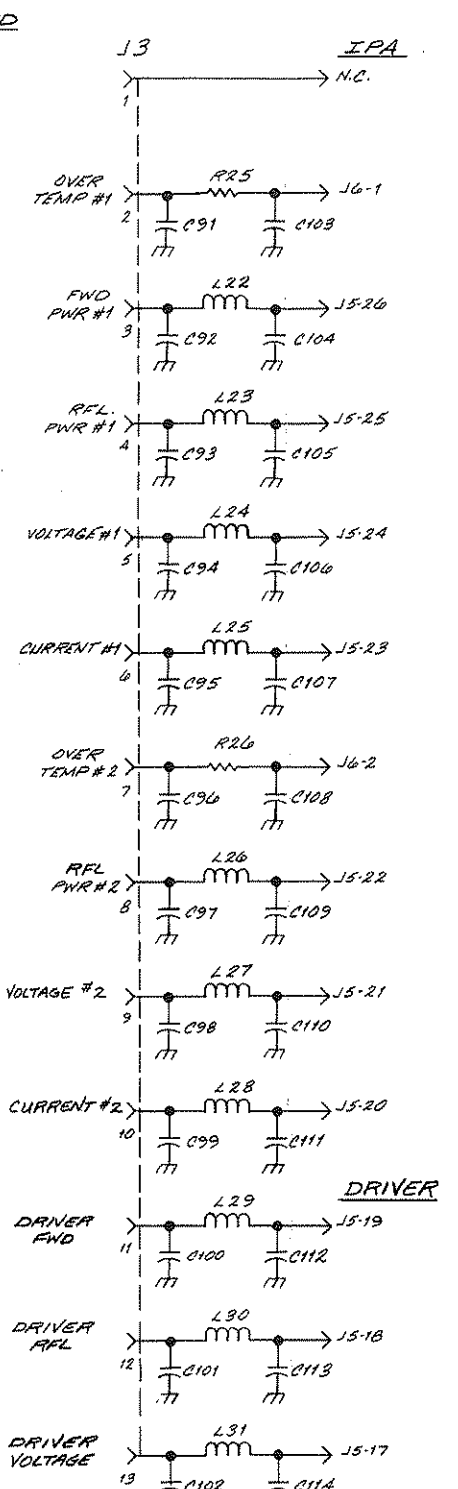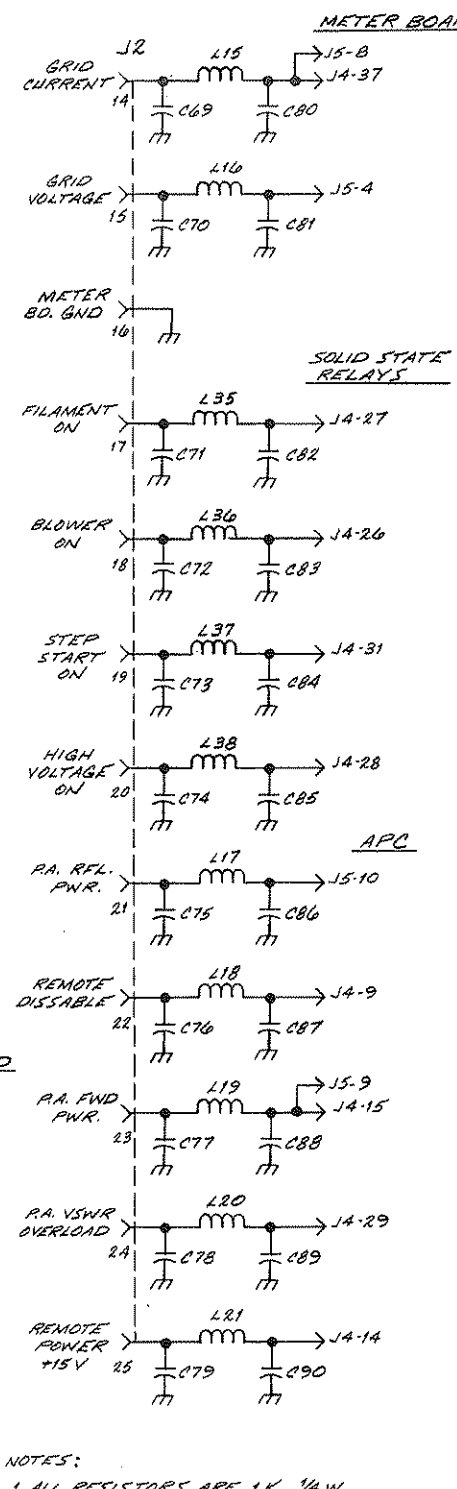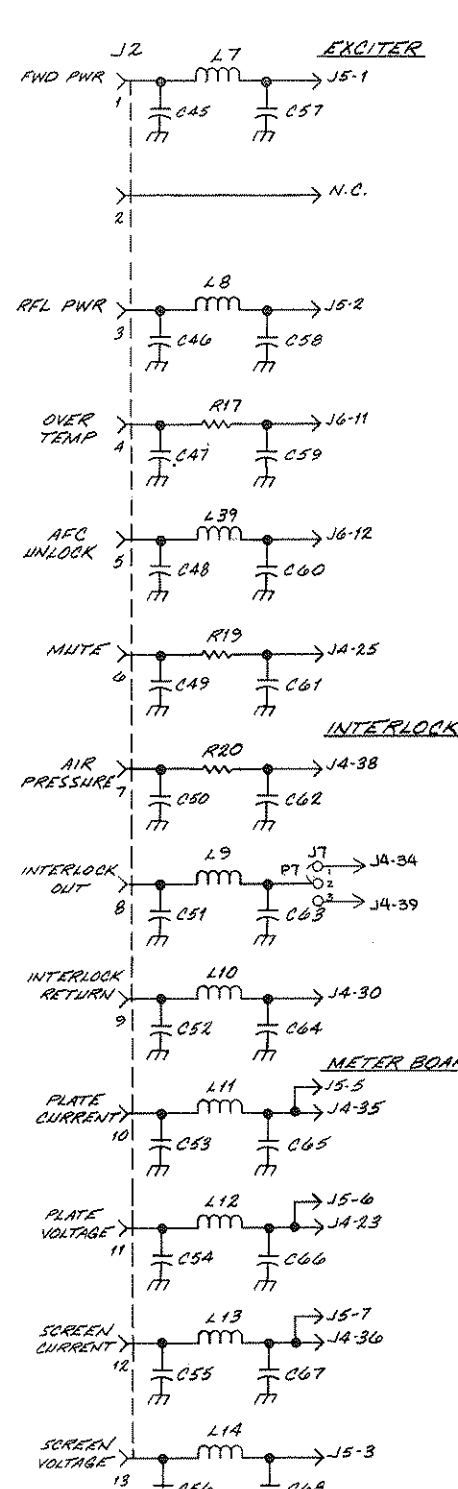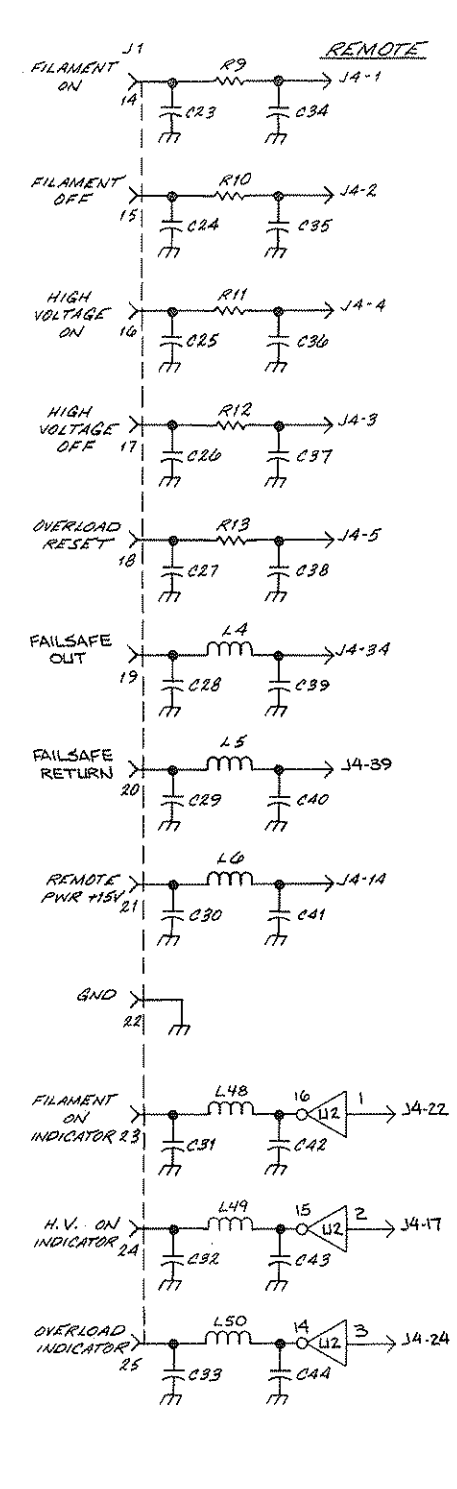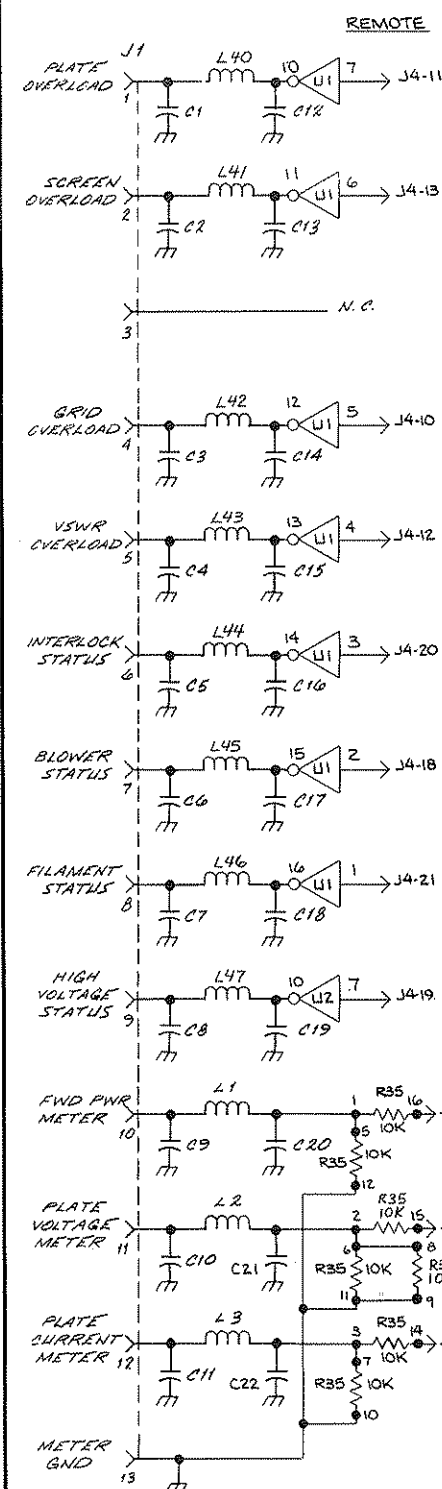


- NOTES:
- ALL RESISTORS ARE 1K, 1/4W. ALL CAPACITORS ARE 390 pF. ALL COILS ARE 4.7 uH OR 2.2 mH.
 - LAST COMPONENTS USED: C136, L39, R35, U2, J7
 - COMPONENTS NOT USED: R18 SEE ASSEMBLY # D919-0056 SEE BOM # 919-0056
 - ON J7, CONNECT 1 TO 2 FOR INDEPENDENT FAILSAFE INTERLOCK STRING OR CONNECT 2 TO 3 FOR SERIAL FAILSAFE INTERLOCK. INDEPENDENT FAILSAFE INTERLOCK REQUIRES REVISION C OR LATER PRIMARY TRANSMITTER CONTROLLER BOARD.

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

| | | | |
|---|--|--|---|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | TOLERANCE UNLESS OTHERWISE SPECIFIED DECIMAL 2 PL = .01 SPL = .005 FRACTIONAL ±1/64 ANGULAR ±1° SHARP EDGES TO BEND RADIUS FILLET RADIUS | DRAWN BY: REBEL CHECKED BY: MM PROJECT ENGR: MM DATE: 5-13-85 APPROVED BY: MM | DATE: 5-13-85 TITLE: SCHEMATIC - TRANSMITTER CONTROLLER INPUT FILTER BD. |
| | MATERIAL: | TREATMENT OR FINISH: | Dwg. No. 919-0056 TYPE: 2 SCALE: 2x SHEET 1 of 1 |

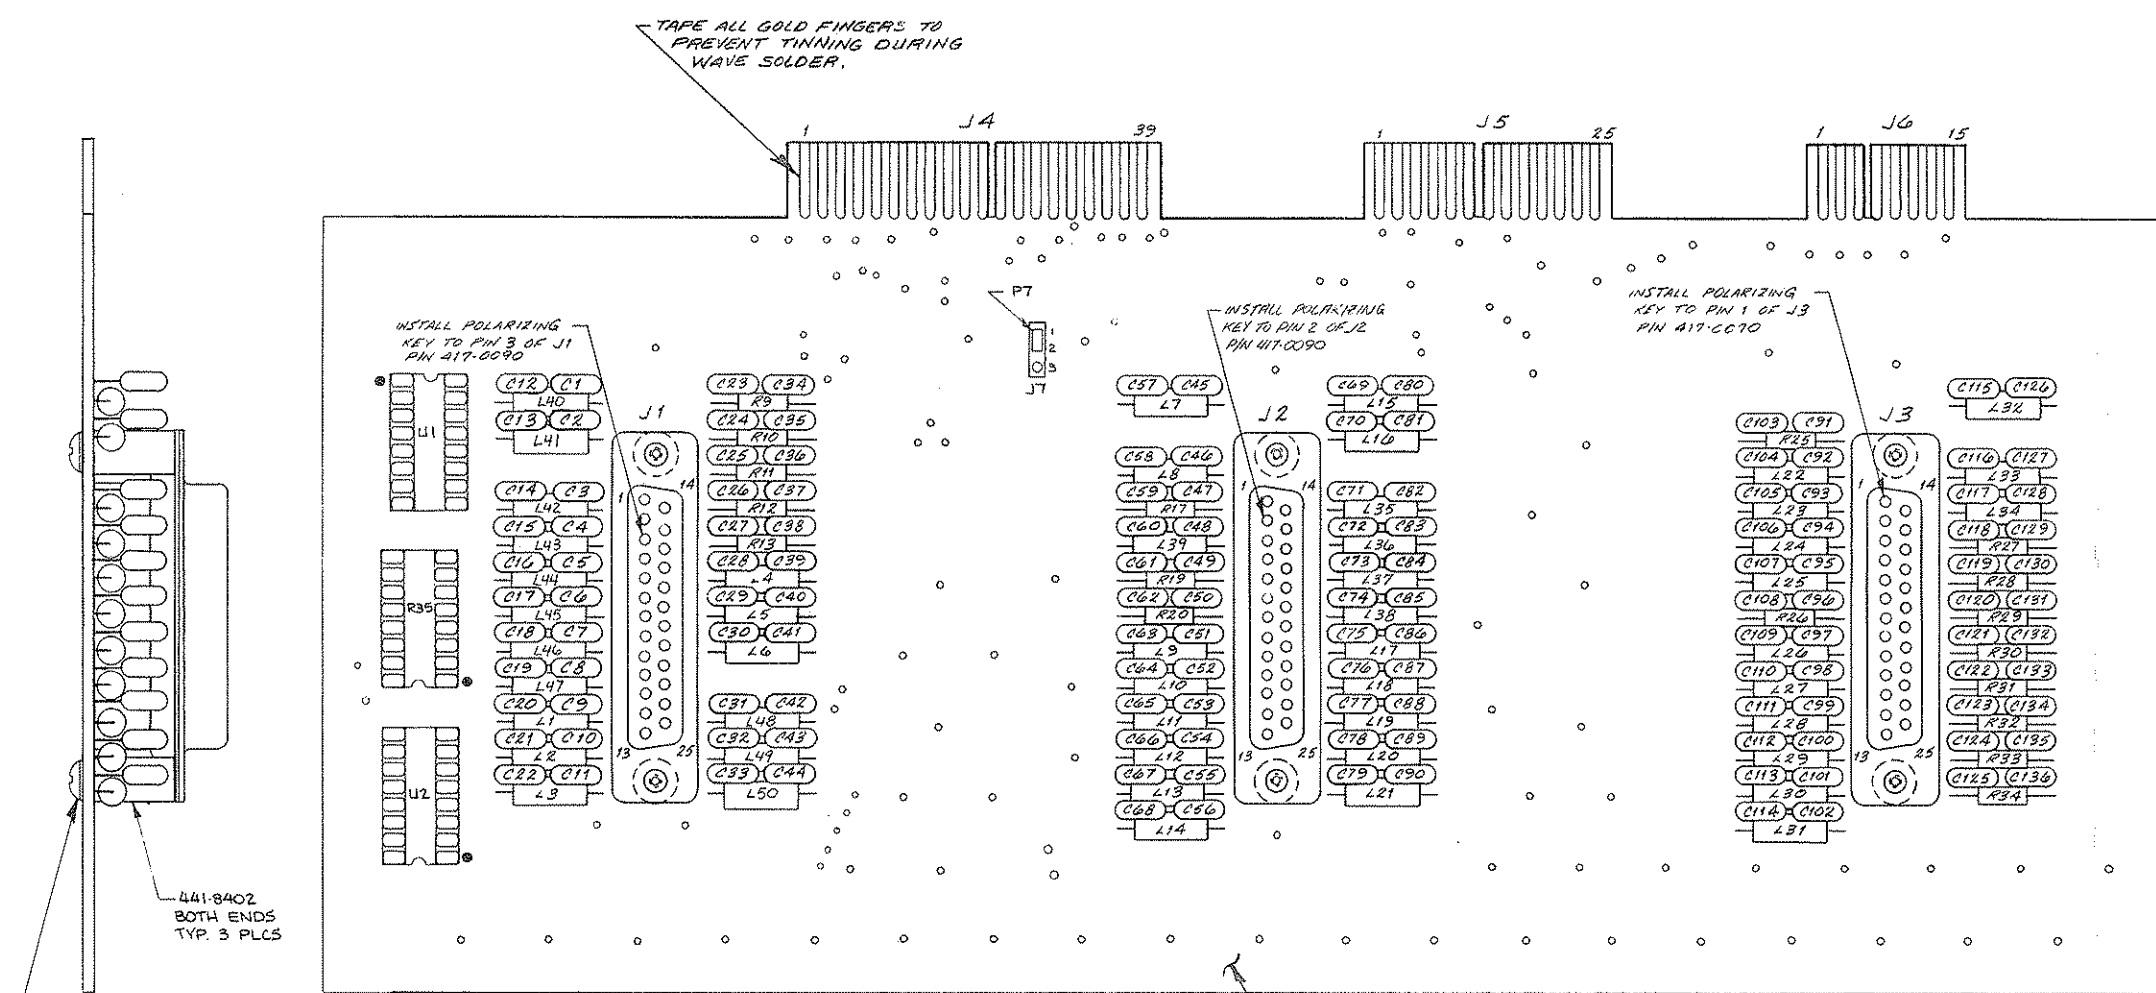

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

441-8402
BOTH ENDS
TYP. 3 PLCS

NOTE:
INSERT HARDWARE INTO PCB FROM
COMPONENT SIDE. TAPE HARDWARE
HOLES ON CIRCUIT SIDE OF PCB TO
PREVENT FILLING DURING WAVE
SOLDER. AFTER WAVE SOLDER, REMOVE
HARDWARE FROM COMPONENT SIDE
AND INSERT INTO CIRCUIT SIDE OF
PCB.

SEE SCHEMATIC # D919-0056
SEE BOM # 919-0056

NOTE:
1. L1-L39 MAY BE EITHER 2.2µH OR 4.7µH UNDER PIN 360 0022.
2. FOR MOSLEY REMOTE CONTROL SYSTEMS, REPLACE U1, U2 & R35 WITH
JUMPERS P/N 360-0006. INSTALL JUMPER AT PIN 1 POSITION OF R35.

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

| | | | | |
|---|--|---|------------------------------|---|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | TOLERANCE UNLESS OTHERWISE SPECIFIED DECIMAL ± PL-01 SPL-005 FRACTIONAL ± 1/64 ANGULAR ± 1° SHARP EDGES SEND RADI FILLET RADI | DRAWN BY CHECKED BY PROJECT ENGR APPROVED BY DATE DATE DATE | DATE DATE DATE | BROADCAST ELECTRONICS, INC. TITLE PCB ASSEMBLY - TRANSMITTER CONTROLLER INPUT FILTER PCB |
| | MATERIAL | TREATMENT OR FINISH | DWG. NO. TYPE 919-0056 | REV. E |
| | TRANSMITTER CONTROLLER | SCALE 24 | SHEET 1 OF 1 | |
| | | | | |


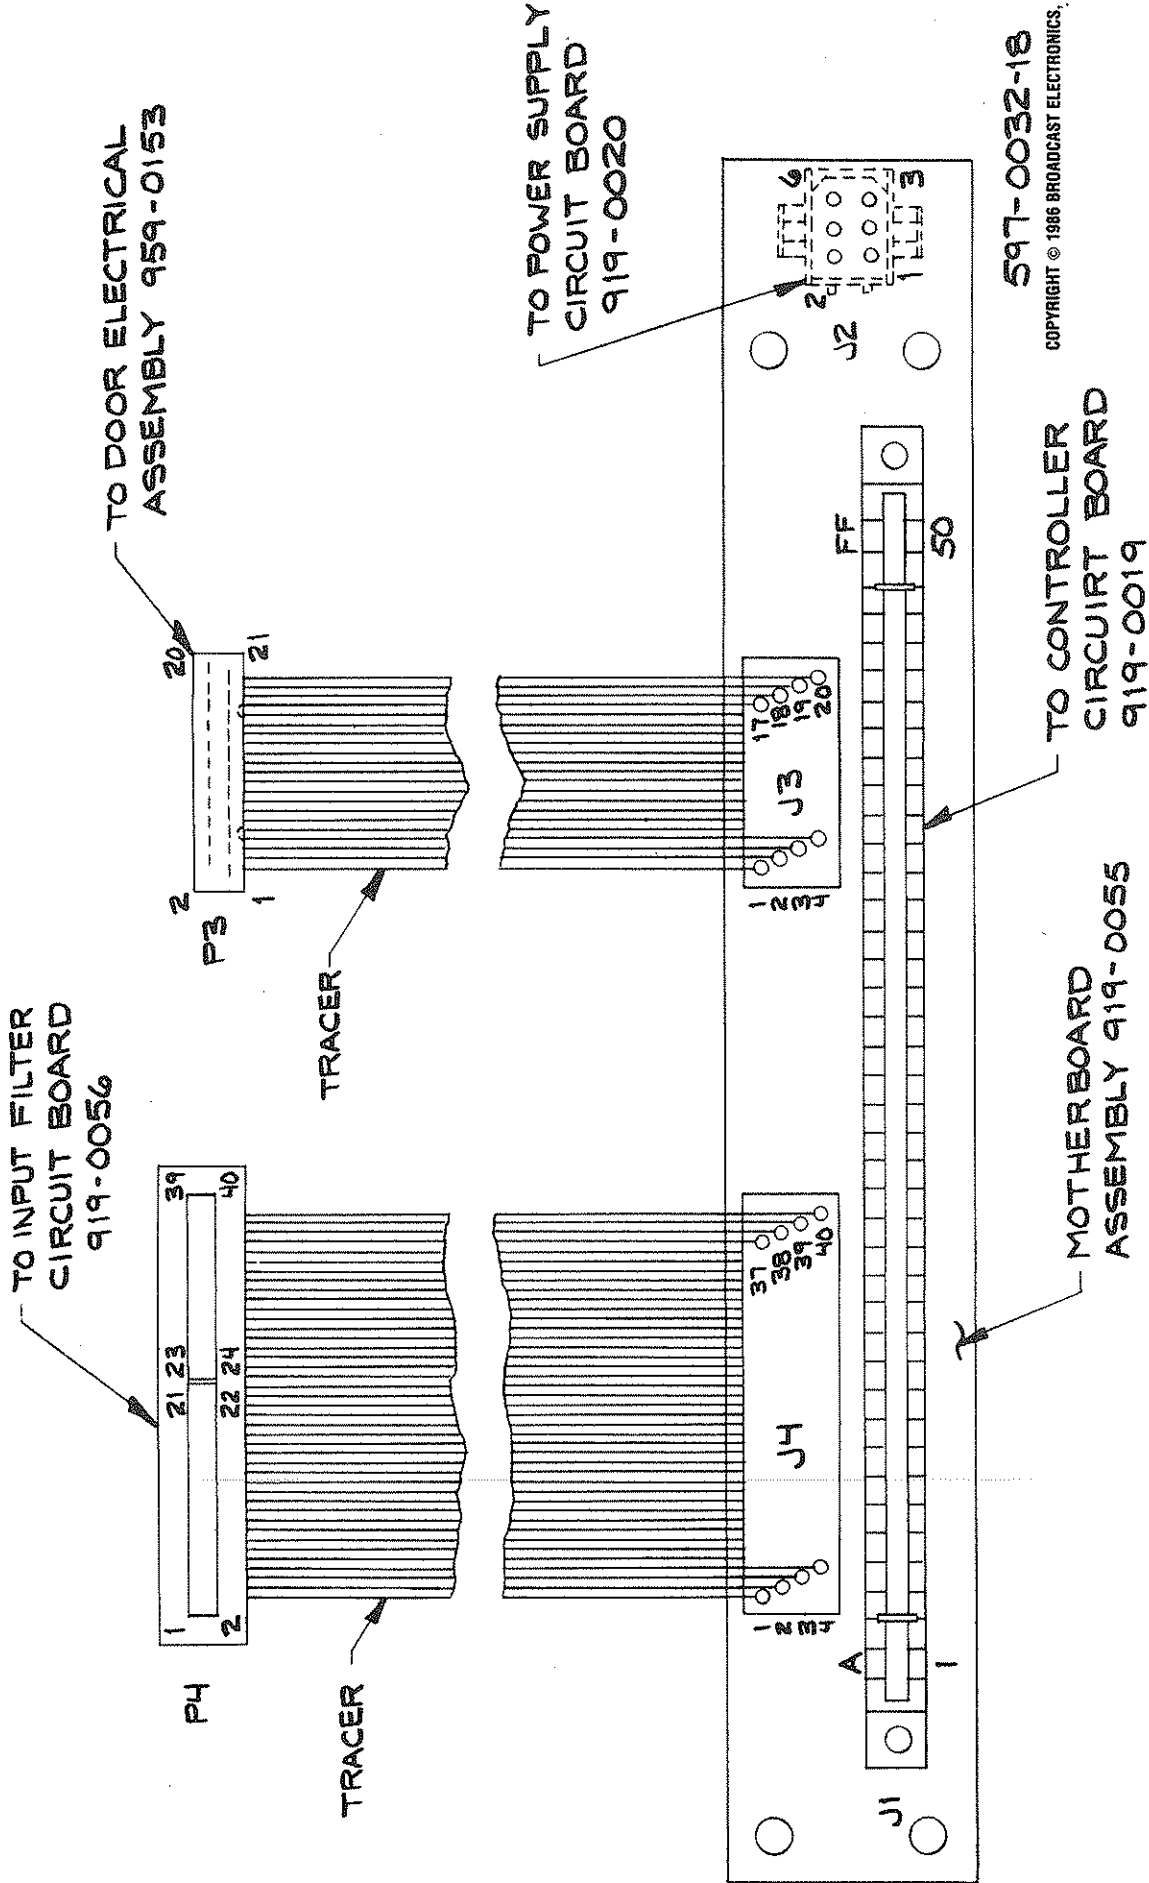


FIGURE 3-4 . MOTHERBOARD ASSEMBLY

HEAT AND REMOVE
PIN 4 FROM J2
PRIOR TO ASSY.

409-0005
2 P.L.C.

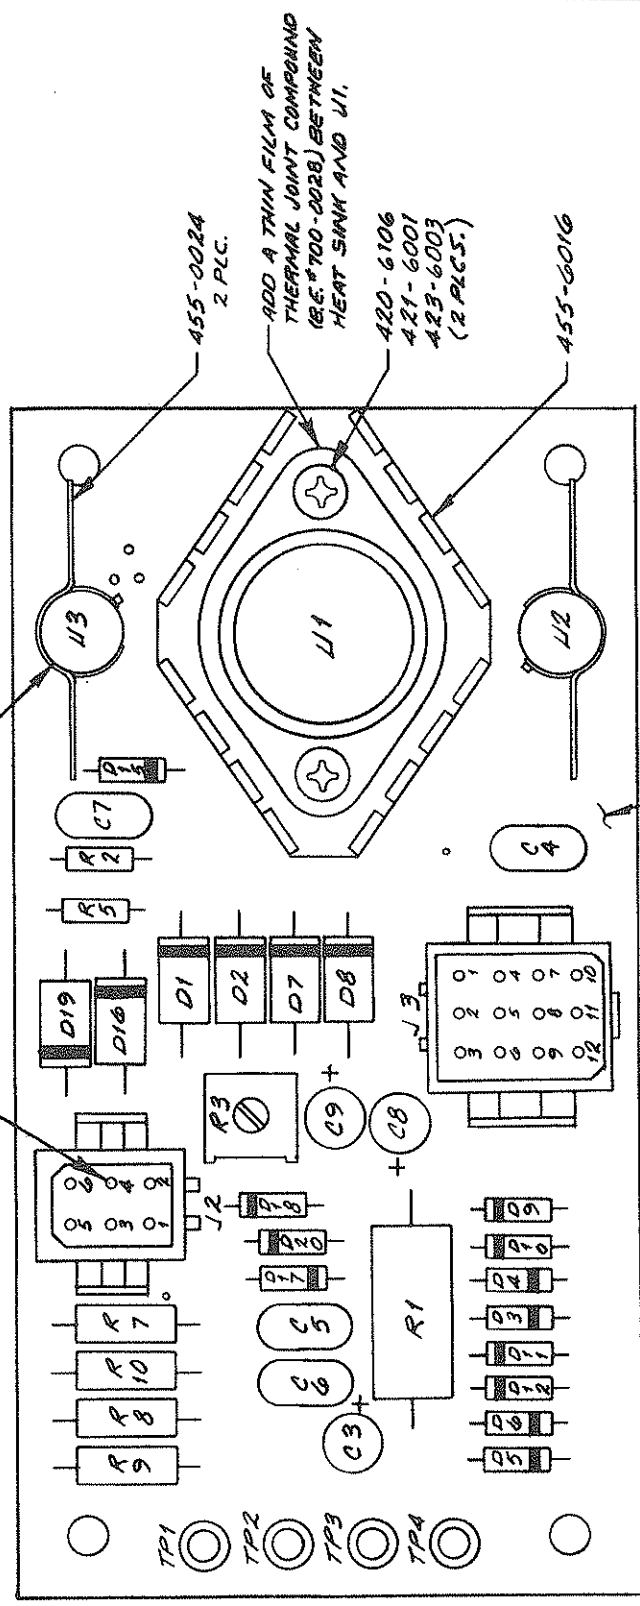

519-0020

SEE SCHEMATIC AC 999-0045
SEE B/M # 919-0020

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.


| | | | |
|--|--|---|--|
| DRAWN BY <u>MERRILL</u> DATE <u>1-11-83</u> | | CHECKED BY _____ DATE _____ | |
| PROJECT <u>PCB ASSEMBLY TRANSMITTER</u> | | DATE <u>5-16-83</u> | |
| ENGINEER <u>MH</u> | | APPROVED BY <u>MH</u> DATE <u>5-16-83</u> | |
| TOLERANCE UNLESS OTHERWISE SPECIFIED DECIMAL 2 PL ± 01 3PL ± 005 FRACTIONAL ± 1/64 ANGULAR ± 1° SHARP EDGES BEND RADI FILLET RADI | | TREATMENT OR FINISH _____ | |
| MATERIAL _____ | | SCALE <u>2/1</u> | |
| <p>PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC.</p> | | REV. <u>B</u> | |
| DWG. NO. <u>919-0020</u> | | SHEET <u>1</u> OF <u>1</u> | |

BROADCAST ELECTRONICS INC.

TITLE PCB ASSEMBLY TRANSMITTER
CONTROLLER POWER SUPPLY

XMTRS


| REVISIONS | | | |
|-----------|--|-------------|----------|
| REV. | DESCRIPTION | DATE | APPROVED |
| A | UPDATED & ENGINEERING RELEASE PER ECN 5205 | ORF 5-16-83 | JH |
| B | PER ECN 5205 | JAN 7-30-84 | JML |
| C | PER ECN 5206 | JAN 7-6-84 | JH |

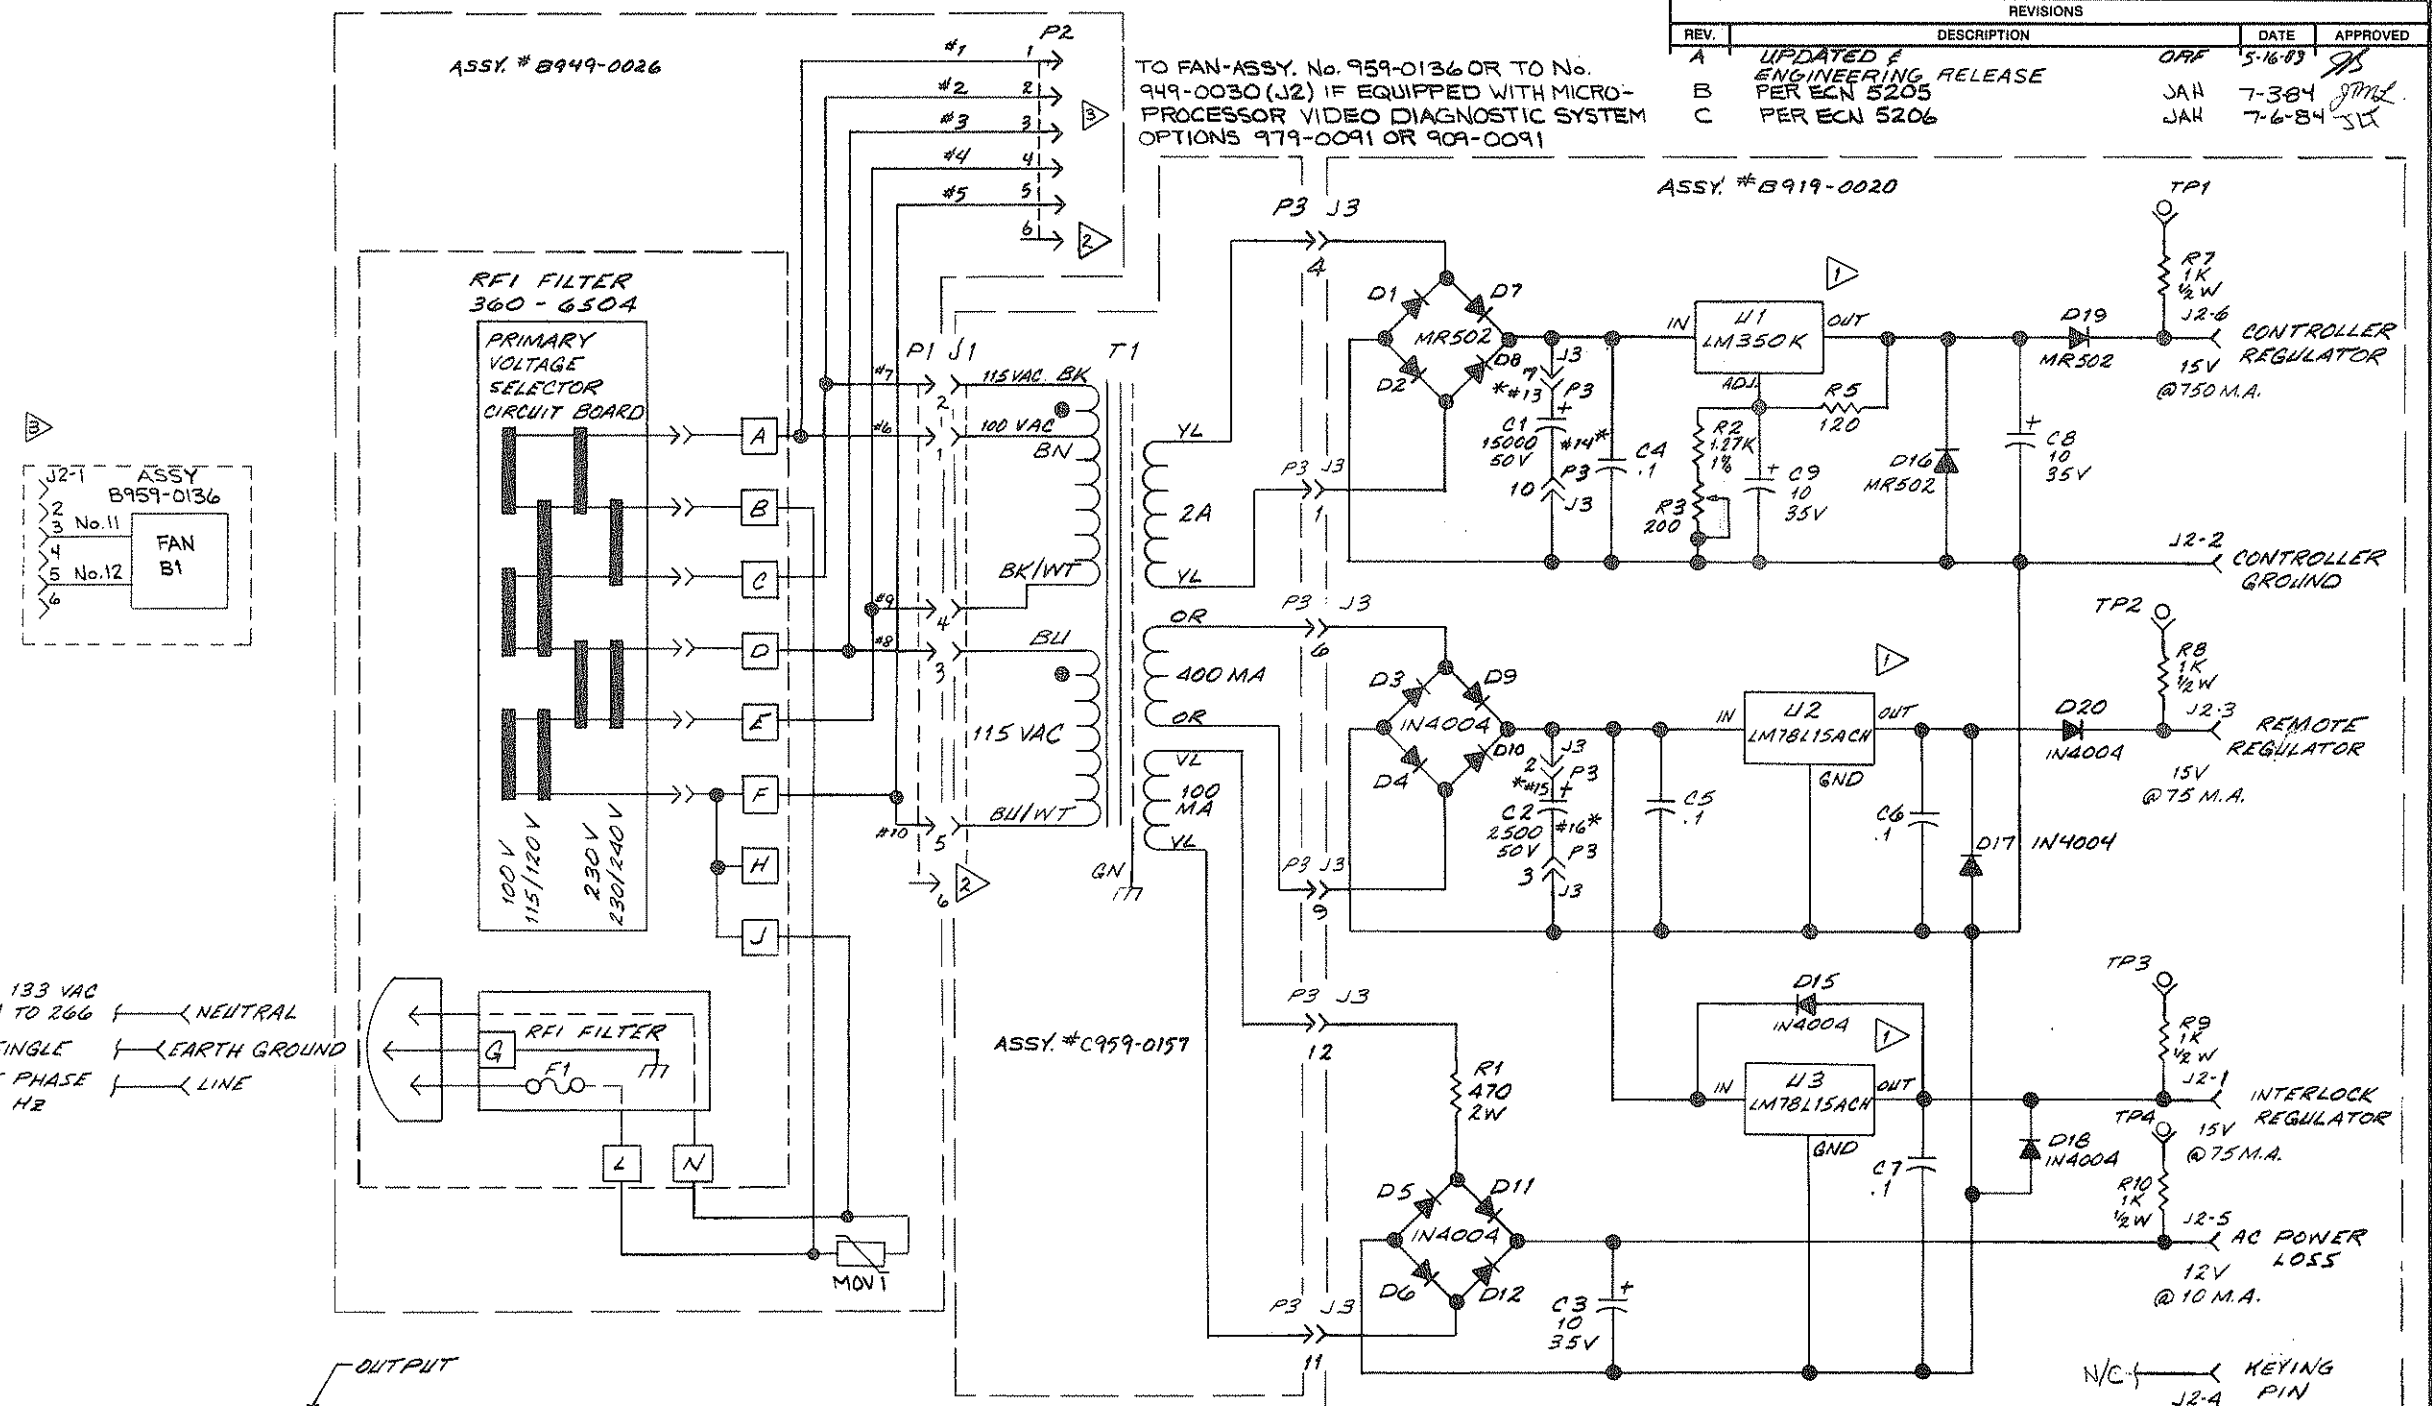

97 TO 133 VAC OR 194 TO 266 VAC SINGLE PHASE 50/60 HZ
 NEUTRAL
 EARTH GROUND
 LINE



LM78L15SACH
 BOTTOM VIEW
 U2 & U3

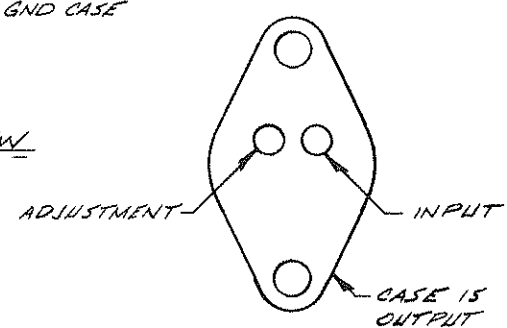


LM350
 BOTTOM VIEW
 U1

1. ALL RESISTORS IN OHMS, 1/4 W; CAPACITORS IN MICROFARADS, U.O.S.
2. - HEATSINK REQUIRED
3. LAST COMPONENTS USED: C9, D21, R10, T1, U3, J3, E10, & TPA
4. POLARIZING PLUG # 418-0026
5. * WIRE # 13, 14, 15 & 16 ARE INCLUDED ON ASSY. #C959-0157.

SEE B/M'S 919-0020, 959-0157, 949-0026 & 959-0045

| | | | | |
|---|--|--|--------------------------------|---|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | TOLERANCE UNLESS OTHERWISE SPECIFIED DECIMAL 2 PL = .01 3 PL = .005 FRACTIONAL ± 1/64 ANGULAR ± 1° SHARP EDGES BEND RADI FILLET RADI | DRAWN BY: NERK CHECKED BY: DATE PROJECT ENGR: DATE APPROVED BY: MAH 5-16-83 | DATE: 9-24-82 DATE: 5-16-83 | BROADCAST ELECTRONICS INC. TITLE: SCHEMATIC - TRANSMITTER CONTROLLER POWER SUPPLY DWG. NO.: 959-0045 SCALE: NTS SHEET 1 OF 1 |
| | MATERIAL | TREATMENT OR FINISH | REV. C | |


| REVISIONS | | | | | |
|-----------|---------|---------------------------------|--------|------|------|
| REV | DATE | DESCRIPTION | DFTSMN | ENGR | ECN |
| A | 5-13-83 | ENGINEERING RELEASE W/IO CHANGE | MH | JH | - |
| B | 7-3-84 | ADDED VOLTAGE TO BATTERY | JAH | JH | 5205 |

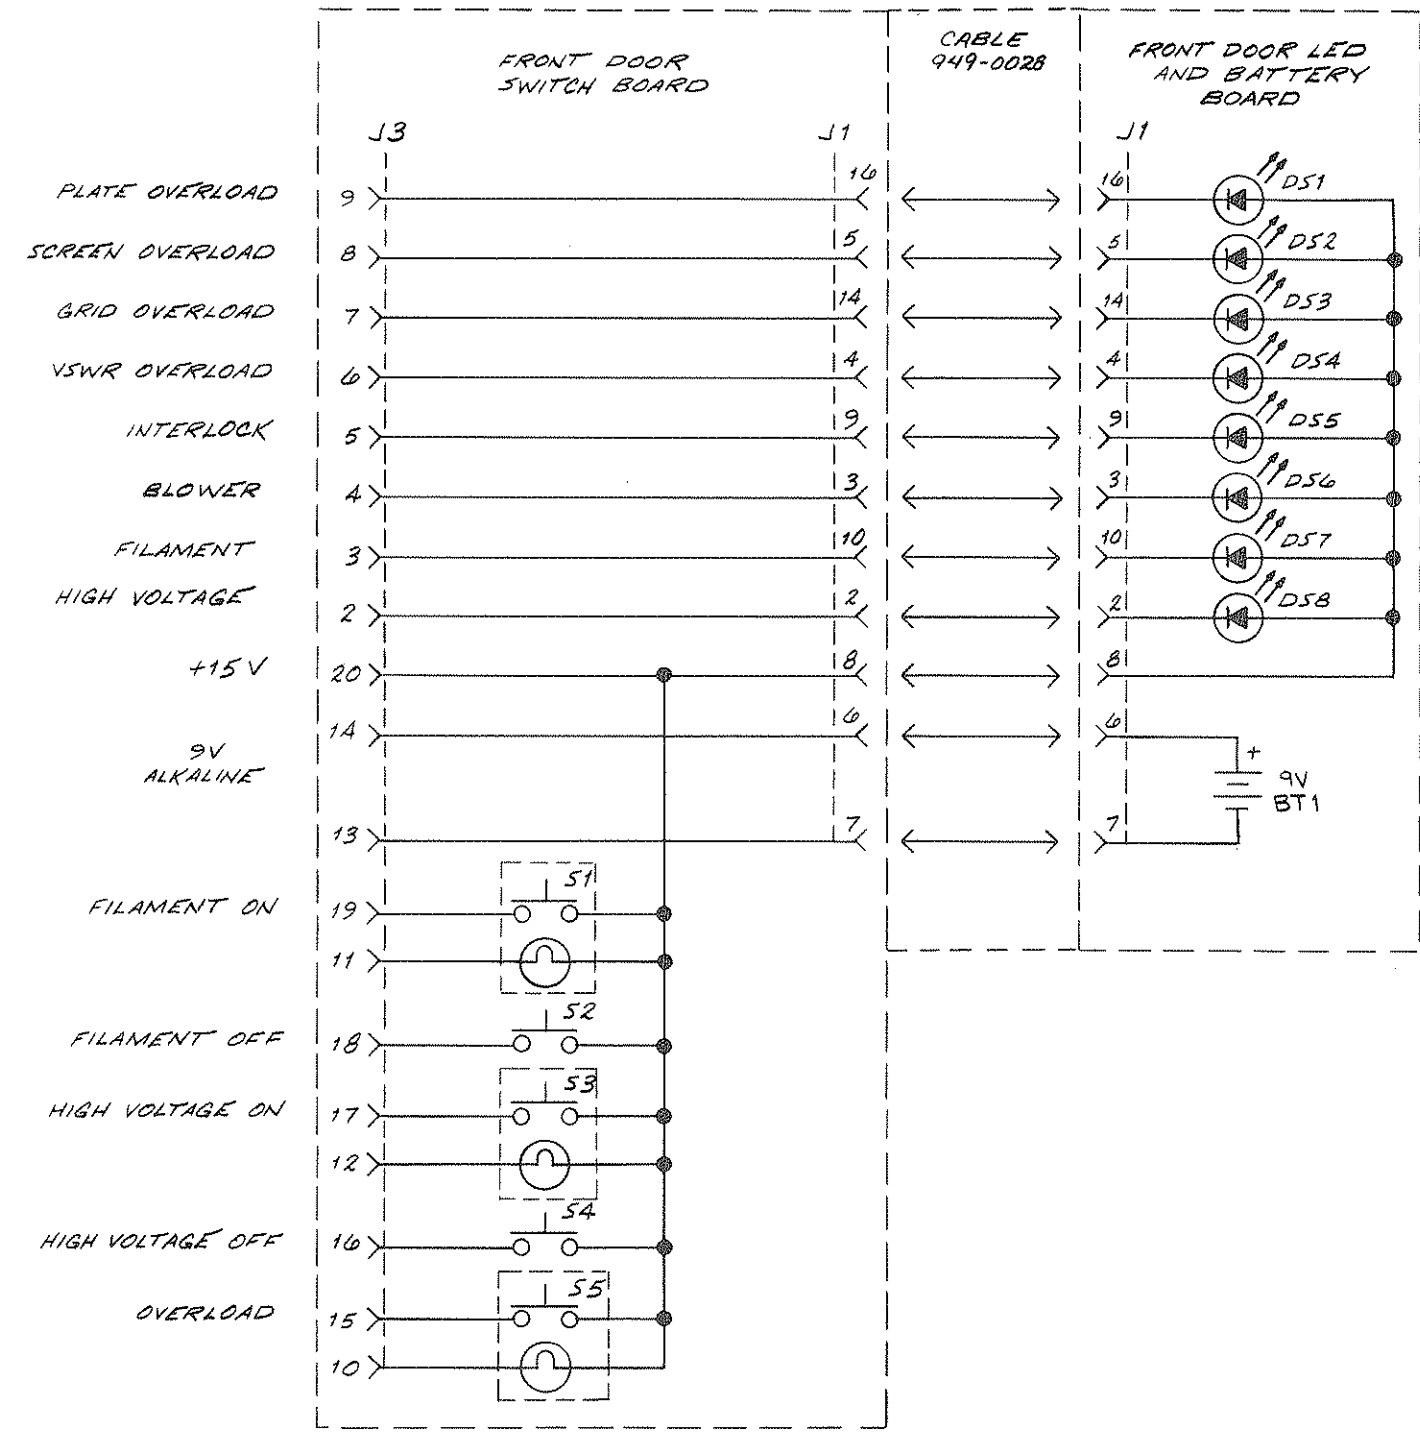

NOTES:
 1. LAST COMPONENTS USED: DS8, J3, 55
 2. SEE ASSEMBLY # CFD 959-0153
 # A949-0028
 SEE BIM # 959-0153
 949-0028

| | | | |
|---|---------------------------|--|---|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | DWN. BY MERKEL 1-28-83 | NEXT ASSY. 959-0046 | BE BROADCAST ELECTRONICS INC. 4100 N. 24TH ST. QUINCY, IL 62305 217/224-9600 TELEX 250142 CABLE BCST ELECT QUI |
| | CHKD. | PRODUCT USED ON TRANSMITTER CONTROLLER | |
| | ME | FINISH | |
| | EE | | |
| | PROJ. ENGR M/5-13-83 | | TITLE SCHEMATIC - FRONT DOOR SWITCH BD AND LED & BATTERY BD. |
| | DFTG. SUPVR. 5-13-83 | | SHEET 1 OF 1 SCALE REV B |
| | MFG. | | TYPE SIZE DWG. NO. S C 959-0153 |
| TOLERANCE (DECIMAL) U.S.S. .X ± .030 .XXX ± .005 .XX ± .015 ANGLES ± 1° | | | |


| REVISIONS | | | |
|-----------|--------------------------------|---------|--------------------|
| REV. | DESCRIPTION | DATE | APPROVED |
| A | ENGINEERING RELEASE W/D CHANGE | 5-13-83 | <i>[Signature]</i> |

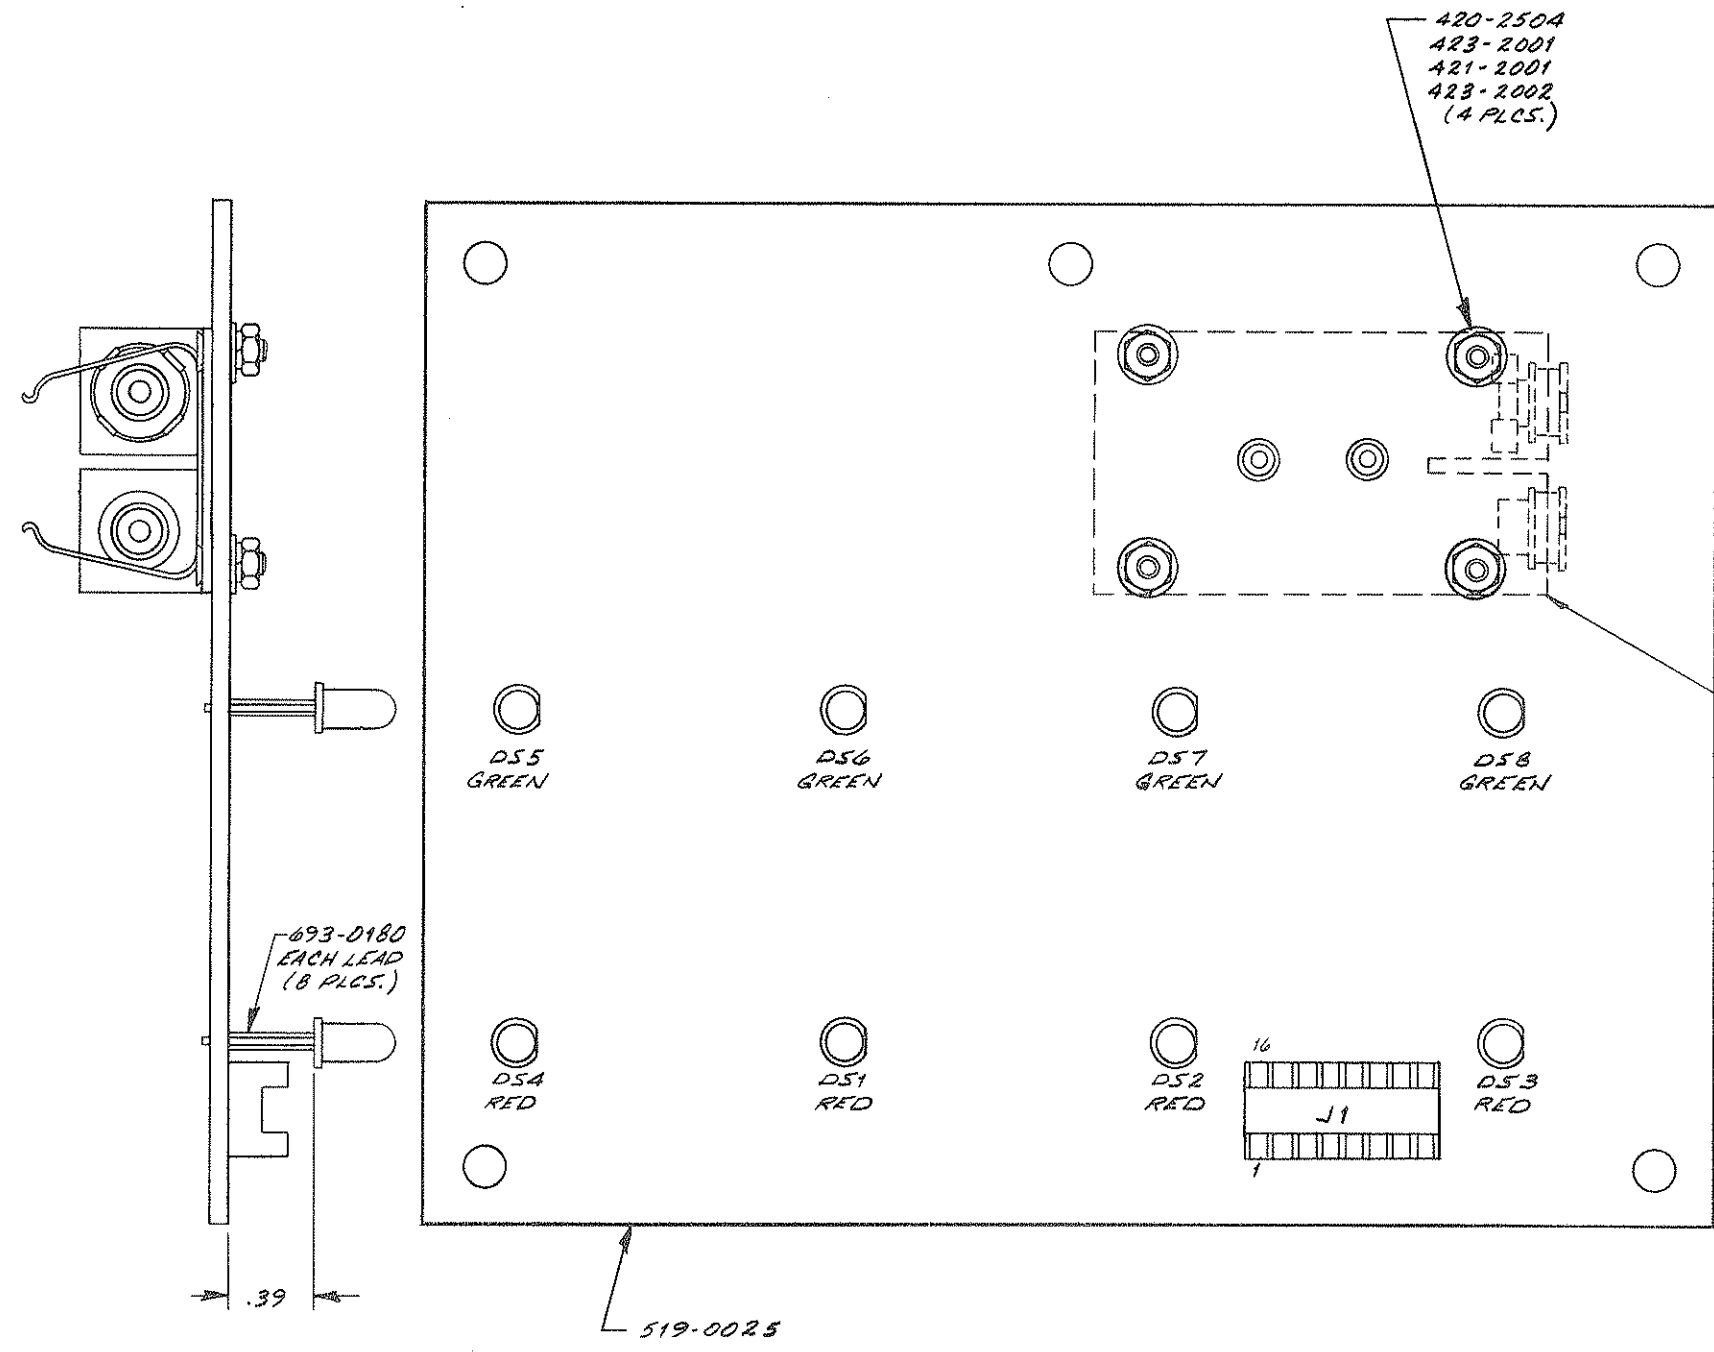

REF ASSY. # D959-0153
SEE SCHEMATIC # C959-0153
SEE B/M # 959-0153

| | | | | |
|--|---|---|---|--------------------------|
| <small>PROPRIETARY RIGHTS</small> are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | <small>TOLERANCE UNLESS OTHERWISE SPECIFIED</small> DECIMAL 2 PL=.01 3PL=.005 FRACTIONAL ±1/64 ANGULAR ±1° SHARP EDGES TO BEND RADII FILLET RADII | <small>DRAWN BY</small> <i>MERK</i> <small>DATE</small> 12-11-82 <small>CHECKED BY</small> <i>[Signature]</i> <small>DATE</small> <small>PROJECT ENGR.</small> <i>[Signature]</i> <small>DATE</small> 5-13-83 <small>APPROVED BY</small> <i>MH</i> <small>DATE</small> 5-13-83 | BROADCAST ELECTRONICS INC. <small>TITLE</small> PCB ASSEMBLY - CONTROLLER FRONT DOOR LED AND BATTERY | |
| | <small>MATERIAL</small> _____ | <small>TREATMENT OR FINISH</small> _____ | <small>DWG. NO.</small> TYPE A 959-0153 | <small>REV.</small> A |
| | <small>SCALE</small> 2/1 | | <small>SHEET 1 OF 2</small> | |
| | <small>TRANSMITTERS</small> | | | |


| REVISIONS | | | |
|-----------|------------------------------------|----------------------|----------|
| REV. | DESCRIPTION | DATE | APPROVED |
| A | MOVED J3 UP ENGINEERING RELEASE | MH 3-4-83 5-13-83 | JMS |

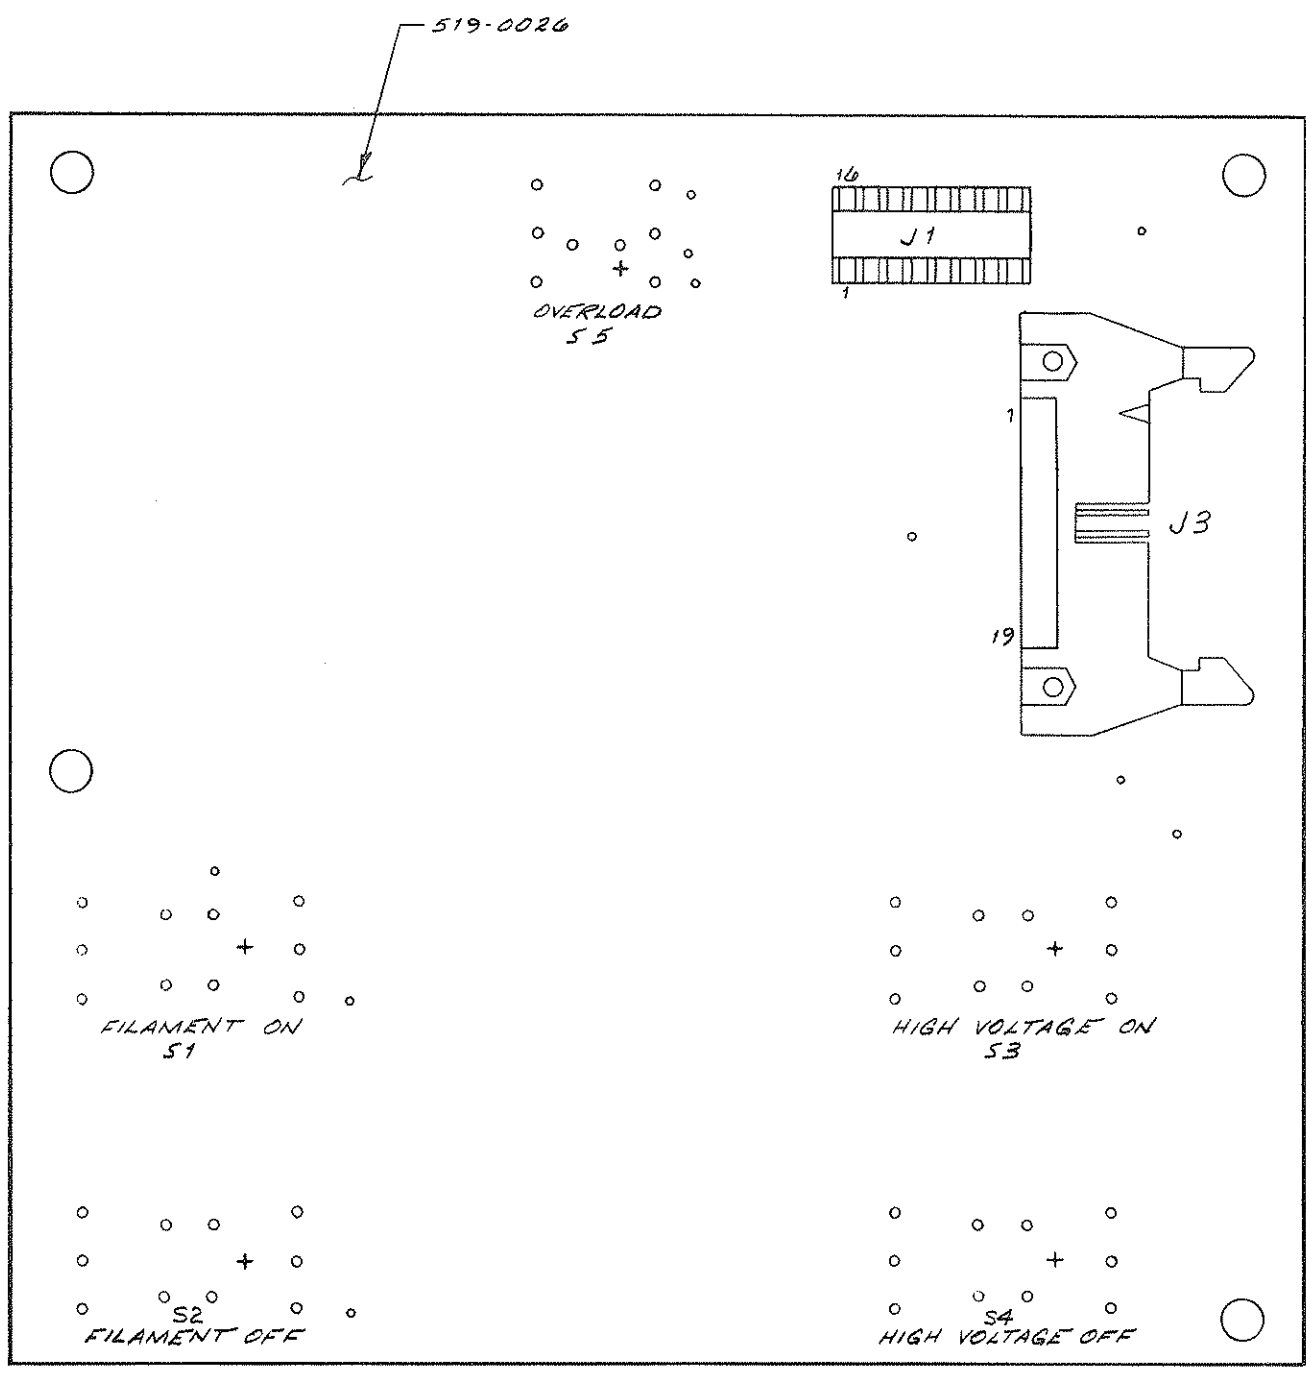

NOTES:
 1. WHEN INSTALLING SWITCHES, (+) TERMINAL MUST MATCH (+) INDICATOR ON PC BOARD.
 2. SWITCHES ARE ADDED DURING FINAL DOOR ASSEMBLY.


REF ASSY # D959-0153
 SEE SCHEMATIC # C959-0153
 SEE B/M # 959-0153

| | | | | |
|---|--|----------------------|--|--|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | TOLERANCE UNLESS OTHERWISE SPECIFIED DECIMAL 2 PL = .01 3PL = .005 FRACTIONAL ± 1/64 ANGULAR ± 1° SHARP EDGES TO FILLET RADII | | DRAWN BY: NERK DATE: 12-11-82 CHECKED BY: DATE: PROJECT ENGR: ME DATE: 5-7-83 APPROVED BY: MH DATE: 5-13-83 | BROADCAST ELECTRONICS INC. TITLE: PCB ASSEMBLY - CONTROLLER FRONT DOOR SWITCH BOARD |
| | MATERIAL: | TREATMENT OR FINISH: | DWG. NO. TYPE: 959-0153 SCALE: 2x | REV. A SHEET 2 OF 2 |
| | | | TRANSMITTERS | |
| | | | | |

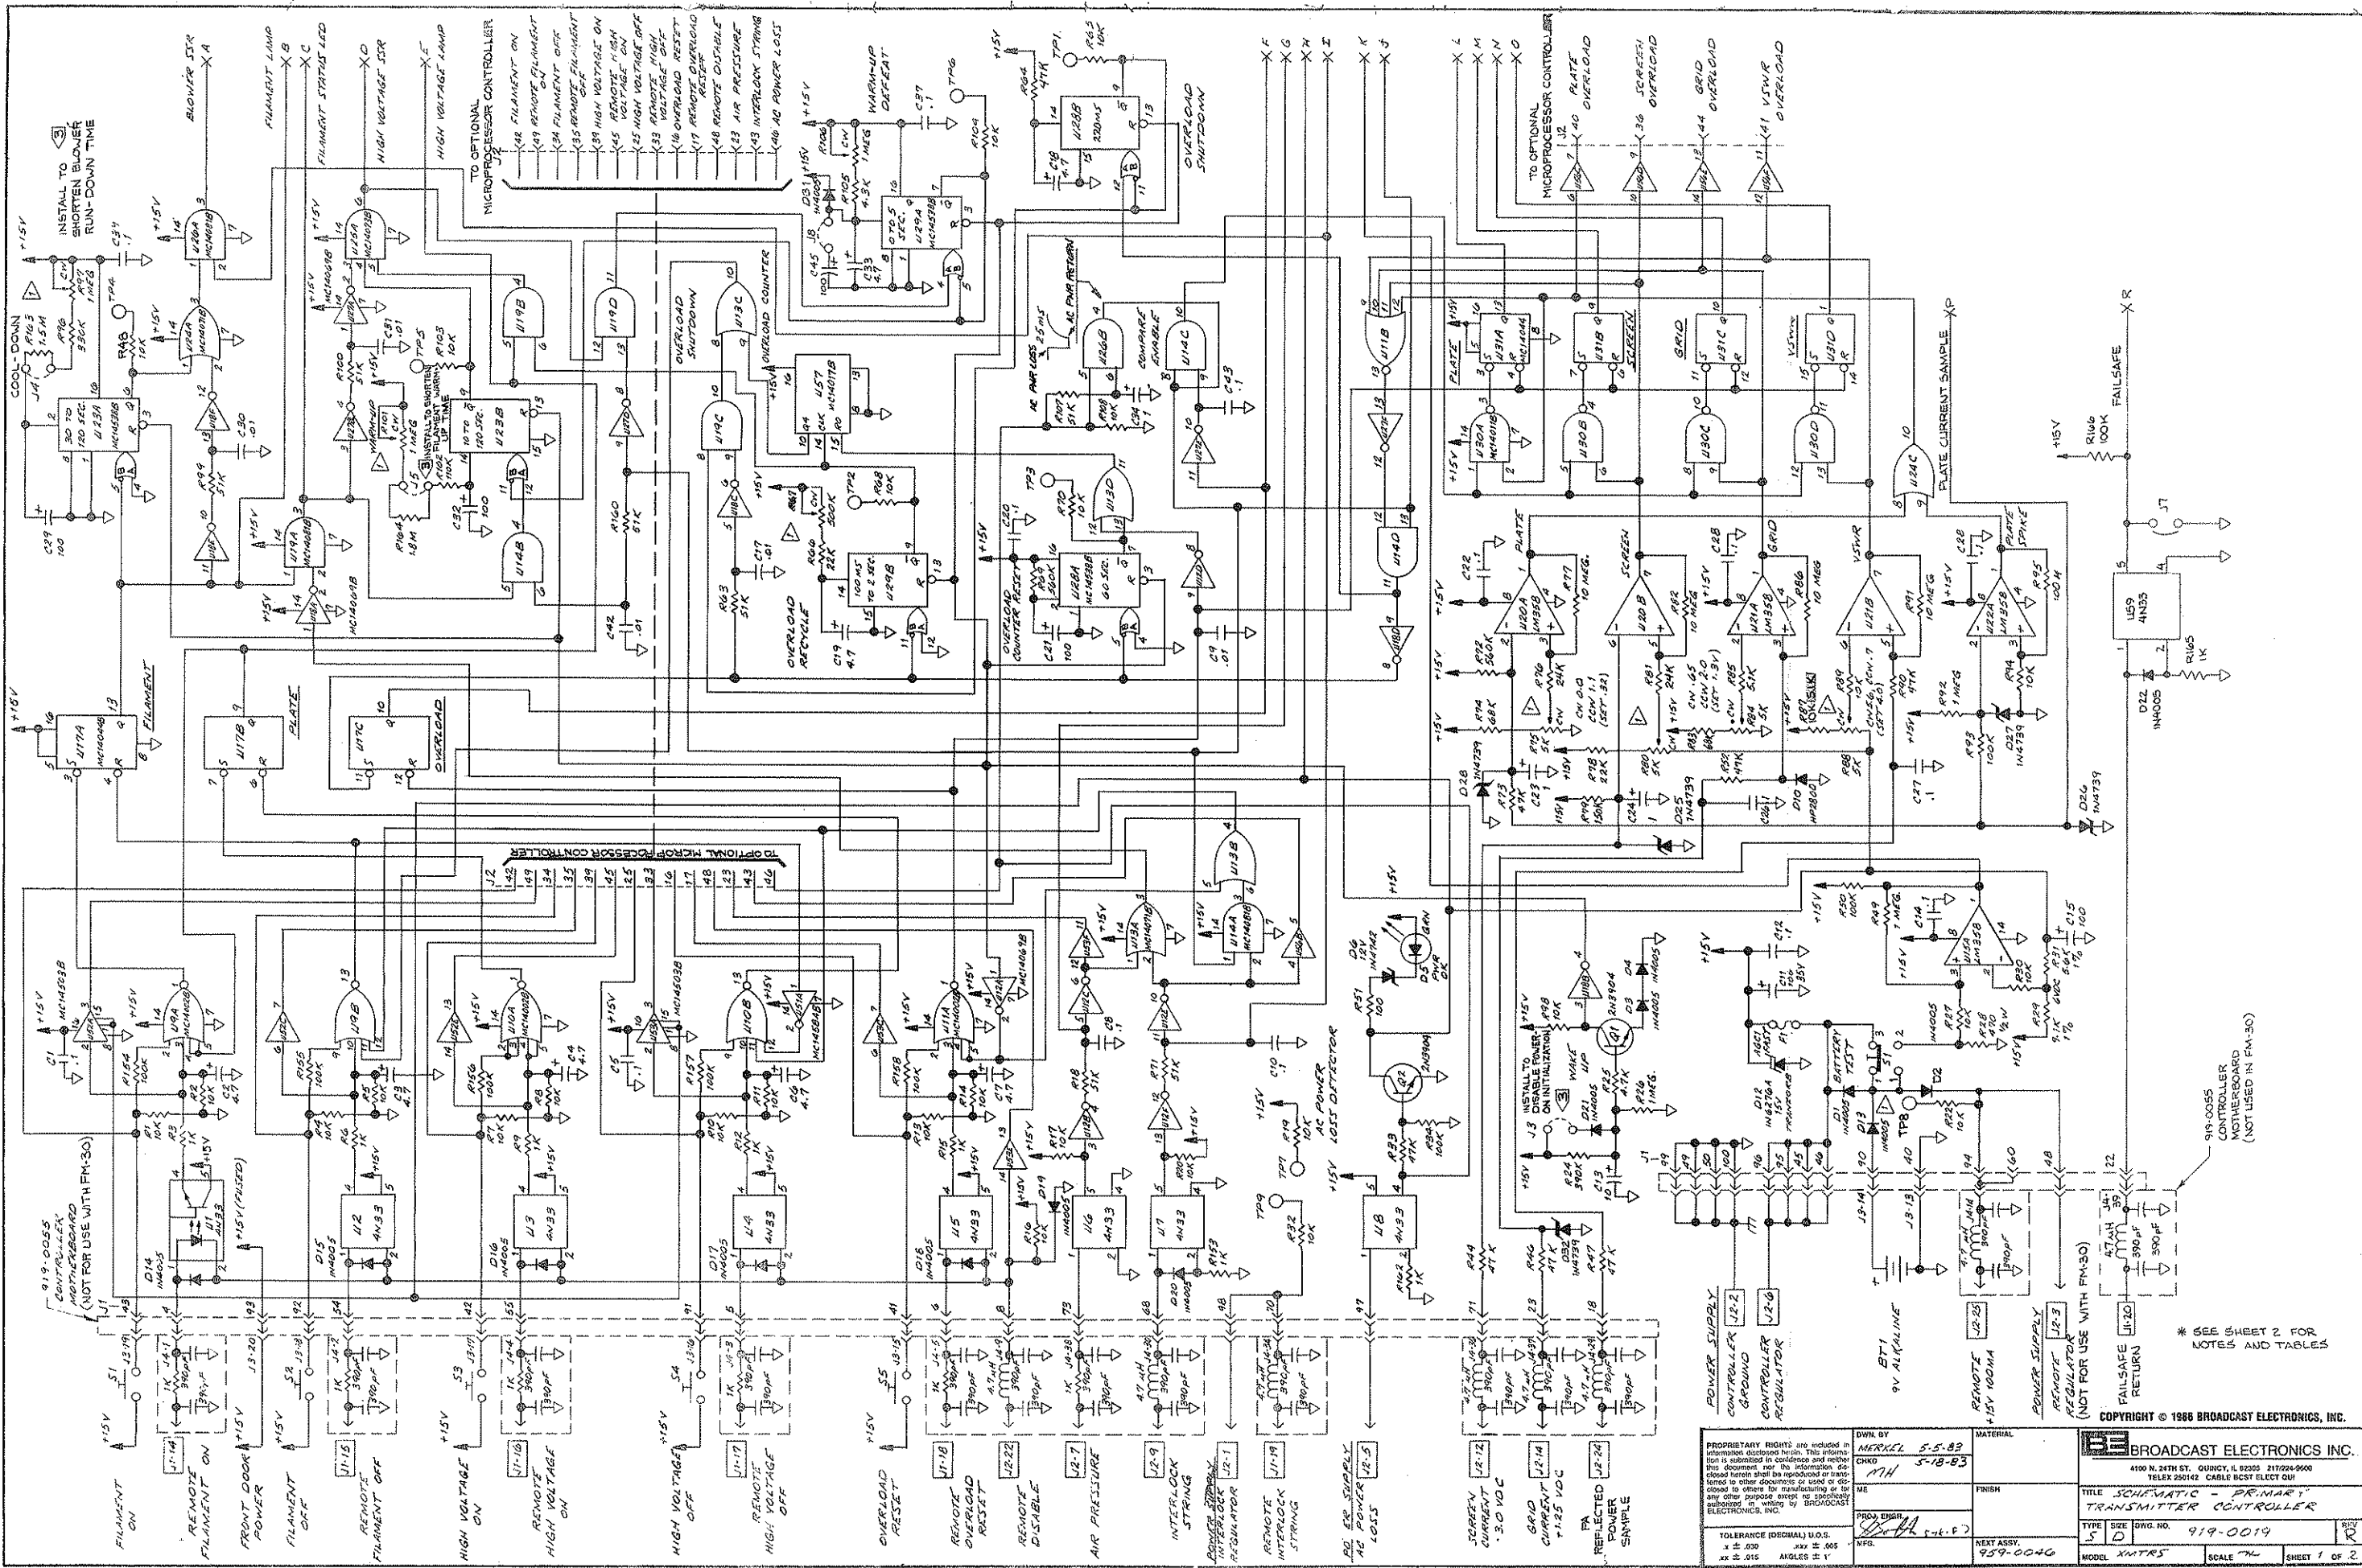

| | | | | |
|---|--|--|---|--|
| PROPRIETARY RIGHTS are reserved and information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or by any information storage and retrieval system, without the prior written permission of Broadcast Electronics, Inc. | | DWRN BY AMERIKEL 5-5-83 CHKD MH 5-18-83 DATE TIME WFB | MATERIAL FINISH TOLERANCE (DIMENAL) U.O.S. ± .030 .XX ± .005 ± .015 ANGLES ± 1° | NEXT ASSY. 959-0046 |
| 919-0055 CONTROLLER MOTHERBOARD (NOT FOR USE WITH FM-30) | | 919-0055 CONTROLLER MOTHERBOARD (NOT USED IN FM-30) | | * SEE SHEET 2 FOR NOTES AND TABLES |
| FILAMENT ON REMOTE FILAMENT ON FRONT POWER FILAMENT OFF REMOTE FILAMENT OFF HIGH VOLTAGE ON REMOTE HIGH VOLTAGE ON HIGH VOLTAGE OFF REMOTE HIGH VOLTAGE OFF OVERLOAD RESET REMOTE OVERLOAD RESET REMOTE DISABLE AIR PRESSURE INTERLOCK STRING REMOTE INTERLOCK STRING AC POWER LOSS SCREEN CURRENT GRID CURRENT PA REFLECTED POWER SAMPLE | | FILAMENT ON REMOTE FILAMENT ON FRONT POWER FILAMENT OFF REMOTE FILAMENT OFF HIGH VOLTAGE ON REMOTE HIGH VOLTAGE ON HIGH VOLTAGE OFF REMOTE HIGH VOLTAGE OFF OVERLOAD RESET REMOTE OVERLOAD RESET REMOTE DISABLE AIR PRESSURE INTERLOCK STRING REMOTE INTERLOCK STRING AC POWER LOSS SCREEN CURRENT GRID CURRENT PA REFLECTED POWER SAMPLE | | TITLE SCHMATIC - PRIMARY TRANSMITTER CONTROLLER TYPE 5 SIZE 10 PRG. NO. 919-0019 MODEL KMTR5 SCALE 1/4" SHEET 1 OF 2 |

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

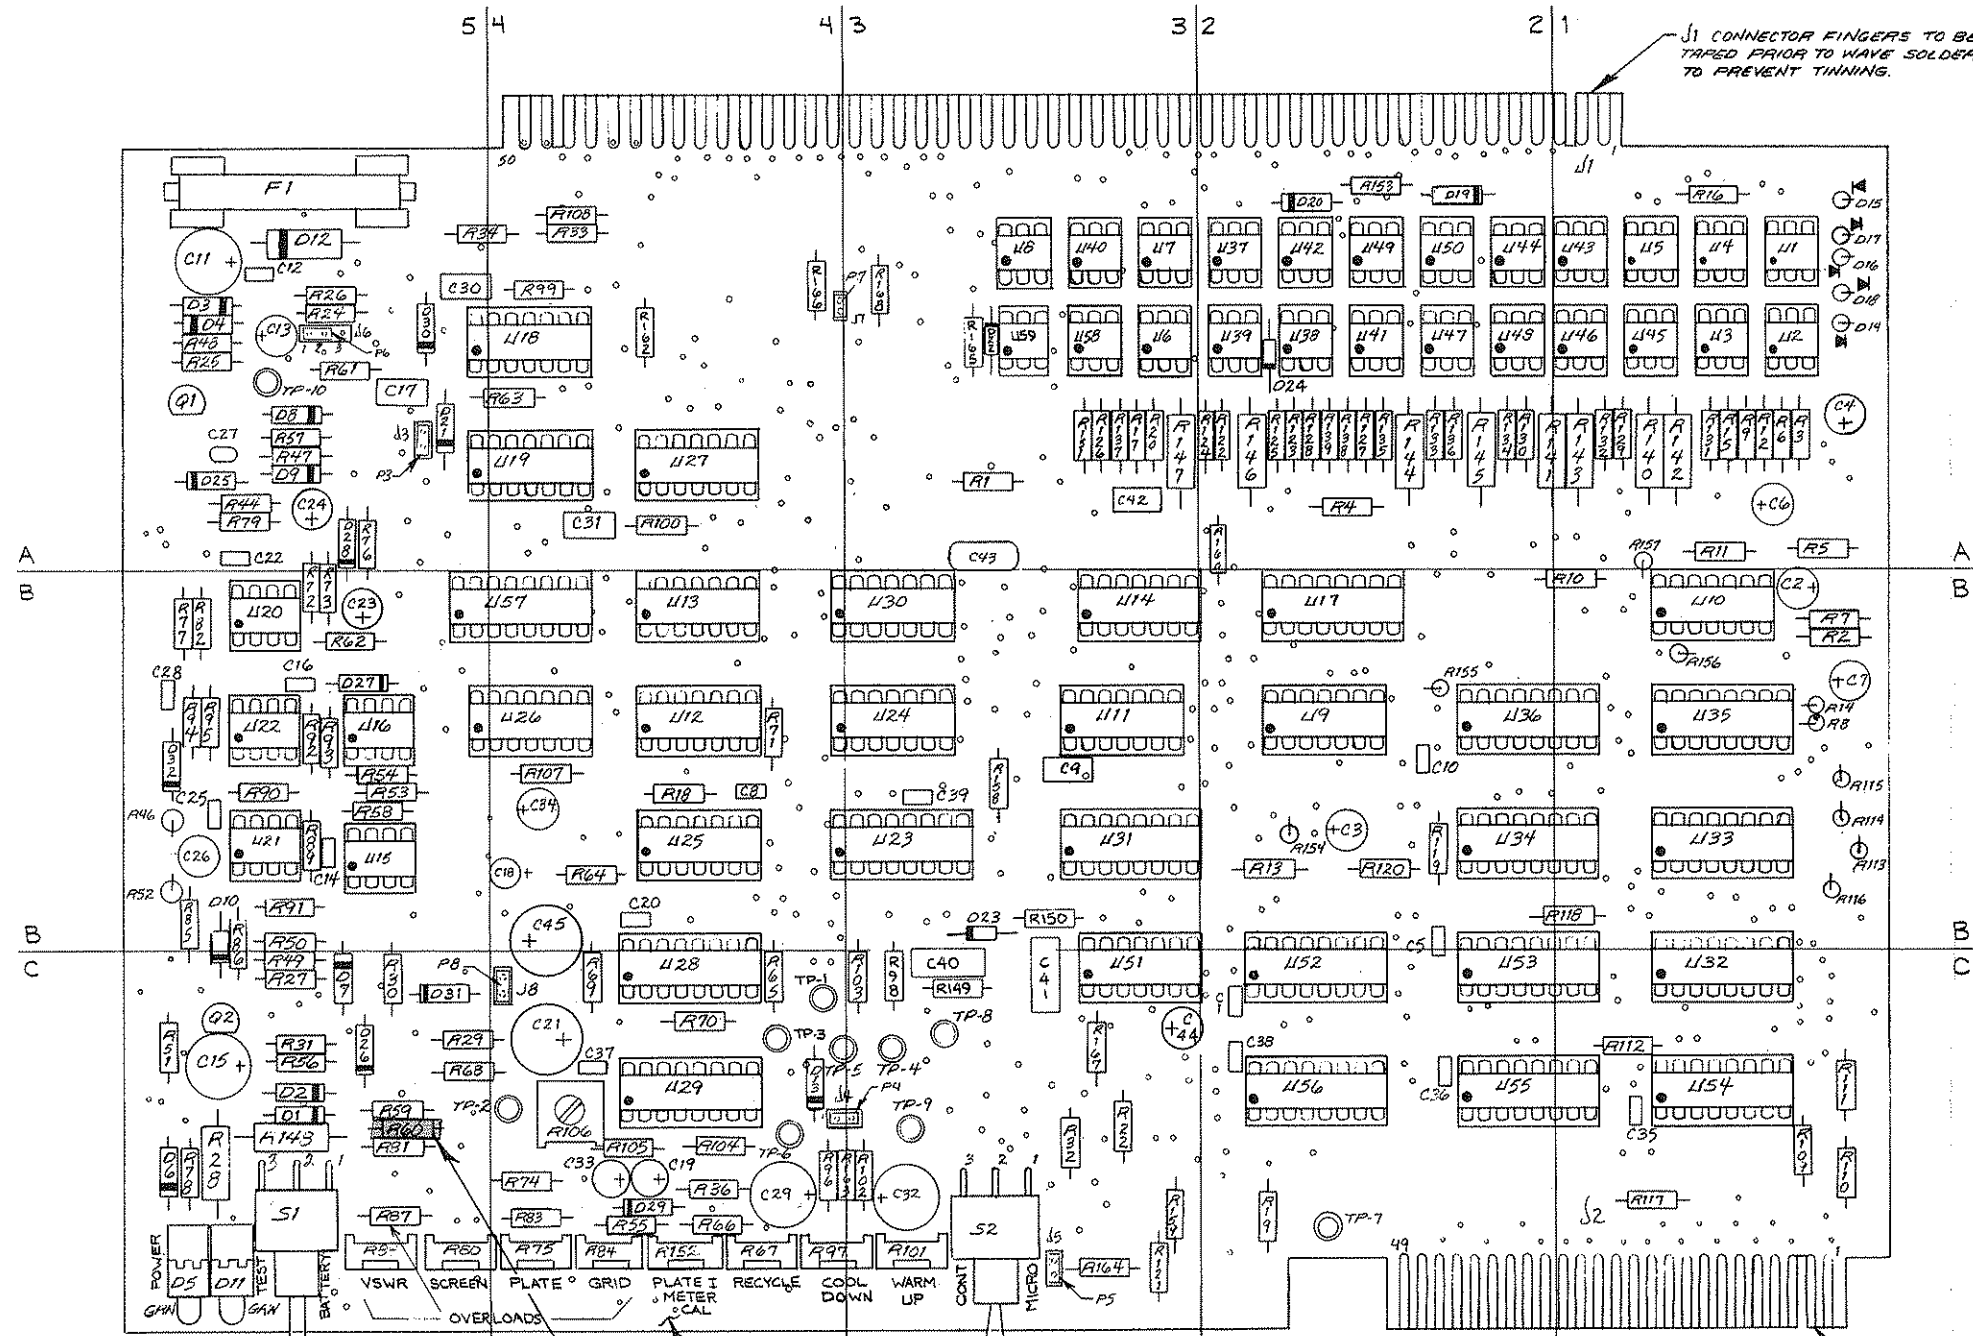

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

DS19-0019
 R60 TO BE INSTALLED ONLY IN FM30 TRANSMITTERS. SEE B/M 919-0019-001
 R87 TO BE CHANGED ONLY IN FM30 TO S.1.K


SEE B/M #919-0019 OR 919-0019-001(FM30)
 SEE SCHEMATIC #D919-0019

SHADED AREA LOCATED IN FM30 ONLY

J2 CONNECTOR FINGERS TO BE TAPED PRIOR TO WAVE SOLDER TO PREVENT TINNING.

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.

| | | | | | | | |
|---|--|---|--|--|--|--|--|
| PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC. | | TOLERANCE UNLESS OTHERWISE SPECIFIED DECIMAL 2 PL-01 SPL-005 FRACTIONAL ±1/64 ANGULAR ±1° SHARP EDGES HIDE RADI FILLET RADI | | DRAWN BY <i>CAF</i> DATE <i>7-28-85</i> CHECKED BY DATE PROJECT <i>919-0019</i> DATE <i>5-16-85</i> ENGR. <i>CAF</i> APPROVED BY <i>AM</i> | | BROADCAST ELECTRONICS INC. TITLE <i>ASSEMBLY</i> PRIMARY <i>FRANKLIN WEA</i> CONT. <i>W. LEA</i> DWG. NO. <i>919-0019</i> REV. <i>N</i> 919-0019-001 MATERIAL TREATMENT OR FINISH SCALE <i>2/1</i> SHEET <i>1</i> OF <i>1</i> | |
|---|--|---|--|--|--|--|--|

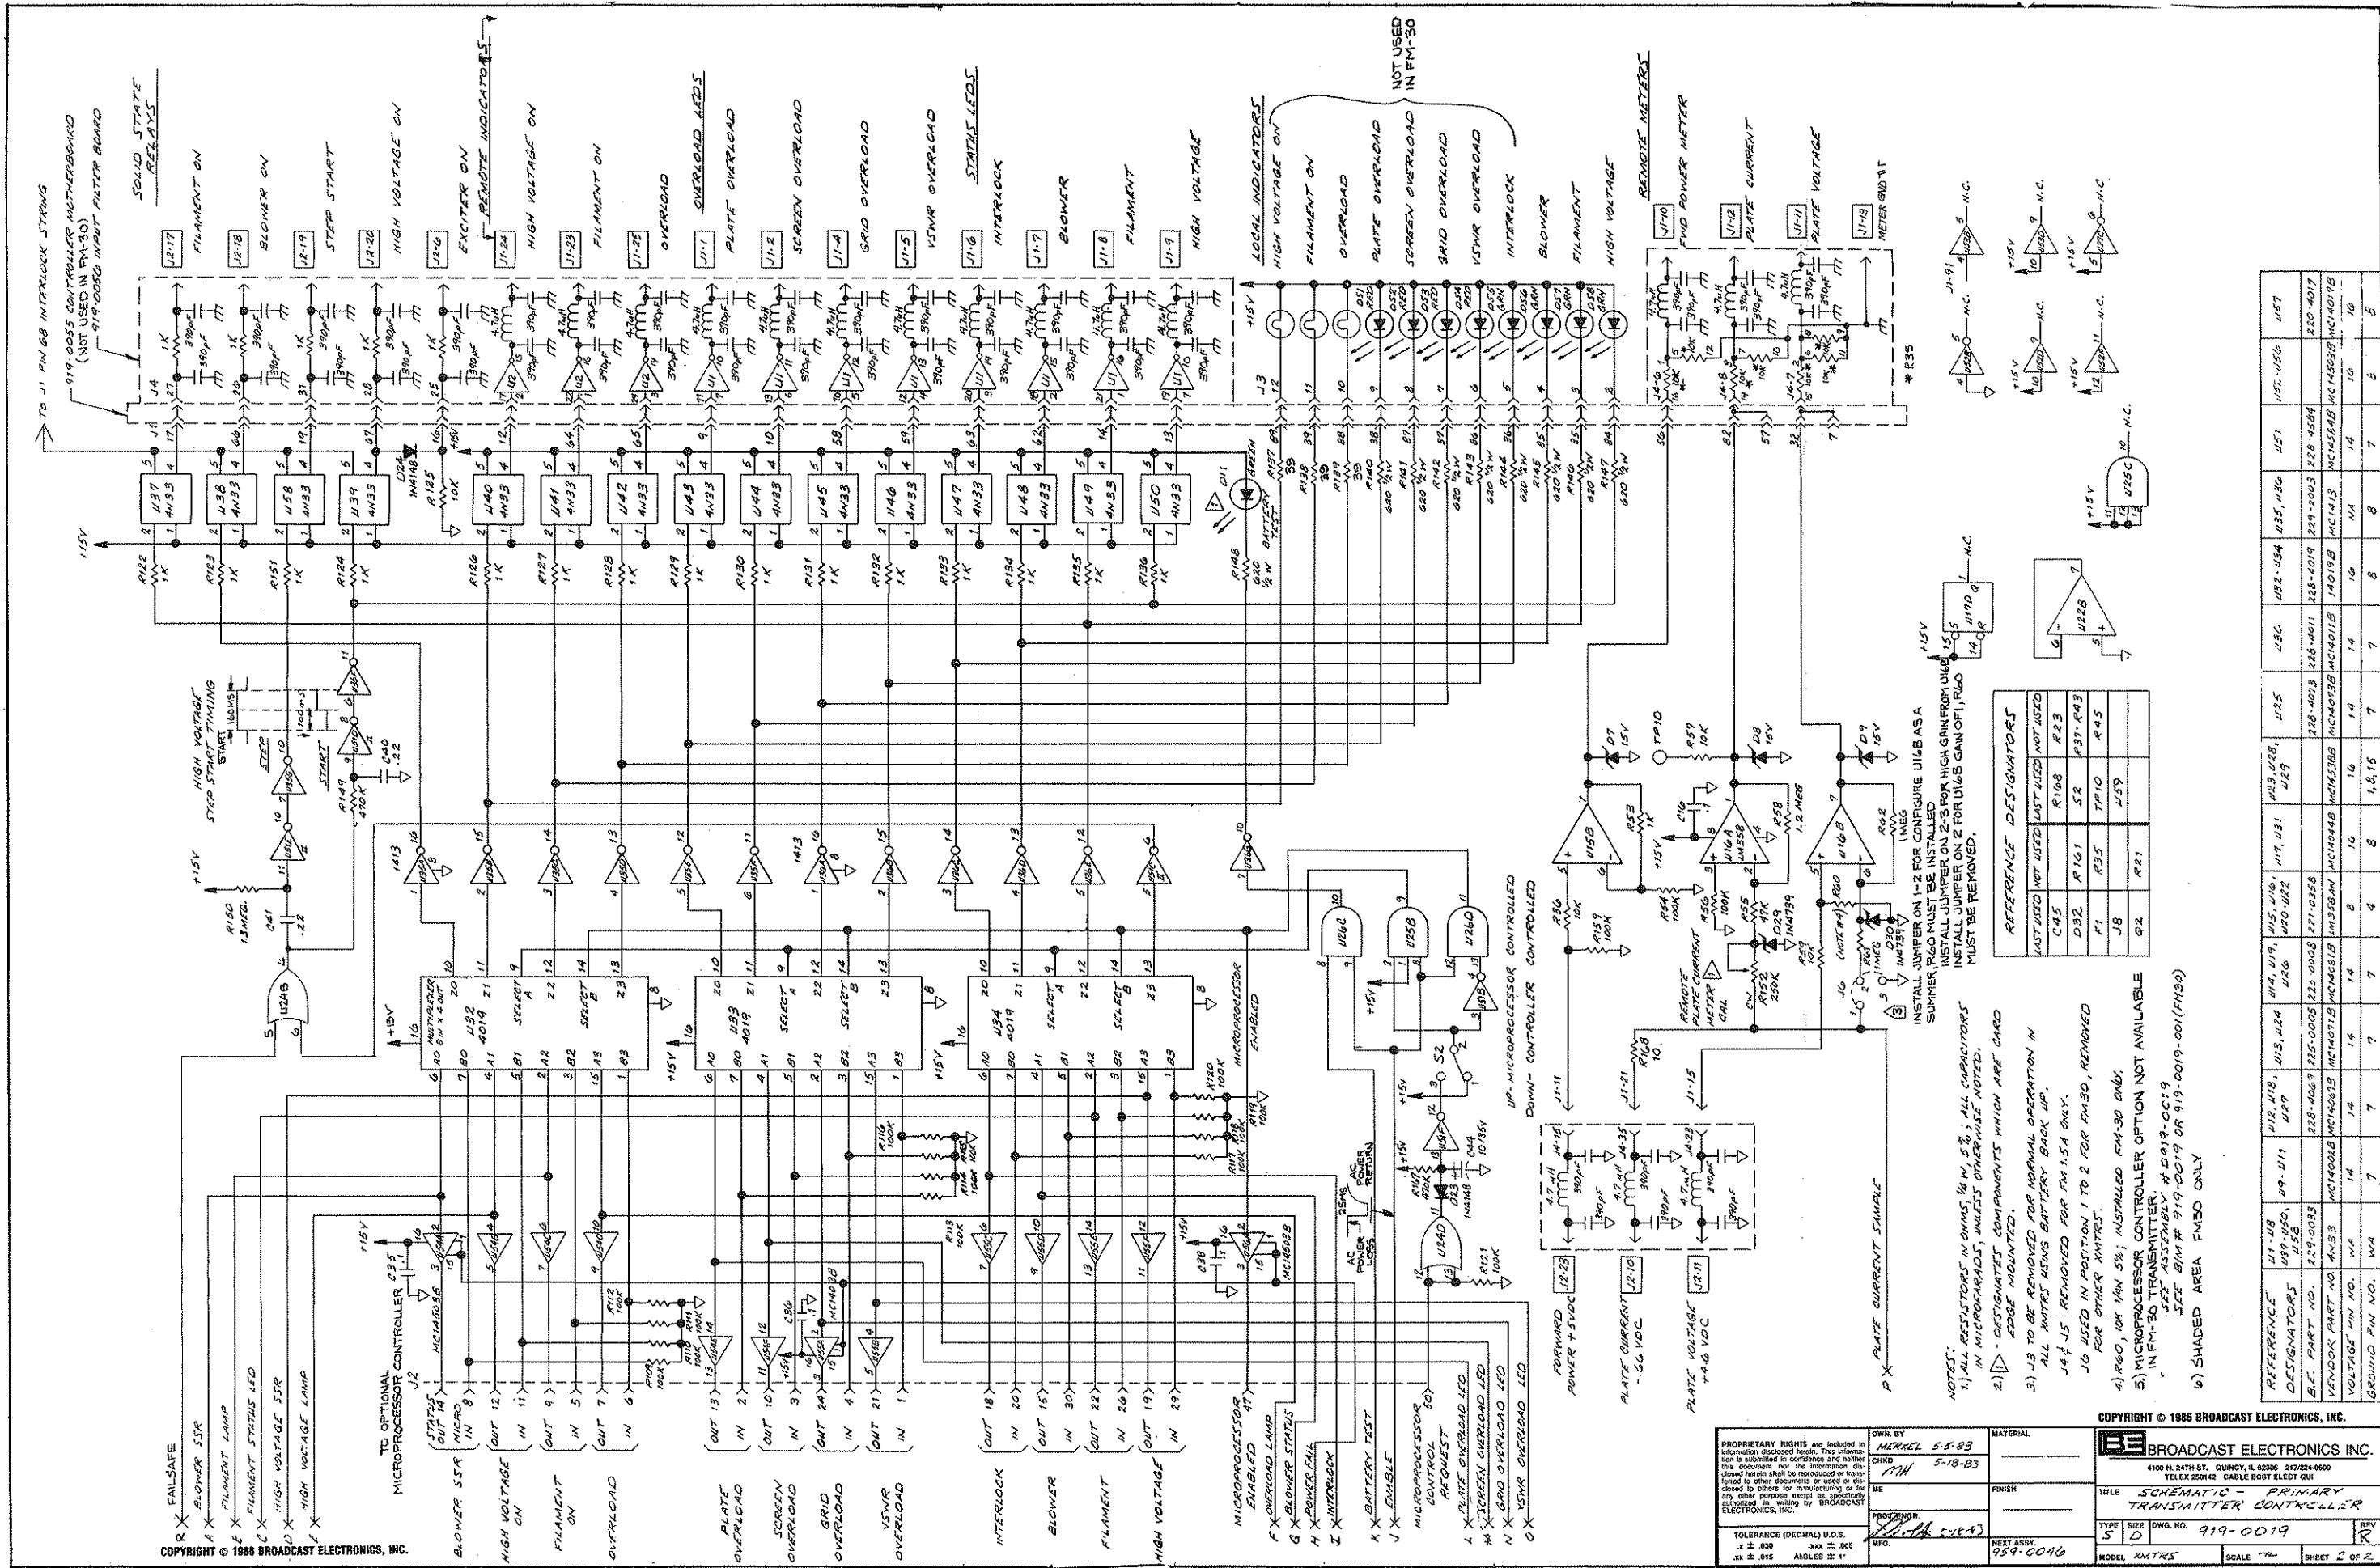

REFERENCE DESIGNATORS

| | | | |
|-----------|----------|-----------|----------|
| LAST USED | NOT USED | LAST USED | NOT USED |
| C45 | R108 | R23 | |
| D52 | R101 | S2 | R37-R43 |
| F1 | R35 | TP10 | R45 |
| J8 | | U59 | |
| Q2 | | R21 | |

- NOTES:
- 1) ALL RESISTORS IN OHMS UNLESS OTHERWISE NOTED.
 - 2) DESIGNATES COMPONENTS WHICH ARE CARD EDGE MOUNTED.
 - 3) J3 TO BE REMOVED FOR NORMAL OPERATION IN FM-30 TRANSMITTER #D919-0019. SEE ASSEMBLY #D919-0019 FOR OTHER MATRS.
 - 4) R60, 10K 1/4W 5%; INSTALLED FM-30 ONLY.
 - 5) MICROPROCESSOR CONTROLLER OPTION NOT AVAILABLE IN FM-30 TRANSMITTER #D919-0019. SEE BOM # 919-0019 OR 919-0019-001 (FM30).
 - 6) SHADED AREA FM30 ONLY.

| | | | |
|-----------------------|-------|---------------|--|
| REFERENCE DESIGNATORS | U1-UB | U18, U19, U20 | U1, U2, U3, U4, U5, U6, U7, U8, U9, U10, U11, U12, U13, U14, U15, U16, U17, U19, U20, U21, U22, U23, U24, U25, U26, U27, U28, U29, U30, U31, U32, U33, U34, U35, U36, U37, U38, U39, U40, U41, U42, U43, U44, U45, U46, U47, U48, U49, U50, U51, U52, U53, U54, U55, U56, U57, U58, U59, U60, U61, U62, U63, U64, U65, U66, U67, U68, U69, U70, U71, U72, U73, U74, U75, U76, U77, U78, U79, U80, U81, U82, U83, U84, U85, U86, U87, U88, U89, U90, U91, U92, U93, U94, U95, U96, U97, U98, U99, U100, U101, U102, U103, U104, U105, U106, U107, U108, U109, U110, U111, U112, U113, U114, U115, U116, U117, U118, U119, U120, U121, U122, U123, U124, U125, U126, U127, U128, U129, U130, U131, U132, U133, U134, U135, U136, U137, U138, U139, U140, U141, U142, U143, U144, U145, U146, U147, U148, U149, U150, U151, U152, U153, U154, U155, U156, U157, U158, U159, U160, U161, U162, U163, U164, U165, U166, U167, U168, U169, U170, U171, U172, U173, U174, U175, U176, U177, U178, U179, U180, U181, U182, U183, U184, U185, U186, U187, U188, U189, U190, U191, U192, U193, U194, U195, U196, U197, U198, U199, U200, U201, U202, U203, U204, U205, U206, U207, U208, U209, U210, U211, U212, U213, U214, U215, U216, U217, U218, U219, U220, U221, U222, U223, U224, U225, U226, U227, U228, U229, U230, U231, U232, U233, U234, U235, U236, U237, U238, U239, U240, U241, U242, U243, U244, U245, U246, U247, U248, U249, U250, U251, U252, U253, U254, U255, U256, U257, U258, U259, U260, U261, U262, U263, U264, U265, U266, U267, U268, U269, U270, U271, U272, U273, U274, U275, U276, U277, U278, U279, U280, U281, U282, U283, U284, U285, U286, U287, U288, U289, U290, U291, U292, U293, U294, U295, U296, U297, U298, U299, U300, U301, U302, U303, U304, U305, U306, U307, U308, U309, U310, U311, U312, U313, U314, U315, U316, U317, U318, U319, U320, U321, U322, U323, U324, U325, U326, U327, U328, U329, U330, U331, U332, U333, U334, U335, U336, U337, U338, U339, U340, U341, U342, U343, U344, U345, U346, U347, U348, U349, U350, U351, U352, U353, U354, U355, U356, U357, U358, U359, U360, U361, U362, U363, U364, U365, U366, U367, U368, U369, U370, U371, U372, U373, U374, U375, U376, U377, U378, U379, U380, U381, U382, U383, U384, U385, U386, U387, U388, U389, U390, U391, U392, U393, U394, U395, U396, U397, U398, U399, U400, U401, U402, U403, U404, U405, U406, U407, U408, U409, U410, U411, U412, U413, U414, U415, U416, U417, U418, U419, U420, U421, U422, U423, U424, U425, U426, U427, U428, U429, U430, U431, U432, U433, U434, U435, U436, U437, U438, U439, U440, U441, U442, U443, U444, U445, U446, U447, U448, U449, U450, U451, U452, U453, U454, U455, U456, U457, U458, U459, U460, U461, U462, U463, U464, U465, U466, U467, U468, U469, U470, U471, U472, U473, U474, U475, U476, U477, U478, U479, U480, U481, U482, U483, U484, U485, U486, U487, U488, U489, U490, U491, U492, U493, U494, U495, U496, U497, U498, U499, U500, U501, U502, U503, U504, U505, U506, U507, U508, U509, U510, U511, U512, U513, U514, U515, U516, U517, U518, U519, U520, U521, U522, U523, U524, U525, U526, U527, U528, U529, U530, U531, U532, U533, U534, U535, U536, U537, U538, U539, U540, U541, U542, U543, U544, U545, U546, U547, U548, U549, U550, U551, U552, U553, U554, U555, U556, U557, U558, U559, U560, U561, U562, U563, U564, U565, U566, U567, U568, U569, U570, U571, U572, U573, U574, U575, U576, U577, U578, U579, U580, U581, U582, U583, U584, U585, U586, U587, U588, U589, U590, U591, U592, U593, U594, U595, U596, U597, U598, U599, U600, U601, U602, U603, U604, U605, U606, U607, U608, U609, U610, U611, U612, U613, U614, U615, U616, U617, U618, U619, U620, U621, U622, U623, U624, U625, U626, U627, U628, U629, U630, U631, U632, U633, U634, U635, U636, U637, U638, U639, U640, U641, U642, U643, U644, U645, U646, U647, U648, U649, U650, U651, U652, U653, U654, U655, U656, U657, U658, U659, U660, U661, U662, U663, U664, U665, U666, U667, U668, U669, U670, U671, U672, U673, U674, U675, U676, U677, U678, U679, U680, U681, U682, U683, U684, U685, U686, U687, U688, U689, U690, U691, U692, U693, U694, U695, U696, U697, U698, U699, U700, U701, U702, U703, U704, U705, U706, U707, U708, U709, U710, U711, U712, U713, U714, U715, U716, U717, U718, U719, U720, U721, U722, U723, U724, U725, U726, U727, U728, U729, U730, U731, U732, U733, U734, U735, U736, U737, U738, U739, U740, U741, U742, U743, U744, U745, U746, U747, U748, U749, U750, U751, U752, U753, U754, U755, U756, U757, U758, U759, U760, U761, U762, U763, U764, U765, U766, U767, U768, U769, U770, U771, U772, U773, U774, U775, U776, U777, U778, U779, U780, U781, U782, U783, U784, U785, U786, U787, U788, U789, U790, U791, U792, U793, U794, U795, U796, U797, U798, U799, U800, U801, U802, U803, U804, U805, U806, U807, U808, U809, U810, U811, U812, U813, U814, U815, U816, U817, U818, U819, U820, U821, U822, U823, U824, U825, U826, U827, U828, U829, U830, U831, U832, U833, U834, U835, U836, U837, U838, U839, U840, U841, U842, U843, U844, U845, U846, U847, U848, U849, U850, U851, U852, U853, U854, U855, U856, U857, U858, U859, U860, U861, U862, U863, U864, U865, U866, U867, U868, U869, U870, U871, U872, U873, U874, U875, U876, U877, U878, U879, U880, U881, U882, U883, U884, U885, U886, U887, U888, U889, U890, U891, U892, U893, U894, U895, U896, U897, U898, U899, U900, U901, U902, U903, U904, U905, U906, U907, U908, U909, U910, U911, U912, U913, U914, U915, U916, U917, U918, U919, U920, U921, U922, U923, U924, U925, U926, U927, U928, U929, U930, U931, U932, U933, U934, U935, U936, U937, U938, U939, U940, U941, U942, U943, U944, U945, U946, U947, U948, U949, U950, U951, U952, U953, U954, U955, U956, U957, U958, U959, U960, U961, U962, U963, U964, U965, U966, U967, U968, U969, U970, U971, U972, U973, U974, U975, U976, U977, U978, U979, U980, U981, U982, U983, U984, U985, U986, U987, U988, U989, U990, U991, U992, U993, U994, U995, U996, U997, U998, U999, U1000 |
|-----------------------|-------|---------------|--|

PROPRIETARY RIGHTS are included in this document. No part of this document may be reproduced or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without the prior written permission of Broadcast Electronics, Inc.

TOLERANCE (DECIMAL) U.S.S.
 ± 0.10% ± 0.05%
 ± 0.05% ANGLES ± 1°

DWG. BY: MERCEL 5-5-83
 CHKD: JWH 5-18-83
 ME: [Signature]
 PRODRGR: [Signature]
 MFG: [Signature]

MATERIAL: [Blank]
 FINISH: [Blank]
 NEXT ASSY: 959-0040

COPYRIGHT © 1986 BROADCAST ELECTRONICS, INC.
 4100 N. 24TH ST., QUINCY, ILL. 62306 217/224-9600
 TELE. 248-1212 CABLE BOST ELEC QUE

TITLE: SCHEMATIC - PRIMARY TRANSMITTER CONTROLLER
 TYPE: S
 DWG. NO.: 919-0019
 MODEL: XMTR5 SCALE: 7/8
 SHEET: 2 OF 2

| REF | ZONE | REF | ZONE | REF | ZONE | REF | ZONE | REF | ZONE | REF | ZONE | REF | ZONE | REF | ZONE | REF | ZONE | REF | ZONE |
|-----|-------|-----|-------|-----|-------|------|-------|------|-------|------|-------|-----|-------|-----|------|-----|------|-----|------|
| C1 | C2 | C44 | C3 | R39 | --- | R82 | B5 | R125 | A2 | R168 | A3 | U31 | B3-B2 | | | | | | |
| C2 | B1 | C45 | B4-C4 | R40 | --- | R83 | C4 | R126 | A3 | S1 | C5 | U32 | C1 | | | | | | |
| C3 | B2 | D1 | C5 | R41 | --- | R84 | C4 | R127 | A2 | S2 | C3 | U33 | B1 | | | | | | |
| C4 | A1 | D2 | C5 | R42 | --- | R85 | B5 | R128 | A2 | TP1 | C3 | U34 | B2-B1 | | | | | | |
| C5 | B2 | D3 | A5 | R43 | --- | R86 | B5 | R129 | A1 | TP2 | C4 | U35 | B1 | | | | | | |
| C6 | A1 | D4 | A5 | R44 | A5 | R87 | C5 | R130 | A2-A1 | TP3 | C4 | U36 | B2-B1 | | | | | | |
| C7 | B1 | D5 | C5 | R45 | --- | R88 | C5 | R131 | A1 | TP4 | C3 | U37 | A2 | | | | | | |
| C8 | B4 | D6 | C5 | R46 | B5 | R89 | B5 | R132 | A1 | TP5 | C3 | U38 | A2 | | | | | | |
| C9 | B3 | D7 | C5 | R47 | A5 | R90 | B5 | R133 | A2 | TP6 | C4 | U39 | A2 | | | | | | |
| C10 | B2 | D8 | A5 | R48 | A5 | R91 | B5 | R134 | A2 | TP7 | C2 | U40 | A3 | | | | | | |
| C11 | A5 | D9 | A5 | R49 | B5-C5 | R92 | B5 | R135 | A2 | TP8 | C3 | U41 | A2 | | | | | | |
| C12 | A5 | D10 | B1 | R50 | B5 | R93 | B5 | R136 | A2 | TP9 | C3 | U42 | A2 | | | | | | |
| C13 | A5 | D11 | B1 | R51 | C5 | R94 | B5 | R137 | A3 | TP10 | A5 | U43 | A1 | | | | | | |
| C14 | B5 | D12 | A5 | R52 | B5 | R95 | B5 | R138 | A2 | U1 | A1 | U44 | A2-A1 | | | | | | |
| C15 | C5 | D13 | C4-C3 | R53 | B5 | R96 | C3 | R139 | A2 | U2 | A1 | U45 | A1 | | | | | | |
| C16 | B5 | D14 | A1 | R54 | B5 | R97 | C4-C5 | R140 | A1 | U3 | A1 | U46 | A1 | | | | | | |
| C17 | A5 | D15 | A1 | R55 | C4 | R98 | C3 | R141 | A1 | U4 | A1 | U47 | A2 | | | | | | |
| C18 | B4 | D16 | A1 | R56 | C5 | R99 | A4 | R142 | A1 | U5 | A1 | U48 | A2-A1 | | | | | | |
| C19 | C4 | D17 | A1 | R57 | A5 | R100 | A4 | R143 | A1 | U6 | A1 | U49 | A2 | | | | | | |
| C20 | B4 | D18 | A1 | R58 | B5 | R101 | C3 | R144 | A2 | U7 | A3 | U50 | A2 | | | | | | |
| C21 | C4 | D19 | A2 | R59 | C5 | R102 | C3 | R145 | A2 | U8 | A3-A2 | U51 | A2 | | | | | | |
| C22 | A5 | D20 | A2 | R60 | C5 | R103 | C3 | R146 | A2 | U9 | B2 | U52 | C2 | | | | | | |
| C23 | B5 | D21 | A5 | R61 | A5 | R104 | C4 | R147 | A2 | U10 | B1 | U53 | C2-C1 | | | | | | |
| C24 | A5 | D22 | A3 | R62 | B5 | R105 | C4 | R148 | C3 | U11 | B3 | U54 | C1 | | | | | | |
| C25 | B5 | D23 | B3 | R63 | A4 | R106 | C4 | R149 | C5 | U12 | B4 | U55 | C2-C1 | | | | | | |
| C26 | B5 | D24 | A2 | R64 | B4 | R107 | B4 | R150 | B3 | U13 | B4 | U56 | C2 | | | | | | |
| C27 | A5 | D25 | A5 | R65 | B4 | R108 | A4 | R151 | A3 | U14 | B3-B2 | U57 | B4 | | | | | | |
| C28 | B5 | D26 | C5 | R66 | C4 | R109 | C1 | R152 | C4 | U15 | B5 | U58 | A3 | | | | | | |
| C29 | C4 | D27 | B5 | R67 | C4 | R110 | C1 | R153 | A2 | U16 | B2 | U59 | A3 | | | | | | |
| C30 | A5-A4 | D28 | A5 | R68 | C5-C4 | R111 | C1 | R154 | B2 | U17 | B2 | | | | | | | | |
| C31 | A4 | D29 | C4 | R69 | C4 | R112 | C1 | R155 | B2 | U18 | A4 | | | | | | | | |
| C32 | C3 | D30 | A5 | R70 | C4 | R113 | B1 | R156 | B1 | U19 | A4 | | | | | | | | |
| C33 | C4 | D31 | C5 | R71 | B4 | R114 | B1 | R157 | A1 | U20 | B5 | | | | | | | | |
| C34 | B4 | D32 | B5 | R72 | B5 | R115 | B1 | R158 | B3 | U21 | B5 | | | | | | | | |
| C35 | C1 | F1 | A5 | R73 | B5 | R116 | B1 | R159 | C2 | U22 | B5 | | | | | | | | |
| C36 | C2 | J3 | A5 | R74 | C4 | R117 | C1 | R160 | A2 | U23 | B3 | | | | | | | | |
| C37 | C4 | J4 | C3 | R75 | C4 | R118 | B1 | R161 | --- | U24 | B3 | | | | | | | | |
| C38 | C2 | J5 | C3 | R76 | A5 | R119 | B2 | R162 | A3 | U25 | B4 | | | | | | | | |
| C39 | B3 | J6 | A5 | R77 | B5 | R120 | B2 | R163 | C3 | U26 | B4 | | | | | | | | |
| C40 | B3-C3 | J7 | A5 | R78 | C5 | R121 | B3 | R164 | C3 | U27 | A4 | | | | | | | | |
| C41 | B3-C3 | J8 | C4 | R79 | A5 | R122 | A2 | R165 | A3 | U28 | C4 | | | | | | | | |
| C42 | A3 | P3 | A5 | R80 | C5-C4 | R123 | A2 | R166 | A4 | U29 | C4 | | | | | | | | |
| C43 | A3 | P4 | C3 | R81 | C5 | R124 | A2 | R167 | C3 | U30 | B3 | | | | | | | | |

COPYRIGHT © 1988 BROADCAST ELECTRONICS, INC.

597-0032-19

FIGURE 3-11. CONTROLLER CIRCUIT BOARD COMPONENT LOCATOR

SECTION IV
PARTS LIST

4-1. INTRODUCTION.

4-2. This section provides descriptions and part numbers of electrical components, assemblies, and selected mechanical parts required for maintenance of the Broadcast Electronics FM-5A FM Transmitter Controller. Each table entry in this section is indexed by reference designators appearing on the applicable schematic diagram.

TABLE 4-1. TRANSMITTER CONTROLLER PARTS LIST INDEX

| TABLE | DESCRIPTION | PART NO. | PAGE |
|-------|--|----------|------|
| 4-2 | TRANSMITTER CONTROLLER | 959-0046 | 4-2 |
| 4-3 | MOTHERBOARD ASSEMBLY | 959-0155 | 4-2 |
| 4-4 | MOTHERBOARD CIRCUIT BOARD | 919-0055 | 4-2 |
| 4-5 | DOOR ELECTRICAL ASSEMBLY | 959-0153 | 4-2 |
| 4-6 | FRONT DOOR SWITCHBOARD TO LED BOARD CABLE | 949-0028 | 4-3 |
| 4-7 | INPUT FILTER CIRCUIT BOARD | 919-0056 | 4-3 |
| 4-8 | CONTROLLER CIRCUIT BOARD | 919-0019 | 4-3 |
| 4-9 | EXTENDER CIRCUIT BOARD | 919-0061 | 4-7 |
| 4-10 | POWER SUPPLY ASSEMBLY | 959-0045 | 4-7 |
| 4-11 | POWER TRANSFORMER AND WIRE HARNESS | 959-0157 | 4-7 |
| 4-12 | POWER SUPPLY CIRCUIT BOARD | 919-0020 | 4-8 |
| 4-13 | EMI/AC POWER CABLE ASSEMBLY | 949-0026 | 4-8 |

TABLE 4-2. TRANSMITTER CONTROLLER - 959-0046

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-------------------------------------|--|----------|------|
| B1 | Fan Assembly; consisting of: 1. Fan, 115V, 50/60 Hz, 70 ft ³ /min, 4.71 in X 4.71 in X 1.5 in | 380-6300 | 1 |
| BT1 | 2. 6-Pin Receptacle (J2) and Wiring Battery, 9 Volt, Alkaline | 350-0002 | 1 |
| ----- 220V AC Input Operation ----- | | | |
| F1, SPARE | Fuse, AGC, 250V, 1/2 Ampere, Slow-Blow | 334-0050 | 2 |
| ----- 110V AC Input Operation ----- | | | |
| F1, SPARE | Fuse, AGC, 250V, 1 Ampere, Slow-Blow | 334-0100 | 2 |
| ---- | Receptacle, Turn-Lock, for optional video monitor | 420-0022 | 2 |
| ---- | Door Electrical Assembly | 959-0153 | 1 |
| ---- | Extender Circuit Board Assembly | 919-0061 | 1 |
| ---- | Controller Circuit Board | 919-0019 | 1 |
| ---- | Power Supply Assembly | 959-0045 | 1 |
| ---- | Motherboard Assembly | 959-0155 | 1 |
| ---- | Input Filter Circuit Board | 919-0056 | 1 |
| ---- | EMI/AC Power Cable Assembly | 949-0026 | 1 |

TABLE 4-3. MOTHERBOARD ASSEMBLY - 959-0155

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|---------------------------|----------|------|
| P2,P2 | Plug, 6-Pin | 418-0670 | 2 |
| P3 | Plug, 20-Pin | 417-0207 | 1 |
| P4 | Plug, 40-Pin | 417-0038 | 1 |
| ---- | Pins for P2,P2 | 417-0053 | 10 |
| ---- | Motherboard Circuit Board | 919-0055 | 1 |

TABLE 4-4. MOTHERBOARD CIRCUIT BOARD - 919-0055

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|---------------------|----------|------|
| J1 | Receptacle, 100-Pin | 418-5001 | 1 |
| J2 | Receptacle, 6-Pin | 417-0677 | 1 |
| J3 | Receptacle, 20-Pin | 418-0027 | 1 |
| J4 | Receptacle, 40-Pin | 418-0028 | 1 |
| ---- | Blank Circuit Board | 519-0055 | 1 |

TABLE 4-5. DOOR ELECTRICAL ASSEMBLY - 959-0153
(Sheet 1 of 2)

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|---------------|--|--------------|------|
| DS1 THRU DS4 | Indicator, LED, Red, 521-9212, 2V @ 50 mA Maximum, (OVERLOAD Indicators) | 323-9217 | 4 |
| DS5 THRU DS8 | Indicator, LED, Green, 521-9176, 3V @ 40 mA Maximum, (STATUS Indicators) | 323-9224 | 4 |
| DS9 THRU DS12 | Lamp, Incandescent, No. 73, 14V @ 0.08 Ampere, T 1 3/4 Base | 320-0007 | 4 |
| J1,J1 | Receptacle, 16-Pin, DIP | 417-1604 | 2 |
| J3 | Receptacle, 20-Pin | 417-0201 | 1 |
| S1 THRU S4 | Switch, Push, SPST, Illuminated, 3 Ampere @ 125V (FILAMENT ON, FILAMENT OFF, HIGH VOLTAGE ON, HIGH VOLTAGE OFF) | 340-0018 | 4 |
| S5 | Switch, Push, SPST, 3 Ampere @ 125V (OVERLOAD Reset) | 340-0015-001 | 1 |

TABLE 4-5. DOOR ELECTRICAL ASSEMBLY - 959-0153
(Sheet 2 of 2)

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|---|----------|------|
| XBY1 | Battery Holder, 9 Volt Rectangular | 415-0002 | 1 |
| ---- | Bezel for DS1 thru DS8 | 454-0004 | 8 |
| ---- | Lens, Red (for S2 and S4) | 346-1018 | 2 |
| ---- | Lens, Green (for S1 and S3) | 340-0016 | 2 |
| ---- | Lens, Yellow (for S5) | 340-0014 | 1 |
| ---- | Front Door Switchboard to LED Board Cable | 949-0028 | 1 |
| ---- | Blank LED Circuit Board | 519-0025 | 1 |
| ---- | Blank Switch Circuit Board | 519-0026 | 1 |

TABLE 4-6. FRONT DOOR SWITCHBOARD TO LED BOARD CABLE - 949-0028

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|------------------|----------|------|
| P1,P1 | Plug, 16-Pin DIP | 417-1602 | 2 |

TABLE 4-7. INPUT FILTER CIRCUIT BOARD - 919-0056

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|--|--|----------|------|
| C1 THRU C136 | Capacitor, Mica, 390 pF \pm 5%, 100V | 042-3922 | 136 |
| J1 THRU J3 | Receptacle, 25-Pin | 417-2500 | 3 |
| J7 | Receptacle, Header, 3-Pin In-line | 417-0003 | 1 |
| L1 THRU L50 | Coil, Molded, 4.7 uH \pm 10%, 430 mA Maximum, DC Resistance: 0.55 Ohms, Resonant at 130 MHz | 360-0022 | 50 |
| P7 | Jumper, Programmable | 340-0004 | 1 |
| R9 THRU R13, R17,R19,R20, R25 THRU R34 | Resistor, 1 k Ohm \pm 5%, 1/4W | 100-1043 | 18 |
| R35 | Resistor Network, 8-10 k Ohm \pm 1%, 1/4W resistors, 16-Pin DIP | 226-1055 | 1 |
| U1,U2 | Integrated Circuit, MC1416P, 7 NPN Darlington Drivers, 16-Pin DIP | 226-2004 | 2 |
| XU1,XU2, XR35 | Socket, 16-Pin DIP | 417-1604 | 3 |
| ---- | Header, Programmable, 8-Pin DIP (for U1, U2, and R35) | 340-0006 | 5 |

TABLE 4-8. CONTROLLER CIRCUIT BOARD - 919-0019
(Sheet 1 of 5)

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|------------|---|----------|------|
| C1 | Capacitor, Ceramic, 0.1 uF \pm 20%, 50V | 003-1054 | 1 |
| C2 THRU C4 | Capacitor, Electrolytic, 4.7 uF, 35V | 024-4764 | 3 |
| C5 | Capacitor, Ceramic, 0.1 uF \pm 20%, 50V | 003-1054 | 1 |
| C6,C7 | Capacitor, Electrolytic, 4.7 uF, 35V | 024-4764 | 2 |
| C8 | Capacitor, Ceramic, 0.1 uF \pm 20%, 50V | 003-1054 | 1 |
| C9 | Capacitor, Mylar Film, 0.01 uF, 100V | 030-1043 | 1 |
| C10 | Capacitor, Ceramic, 0.1 uF \pm 20%, 50V | 003-1054 | 1 |
| C11 | Capacitor, Electrolytic, 100 uF, 25V | 023-1084 | 1 |
| C12 | Capacitor, Ceramic, 0.1 uF \pm 20%, 50V | 003-1054 | 1 |
| C13 | Capacitor, Electrolytic, 10 uF, 35V | 023-1076 | 1 |
| C14 | Capacitor, Ceramic, 0.1 uF \pm 20%, 50V | 003-1054 | 1 |
| C15 | Capacitor, Electrolytic, 100 uF, 25V | 023-1084 | 1 |
| C16 | Capacitor, Ceramic, 0.1 uF \pm 20%, 50V | 003-1054 | 1 |
| C17 | Capacitor, Mylar Film, 0.01 uF, 100V | 030-1043 | 1 |
| C18,C19 | Capacitor, Electrolytic, 4.7 uF, 35V, Tantalum | 064-4763 | 2 |
| C20 | Capacitor, Ceramic, 0.1 uF \pm 20%, 50V | 003-1054 | 1 |
| C21 | Capacitor, Electrolytic, 100 uF \pm 10%, 25V, Low-Leakage | 023-1085 | 1 |
| C22 | Capacitor, Ceramic, 0.1 uF \pm 20%, 50V | 003-1054 | 1 |
| C23,C24 | Capacitor, Electrolytic, 1 uF, 50V | 024-1064 | 2 |

TABLE 4-8. CONTROLLER CIRCUIT BOARD - 919-0019
(Sheet 2 of 5)

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------------|--|----------|------|
| C25 | Capacitor, Ceramic, 0.1 uF ±20%, 50V | 024-1054 | 1 |
| C26 | Capacitor, Electrolytic, 1 uF, 50V | 020-1064 | 1 |
| C27,C28 | Capacitor, Ceramic, 0.1 uF ±20%, 50V | 003-1054 | 2 |
| C29 | Capacitor, Electrolytic, 100 uF ±10%, 25V, Low-Leakage | 023-1085 | 1 |
| C30,C31 | Capacitor, Mylar Film, 0.01 uF, 100V | 030-1043 | 2 |
| C32 | Capacitor, Electrolytic, 100 uF ±10%, 25V, Low-Leakage | 023-1085 | 1 |
| C33 | Capacitor, Electrolytic, 4.7 uF, 35V, Tantalum | 064-4763 | 1 |
| C34 | Capacitor, Electrolytic, 1 uF, 50V | 024-1064 | 1 |
| C35 THRU C39 | Capacitor, Ceramic, 0.1 uF ±20%, 50V | 003-1054 | 5 |
| C40,C41 | Capacitor, Mylar Film, 0.22 uF, 100V | 030-2253 | 2 |
| C42 | Capacitor, Mylar Film, 0.01 uF, 100V | 030-1043 | 1 |
| C43 | Capacitor, Mylar Film, 0.1 uF, 100V | 030-1053 | 1 |
| C44 | Capacitor, Electrolytic, 10 uF, 35V | 023-1076 | 1 |
| C45 | Capacitor, Electrolytic, 100 uF ±10%, 25V | 023-1085 | 1 |
| D1 THRU D4 | Diode, 1N4005, Silicon, 600V, 1 Ampere | 203-4005 | 4 |
| D5 | POWER Indicator, LED, Green, 550-2206, 2.3V @ 50 mA Maximum | 323-2206 | 1 |
| D6 | Diode, Zener, 1N4742A, 12V ±5%, 1W | 200-4742 | 1 |
| D7 THRU D9 | Diode, Zener, 1N4744A, 15V ±5%, 1W | 200-0015 | 3 |
| D10 | Diode, HP5082-2800, High Voltage Schottky Barrier, 70V @ 15 mA Maximum | 201-2800 | 1 |
| D11 | TEST Indicator, LED, Green, 550-2206, 2.3V @ 50 mA Maximum | 323-2206 | 1 |
| D12 | Diode, 1N6276A, Transient Voltage Suppressor, 15.2V, 67 Ampere Peak Current | 206-6276 | 1 |
| D13 THRU D22 | Diode, 1N4005, Silicon, 600V, 1 Ampere | 203-4005 | 10 |
| D23,D24 | Diode, 1N4148, Silicon, 75V @ 0.3 Amperes | 203-4148 | 2 |
| D25 THRU D30 | Diode, Zener, 1N4739A, 9.1V ±5%, 1W | 200-0009 | 6 |
| D31 | Diode, 1N4005, Silicon, 600V, 1 Ampere | 203-4005 | 1 |
| D32 | Diode, Zener, 1N4739A, 9.1V ±5%, 1W | 200-0009 | 1 |
| F1 | Fuse, AGC, 250V, 1 Ampere | 330-0100 | 1 |
| J3 THRU J5 | Receptacle, Header, 2-Pin | 417-4004 | 3 |
| J6 | Receptacle, Header, 3-Pin | 417-0003 | 1 |
| J7,J8 | Receptacle, Header, 2-Pin | 417-4004 | 2 |
| P3 THRU P8 | Plug, 2-Pin | 340-0004 | 6 |
| Q1,Q2 | Transistor, 2N3904, Silicon, NPN, 10-92 Case | 211-3904 | 2 |
| R1,R2 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 2 |
| R3 | Resistor, 1 k Ohm ±5%, 1/4W | 100-1043 | 1 |
| R4,R5 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 2 |
| R6 | Resistor, 1 k Ohm ±5%, 1/4W | 100-1043 | 1 |
| R7,R8 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 2 |
| R9 | Resistor, 1 k Ohm ±5%, 1/4W | 100-1043 | 1 |
| R10,R11 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 2 |
| R12 | Resistor, 1 k Ohm ±5%, 1/4W | 100-1043 | 1 |
| R13,R14 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 2 |
| R15 | Resistor, 1 k Ohm ±5%, 1/4W | 100-1043 | 1 |
| R16,R17 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 2 |
| R18 | Resistor, 51 k Ohm ±5%, 1/4W | 100-5153 | 1 |
| R19,R20,R22 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 3 |
| R24 | Resistor, 390 k Ohm ±5%, 1/4W | 100-3963 | 1 |
| R25 | Resistor, 4.7 k Ohm ±5%, 1/4W | 100-4743 | 1 |
| R26 | Resistor, 1 Meg Ohm ±5%, 1/4W | 100-1073 | 1 |
| R27 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 1 |
| R28 | Resistor, 470 Ohm ±5%, 1/2W | 110-4733 | 1 |
| R29 | Resistor, 9.1 k Ohm ±5%, 1/4W | 100-9143 | 1 |
| R30 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 1 |
| R31 | Resistor, 5.6 Ohm ±5%, 1/4W | 100-5643 | 1 |
| R32 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 1 |
| R33 | Resistor, 47 k Ohm ±5%, 1/4W | 100-4753 | 1 |
| R34 | Resistor, 100 k Ohm ±5%, 1/4W | 100-1063 | 1 |
| R36 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 1 |
| R44,R46,R47 | Resistor, 47 k Ohm ±5%, 1/4W | 100-4753 | 3 |
| R48 | Resistor, 10 k Ohm ±5%, 1/4W | 100-1053 | 1 |
| R49 | Resistor, 1 Meg Ohm ±5%, 1/4W | 100-1073 | 1 |
| R50 | Resistor, 100 k Ohm ±5%, 1/4W | 100-1063 | 1 |
| R51 | Resistor, 100 Ohm ±5%, 1/4W | 100-1033 | 1 |
| R52 | Resistor, 47 k Ohm ±5%, 1/4W | 100-4753 | 1 |

TABLE 4-8, CONTROLLER CIRCUIT BOARD - 919-0019
(Sheet 3 of 5)

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-------------------|--|----------|------|
| R53 | Resistor, 1 k Ohm $\pm 5\%$, 1/4W | 100-1043 | 1 |
| R54 | Resistor, 100 k Ohm $\pm 5\%$, 1/4W | 100-1063 | 1 |
| R55 | Resistor, 47 k Ohm $\pm 5\%$, 1/4W | 100-4753 | 1 |
| R56 | Resistor, 100 k Ohm $\pm 5\%$, 1/4W | 100-1063 | 1 |
| R57 | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 1 |
| R58 | Resistor, 1.2 Meg Ohm $\pm 5\%$, 1/4W | 100-1273 | 1 |
| R59,R60 | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 2 |
| R61,R62 | Resistor, 1 Meg Ohm $\pm 5\%$, 1/4W | 100-1073 | 2 |
| R63 | Resistor, 51 k Ohm $\pm 5\%$, 1/4W | 100-5153 | 1 |
| R64 | Resistor, 47 k Ohm $\pm 5\%$, 1/4W | 100-4753 | 1 |
| R65 | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 1 |
| R66 | Resistor, 22 k Ohm $\pm 5\%$, 1/4W | 100-2253 | 1 |
| R67 | Potentiometer, 500 k Ohm $\pm 10\%$, 1/2W | 178-5064 | 1 |
| R68 | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 1 |
| R69 | Resistor, 560 k Ohm $\pm 5\%$, 1/4W | 100-5663 | 1 |
| R70 | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 1 |
| R71 | Resistor, 51 k Ohm $\pm 5\%$, 1/4W | 100-5153 | 1 |
| R72 | Resistor, 560 k Ohm $\pm 5\%$, 1/4W | 100-5663 | 1 |
| R73 | Resistor, 47 k Ohm $\pm 5\%$, 1/4W | 100-4753 | 1 |
| R74 | Resistor, 68 k Ohm $\pm 5\%$, 1/4W | 100-6853 | 1 |
| R75 | Potentiometer, 5 k Ohm $\pm 10\%$, 1/2W | 178-5044 | 1 |
| R76 | Resistor, 24 k Ohm $\pm 5\%$, 1/4W | 100-2453 | 1 |
| R77 | Resistor, 10 Meg Ohm $\pm 5\%$, 1/4W | 100-1083 | 1 |
| R78 | Resistor, 22 k Ohm $\pm 5\%$, 1/4W | 100-2253 | 1 |
| R79 | Resistor, 150 k Ohm $\pm 5\%$, 1/4W | 100-1563 | 1 |
| R80 | Potentiometer, 5 k Ohm $\pm 10\%$, 1/2W | 178-5044 | 1 |
| R81 | Resistor, 24 k Ohm $\pm 5\%$, 1/4W | 100-2453 | 1 |
| R82 | Resistor, 10 Meg Ohm $\pm 5\%$, 1/4W | 100-1083 | 1 |
| R83 | Resistor, 68 k Ohm $\pm 5\%$, 1/4W | 100-6853 | 1 |
| R84 | Potentiometer, 5 k Ohm $\pm 10\%$, 1/2W | 178-5044 | 1 |
| R85 | Resistor, 5.1 k Ohm $\pm 5\%$, 1/4W | 100-5143 | 1 |
| R86 | Resistor, 10 Meg Ohm $\pm 5\%$, 1/4W | 100-1083 | 1 |
| R87 | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 1 |
| R88 | Potentiometer, 5 k Ohm $\pm 10\%$, 1/2W | 178-5044 | 1 |
| R89 | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 1 |
| R90 | Resistor, 47 k Ohm $\pm 5\%$, 1/4W | 100-4753 | 1 |
| R91 | Resistor, 10 Meg Ohm $\pm 5\%$, 1/4W | 100-1083 | 1 |
| R92 | Resistor, 1 Meg Ohm $\pm 5\%$, 1/4W | 100-1073 | 1 |
| R93 | Resistor, 100 k Ohm $\pm 5\%$, 1/4W | 100-1063 | 1 |
| R94 | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 1 |
| R95 | Resistor, 100 k Ohm $\pm 5\%$, 1/4W | 100-1063 | 1 |
| R96 | Resistor, 330 k Ohm $\pm 5\%$, 1/4W | 100-3363 | 1 |
| R97 | Potentiometer, 1 Meg Ohm $\pm 10\%$, 1/2W | 178-1074 | 1 |
| R98 | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 1 |
| R99,R100 | Resistor, 51 k Ohm, $\pm 5\%$, 1/4W | 100-5153 | 2 |
| R101 | Potentiometer, 1 Meg Ohm $\pm 10\%$, 1/2W | 178-1074 | 1 |
| R102 | Resistor, 110 k Ohm $\pm 5\%$, 1/4W | 100-1163 | 1 |
| R103,R104 | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 2 |
| R105 | Resistor, 4.3 k Ohm $\pm 5\%$, 1/4W | 100-4343 | 1 |
| R106 | Potentiometer, 1 Meg Ohm $\pm 10\%$, 1/2W | 177-1074 | 1 |
| R107 | Resistor, 51 k Ohm $\pm 5\%$, 1/4W | 100-5153 | 1 |
| R108 | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 1 |
| R109 THRU R121 | Resistor, 100 k Ohm $\pm 5\%$, 1/4W | 100-1063 | 13 |
| R122 THRU R124 | Resistor, 1 k Ohm $\pm 5\%$, 1/4W | 100-1043 | 3 |
| R125 | Resistor, 10 k Ohm $\pm 5\%$, 1/4W | 100-1053 | 1 |
| R126 | Resistor, 1 k Ohm $\pm 5\%$, 1/4W | 100-1043 | 1 |
| R127 THRU R136 | Resistor, 1 k Ohm $\pm 5\%$, 1/4W | 100-1043 | 10 |
| R137 THRU R139 | Resistor, 39 Ohm $\pm 5\%$, 1/4W | 100-3923 | 3 |
| R140 THRU R148 | Resistor, 620 Ohm $\pm 5\%$, 1/2W | 110-6233 | 8 |
| R149 | Resistor, 470 k Ohm $\pm 5\%$, 1/4W | 100-4763 | 1 |
| R150 | Resistor, 1.3 Meg Ohm $\pm 5\%$, 1/4W | 100-1373 | 1 |
| R151 | Resistor, 1 k Ohm $\pm 5\%$, 1/4W | 100-1043 | 1 |
| R152 | Potentiometer, 250 k Ohm $\pm 10\%$, 1/2W | 180-0001 | 1 |

TABLE 4-8. CONTROLLER CIRCUIT BOARD - 919-0019
(Sheet 4 of 5)

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|----------------|--|----------|------|
| R153 | Resistor, 1 k Ohm $\pm 5\%$, 1/4W | 100-1043 | 1 |
| R154 THRU R159 | Resistor, 100 k Ohm $\pm 5\%$, 1/4W | 100-1063 | 6 |
| R160 | Resistor, 51 k Ohm $\pm 5\%$, 1/4W | 100-5153 | 1 |
| R162 | Resistor, 1 k Ohm $\pm 5\%$, 1/4W | 100-1043 | 1 |
| R163 | Resistor, 1.5 Meg Ohm $\pm 5\%$, 1/4W | 100-1573 | 1 |
| R164 | Resistor, 1.8 Meg Ohm $\pm 5\%$, 1/4W | 100-1873 | 1 |
| R165 | Resistor, 1 k Ohm $\pm 5\%$, 1/4W | 100-1043 | 1 |
| R166 | Resistor, 100 k Ohm $\pm 5\%$, 1/4W | 100-1063 | 1 |
| R167 | Resistor, 470 k Ohm $\pm 5\%$, 1/4W | 100-4763 | 1 |
| R168 | Resistor, 10 Ohm $\pm 5\%$, 1/4W | 100-1023 | 1 |
| S1 | Switch, Push, SPST, Normally Open, 1 Ampere @ 120V ac | 343-6330 | 1 |
| S2 | Switch, Toggle, SPST, 5 Ampere @ 120V ac or 28V dc | 348-0123 | 1 |
| U1 THRU U8 | Integrated Circuit, 4N33, Optical Isolator, NPN Photo Transistor/Infared Emitting Diode Type, 1500V Isolation, 6-Pin DIP | 229-0033 | 8 |
| U9 THRU U11 | Integrated Circuit, MC14002B, Dual 4-Input NOR Gate, CMOS, 14-Pin DIP | 228-4002 | 3 |
| U12 | Integrated Circuit, MC14069UB, Hex Inverter, CMOS, 14-Pin DIP | 228-4069 | 1 |
| U13 | Integrated Circuit, CD4071B, OR Gate, CMOS, 14-Pin DIP | 225-0005 | 1 |
| U14 | Integrated Circuit, CD4081B, AND Gate, CMOS, 14-Pin DIP | 225-0008 | 1 |
| U15,U16 | Integrated Circuit, LM358N, Dual Operational Amplifier, 8-Pin DIP | 221-0358 | 2 |
| U17 | Integrated Circuit, MC14044BP, Quad NAND R-S Latch, CMOS, 16-Pin DIP | 228-4044 | 1 |
| U18 | Integrated Circuit, MC14069UB, Hex Inverter, CMOS, 14-Pin DIP | 228-4069 | 1 |
| U19 | Integrated Circuit, CD4081B, AND Gate, CMOS, 14-Pin DIP | 225-0008 | 1 |
| U20 THRU U22 | Integrated Circuit, LM358N, Dual Operational Amplifier, 8-Pin DIP | 221-0358 | 3 |
| U23 | Integrated Circuit, MC14538B, Dual Resettable/Retriggerable Monostable Multivibrator, CMOS, 16-Pin DIP | 228-4538 | 1 |
| U24 | Integrated Circuit, CD4071B, OR Gate, CMOS, 14-Pin DIP | 225-0005 | 1 |
| U25 | Integrated Circuit, MC14073B, Tripple 3-Input AND Gate, CMOS, 14-Pin DIP | 228-4073 | 1 |
| U26 | Integrated Circuit, CD4081B, AND Gate, CMOS, 14-Pin DIP | 225-0008 | 1 |
| U27 | Integrated Circuit, MC14069UB, Hex Inverter, CMOS, 14-Pin DIP | 228-4069 | 1 |
| U28,U29 | Integrated Circuit, MC14538B, Dual Resettable/Retriggerable Monostable Multivibrator, CMOS, 16-Pin DIP | 228-4538 | 1 |
| U30 | Integrated Circuit, MC14011B, Quad 2-Input NAND Gate, CMOS, 14-Pin DIP | 228-4011 | 1 |
| U31 | Integrated Circuit, MC14044BP, Quad NAND R-S Latch, CMOS, 16-Pin DIP | 228-4044 | 1 |
| U32 THRU U34 | Integrated Circuit, CD4019BE, Quad AND/OR Select Gate, CMOS, 16-Pin DIP | 228-4019 | 3 |
| U35,U36 | Integrated Circuit, ULN2003A, 7 Section NPN Darlington Driver, CMOS, 16-Pin DIP | 229-2003 | 2 |
| U37 THRU U50 | Integrated Circuit, 4N33, Optical Isolator, NPN Photo Transistor/Infared Emitting Diode Type, 1500V Isolation, 6-Pin DIP | 229-0033 | 14 |
| U51 | Integrated Circuit, MC14584, Hex Schmitt Trigger, CMOS, 14-Pin DIP | 228-4584 | 1 |
| U52 THRU U56 | Integrated Circuit, MC14503B, Hex Non-Inverting 3-State Buffer, CMOS, 16-Pin DIP | 228-4503 | 5 |
| U57 | Integrated Circuit, CD4017B, 10-Output Counter/Divider, CMOS, 16-Pin DIP | 220-4017 | 1 |
| U58,U59 | Integrated Circuit, 4N33, Optical Isolator, NPN Photo Transistor/Infared Emitting Diode Type, 1500V Isolation, 6-Pin DIP | 229-0033 | 2 |
| XF1 | Fuse Clip, AGC | 415-2068 | 2 |
| XU1 THRU XU8 | Socket, 6-Pin DIP | 417-0600 | 8 |
| XU9 THRU XU14 | Socket, 14-Pin DIP | 417-1404 | 6 |
| XU15,XU16 | Socket, 8-Pin DIP | 417-0804 | 2 |
| XU17 | Socket, 16-Pin DIP | 417-1604 | 1 |
| XU18,XU19 | Socket, 14-Pin DIP | 417-1404 | 2 |
| XU20 THRU XU22 | Socket, 8-Pin DIP | 417-0804 | 3 |

TABLE 4-8. CONTROLLER CIRCUIT BOARD - 919-0019
(Sheet 5 of 5)

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|----------------|---------------------|----------|------|
| XU23 | Socket, 16-Pin DIP | 417-1604 | 1 |
| XU24 THRU XU27 | Socket, 14-Pin DIP | 417-1404 | 4 |
| XU28, XU29 | Socket, 16-Pin DIP | 417-1604 | 2 |
| XU30 | Socket, 14-Pin DIP | 417-1404 | 1 |
| XU31 THRU XU36 | Socket, 16-Pin DIP | 417-1604 | 6 |
| XU37 THRU XU50 | Socket, 6-Pin DIP | 417-0600 | 14 |
| XU51 | Socket, 14-Pin DIP | 417-1404 | 1 |
| XU52 THRU XU57 | Socket, 16-Pin DIP | 417-1604 | 6 |
| XU58 | Socket, 6-Pin DIP | 417-0600 | 1 |
| ---- | Blank Circuit Board | 519-0019 | 1 |

TABLE 4-9. EXTENDER CIRCUIT BOARD - 919-0061

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|--|----------|------|
| J1 | Receptacle, 100-Pin | 418-5001 | 1 |
| S1 | Push Switch, SPSY, Normally Open, 1 Ampere @ 120V ac | 343-6330 | 1 |
| ---- | Switch Cap, for J1 | 343-6331 | 1 |
| ---- | Blank Circuit Board | 519-0061 | 1 |

TABLE 4-10. POWER SUPPLY ASSEMBLY - 959-0045

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|---|----------|------|
| C1 | Capacitor, Electrolytic, 15,000 uF, 50V | 024-1590 | 1 |
| C2 | Capacitor, Electrolytic, 2500 uF, 50V | 024-2590 | 1 |
| ---- | Power Transformer and Wire Harness | 959-0157 | 1 |
| ---- | Power Supply Circuit Board | 919-0020 | 1 |

TABLE 4-11. POWER TRANSFORMER AND WIRE HARNESS - 959-0157

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|--|----------|------|
| J1 | Receptacle, 6-Pin | 418-0006 | 1 |
| P3 | Plug, 12-Pin | 418-1271 | 1 |
| T1 | Power Transformer, Single Phase, 50/60 Hz Primary: Dual 115 Volt Windings, One Winding tapped at 90V Secondary: 17.6V RMS @ 0.1 Ampere Open Circuit 20.4V RMS @ 0.4 Ampere Open Circuit 20.4V RMS @ 2 Amperes Open Circuit | 370-0005 | 1 |
| ---- | Pins for J1 | 417-0036 | 5 |
| ---- | Pins for P3 | 417-0053 | 10 |

TABLE 4-12. POWER SUPPLY CIRCUIT BOARD - 919-0020

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|---------------------|--|----------|------|
| C3 | Capacitor, Electrolytic, 10 uF, 35V | 023-1076 | 1 |
| C4 THRU C7 | Capacitor, Mylar Film, 0.1 uF ±10%, 100V | 030-1053 | 4 |
| C8,C9 | Capacitor, Electrolytic, 10 uF, 35V | 023-1076 | 2 |
| D1,D2 | Diode, MR502, Silicon, 200V, 3 Amperes | 202-0502 | 2 |
| D3 THRU D6 | Diode, 1N4004, Silicon, 400V, 1 Ampere | 203-4004 | 4 |
| D7,D8 | Diode, MR502, Silicon, 200V, 3 Amperes | 202-0502 | 2 |
| D9 THRU D12, D15 | Diode, 1N4004, Silicon, 400V, 1 Ampere | 203-4004 | 5 |
| D16 | Diode, MR502, Silicon, 200V, 3 Amperes | 202-0502 | 1 |
| D17,D18 | Diode, 1N4004, Silicon, 400V, 1 Ampere | 203-4004 | 2 |
| D19 | Diode, MR502, Silicon, 200V, 3 Amperes | 202-0502 | 1 |
| D20 | Diode, 1N4004, Silicon, 400V, 1 Ampere | 203-4004 | 1 |
| J2 | Receptacle, 6-Pin | 417-0677 | 1 |
| J3 | Receptacle, 12-Pin | 417-1276 | 1 |
| R1 | Resistor, 470 Ohm ±5%, 2W | 130-4733 | 1 |
| R2 | Resistor, 1.27 k Ohm ±1%, 1/4W | 103-1274 | 1 |
| R3 | Potentiometer, 200 Ohm ±10%, 1/2W | 177-2034 | 1 |
| R5 | Resistor, 120 Ohm ±5%, 1/4W | 100-1233 | 1 |
| R7 THRU R10 | Resistor, 1 k Ohm ±5%, 1/2W | 110-1043 | 4 |
| U1 | Integrated Circuit, LM350K, Three-Terminal Adjustable Positive Voltage Regulator, 1.2V to 33V, 3 Ampere Maximum, TO-3 Case | 227-0350 | 1 |
| U2,U3 | Integrated Circuit, LM78L15ACH, Three-Terminal Fixed 15 Volt Regulator, 0.1 Ampere, 15V, TO-39 Case | 227-7800 | 2 |
| ---- | Blank Circuit Board | 519-0020 | 1 |

TABLE 4-13. EMI/AC POWER CABLE ASSEMBLY - 949-0026

| REF. DES. | DESCRIPTION | PART NO. | QTY. |
|-----------|--|----------|------|
| FL1 | Fused Power Connector/120/240V Voltage Selector/EMI Filter | 360-6504 | 1 |
| MOV1 | Metal-Oxide Varistor, V250LA15A, 250V RMS, 15 Joules | 140-0008 | 1 |
| P1,P2 | Plug, 6-Pin | 418-0670 | 2 |
| ---- | Pins for P1 and P2 | 417-0053 | 10 |

PRODUCT WARRANTY

LIMITED ONE YEAR

While this warranty gives you specific legal rights, which terminate one (1) year (6 months on turntable motors) from the date of shipment, you may also have other rights which vary from state to state.

Broadcast Electronics, Inc. ("BE"), 4100 North 24th Street, P. O. Box 3606, Quincy, Illinois 62305, hereby warrants cartridge machines, consoles, transmitters and other new Equipment manufactured by BE against any defects in material or workmanship at the time of delivery thereof, that develop under normal use within a period of one (1) year (6 months for turntable motors) from the date of shipment. Other manufacturers' Equipment, if any, shall carry only such manufacturers' standard warranty. This warranty extends to the original user and any subsequent purchaser during the warranty period. BE's sole responsibility with respect to any Equipment or parts not conforming to this warranty is to replace such equipment or parts upon the return thereof F.O.B. BE's factory or authorized repair depot within the period aforesaid.

In the event of replacement pursuant to the foregoing warranty, only the unexpired portion of the warranty from the time of the original purchase will remain in effect for any such replacement. However, the warranty period will be extended for the length of time that the original user is without the services of the Equipment due to its being serviced pursuant to this warranty. The terms of the foregoing warranty shall be null and void if the Equipment has been altered or repaired without specific written authorization of BE, or if Equipment is operated under environmental conditions or circumstances other than those specifically described in BE's product literature or instruction manual which accompany the Equipment purchased. BE shall not be liable for any expense of any nature whatsoever incurred by the original user without prior written consent of BE.

BE shall not be liable to the original user for any and all incidental or consequential damages for breach of either expressed or implied warranties. However, some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. All express and implied warranties shall terminate at the conclusion of the period set forth herein.

Except as set forth herein, and except as to title, there are no warranties, or any affirmations of fact or promises by BE, with reference to the Equipment, or to merchantability, fitness for a particular application, signal coverage, infringement, or otherwise, which extend beyond the description of the Equipment in BE's product literature or instruction manual which accompany the Equipment. Any card which is enclosed with the Equipment will be used by BE for survey purposes only.

BROADCAST ELECTRONICS, INC.
4100 North 24th Street, P. O. Box 3606, Quincy, Illinois 62305